



Wi-Tek IP Camera Tester User Manual



Detect IP camera


Note: Please enable WIFI and GPS function of your smart phone.



● IPC Tester change to IPC mode



Step 1. Enter into IPC Tester APP, your smart phone will connect to IPC Tester's WIFI SSID automatically.


Step 2. Power up your IP camera by 12V DC out port and hook your IPC to RJ45 port as well .



Step 3. On the APP, click IP camera  icon, then APP will search and find your IP camera (brand and IP address), then enter into login user/password, you can check IP camera review and setting status(voltage, current, IP address, firmware version).

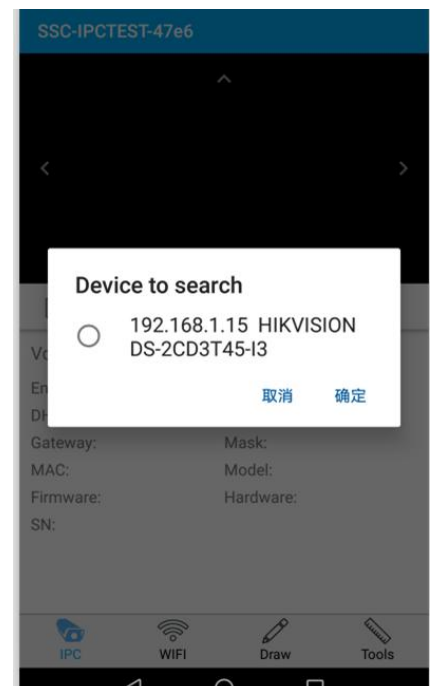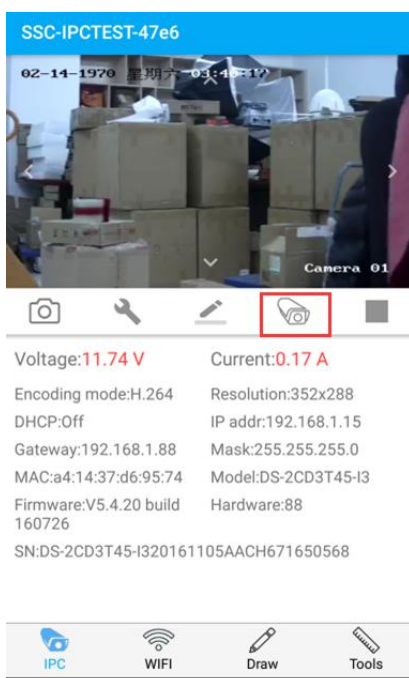

Hikvision brand IP camera activation

The latest Hikvision IP camera need to be activated while the first-time used. Wi-Tek IPC Tester can do the activation easily when you deploy the CCTV system. Please refer to the following step.


Step 1. On the home page of the APP, click tool  icon, APP will search and find your IP camera, and you can set up private new password for new camera activation. After finish the activation, it will jump to Hikvision official website.

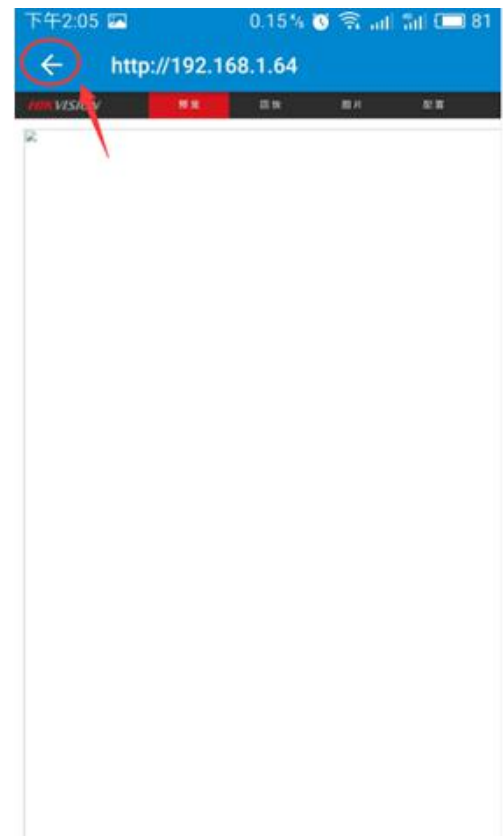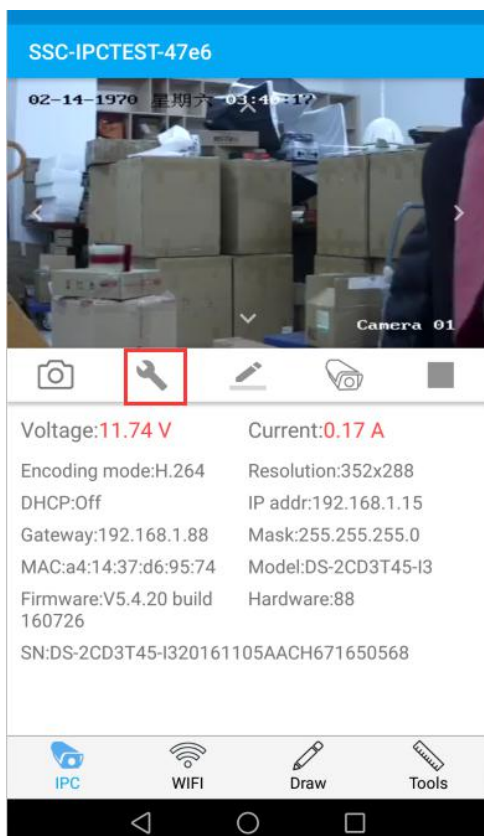


Batch Detect/Config IP camera

Wi-Tek IPC Tester can Batch Detect/Config more IP camera, you can hook IPC Tester RJ45 port to one Switch/PoE Switch, then IPC Tester will search all Camera IP address.



Step 1. On the home page of the APP, click Pen  icon, it will scan all of your IP cameras, then all IP cameras will appear, input user name/password for all IP cameras, include start IP address of all IP cameras.

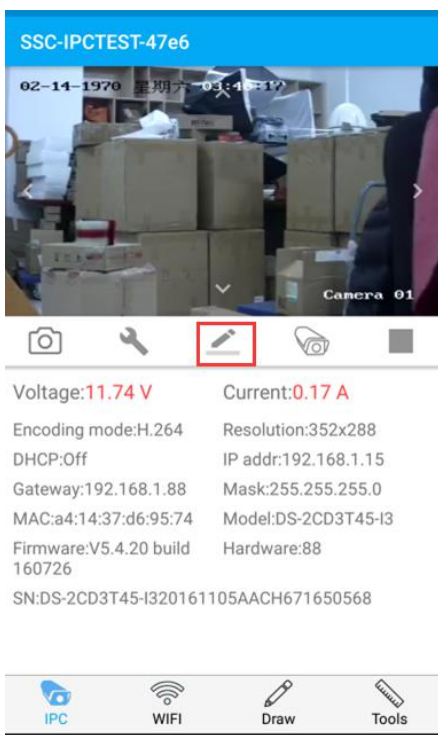

More function and info about AP, WIFI MAP, Topology Drawing will be found at advance settings page.