



Quick Installation Guide

Cloud Easy Smart Outdoor PoE Switch

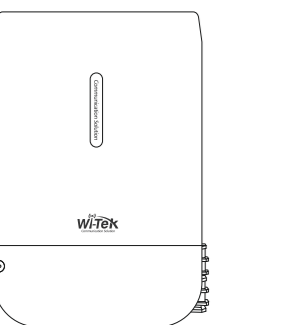


WI-PCES206-O | WI-PCES210G-O
www.wireless-tek.com

1. Packing Content

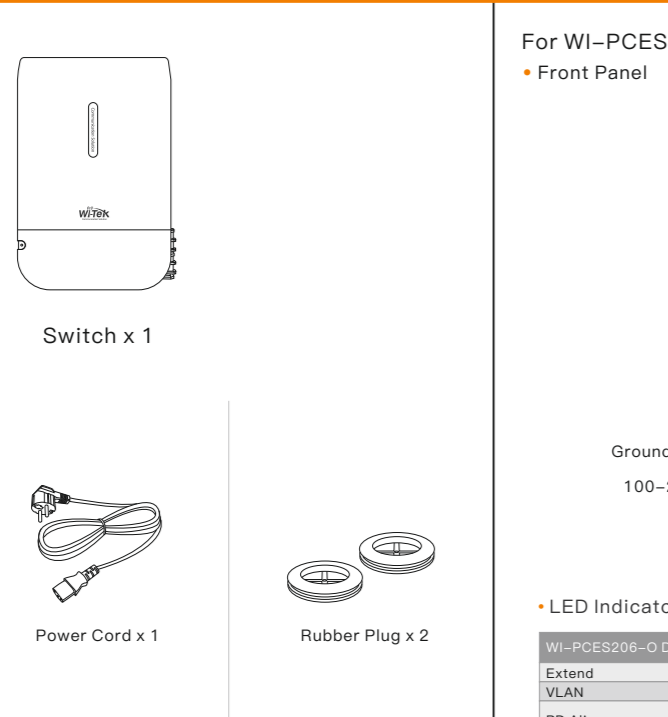

2. Appearance Overview

For WI-PCES206-O
• Front Panel

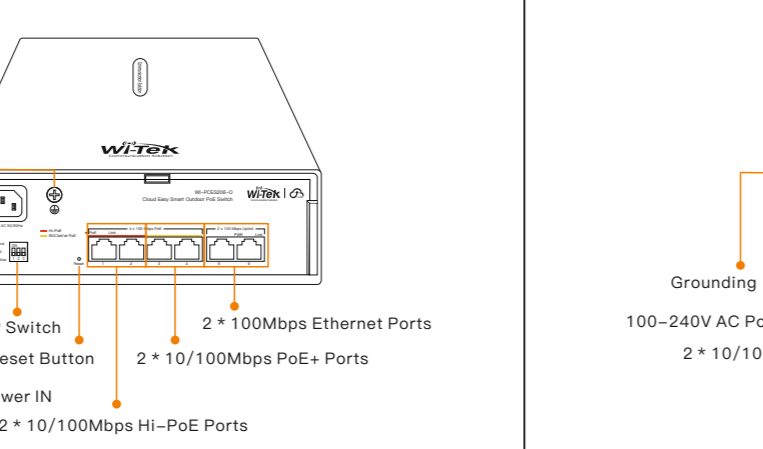


• LED Indicator and Button

WI-PCES206-O DIP Switch Description	Description
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN
VLAN	Enable Port VLAN, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices

LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: PoE enabled Off: PoE disabled
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default

For WI-PCES210G-O
• Front panel

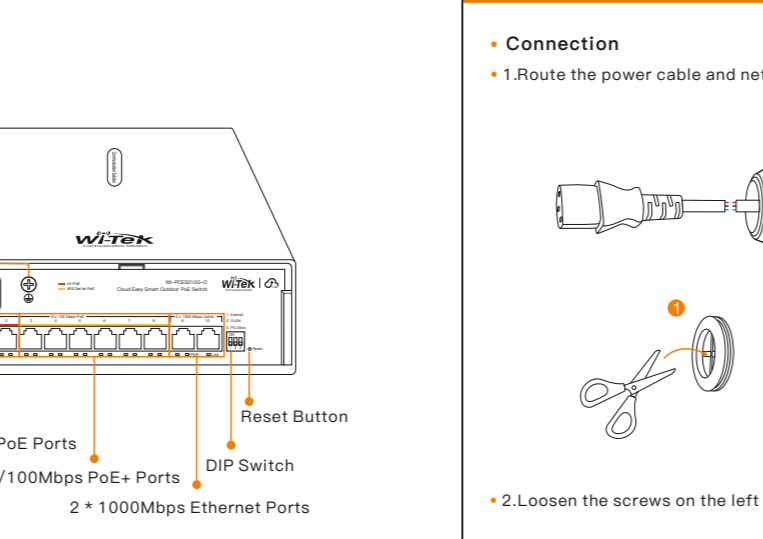


• LED Indicator and Button

WI-PCES210G-O DIP Switch Description	Description
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN
VLAN	Enable Port VLAN, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices


LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: PoE enabled Off: PoE disabled
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default

3. Device Installation


• Connection

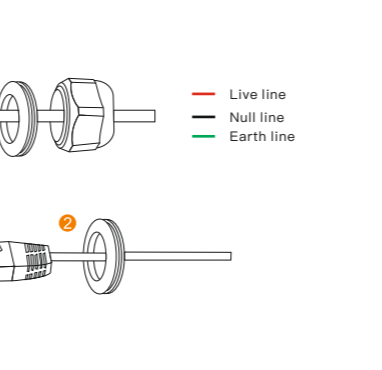


• 3. Slide down the front lower cover to open.

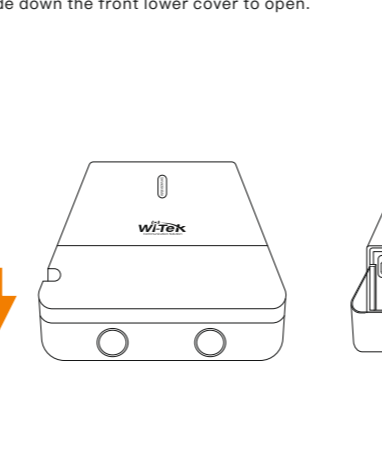


• 4. Screw the sealing sleeve to the round hole at the bottom of the switch and tighten it, Connect the power cable and network cables to the ports.

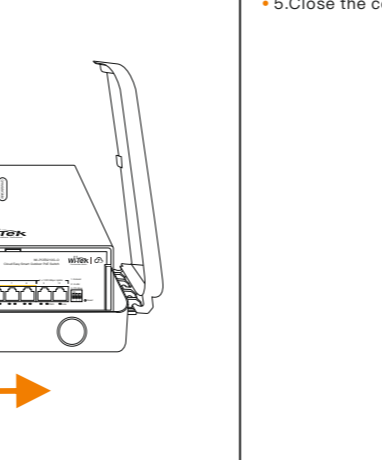

• 5. Close the cover and tighten the screws.

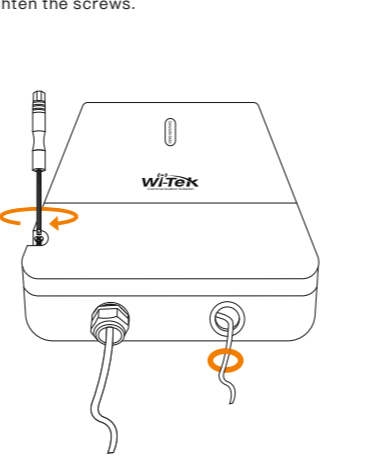


• 6. Check whether the installation is secure.

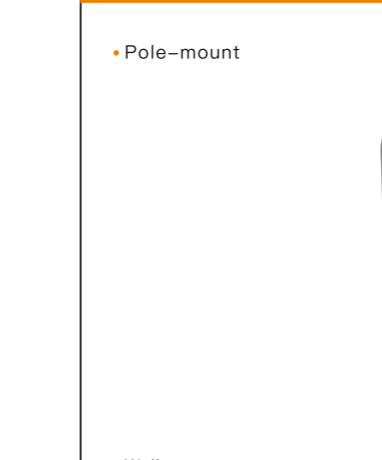


4. Installation

• Pole-mount

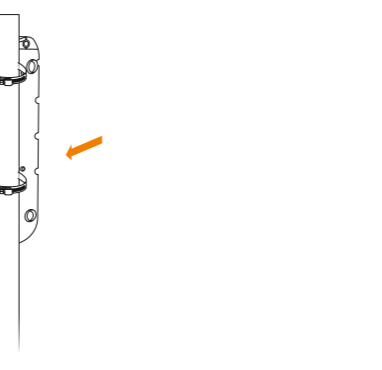

• Wall-mount

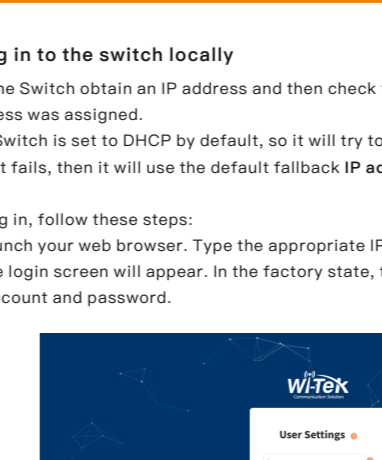

5. Management

• Log in to the switch locally


Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:
1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. In the factory state, the first login requires setting an account and password.




• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

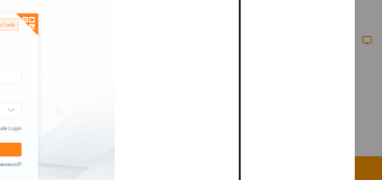


2. Enter the cloud binding switch

(Explain: The switch must be connected to the internet to bind successfully)

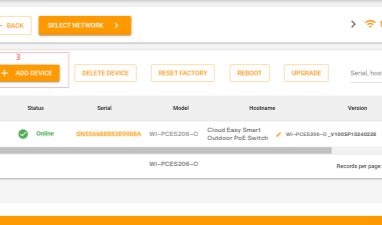


Please enter the device serial number to bind a device to the current group, device can be off when binding.
(Explain: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

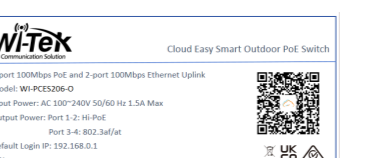




• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

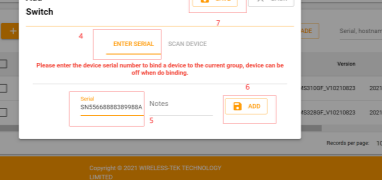

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

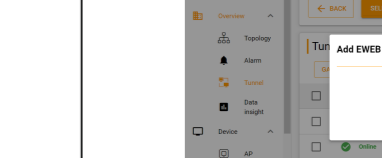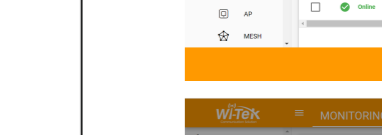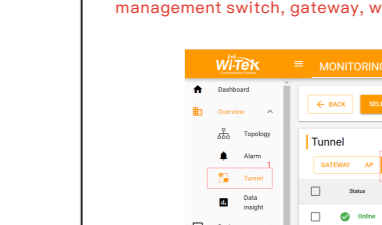

• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

