 


Quick Installation Guide


Cloud L3 Managed Switch

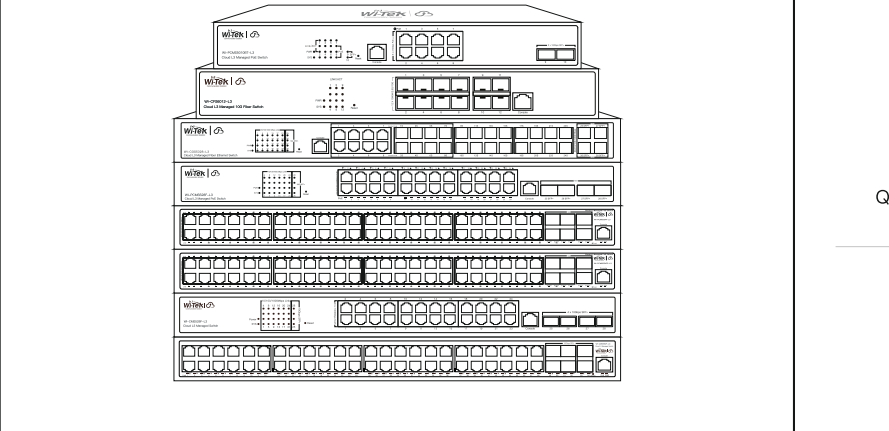


WI-PCMS528F-L3 | WI-PCMS554F-L3 | WI-PCMS554FP-L3 | WI-CGS328-L3 | WI-CFS6012-L3 | WI-PCMS528F-L3 | WI-PCMS554F-L3 | WI-PCMS554FP-L3 | WI-CGS328-L3 | WI-CFS6012-L3

www.wireless-tek.com

 1. Packing Content

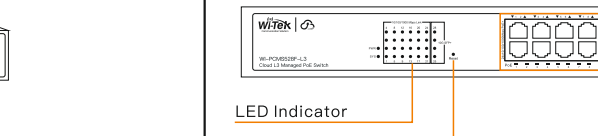


Switch x 1

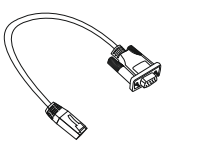 


Quick Installation Guide x 1



 Serial Line x 1

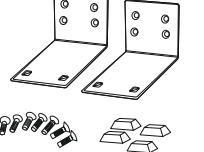

 Power Cord x 1
* WI-CGS328-L3(V2) Has 2 Power Cords

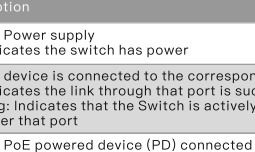

Mounting Accessories
(hook x 2, mats x 4, screw x 8)

2. Appearance Overview

WI-PCMS528F-L3

• Front panel



• Back panel




• LED Indicator and Button

Item	Status	Description
PWR	Green	Off: No Power supply On: Indicates the switch has power
Link	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
PoE	Orange	Off: No PoE powered device (PD) connected On: There is a PoE PD connected to be port, which supply power successfully
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-PCMS554F-L3

 • Front panel

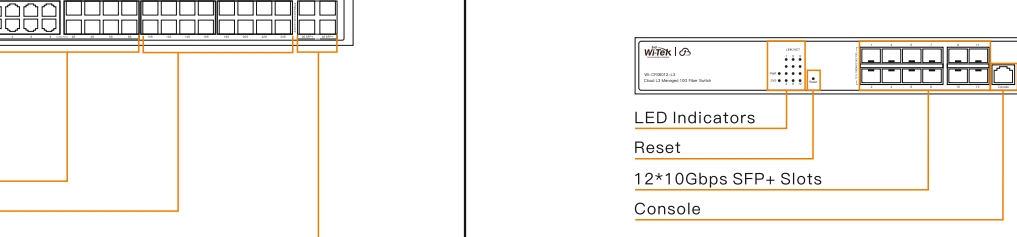

• Back panel




• LED Indicator and Button

Item	Status	Description
PWR	Green	Off: No Power supply On: Indicates the switch has power
Link	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
PoE	Orange	Off: No PoE powered device (PD) connected On: There is a PoE PD connected to be port, which supply power successfully
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-CGS328-L3

 • Front panel

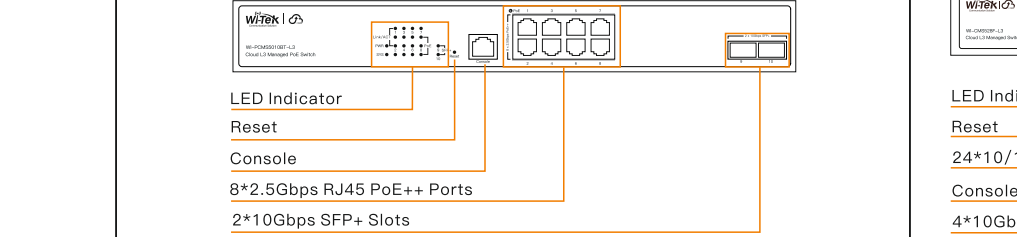

• Back panel




• LED Indicator and Button

Item	Status	Description
PWR	Green	Off: The device is power off or failed On: The device power on is normal
Link	Blinking	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-CFS6012-L3

 • Front Panel

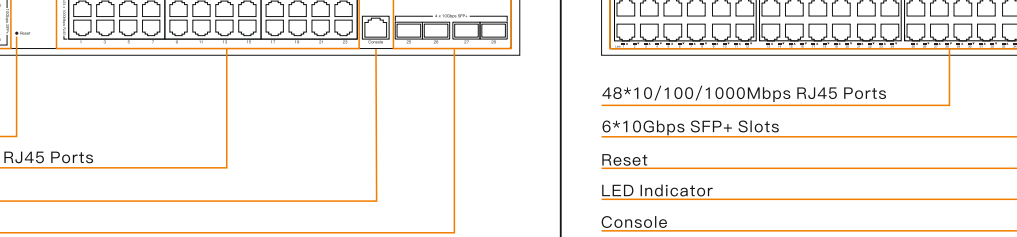

• Back panel




• LED Indicator and Button

Item	Status	Description
PWR	Green	Off: The device is power off or failed On: The device power on is normal
Link	Blinking	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-PCMS5010BT-L3

 • Front Panel

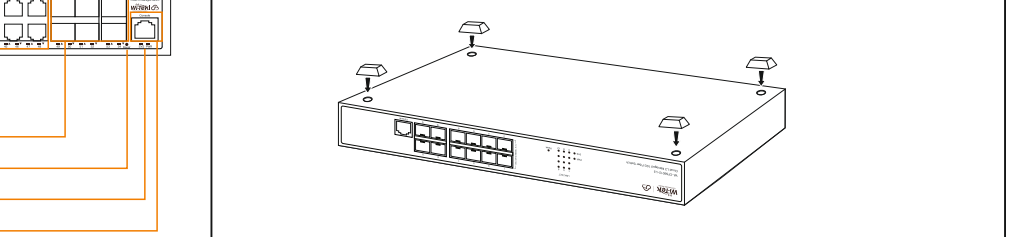

• Back panel




• LED Indicator and Button

Item	Status	Description
PWR	Green	Off: The device is power off or failed On: The device power on is normal
Link	Blinking	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-CMS528F-L3

 • Front panel

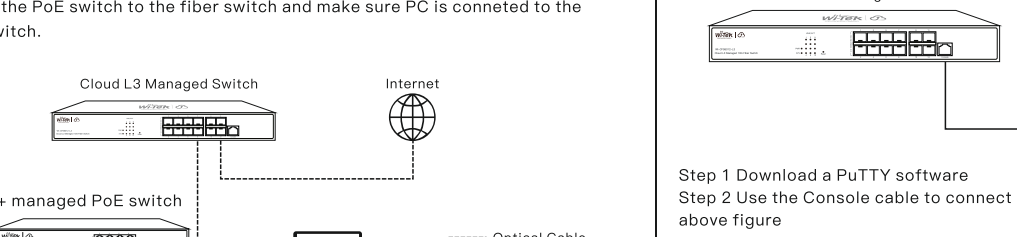

• Back panel




• LED Indicator and Button


Item	Status	Description
Power	Green	Off: No Power supply On: Indicates the switch has power
Link	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

WI-CMS554F-L3

 • Front panel

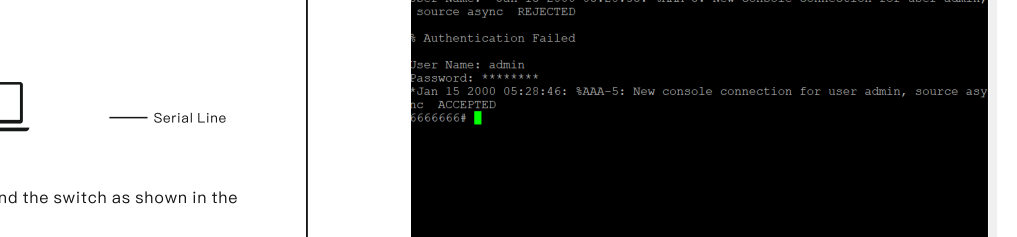

• Back panel

 


• LED Indicator and Button


Item	Status	Description
PWR	Green	Off: No Power supply On: Indicates the switch has power
Link	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal
SFP+	Green	Off: No device is connected to the corresponding port On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port
Reset	/	Hold on over 5 seconds to restore the device to the factory

3. Installation

 • Desktop Installation




• Rack-mount Installation

 

4. Configuration

• Use the console cable to access the switch

 Connection Diagram:







Step 1 Download a PuTTY software
Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Notice:
Step 2 is your computer recognizes the COM number of the Console line
Step 3 is the baud rate of the switch (the baud rate of the switch is 9600)

• Cloud login switch configuration

    1. Log in to the cloud management interface
(No account, you need to register an account to log in, The URL is: https://cloud2.wireless-tek.com)



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

