


# Quick Installation Guide

Cloud L2+ Managed Outdoor Gigabit PoE Switch

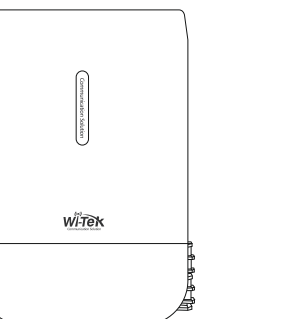

WI-PCMS310GF-O(V2)


www.wireless-tek.com

## 1. Packing Content


### 1. Packing Content




Switch x 1

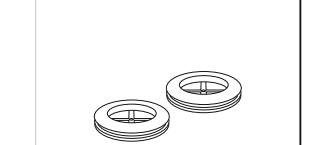

Quick Installation Guide x 1

 

Power Cord x 1

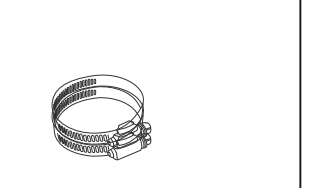

Rubber Plug x 2



M36 Waterproof Gland x 2




Metal Tie Accessory x 2

## 2. Appearance Overview

### WI-PCMS310GF-O(V2)

#### • Front Panel

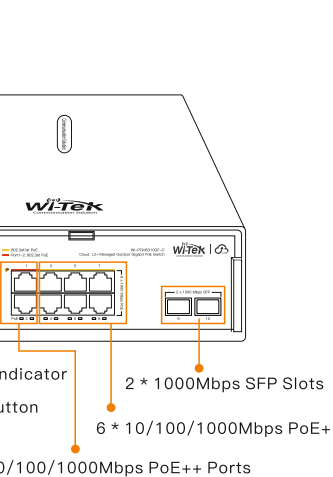


#### • LED Indicator and Button

LED Indicator&Button	Description
PWR	Off: The device is power off or failed On: The device power on is normal
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PoE	On: PoE enabled Off: PoE disabled Blinking: Indicates the port is abnormal
Link	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the switch is actively sending or receiving data over that port
Reset	Hold for >5 sec. to restore factory default


## 3. Device Installation

### • Connection


#### • 1.Route the power cable and network cable through the sealing sleeve.

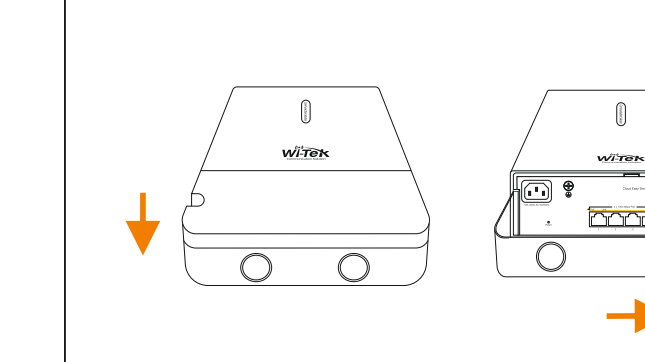


#### • 2.Loosen the screws on the left side of the switch with a screwdriver.

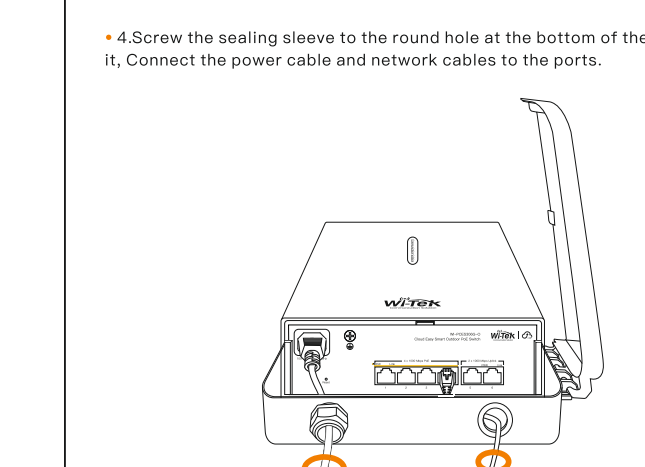


### • 3.Slide down the front lower cover to open.

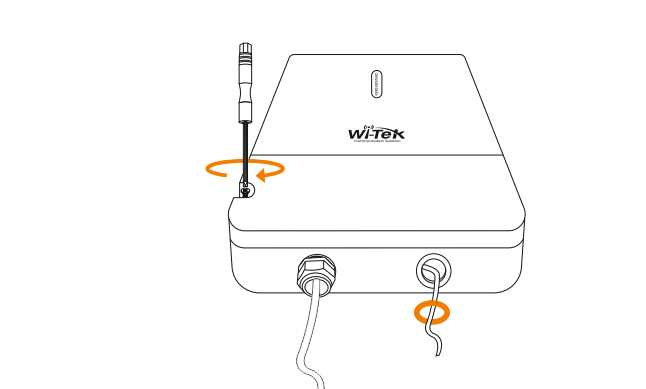


#### • 4.Screw the sealing sleeve to the round hole at the bottom of the switch and tighten it, Connect the power cable and network cables to the ports.

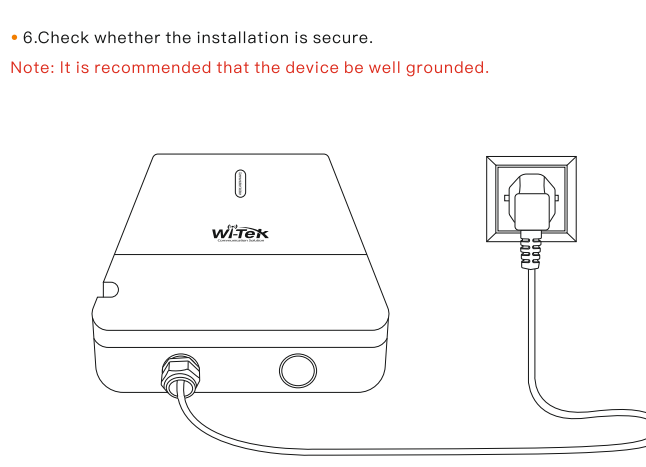

### • 5.Close the cover and tighten the screws.

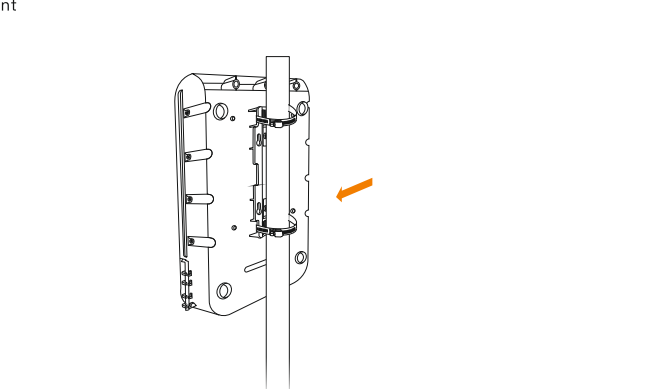


#### • 6.Check whether the installation is secure.

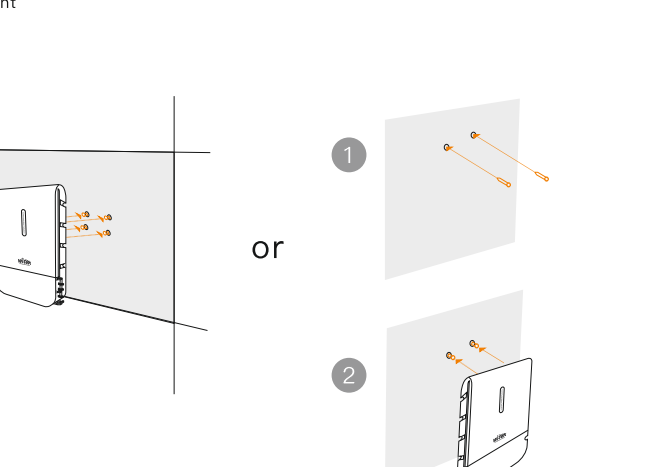


## 4.Installation

### • Pole-mount

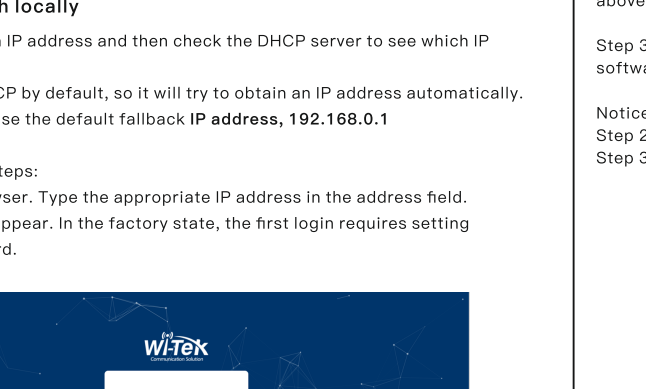


### • Wall-mount

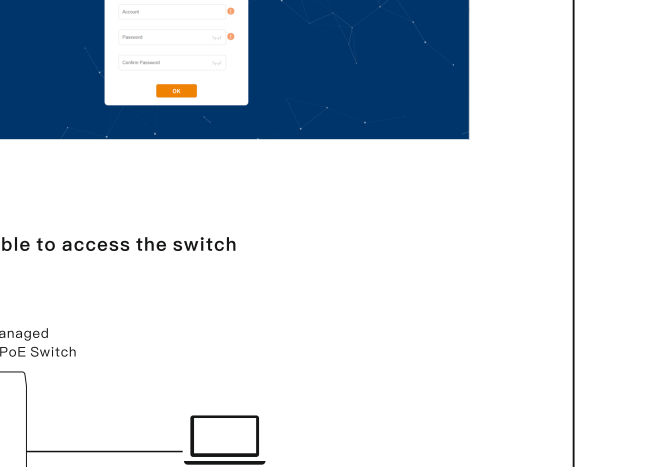

## 5.Login WEB UI

### Step 1 Download a PuTTY Software


### Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

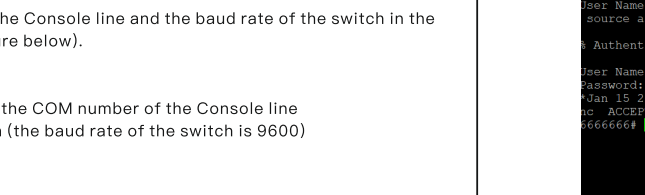

### Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).


#### Notice:

Step 2 is your computer recognizes the COM number of the Console line  
Step 3 is the baud rate of the switch (the baud rate of the switch is 9600)

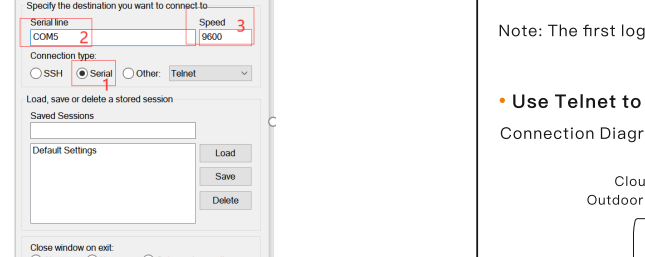


### • Use Telnet to log in to the CLI mode of the switch

#### Connection Diagram:

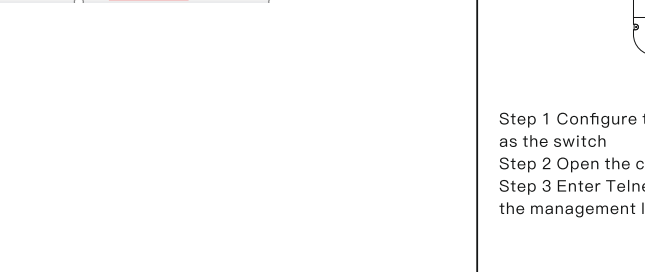

## 2.Enter the cloud binding switch

(Explain:The switch must be connected to the internet to bind successfully)

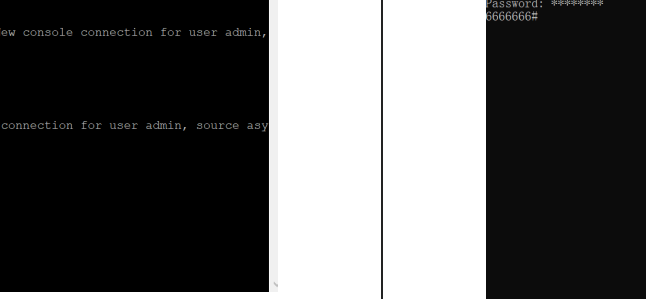


### 1. Log in to the cloud management page

(No account, you need to register an account to log in. The URL is <http://cloud2.wireless-tek.com>)




### 2. Open the cmd window of the computer

Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

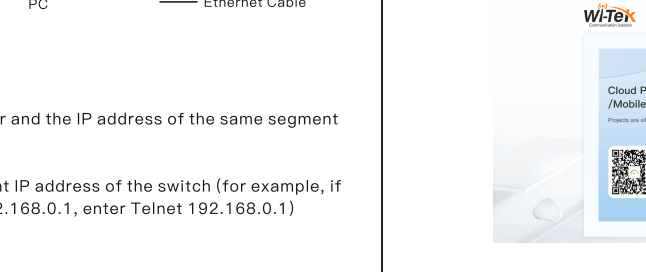


## 3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.

(After entering the switch, you can configure it based on your own needs)

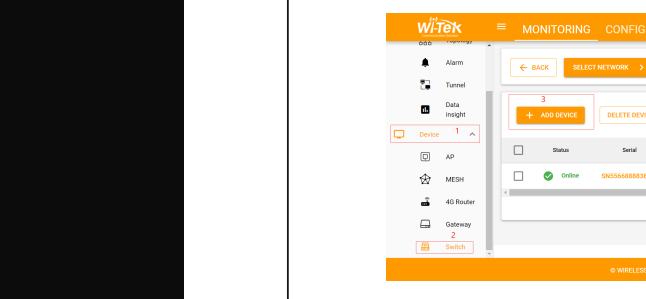


### Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.

(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

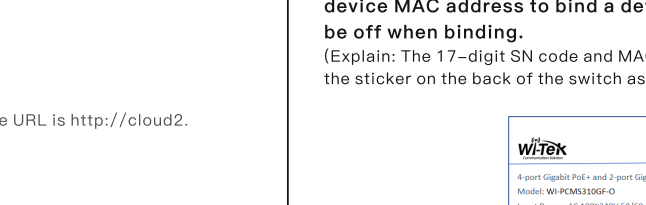

### 1. Log in to the cloud management page

(No account, you need to register an account to log in. The URL is <http://cloud2.wireless-tek.com>)

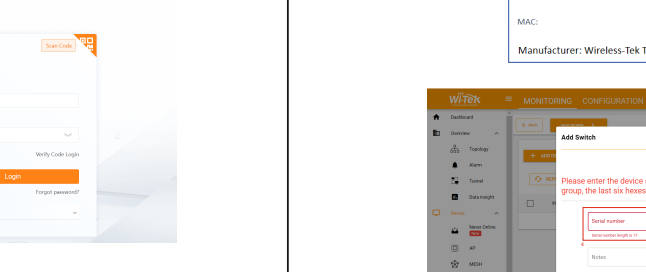


## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Purchase Time	
Serial No.	
Dealer Signature	


### If the product defects within the warranty period, we will provide professional maintenance service.

• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

• Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

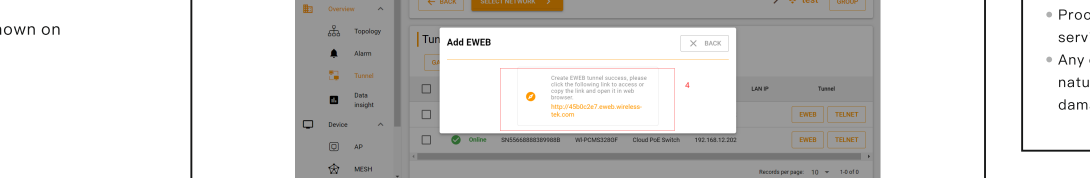

Technical Support    Company Website    Cloud Management

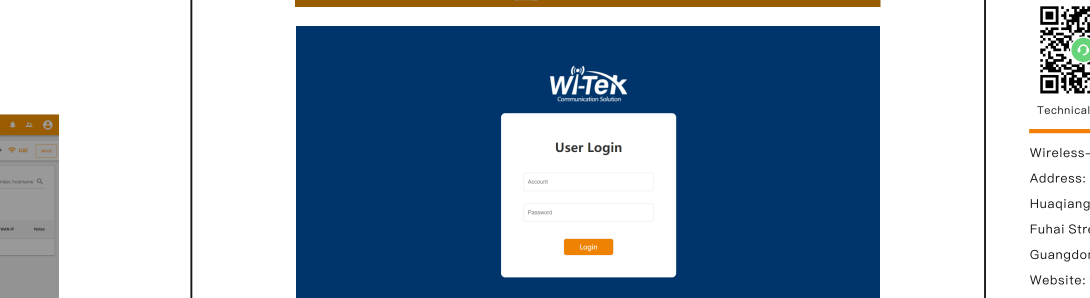

Wireless-Tek Technology Limited  
Address: Building 3, Units 1801-1807, 1812,  
Huaqiang Era Plaza, Tangwei Community,  
Fuhai Street, Bao'an District, Shenzhen City,  
Guangdong Province, China.  
Website: [www.wireless-tek.com](http://www.wireless-tek.com)  
Tel: 86-0755-32811290  
Email: [sales@wireless-tek.com](mailto:sales@wireless-tek.com)  
Technical Support: [tech@wireless-tek.com](mailto:tech@wireless-tek.com)

