



Quick Installation Guide

6GHz AX2400 Fixed Wireless Access

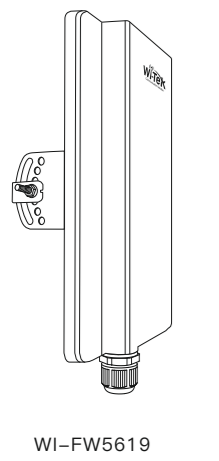


WI-FW5619

1. Packing Content

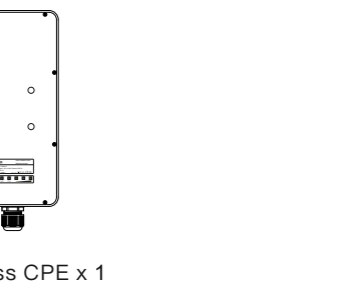

Wireless CPE x 1

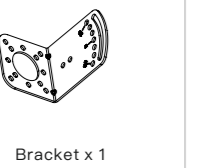

Bracket x 1



U Bolt x 1



U-groove x 1



Waterproof Connector x 1



24V 2.5GE PoE Adapter x 1




Power Cord x 1


2. Appearance Overview

For WI-FW5619

• Back Panel

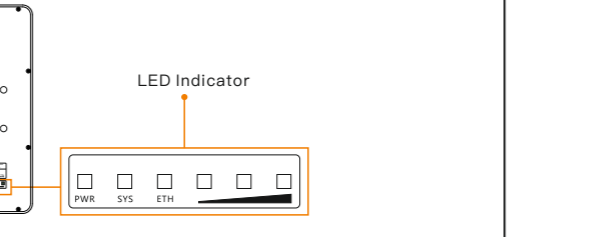

• Side Panel

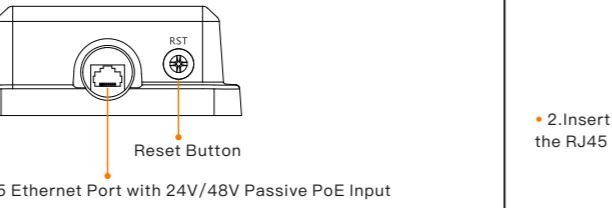

• Button indicator


Item	Description
Reset Button	Press and hold the "Reset" button for more than five seconds to restore the device to its factory settings mode.

• LED Indicator


Item	Status	Description
PWR	On	The device is powered on
	Off	The device is powered off
SYS	On	The system is working normally
	Off	The system is not working
ETH	On	The port is connected
	Off	The port is disconnected
—	0 LED	No connection
	1 LED	Weak signal
	2 LED	Middle Signal
	3 LED	Strong Signal

3. Device Installation


• 1.Remove the waterproof connector.

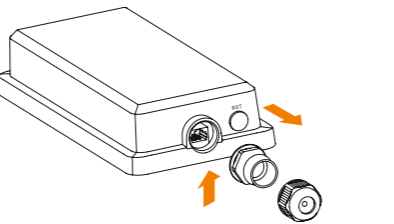


• 2.Insert the Ethernet cable through the waterproof connector, then connect the RJ45 connector to the device Ethernet port.

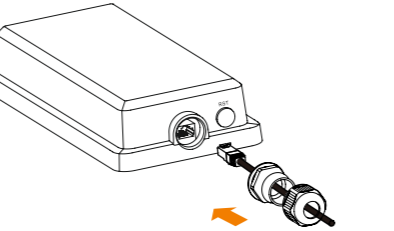

• 3.Tighten the waterproof connector.

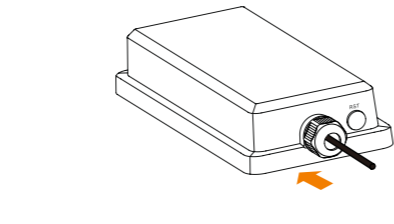

• 4.Install the device on the pole.

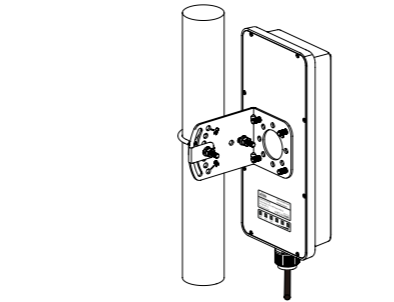


4. Application

• PTP




• PTMP

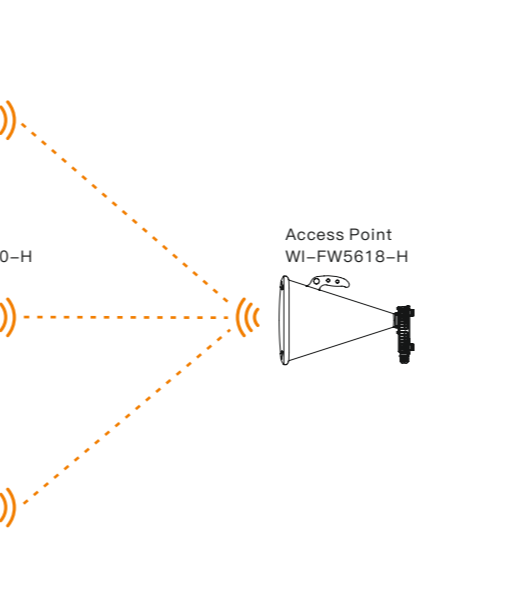


5. Web Management

• A) Boot Up Device

- (1) Power on the device.
- (2) Connect the PC to the PoE adapter using Ethernet cable

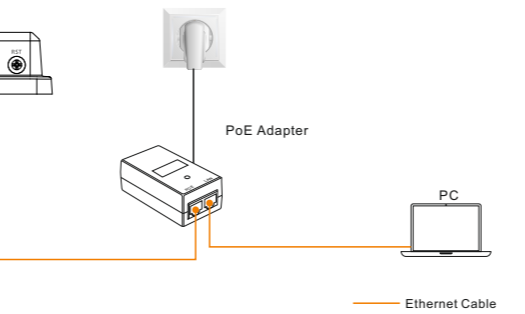


(3) Open a browser such as Chrome or Firefox and launch the login page with default IP 192.168.1.2, then type the password admin to enter the Management UI.

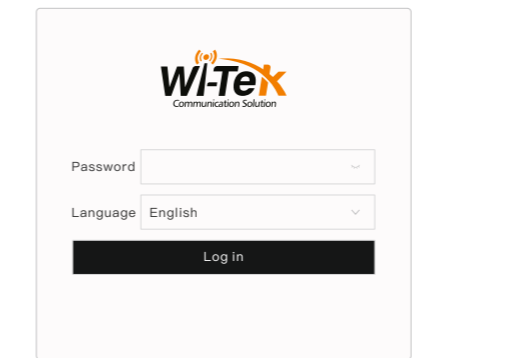


• B) Configure the Access Point

- (1) Please finish LAN Settings, and then click Next.

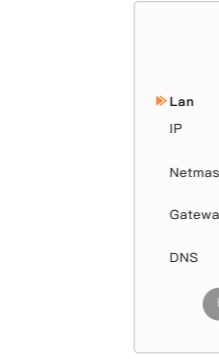


(2) Wireless Settings: Choose Access Point Mode and create a new SSID (Network name) for your wireless network. And then select Encryption Mode and create a PSK Key to protect the device.

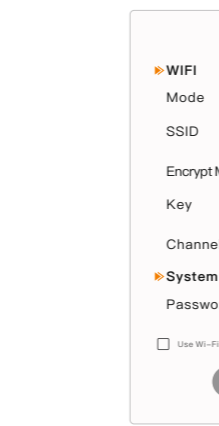


• C) Configure the Client


- (1) Repeat step A) to make sure the device is powered on
- (2) Please finish LAN Settings and make sure the subnet is the same as the Access Point, and then click Next.

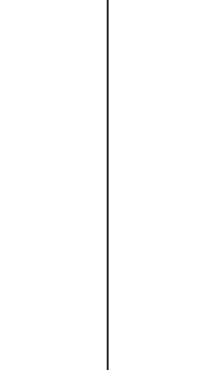


(3) Verify your settings and click Finish to complete the configuration.

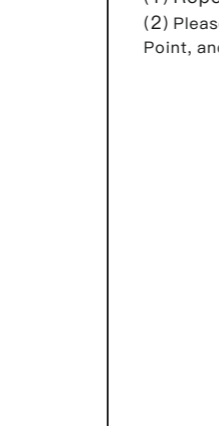

 (3) Wireless Settings: Choose Client Mode and enter the same SSID and PSK Key and select the same Encryption Mode as Access Point.



 (4) Verify your settings and click Finish to complete the configuration.



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

