




Quick Installation Guide



Cloud Easy Smart SC Fiber Switch

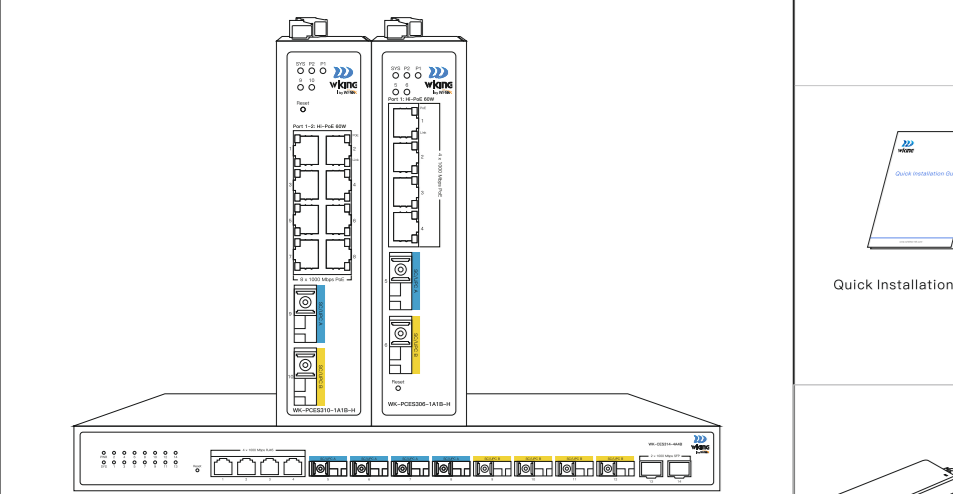




WK-PCES306-1A1B-H | WK-PCES310-1A1B-H | WK-CES314-4A4B

www.wireless-tek.com



1. Package Contents

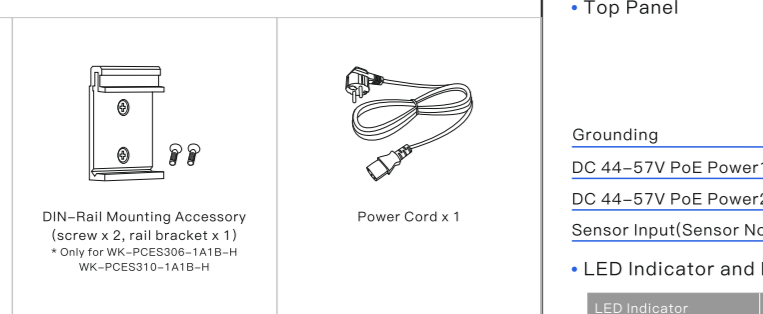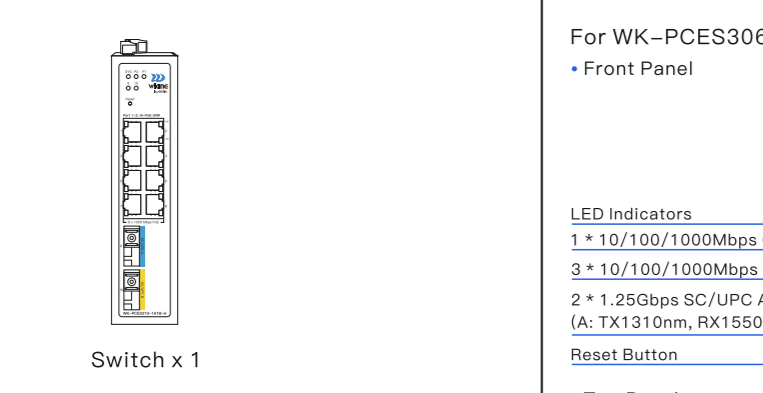

2. Appearance Overview

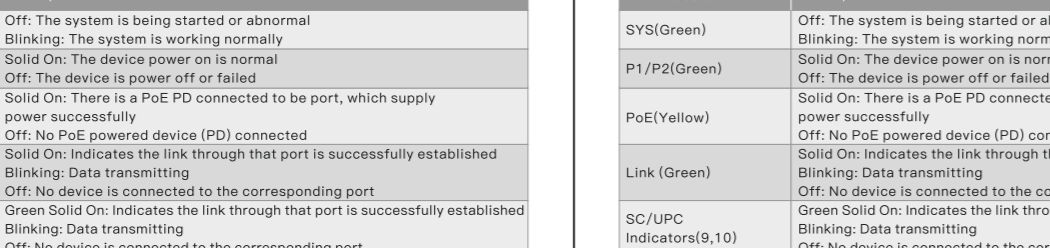
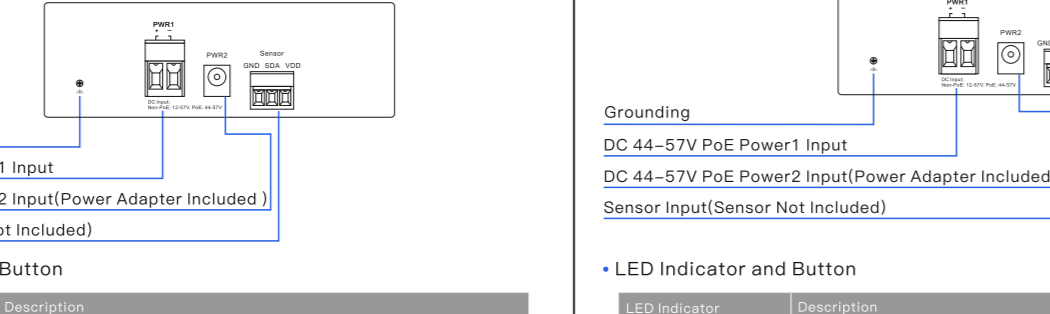
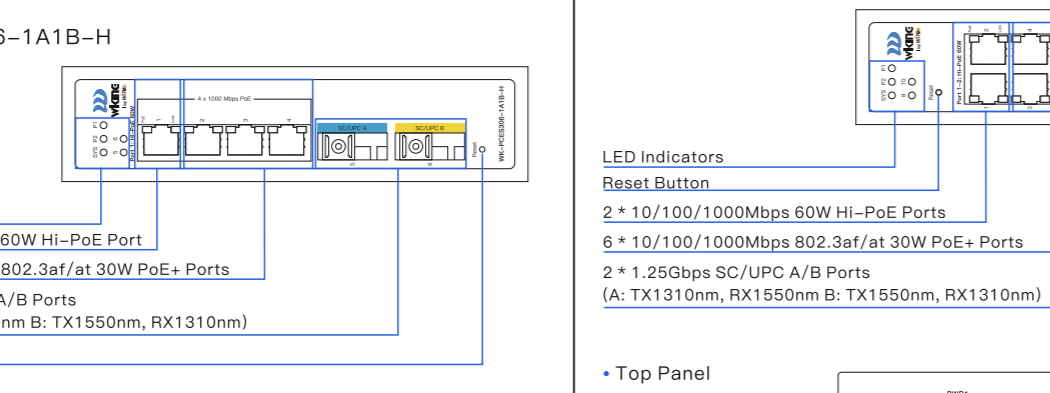


3. Installation


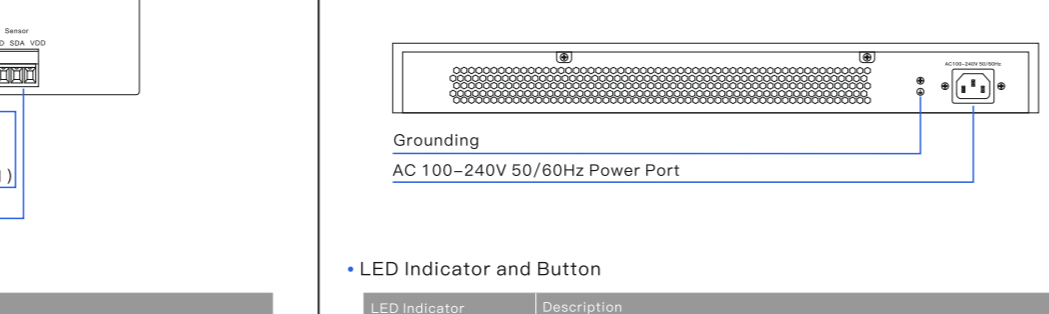
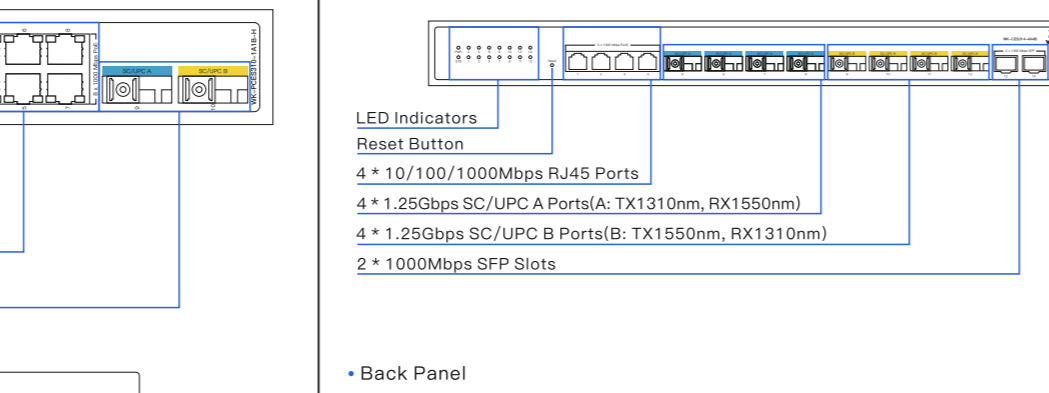


LED Indicator	Description
SYS(Green)	Off: The system is being started or abnormal Blinking: The system is working normally
P1/P2(Green)	Solid On: The device power on is normal Off: The device is power off or failed
PoE(Yellow)	Solid On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Link (Green)	Solid On: Indicates the link through that port is successfully established Blinking: Data transmitting Off: No device is connected to the corresponding port
SC/UPC Indicators(5,6)	Green Solid On: Indicates the link through that port is successfully established Blinking: Data transmitting Off: No device is connected to the corresponding port
Reset	Hold for >5 sec. to restore factory default



3.1 DIN-rail Installation

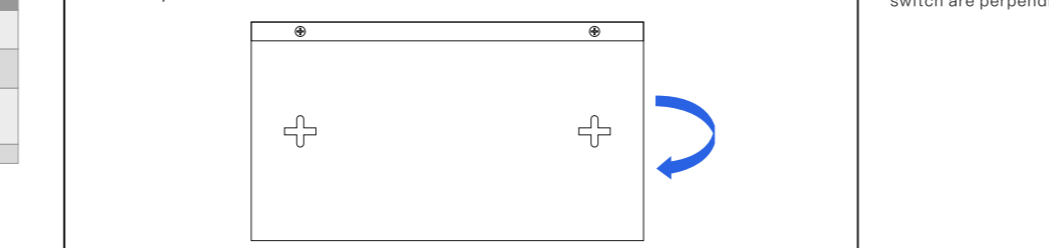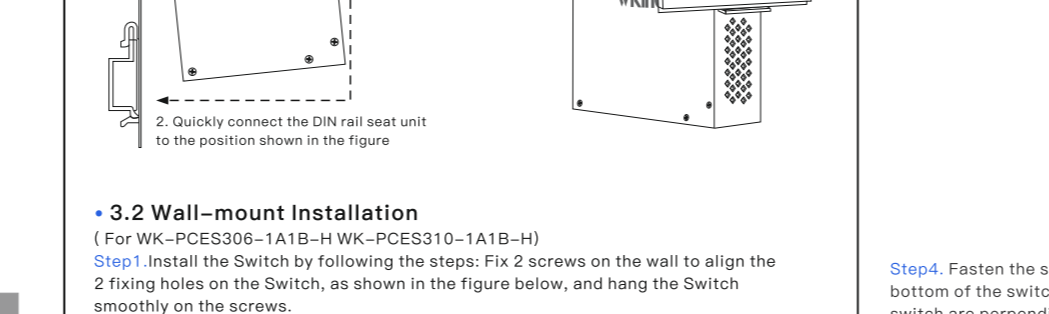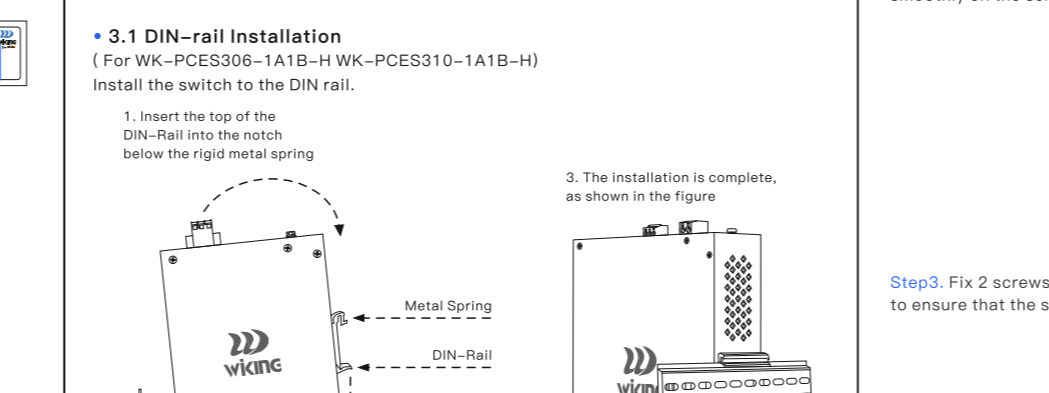

3.2 Wall-mount Installation

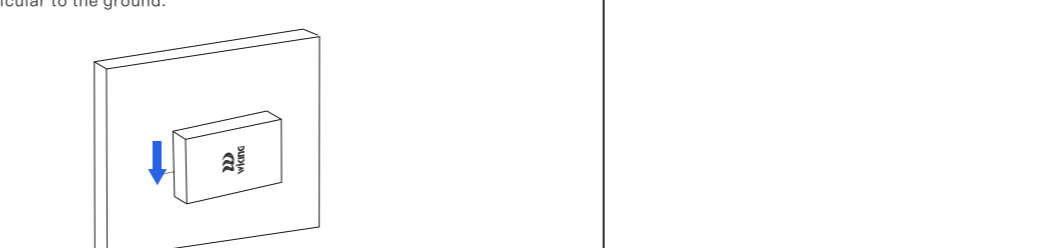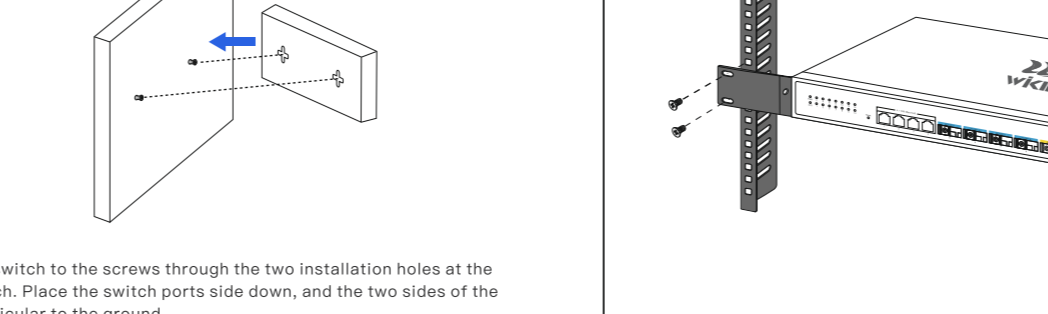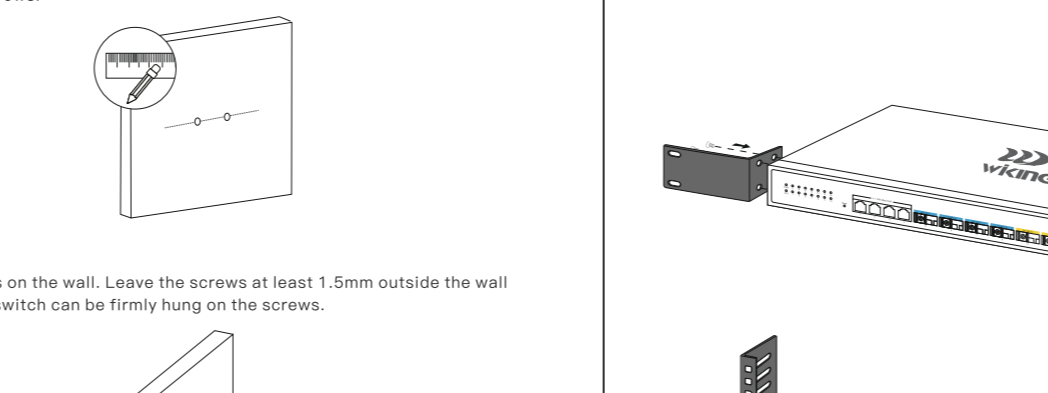

3.3 Rack-mount Installation

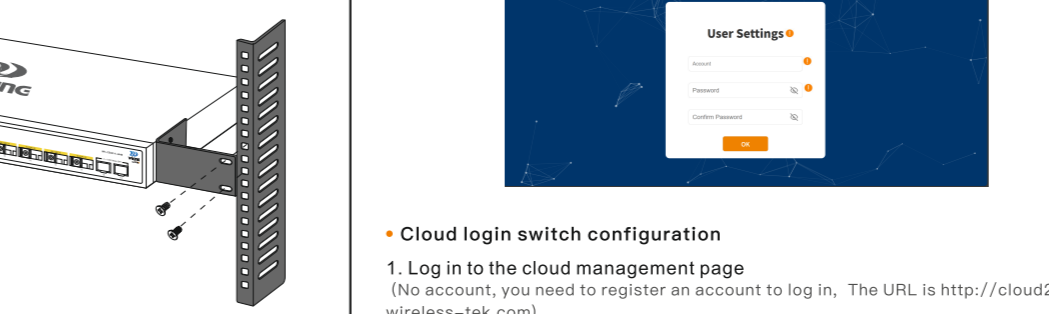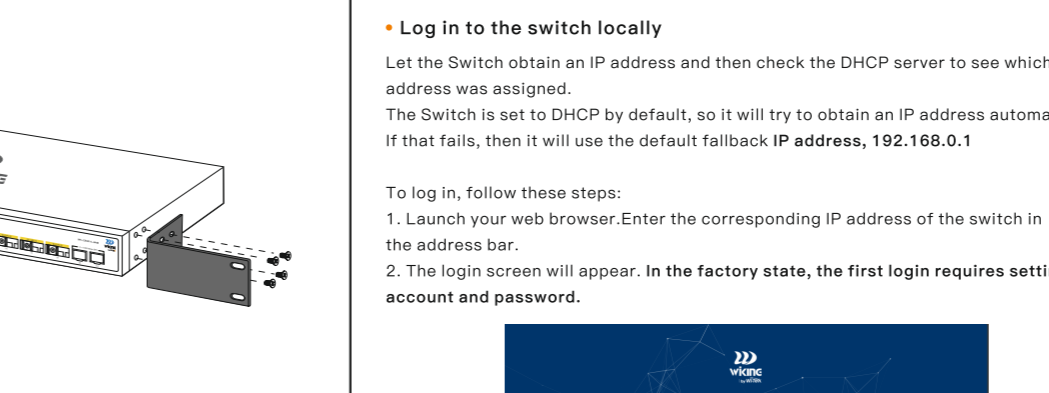

4. Configuration



Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.

The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:



1. Launch your web browser. Enter the corresponding IP address of the switch in the address bar.
2. The login screen will appear. In the factory state, the first login requires setting an account and password.

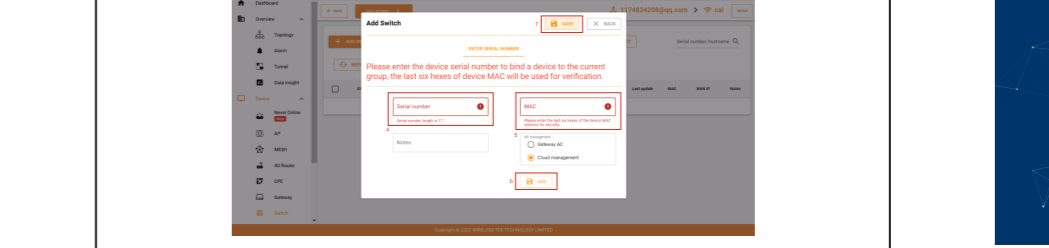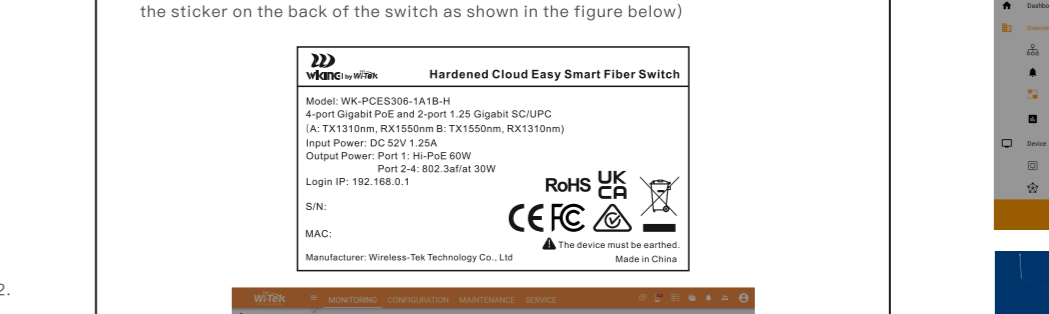

4. Cloud login switch configuration

1. Log in to the cloud management page

(No account, you need to register an account to log in, The URL is http://cloud2.wireless-tek.com)

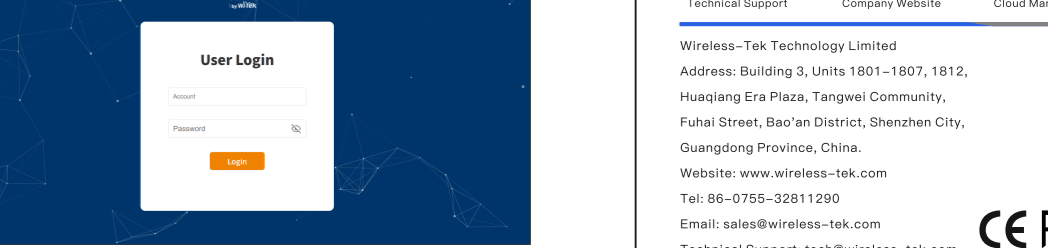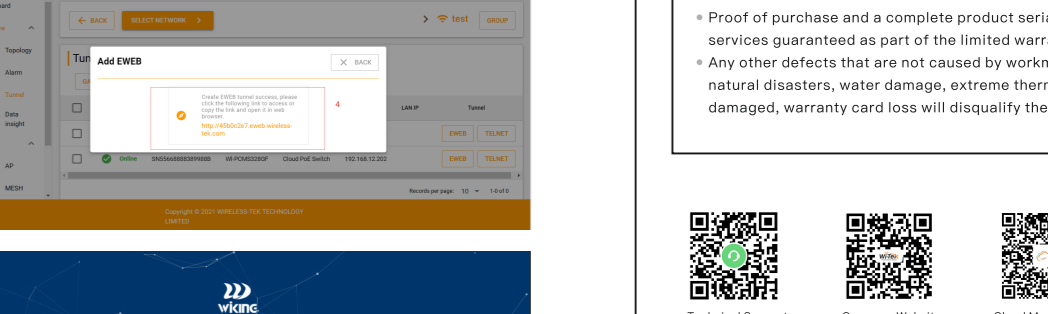

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com