

Quick Installation Guide






Cloud AP Controller





WI-AC150 Hardware Version:V2

www.wireless-tek.com

1.Packing Content

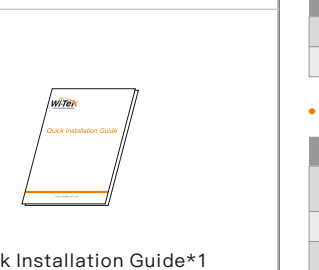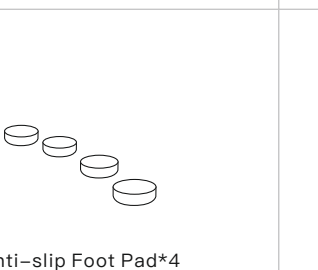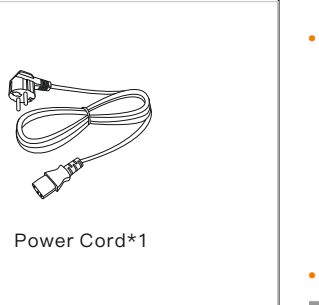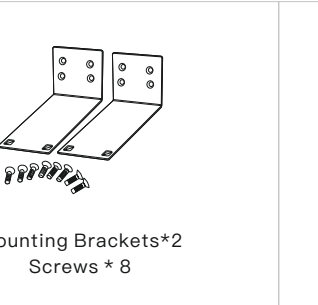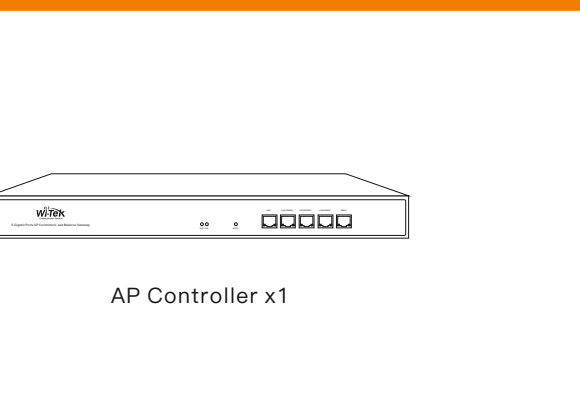

2. Appearance Overview

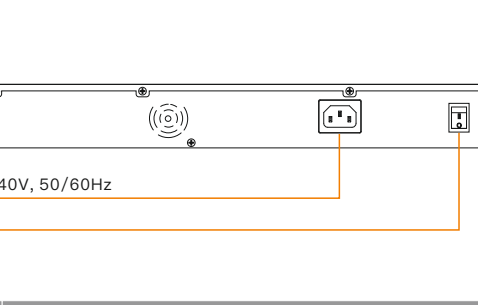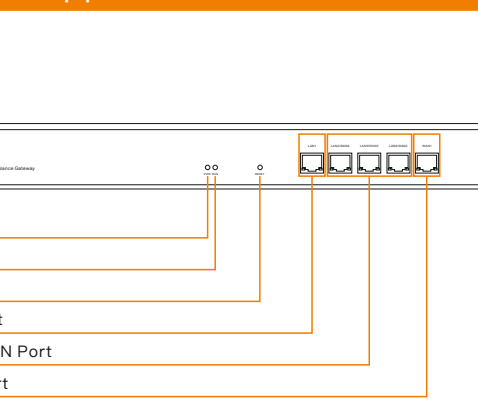



- LED Indicator

Item	Description
PWR	The green light indicates that the device has power input.
RUN	The green light indicates that the device is power on and working normally.



- Port and Button

Item	Description
LAN	10/100/1000Mbps auto-negotiation RJ45 ports for connecting to Ethernet devices.
WAN	10/100/1000Mbps auto-negotiation RJ45 ports for connecting to ISP.
RESET	Press for more than 8 seconds to restore the gateway to factory.




3. Installation

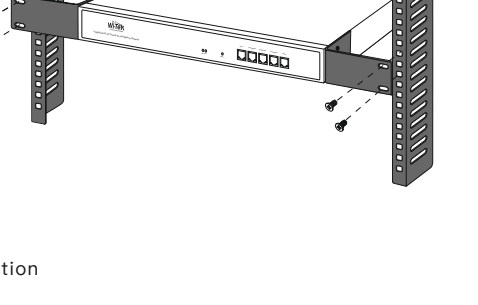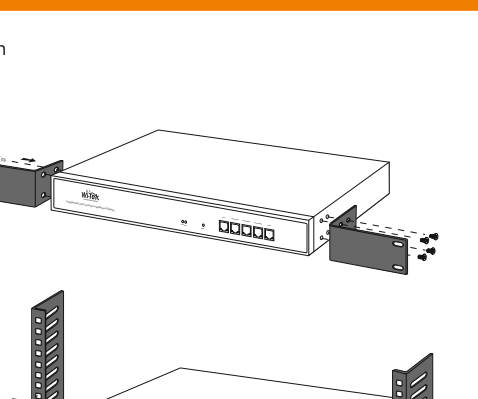




4.Configuration

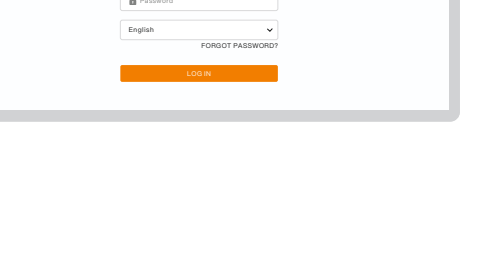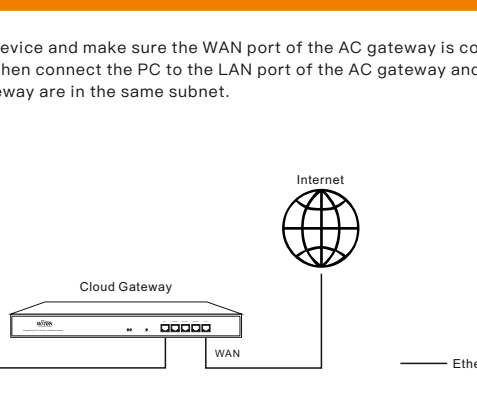




5.Cloud management settings

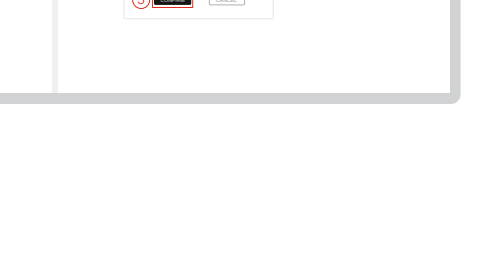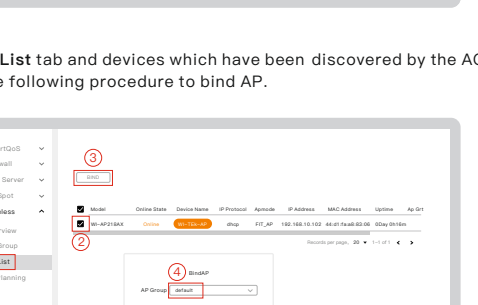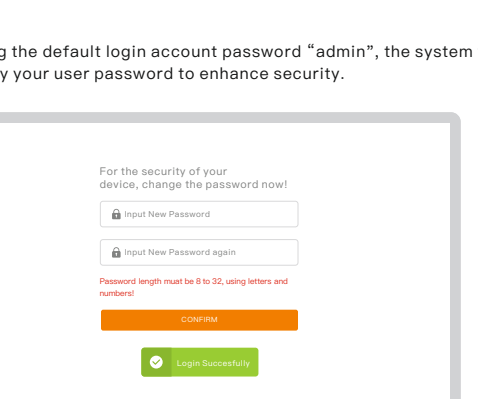

5.Cloud management settings

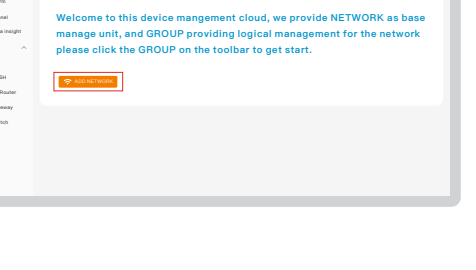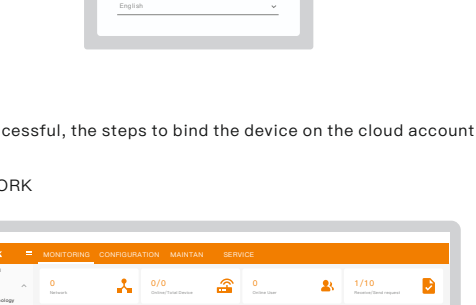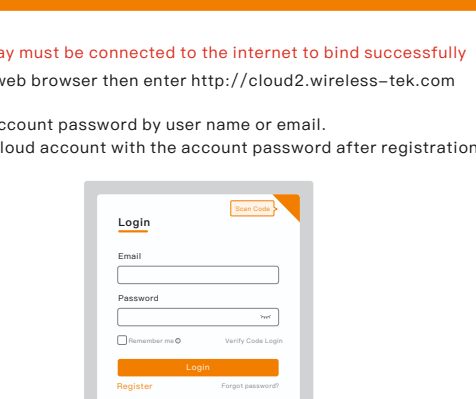

5.Cloud management settings

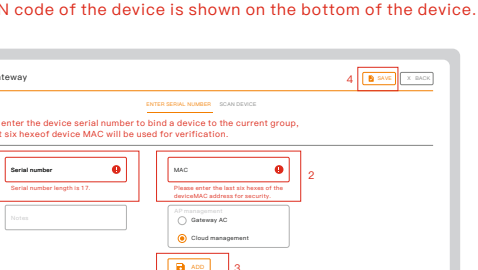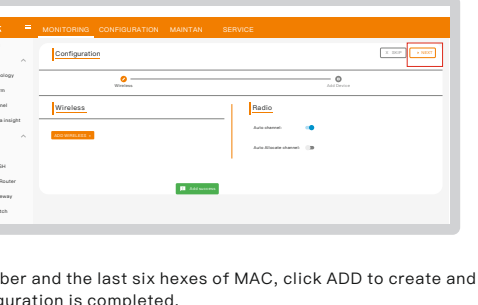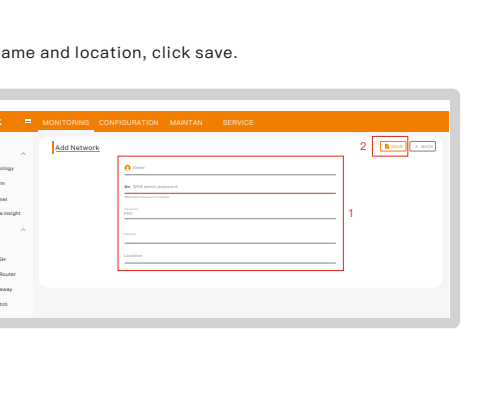

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

