




Quick Installation Guide


Cloud Easy Smart 250m PoE Switch

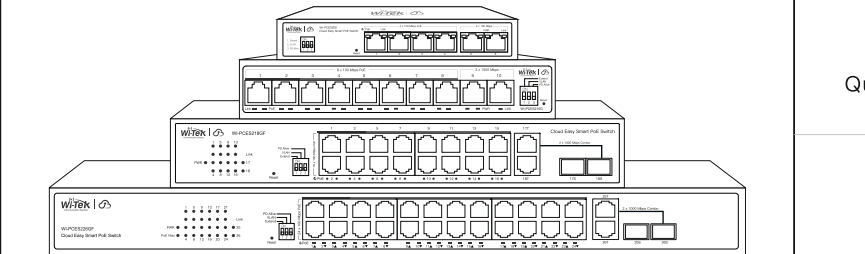

WI-PCES206 | WI-PCES210G | WI-PCES218GF | WI-PCES226GF

www.wireless-tek.com

 
1. Package Contents



Switch x 1




Quick Installation Guide x 1

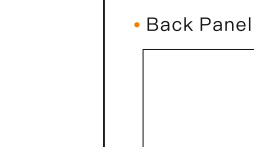

Power Cord x 1



Mats x 4

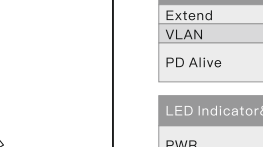


Mounting Accessories
(Hook x 2, Mats x 4, Screw x 8)
(only for WI-PCES218GF WI-PCES226GF)


2. Appearance Overview

For WI-PCES206

• Front Panel

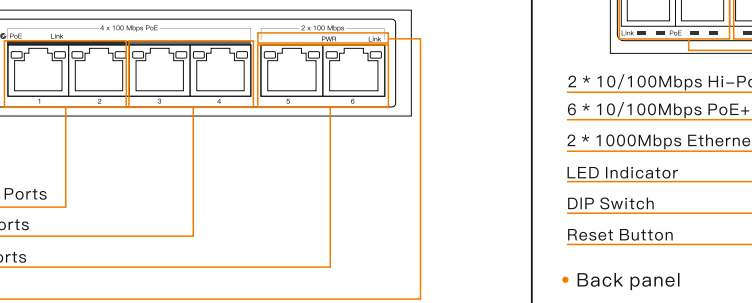

• Back Panel

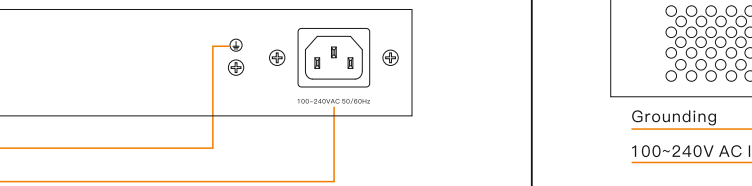


• DIP Switch and LED Indicator and Button


WI-PCES206 DIP Switch Description	
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps
VLAN	Enable Port Isolation, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices
LED Indicator&Button	
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default

For WI-PCES210G

• Front panel

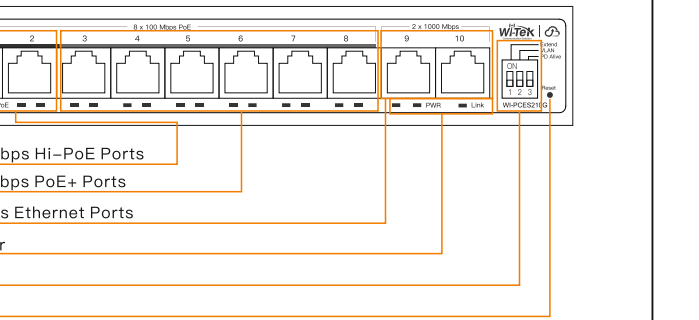

• Back panel

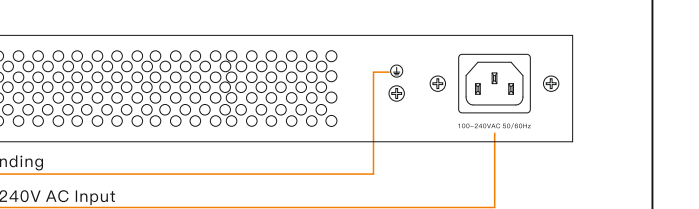


• DIP Switch and LED Indicator and Button


WI-PCES210G DIP Switch Description	
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps
VLAN	Enable Port Isolation, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices
LED Indicator&Button	
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default

For WI-PCES218GF

• Front panel

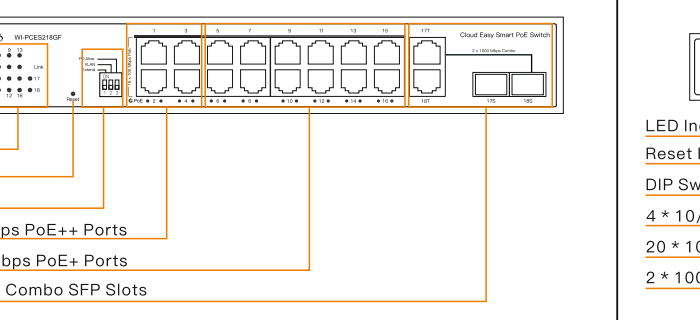

• Back panel

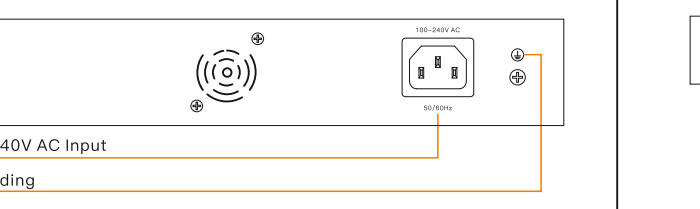


• DIP Switch and LED Indicator and Button


WI-PCES218GF DIP Switch Description	
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps
VLAN	Enable Port Isolation, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices
LED Indicator&Button	
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default

For WI-PCES226GF

• Front panel

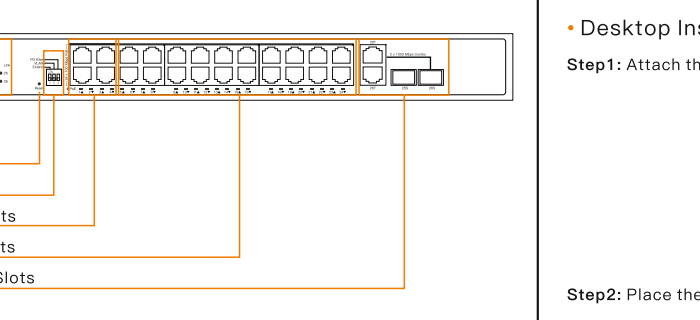

• Back panel

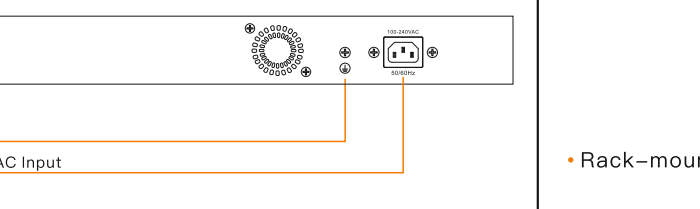


• DIP Switch and LED Indicator and Button

WI-PCES226GF DIP Switch Description	
Extend	The transmission distance of PoE Port can be up to 250m with 10Mbps
VLAN	Enable Port Isolation, each PoE port just can send data to uplink port
PD Alive	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices
LED Indicator&Button	
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
PoE	On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
PoE Max	When total PoE output power > PoE Budget * 80%, the LED indicator will be on
Reset	Hold for >5 sec. to restore factory default


3. Installation

• Desktop Installation


Step1: Attach the mats to the bottom four corners of the switch.

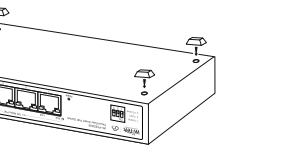

 Step2: Place the switch horizontally on the desktop.



• Rack-mount Installation(For WI-PCES218GF WI-PCES226GF)

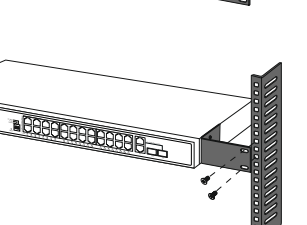


4.Management

• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.
The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1


To log in, follow these steps:

- 1.Launch your web browser. Type the appropriate IP address in the address field.
- 2.The login screen will appear. In the factory state, the first login requires setting an account and password.

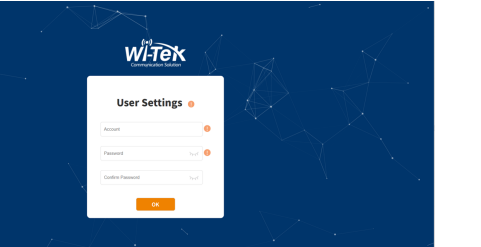


• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

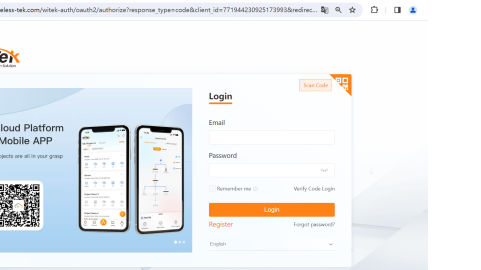



2. Enter the cloud binding switch

(Explain: The switch must be connected to the Internet to bind successfully)

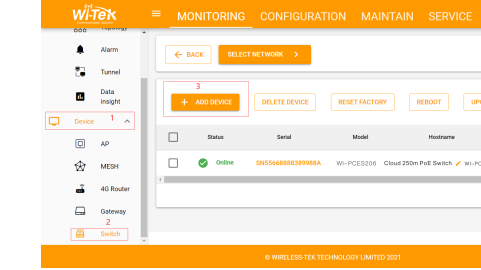




Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.

(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

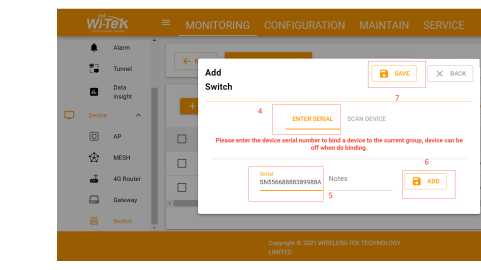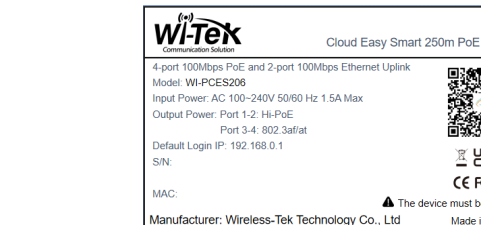

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

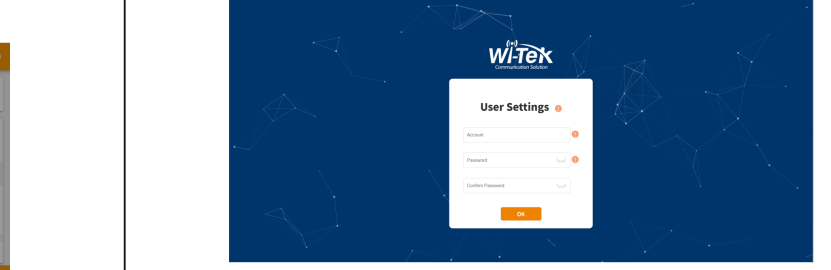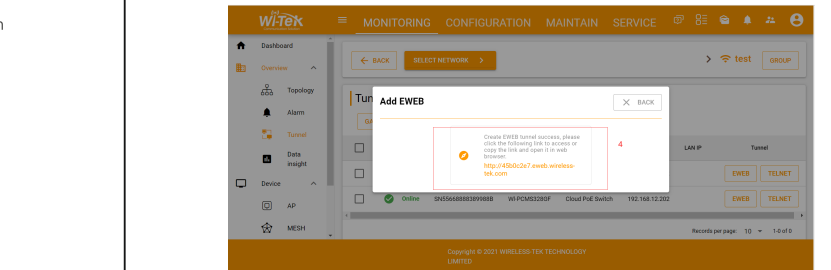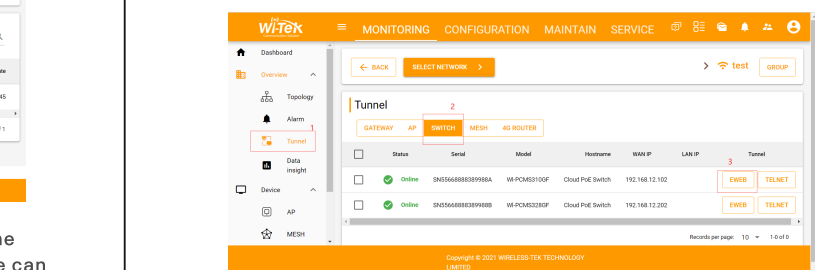

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

