

Cloud L3 Managed Switches CLI User Manual

www.wireless-tek.com

1.1 COMMANDS FOR BASIC CONFIGURATION	31
AUTHENTICATION LINE	31
BANNER	31
BOOT IMG	32
BOOT STARTUP-CONFIG	32
CLOCK SET	33
CONFIG	33
DISABLE	34
ENABLE	34
ENABLE PASSWORD	34
END	35
EXEC-TIMEOUT	35
EXIT	36
HELP	36
HOSTNAME	36
IP HOST	37
IPV6 HOST	37
IP HTTP SERVER	38
LOGIN	38
PASSWORD	38
PRIVILEGE	39
RELOAD	39
SERVICE PASSWORD-ENCRYPTION	39
SERVICE TERMINAL-LENGTH	40
SYSCONTACT	40
SYSLOCATION	41
SET DEFAULT	41
SET BOOT PASSWORD	41
SETUP	42
SHOW CLOCK	42
SHOW CPU USAGE	42
SHOW CPU UTILIZATION	43
SHOW MEMORY USAGE	43
SHOW PRIVILEGE	43
SHOW PRIVILEGE MODE LINE	43
SHOW TECH-SUPPORT	44
SHOW VERSION	44
USERNAME	45
WEB-AUTH PRIVILEGE <1-15>	46
WRITE	46
WRITE RUNNING-CONFIG	46
1.2 COMMANDS FOR TELNET	47
ACCOUNTING EXEC	47

ACCOUNTING COMMAND	48
AUTHENTICATION IP ACCESS-CLASS	49
AUTHENTICATION ENABLE	49
AUTHENTICATION IPV6 ACCESS-CLASS	50
AUTHENTICATION LINE LOGIN	50
AUTHENTICATION SECURITYIP	51
AUTHENTICATION SECURITYIPV6	51
AUTHORIZATION	52
CLEAR LINE VTY <0-31>	53
AUTHORIZATION LINE VTY COMMAND	53
CRYPTO KEY CLEAR RSA	54
TERMINAL LENGTH	55
TELNET	55
TELNET SERVER ENABLE	56
TELNET-SERVER MAX-CONNECTION	56
SSH-SERVER AUTHENTICATION-RETRIES	56
SSH-SERVER ENABLE	57
SSH-SERVER HOST-KEY CREATE RSA	57
SSH-SERVER MAX-CONNECTION	58
SSH-SERVER TIMEOUT	58
SHOW CRYPTO KEY	58
SHOW SSH-SERVER	58
SHOW TELNET LOGIN	59
SHOW USERS	59
WHO	60
1.3 COMMANDS FOR CONFIGURING SWITCH IP	60
INTERFACE VLAN	60
IP ADDRESS	60
IPV6 ADDRESS	61
IP BOOTP-CLIENT ENABLE	61
IP DHCP-CLIENT ENABLE	62
1.4 COMMANDS FOR SNMP	62
RMON ENABLE	62
RMON HISTORY	63
RMON EVENT	63
RMON ALARM	64
SHOW RMON HISTORY	65
SHOW RMON EVENT	66
SHOW RMON EVENT LOG	66
SHOW RMON ALARM	66
CLEAR RMON STATISTICS	67
SHOW PRIVATE-MIB OID	67
SHOW SNMP	67

SHOW SNMP ENGINEID	68
SHOW SNMP GROUP	68
SHOW SNMP MIB	69
SHOW SNMP STATUS	69
SHOW SNMP USER	69
SHOW SNMP VIEW	70
SNMP-SERVER COMMUNITY	70
SNMP-SERVER ENABLE	71
SNMP-SERVER ENABLE TRAPS	71
SNMP-SERVER ENGINEID	72
SNMP-SERVER GROUP	72
SNMP-SERVER HOST	73
SNMP-SERVER SECURITYIP	74
SNMP-SERVER SECURITYIP ENABLE	74
SNMP-SERVER TRAP-SOURCE	75
SNMP-SERVER USER	75
SNMP-SERVER VIEW	76
SWITCHPORT UPDOWN NOTIFICATION ENABLE	76
1.5 COMMANDS FOR SWITCH UPGRADE	77
COPY (FTP)	77
COPY (TFTP)	78
FTP-DIR	79
FTP-SERVER ENABLE	80
FTP-SERVER TIMEOUT	80
IP FTP	80
SHOW FTP	81
SHOW TFTP	81
TFTP-SERVER ENABLE	81
TFTP-SERVER RETRANSMISSION-NUMBER	82
TFTP-SERVER TRANSMISSION-TIMEOUT	82
1.6 COMMANDS FOR FILE SYSTEM	82
CD	82
COPY	83
DELETE	83
DIR	84
PWD	84
RENAME	84
2.1. COMMANDS FOR ETHERNET PORT CONFIGURATION	85
BANDWIDTH	85
CLEAR COUNTERS INTERFACE	85

DESCRIPTION	86
INTERFACE ETHERNET	86
FLOW CONTROL	86
LOOPBACK	87
NEGOTIATION	87
PORT-RATE-STATISTICS INTERVAL	88
RATE-VIOLATION	88
RATE-VIOLATION CONTROL	88
SHOW INTERFACE	89
SHUTDOWN	90
SPEED-DUPLEX	90
STORM-CONTROL	91
STORM-CONTROL	91
STORM-CONTROL BYPASS	92
VIRTUAL-CABLE-TEST	92
SWITCHPORT DISCARD PACKET	93
SWITCHPORT FLOOD-CONTROL	94
SWITCHPORT FLOOD-FORWARDING	94
2.2 COMMANDS FOR PORT ISOLATION FUNCTION	95
ISOLATE-PORT GROUP	95
ISOLATE-PORT GROUP SWITCHPORT INTERFACE	95
SHOW ISOLATE-PORT GROUP	96
2.3.COMMANDS FOR PORT LOOPBACK DETECTION FUNCTION	96
LOOPBACK-DETECTION CONTROL	96
LOOPBACK-DETECTION CONTROL-RECOVERY TIMEOUT	96
LOOPBACK-DETECTION INTERVAL-TIME	97
LOOPBACK-DETECTION SPECIFIED-VLAN	97
SHOW LOOPBACK-DETECTION	98
2.4.COMMANDS FOR ULDP	98
ULDP AGGRESSIVE-MODE	98
ULDP ENABLE	98
ULDP HELLO-INTERVAL	99
ULDP MANUAL-SHUTDOWN	99
ULDP RECOVERY-TIME	99
ULDP RESET	100
SHOW ULDP	100
2.5.COMMANDS FOR LLDP FUNCTION	101
CLEAR LLDP REMOTE-TABLE	101
LLDP ENABLE	101
LLDP ENABLE (PORT)	101

LLDP MANAGEMENT-ADDRESS TLV	101
LLDP MODE	102
LLDP MSGTXHOLD	102
LLDP NEIGHBORS MAX-NUM	102
LLDP NOTIFICATION INTERVAL	103
LLDP TOOMANYNEIGHBORS	103
LLDP TRANSMIT DELAY	103
LLDP TRANSMIT OPTIONAL TLV	104
LLDP TRAP	104
LLDP TX-INTERVAL	104
SHOW DEBUGGING LLDP	105
SHOW LLDP	105
SHOW LLDP INTERFACE ETHERNET	106
SHOW LLDP NEIGHBORS INTERFACE ETHERNET	106
SHOW LLDP TRAFFIC	107
2.6.COMMANDS FOR PORT CHANNEL	107
INTERFACE PORT-CHANNEL	107
LACP PORT-PRIORITY	107
LACP SYSTEM-PRIORITY	108
LACP TIMEOUT	108
LOAD-BALANCE	108
PORT-GROUP	109
PORT-GROUP MODE	109
SHOW PORT-GROUP	109
2.7.COMMANDS FOR MTU	110
MTU	110
2.8.COMMANDS FOR EFM OAM	110
CLEAR ETHERNET-OAM	110
ETHERNET-OAM	111
ETHERNET-OAM ERRORED-FRAME THRESHOLD HIGH	111
ETHERNET-OAM ERRORED-FRAME THRESHOLD LOW	111
ETHERNET-OAM ERRORED-FRAME WINDOW	112
ETHERNET-OAM ERRORED-FRAME-SECONDS THRESHOLD HIGH	112
ETHERNET-OAM ERRORED-FRAME-SECONDS THRESHOLD LOW	112
ETHERNET-OAM ERRORED-FRAME-SECONDS WINDOW	113
ETHERNET-OAM ERRORED-SYMBOL-PERIOD THRESHOLD HIGH	113
ETHERNET-OAM ERRORED-SYMBOL-PERIOD THRESHOLD LOW	113
ETHERNET-OAM ERRORED-SYMBOL-PERIOD WINDOW	114
ETHERNET-OAM LINK-MONITOR	114
ETHERNET-OAM MODE	114
ETHERNET-OAM PERIOD	115
ETHERNET-OAM REMOTE-FAILURE	115

ETHERNET-OAM REMOTE-LOOPBACK	115
ETHERNET-OAM REMOTE-LOOPBACK SUPPORTED	116
ETHERNET-OAM TIMEOUT	116
SHOW ETHERNET-OAM	116
SHOW ETHERNET-OAM EVENTS	117
SHOW ETHERNET-OAM LINK-EVENTS-CONFIGURATION	118
SHOW ETHERNET-OAM LOOPBACK STATUS	118
2.9.COMMANDS FOR PORT SECURITY	118
CLEAR PORT-SECURITY	118
SHOW PORT-SECURITY	119
SWITCHPORT PORT-SECURITY	119
SWITCHPORT PORT-SECURITY MAC-ADDRESS	119
SWITCHPORT PORT-SECURITY MAXIMUM	120
SWITCHPORT PORT-SECURITY VIOLATION	120
2.10.COMMANDS FOR DDM	121
CLEAR TRANSCEIVER THRESHOLD-VIOLATION	121
SHOW TRANSCEIVER	121
SHOW TRANSCEIVER THRESHOLD-VIOLATION	121
TRANSCEIVER-MONITORING	122
TRANSCEIVER-MONITORING INTERVAL	122
TRANSCEIVER THRESHOLD	123
2.11.COMMANDS FOR LLDP-MED	123
CIVIC LOCATION	124
ECS LOCATION	125
LLDP MED FAST COUNT	125
LLDP MED TRAP	125
LLDP TRANSMIT MED TLV ALL	125
LLDP TRANSMIT MED TLV CAPABILITY	126
LLDP TRANSMIT MED TLV EXTENDPOE	126
LLDP TRANSMIT MED TLV LOCATION	126
LLDP TRANSMIT MED TLV INVENTORY	127
LLDP TRANSMIT MED TLV NETWORKPOLICY	127
NETWORK POLICY	128
SHOW LLDP	129
SHOW LLDP [INTERFACE ETHERNET <IFNAME>	129
SHOW LLDP NEIGHBORS	129
SHOW LLDP TRAFFIC	130
2.12.COMMANDS FOR BPDU-TUNNEL	130
BPDU-TUNNEL-PROTOCOL	130
BPDU-TUNNEL-PROTOCOL GROUP-MAC	131
BPDU-TUNNEL-PROTOCOL PROTOCOL-MAC	131

BPDU-TUNNEL-PROTOCOL ETHERNETII	132
BPDU-TUNNEL-PROTOCOL SNAP	132
BPDU-TUNNEL-PROTOCOL LLC	133
2.13.COMMANDS FOR EEE ENERGY-SAVING	134
EEE ENABLE	134
2.14.COMMANDS FOR LED SHUT-OFF	134
PORT-LED SHUTOFF TIME-RANGE	134
3.1 MAC ADDRESS TABLE	134
CLEAR COLLISION-MAC-ADDRESS-TABLE	134
CLEAR MAC-ADDRESS-TABLE DYNAMIC	135
MAC-ADDRESS-LEARNING ENABLE DISABLE	135
MAC-ADDRESS-TABLE AGING-TIME	135
MAC-ADDRESS-TABLE STATIC BLACKHOLE	136
L2-ADDRESS-TABLE STATIC-MULTICAST ADDRESS	137
SHOW COLLISION-MAC-ADDRESS-TABLE	137
SHOW MAC-ADDRESS-TABLE	138
SHOW L2-ADDRESS-TABLE MULTICAST	138
CLEAR MAC-NOTIFICATION STATISTICS	138
MAC-ADDRESS-TABLE NOTIFICATION	139
MAC-ADDRESS-TABLE NOTIFICATION HISTORY-SIZE	139
MAC-ADDRESS-TABLE NOTIFICATION INTERVAL	139
MAC-NOTIFICATION	140
SHOW MAC-NOTIFICATION SUMMARY	140
SNMP-SERVER ENABLE TRAPS MAC-NOTIFICATION	140
4 .1 VLAN	141
VLAN	141
NAME (VLAN)	141
SWITCHPORT INTERFACE	142
SWITCHPORT FORBIDDEN VLAN	143
SWITCHPORT MODE	144
SWITCHPORT HYBRID NATIVE VLAN	145
SWITCHPORT HYBRID ALLOWED VLAN	146
SWITCHPORT ACCESS VLAN	146
SWITCHPORT TRUNK ALLOWED VLAN	147
SWITCHPORT TRUNK NATIVE VLAN	148
SWITCHPORT MODE TRUNK ALLOW-NULL	148
VLAN INGRESS ENABLE	149
VLAN-TRANSLATION ENABLE	149
VLAN-TRANSLATION	150
VLAN-TRANSLATION MISS DROP	151
DOT1Q-TUNNEL ENABLE	151

DOT1Q-TUNNEL SELECTIVE ENABLE	152
DOT1Q-TUNNEL SELECTIVE S-VLAN	152
GARP TIMER JOIN	153
GARP TIMER LEAVE	154
GARP TIMER LEAVEALL	154
NO GARP TIMER	154
GVRP(GLOBAL)	155
GVRP(PORT)	155
PRIVATE-VLAN	156
PRIVATE-VLAN ASSOCIATION	157
SHOW DOT1Q-TUNNEL	157
SHOW GARP TIMER	158
SHOW GVRP FSM INFORMATION	158
SHOW GVRP LEAVEALL FSM INFORMATION	159
SHOW GVRP LEAVETIMER RUNNING INFORMATION	159
SHOW GVRP PORT-MEMBER	160
SHOW GVRP PORT REGISTERD VLAN	160
SHOW GVRP TIMER RUNNING INFORMATION	160
SHOW GVRP VLAN REGISTERD PORT	161
SHOW VLAN	161
SHOW VLAN-TRANSLATION	162
VLAN-TRANSLATION N-TO-1	162
SHOW VLAN-TRANSLATION N-TO-1	163
DYNAMIC-VLAN MAC-VLAN PREFER	164
DYNAMIC-VLAN SUBNET-VLAN PREFER	164
MAC-VLAN VLAN	165
MAC-VLAN	165
PROTOCOL-VLAN	166
SHOW DYNAMIC-VLAN PREFER	167
SHOW MAC-VLAN INTERFACE	167
SHOW PROTOCOL-VLAN	168
SHOW SUBNET-VLAN	168
SHOW SUBNET-VLAN INTERFACE	168
SUBNET-VLAN	169
SWITCHPORT MAC-VLAN ENABLE	170
SWITCHPORT SUBNET-VLAN ENABLE	170
SHOW VOICE-VLAN	171
SWITCHPORT VOICE-VLAN ENABLE	172
VOICE-VLAN	172
VOICE-VLAN VLAN	173
5.1.COMMANDS FOR MSTP	174
ABORT	174
EXIT	175
INSTANCE VLAN	175

NAME	175
REVISION-LEVEL	176
SPANNING-TREE	176
SPANNING-TREE COST	176
SPANNING-TREE DIGEST-SNOOPING	177
SPANNING-TREE FORMAT	178
SPANNING-TREE FORWARD-TIME	178
SPANNING-TREE HELLO-TIME	179
SPANNING-TREE LINK-TYPE P2P	179
SPANNING-TREE MAXAGE	180
SPANNING-TREE MAX-HOP	180
SPANNING-TREE MCHECK	180
SPANNING-TREE MODE	181
SPANNING-TREE MST CONFIGURATION	181
PANNING-TREE MST COST	181
SPANNING-TREE COST-FORMAT	183
SPANNING-TREE MST LOOPGUARD	183
SPANNING-TREE MST PORT-PRIORITY	183
SPANNING-TREE MST PRIORITY	184
SPANNING-TREE MST ROOTGUARD	184
SPANNING-TREE PORTFAST	185
SPANNING-TREE PORT-PRIORITY	185
SPANNING-TREE PRIORITY	185
SPANNING-TREE ROOTGUARD	186
SPANNING-TREE TCFLUSH (GLOBAL MODE)	186
SPANNING-TREE TCFLUSH (PORT MODE)	187
SPANNING-TREE TRANSMIT-HOLD-COUNT	187
SHOW MST-PENDING	187
SHOW SPANNING-TREE	188
SHOW SPANNING-TREE MST CONFIG	189
SPANNING-TREE PROCESS	190
SPANNING-TREE TC-NOTIFY PROCESS0	190
SPANNING-TREE BINDING-PROCESS	190
SPANNING-TREE BINDING-PROCESS LINK-SHARE	191
5.2.ERPS CONFIGURATION	191
ETHERNET TCN-PROPAGATION ERPS TO {ERPS STP}	191
ERPS-RING <RING-NAME>	192
VERSION {V1 V2}	192
OPEN-RING	193
RAPS-VIRTUAL-CHANNEL {WITH WITHOUT}	193
ERPS-RING <RING-NAME> PORT0 [PORT1-NONE]	193
ERPS-RING <RING-NAME> PORT1	194
ERPS-INSTANCE <INSTANCE-ID>	195
DESCRIPTION	196

RING-ID <RING-ID>	196
RPL {PORT0 PORT1} {OWNER NEIGHBOUR}	197
NON-REVERTIVE	197
GUARD-TIMER <GUARD-TIMES>	198
HOLDOFF-TIMER < HOLDOFF-TIMES>	198
WTR-TIMER <WTR-TIMES>	198
PROTECTED-INSTANCE	199
RAPS-MEL <LEVEL-VALUE>	199
CONTROL-VLAN <VLAN-ID>	200
FORCED-SWITCH {PORT0 PORT1}	200
MANUAL-SWITCH {PORT0 PORT1}	200
CLEAR COMMAND	201
SHOW ERPS RING {<RING-NAME> BRIEF}	201
SHOW ERPS INSTANCE [RING <RING-NAME> [INSTANCE <INSTANCE-ID>]]	202
SHOW ERPS STATUS [RING <RING-NAME> [INSTANCE <INSTANCE-ID>]]	203
SHOW ERPS STATISTICS [RING <RING-NAME> [INSTANCE <INSTANCE-ID>]]	204
CLEAR ERPS STATISTICS [RING <RING-NAME> [INSTANCE <INSTANCE-ID>]]	205
6.1 QOS	205
ACCOUNTING	205
CLASS	206
CLASS-MAP	206
CLEAR MLS QOS STATISTICS	207
DROP	207
MATCH	207
MLS QOS AGGREGATE-POLICY	208
MLS QOS COS	209
MLS QOS MAP	209
MLS QOS QUEUE ALGORITHM	210
MLS QOS QUEUE WDRR WEIGHT	211
MLS QOS QUEUE WRR WEIGHT	211
MLS QOS QUEUE BANDWIDTH	212
MLS QOS TRUST	212
POLICY BURST	213
POLICY	213
POLICY AGGREGATE	213
POLICY-MAP	214
SERVICE-POLICY INPUT	214
SERVICE-POLICY INPUT VLAN	215
SET	215
SHOW CLASS-MAP	216
SHOW POLICY-MAP	216
SHOW MLS QOS INTERFACE	217
SHOW MLS QOS IN (INTERFACE <INTERFACE-NAME> POLICY) (VLAN <VLAN-ID>)	219
SHOW MLS QOS MAPS	219

SHOW MLS QOS VLAN	220
SHOW MLS QOS AGGREGATE-POLICY	220
TRANSMIT	221
ACCESS-GROUP REDIRECT TO INTERFACE ETHERNET	221
SHOW FLOW-BASED-REDIRECT	222
ADD	222
MATCH	223
SERVICE-POLICY	224
SET	224
7.1.COMMANDS FOR LAYER 3 INTERFACE	224
DESCRIPTION	224
INTERFACE VLAN	225
NO INTERFACE IFNAME	225
SHOW IP ROUTE	225
7.2.COMMANDS FOR IPV4/V6 CONFIGURATION	226
CLEAR IP TRAFFIC	226
CLEAR IPV6 NEIGHBOR	226
IP ADDRESS	227
IP DEFAULT-GATEWAY	227
IPV6 ADDRESS	227
IPV6 ND DAD ATTEMPTS	228
IPV6 ND NS-INTERVAL	228
IPV6 NEIGHBOR	228
SHOW IP INTERFACE	229
SHOW IP TRAFFIC	229
SHOW IPV6 INTERFACE	231
SHOW IPV6 ROUTE	232
SHOW IPV6 NEIGHBORS	233
SHOW IPV6 TRAFFIC	233
IP ROUTE	235
7.3.COMMANDS FOR ARP CONFIGURATION	235
ARP	235
CLEAR ARP-CACHE	235
CLEAR ARP TRAFFIC	236
SHOW ARP	236
SHOW ARP TRAFFIC	237
7.4.COMMANDS FOR ARP SCANNING PREVENTION	237
ANTI-ARPCAN ENABLE	237
ANTI-ARPCAN PORT-BASED THRESHOLD	237
ANTI-ARPCAN IP-BASED THRESHOLD	238
ANTI-ARPCAN TRUST	238

ANTI-ARPCAN TRUST IP	238
ANTI-ARPCAN RECOVERY ENABLE	239
ANTI-ARPCAN RECOVERY TIME	239
ANTI-ARPCAN LOG ENABLE	239
ANTI-ARPCAN TRAP ENABLE	240
SHOW ANTI-ARPCAN	240
7.5.COMMANDS FOR PREVENTING ARP SPOOFING	241
IP ARP-SECURITY UPDATEPROTECT	241
IP ARP-SECURITY LEARNPROTECT	241
IP ARP-SECURITY CONVERT	242
CLEAR IP ARP DYNAMIC	242
CLEAR IPV6 ND DYNAMIC	242
7.6.COMMAND FOR ARP GUARD	242
ARP-GUARD IP	242
7.7.COMMANDS FOR GRATUITOUS ARP CONFIGURATION	243
IP GRATUITOUS-ARP	243
SHOW IP GRATUITOUS-ARP	243
7.8.COMMANDS FOR DYNAMIC ARP INSPECTION	244
IP ARP INSPECTION	244
IP ARP INSPECTION TRUST	244
IP ARP INSPECTION LIMIT-RATE	244
8.1.DHCP	245
BOOTFILE	245
CLEAR IP DHCP BINDING	245
CLEAR IP DHCP CONFLICT	246
CLEAR IP DHCP SERVER STATISTICS	246
CLIENT-IDENTIFIER	246
DEFAULT-ROUTER	247
DNS-SERVER	247
DOMAIN-NAME	247
HARDWARE-ADDRESS	248
HOST	248
IP DHCP CONFLICT LOGGING	249
IP DHCP DISABLE	249
IP DHCP EXCLUDED-ADDRESS	249
IP DHCP POOL	250
IP DHCP CONFLICT PING-DETECTION ENABLE	250
IP DHCP PING PACKETS	250
IP DHCP PING TIMEOUT	251
LEASE	251

MAX-LEASE-TIME	252
NETBIOS-NAME-SERVER	252
NETBIOS-NODE-TYPE	252
NETWORK-ADDRESS	253
NEXT-SERVER	253
OPTION	254
SERVICE DHCP	254
SHOW IP DHCP BINDING	254
SHOW IP DHCP CONFLICT	255
SHOW IP DHCP RELAY INFORMATION OPTION	255
SHOW IP DHCP SERVER STATISTICS	256
IP DHCP BROADCAST SUPPRESS	257
IP DHCP RELAY SHARE-VLAN <VLANID> SUB-VLAN <VLANLIST>	257
IP FORWARD-PROTOCOL UDP BOOTPS	258
IP HELPER-ADDRESS	258
SHOW IP FORWARD-PROTOCOL	258
SHOW IP HELPER-ADDRESS	259
CLEAR IPV6 DHCP BINDING	259
CLEAR IPV6 DHCP CONFLICT	259
CLEAR IPV6 DHCP STATISTICS	260
DNS-SERVER	260
DOMAIN-NAME	261
EXCLUDED-ADDRESS	261
IPV6 ADDRESS	261
IPV6 DHCP CLIENT PD	262
IPV6 DHCP CLIENT PD HINT	262
IPV6 DHCP POOL	263
IPV6 DHCP RELAY DESTINATION	263
IPV6 DHCP SERVER	264
IPV6 GENERAL-PREFIX	264
IPV6 LOCAL POOL	265
LIFETIME	266
NETWORK-ADDRESS	266
PREFIX-DELEGATION	267
PREFIX-DELEGATION POOL	267
SERVICE DHCPV6	268
SHOW IPV6 DHCP	268
SHOW IPV6 DHCP BINDING	269
SHOW IPV6 DHCP CONFLICT	269
SHOW IPV6 DHCP INTERFACE	269
SHOW IPV6 DHCP POOL	270
SHOW IPV6 DHCP STATISTICS	270
SHOW IPV6 GENERAL-PREFIX	271
SHOW IPV6 LOCAL POOL	272

IP DHCP RELAY INFORMATION OPTION	272
IP DHCP RELAY INFORMATION OPTION DELIMITER	272
IP DHCP RELAY INFORMATION OPTION REMOTE-ID	273
IP DHCP RELAY INFORMATION OPTION REMOTE-ID FORMAT	273
IP DHCP RELAY INFORMATION OPTION SELF-DEFINED REMOTE-ID	274
IP DHCP RELAY INFORMATION OPTION SELF-DEFINED REMOTE-ID FORMAT	274
IP DHCP RELAY INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID	275
IP DHCP RELAY INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID FORMAT	275
IP DHCP RELAY INFORMATION OPTION SUBSCRIBER-ID	276
IP DHCP RELAY INFORMATION OPTION SUBSCRIBER-ID FORMAT	276
IP DHCP RELAY INFORMATION POLICY	277
IP DHCP SERVER RELAY INFORMATION ENABLE	278
SHOW IP DHCP RELAY INFORMATION OPTION	278
OPTION 43 ASCII LINE	278
OPTION 43 HEX WORD	279
OPTION 43 IP A.B.C.D	279
OPTION 60 ASCII LINE	280
OPTION 60 HEX WORD	280
OPTION 60 IP A.B.C.D	280
ADDRESS RANGE	281
CLASS	281
IPv6 DHCP CLASS	282
IPv6 DHCP RELAY REMOTE-ID	282
IPv6 DHCP RELAY REMOTE-ID OPTION	282
IPv6 DHCP RELAY SUBSCRIBER-ID	283
IPv6 DHCP RELAY SUBSCRIBER-ID OPTION	283
IPv6 DHCP RELAY SUBSCRIBER-ID SELECT DELIMITER	284
IPv6 DHCP SERVER REMOTE-ID OPTION	284
IP DHCP SERVER SELECT RELAY-FORW	285
IPv6 DHCP SERVER SUBSCRIBER-ID OPTION	285
IPv6 DHCP SNOOPING INFORMATION OPTION REMOTE-ID FORMAT	285
IPv6 DHCP SNOOPING INFORMATION OPTION SUBSCRIBER-ID FORMAT	286
IPv6 DHCP SNOOPING REMOTE-ID	286
IPv6 DHCP SNOOPING REMOTE-ID OPTION	287
IPv6 DHCP SNOOPING REMOTE-ID POLICY	287
IPv6 DHCP SNOOPING SUBSCRIBER-ID	288
IPv6 DHCP SNOOPING SUBSCRIBER-ID OPTION	288
IPv6 DHCP SNOOPING SUBSCRIBER-ID POLICY	289
IPv6 DHCP SNOOPING SUBSCRIBER-ID SELECT DELIMITER	289
IPv6 DHCP USE CLASS	290
REMOTE-ID SUBSCRIBER-ID	290
SHOW IPv6 DHCP RELAY OPTION	291
SHOW IPv6 DHCP SNOOPING OPTION	291
ENABLE TRUSTVIEW KEY	291

IP DHCP SNOOPING	292
IP DHCP SNOOPING ACTION	292
IP DHCP SNOOPING ACTION MAXNUM	293
IP DHCP SNOOPING BINDING	293
IP DHCP SNOOPING BINDING DOT1X	293
IP DHCP SNOOPING BINDING USER	294
IP DHCP SNOOPING BINDING USER-CONTROL	294
IP DHCP SNOOPING BINDING USER-CONTROL MAX-USER	295
IP DHCP SNOOPING INFORMATION ENABLE	295
IP DHCP SNOOPING INFORMATION OPTION ALLOW-UNTRUSTED (REPLACE)	296
IP DHCP SNOOPING INFORMATION OPTION DELIMITER	296
IP DHCP SNOOPING INFORMATION OPTION REMOTE-ID	297
IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED REMOTE-ID	297
IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED REMOTE-ID FORMAT	298
IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID	298
IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID FORMAT	299
IP DHCP SNOOPING INFORMATION OPTION SUBSCRIBER-ID	299
IPV6 DHCP SNOOPING INFORMATION OPTION SUBSCRIBER-ID FORMAT	299
IP DHCP SNOOPING LIMIT-RATE	300
IP DHCP SNOOPING TRUST	301
IP DHCP SNOOPING VLAN	301
IP USER HELPER-ADDRESS	301
IP USER PRIVATE PACKET VERSION TWO	302
SHOW IP DHCP SNOOPING	302
SHOW IP DHCP SNOOPING BINDING ALL	304
SHOW TRUSTVIEW STATUS	305
IP DHCP SNOOPING INFORMATION ENABLE	305
9.1 IPV4 MULTICAST	306
ACCESS-LIST (MULTICAST DESTINATION CONTROL)	306
ACCESS-LIST (MULTICAST SOURCE CONTROL)	307
IP MULTICAST DESTINATION-CONTROL ACCESS-GROUP	307
IP MULTICAST DESTINATION-CONTROL ACCESS-GROUP (SIP)	308
IP MULTICAST DESTINATION-CONTROL ACCESS-GROUP (VMAC)	308
IP MULTICAST POLICY	309
IP MULTICAST SOURCE-CONTROL	309
IP MULTICAST SOURCE-CONTROL ACCESS-GROUP	309
IP MULTICAST DESTINATION-CONTROL	310
PROFILE-ID (MULTICAST DESTINATION CONTROL RULE LIST)	310
SHOW IP MULTICAST DESTINATION-CONTROL	310
SHOW IP MULTICAST DESTINATION-CONTROL ACCESS-LIST	311
SHOW IP MULTICAST DESTINATION-CONTROL FILTER-PROFILE-LIST	311
SHOW IP MULTICAST POLICY	311
SHOW IP MULTICAST SOURCE-CONTROL	312
SHOW IP MULTICAST SOURCE-CONTROL ACCESS-LIST	312

CLEAR IP IGMP SNOOPING VLAN	312
CLEAR IP IGMP SNOOPING VLAN <1-4094> MROUTER-PORT	313
IP IGMP SNOOPING	313
IP IGMP SNOOPING PROXY	313
IP IGMP SNOOPING VLAN	313
IP IGMP SNOOPING VLAN IMMEDIATE-LEAVE	314
IP IGMP SNOOPING VLAN <ID> IMMEDIATELY-LEAVE MAC-BASED	314
IP IGMP SNOOPING VLAN L2-GENERAL-QUERIER	315
IP IGMP SNOOPING VLAN L2-GENERAL-QUERIER-SOURCE	315
IP IGMP SNOOPING VLAN L2-GENERAL-QUERIER-VERSION	315
IP IGMP SNOOPING VLAN LIMIT	316
IP IGMP SNOOPING VLAN INTERFACE (ETHERNET PORT-CHANNEL) IFNAME	316
IP IGMP SNOOPING VLAN MROUTER-PORT INTERFACE	317
IP IGMP SNOOPING VLAN MROUTER-PORT LEARNPIM	317
IP IGMP SNOOPING VLAN MRPT	317
IP IGMP SNOOPING VLAN QUERY-INTERVAL	318
IP IGMP SNOOPING VLAN QUERY-MRSP	318
IP IGMP SNOOPING VLAN QUERY-ROBUSTNESS	318
IP IGMP SNOOPING VLAN REPORT SOURCE-ADDRESS	318
IP IGMP SNOOPING VLAN SPECIFIC-QUERY-MRSP	319
IP IGMP SNOOPING VLAN STATIC-GROUP	319
IP IGMP SNOOPING VLAN SUPPRESSION-QUERY-TIME	319
SHOW IP IGMP SNOOPING	320
CLEAR IPV6 MLD SNOOPING VLAN	321
CLEAR IPV6 MLD SNOOPING VLAN <1-4094> MROUTER-PORT	321
IPV6 MLD SNOOPING	322
IPV6 MLD SNOOPING VLAN	322
IPV6 MLD SNOOPING VLAN IMMEDIATE-LEAVE	322
IPV6 MLD SNOOPING VLAN L2-GENERAL-QUERIER	323
IPV6 MLD SNOOPING VLAN LIMIT	323
IPV6 MLD SNOOPING VLAN MROUTER-PORT INTERFACE	324
IPV6 MLD SNOOPING VLAN MROUTER-PORT LEARNPIM6	324
IPV6 MLD SNOOPING VLAN MRPT	324
IPV6 MLD SNOOPING VLAN QUERY-INTERVAL	325
IPV6 MLD SNOOPING VLAN QUERY-MRSP	325
IPV6 MLD SNOOPING VLAN QUERY-ROBUSTNESS	325
IPV6 MLD SNOOPING VLAN STATIC-GROUP	326
IPV6 MLD SNOOPING VLAN SUPPRESSION-QUERY-TIME	326
SHOW IPV6 MLD SNOOPING	326
MULTICAST-VLAN	328
MULTICAST-VLAN ASSOCIATION	328
MULTICAST-VLAN ASSOCIATION INTERFACE	329
MULTICAST-VLAN MODE	329
SWITCHPORT ASSOCIATION MULTICAST-VLAN	330

10.1 COMMANDS FOR ACL	330
ABSOLUTE-PERIODIC/PERIODIC	331
ABSOLUTE START	331
ACCESS-LIST (IP EXTENDED)	332
ACCESS-LIST (IP STANDARD)	334
ACCESS-LIST(MAC EXTENDED)	334
ACCESS-LIST(MAC-IP EXTENDED)	335
ACCESS-LIST (MAC STANDARD)	337
CLEAR ACCESS-GROUP STATISTIC	338
FIREWALL	338
IP ACCESS EXTENDED	338
IP ACCESS STANDARD	339
IPV6 ACCESS-LIST	339
IPV6 ACCESS STANDARD	339
IPV6 ACCESS EXTENDED	340
{IP IPV6 MAC MAC-IP} ACCESS-GROUP	340
MAC ACCESS EXTENDED	341
MAC-IP ACCESS EXTENDED	341
PERMIT DENY (IP EXTENDED)	342
PERMIT DENY (IP STANDARD)	343
PERMIT DENY (IPV6 EXTENDED)	343
PERMIT DENY (IPV6 STANDARD)	345
PERMIT DENY (MAC EXTENDED)	345
PERMIT DENY (MAC-IP EXTENDED)	346
SHOW ACCESS-LISTS	349
SHOW ACCESS-GROUP	349
SHOW FIREWALL	350
SHOW IPV6 ACCESS-LISTS	350
SHOW TIME-RANGE	350
TIME-RANGE	351
10.2 COMMANDS FOR SELF-DEFINED ACL	351
USERDEFINED-ACCESS-LIST STANDARD OFFSET	351
USERDEFINED-ACCESS-LIST STANDARD	353
USERDEFINED ACCESS-GROUP	353
VACL USERDEFINED ACCESS-GROUP	354
10.3 COMMANDS FOR 802.1X	355
DOT1X ACCEPT-MAC	355
DOT1X EAPOR ENABLE	356
DOT1X ENABLE	356
DOT1X IPV6 PASSTHROUGH	357
DOT1X GUEST-VLAN	357
DOT1X MACFILTER ENABLE	358

DOT1X MACBASED GUEST-VLAN	358
DOT1X MACBASED PORT-DOWN-FLUSH	359
DOT1X MAX-REQ	359
DOT1X USER ALLOW-MOVEMENT	360
DOT1X USER FREE-RESOURCE	360
DOT1X MAX-USER MACBASED	361
DOT1X MAX-USER USERBASED	361
DOT1X PORTBASED MODE SINGLE-MODE	362
DOT1X PORT-CONTROL	362
DOT1X PORT-METHOD	363
DOT1X PRIVATECLIENT ENABLE	364
DOT1X PRIVATECLIENT PROTECT ENABLE	364
DOT1X RE-AUTHENTICATE	364
DOT1X RE-AUTHENTICATION	365
DOT1X TIMEOUT QUIET-PERIOD	365
DOT1X TIMEOUT RE-AUTHPERIOD	365
DOT1X TIMEOUT TX-PERIOD	366
DOT1X UNICAST ENABLE	366
SHOW DOT1X	366

10.4 COMMANDS FOR THE NUMBER LIMITATION FUNCTION OF MAC AND IP IN PORT, VLAN 367

IP ARP DYNAMIC MAXIMUM	368
IPV6 ND DYNAMIC MAXIMUM	368
SHOW ARP-DYNAMIC COUNT	369
SHOW MAC-ADDRESS DYNAMIC COUNT	369
SHOW ND-DYNAMIC COUNT	370
SWITCHPORT ARP DYNAMIC MAXIMUM	370
SWITCHPORT MAC-ADDRESS DYNAMIC MAXIMUM	371
SWITCHPORT MAC-ADDRESS VIOLATION	371
SWITCHPORT ND DYNAMIC MAXIMUM	372
VLAN MAC-ADDRESS DYNAMIC MAXIMUM	372

10.5 COMMANDS FOR AM CONFIGURATION 373

AM ENABLE	373
AM PORT	373
AM IP-POOL	374
AM MAC-IP-POOL	374
NO AM ALL	374
SHOW AM	375

10.6 COMMANDS FOR SECURITY FEATURE 375

DOSATTACK-CHECK SRCIP-EQUAL-DSTIP ENABLE	375
DOSATTACK-CHECK TCP-FLAGS ENABLE	376
DOSATTACK-CHECK SRCPORT-EQUAL-DSTPORT ENABLE	376

DOSATTACK-CHECK ICMP-ATTACKING ENABLE	377
DOSATTACK-CHECK ICMPV4-SIZE	377
10.7 COMMANDS FOR TACACS+	377
TACACS-SERVER AUTHENTICATION HOST	377
TACACS-SERVER KEY	378
TACACS-SERVER NAS-IPV4	379
TACACS-SERVER TIMEOUT	379
10.8 COMMANDS FOR RADIUS	380
AAA ENABLE	380
AAA-ACCOUNTING ENABLE	380
AAA-ACCOUNTING UPDATE	380
RADIUS NAS-IPV4	381
RADIUS NAS-IPV6	381
RADIUS-SERVER ACCOUNTING HOST	382
RADIUS-SERVER AUTHENTICATION HOST	383
RADIUS-SERVER DEAD-TIME	384
RADIUS-SERVER KEY	384
RADIUS-SERVER RETRANSMIT	385
RADIUS-SERVER TIMEOUT	385
RADIUS-SERVER ACCOUNTING-INTERIM-UPDATE TIMEOUT	386
SHOW AAA AUTHENTICATED-USER	387
SHOW AAA AUTHENTICATING-USER	387
SHOW AAA CONFIG	388
SHOW RADIUS AUTHENTICATED-USER COUNT	388
SHOW RADIUS AUTHENTICATING-USER COUNT	388
SHOW RADIUS COUNT	389
10.9 COMMANDS FOR SSL CONFIGURATION	389
IP HTTP SECURE-SERVER	389
IP HTTP SECURE-PORT	389
IP HTTP SECURE- CIPHERSUITE	390
SHOW IP HTTP SECURE-SERVER STATUS	390
10.10 COMMANDS FOR IPV6 SECURITY RA	390
IPV6 SECURITY-RA ENABLE	390
IPV6 SECURITY-RA ENABLE	391
SHOW IPV6 SECURITY-RA	391
10.11 COMMANDS FOR MAB	392
AUTHENTICATION MAB	392
CLEAR MAC-AUTHENTICATION-BYPASS BINDING	392
MAC-AUTHENTICATION-BYPASS BINDING-LIMIT	393
MAC-AUTHENTICATION-BYPASS ENABLE	393

MAC-AUTHENTICATION-BYPASS GUEST-VLAN	393
MAC-AUTHENTICATION-BYPASS SPOOFING-GARP-CHECK	394
MAC-AUTHENTICATION-BYPASS TIMEOUT LINKUP-PERIOD	394
MAC-AUTHENTICATION-BYPASS TIMEOUT OFFLINE-DETECT	395
MAC-AUTHENTICATION-BYPASS TIMEOUT QUIET-PERIOD	395
MAC-AUTHENTICATION-BYPASS TIMEOUT REAUTH-PERIOD	396
MAC-AUTHENTICATION-BYPASS TIMEOUT STALE-PERIOD	396
MAC-AUTHENTICATION-BYPASS USERNAME-FORMAT	396
SHOW MAC-AUTHENTICATION-BYPASS	397
10.12 COMMANDS FOR MAB PPPOE INTERMEDIATE AGENT	398
PPPOE INTERMEDIATE-AGENT	398
PPPOE INTERMEDIATE-AGENT (PORT)	398
PPPOE INTERMEDIATE-AGENT CIRCUIT-ID	398
PPPOE INTERMEDIATE-AGENT DELIMITER	399
PPPOE INTERMEDIATE-AGENT FORMAT	399
PPPOE INTERMEDIATE-AGENT REMOTE-ID	399
PPPOE INTERMEDIATE-AGENT TRUST	400
PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED CIRCUIT-ID	400
PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED REMOTEID	401
PPPOE INTERMEDIATE-AGENT TYPE TR-101 CIRCUIT-ID ACCESS-NODE-ID	401
PPPOE INTERMEDIATE-AGENT VENDOR-TAG STRIP	403
SHOW PPPOE INTERMEDIATE-AGENT ACCESS-NODE-ID	403
SHOW PPPOE INTERMEDIATE-AGENT IDENTIFIER-STRING OPTION DELIMITER	403
SHOW PPPOE INTERMEDIATE-AGENT INFO	404
10.13 COMMANDS FOR VLAN-ACL	404
CLEAR VACL STATISTIC VLAN	404
SHOW VACL VLAN	405
VACL IP ACCESS-GROUP	406
VACL IPV6 ACCESS-GROUP	406
VACL MAC ACCESS-GROUP	407
VACL MAC-IP ACCESS-GROUP	407
10.14 COMMANDS FOR SAVI	408
IPV6 CPS PREFIX	408
IPV6 CPS PREFIX CHECK ENABLE	408
IPV6 DHCP SNOOPING TRUST	409
IPV6 ND SNOOPING TRUST	409
SAVI CHECK BINDING	410
SAVI ENABLE	410
SAVI IPV6 BINDING NUM	411
SAVI IPV6 CHECK SOURCE BINDING	411
SAVI IPV6 CHECK SOURCE IP-ADDRESS MAC-ADDRESS	412
SAVI IPV6 {DHCP-ONLY SLAAC-ONLY DHCP-SLAAC} ENABLE	412

SAVI IPV6 MAC-BINDING-LIMIT	413
SAVI MAX-DAD-DALAY	413
SAVI MAX-DAD-PREPARE-DELAY	413
SAVI MAX-SLAAC-LIFE	414
SAVI TIMEOUT BIND-PROTECT	414
SHOW SAVI IPV6 CHECK SOURCE BINDING	415
11.1.COMMANDS FOR MRPP	415
CONTROL-VLAN	415
CLEAR MRPP STATISTICS	416
ENABLE	416
ERRP DOMAIN	417
FAIL-TIMER	417
HELLO-TIMER	417
MRPP EAPS COMPATIBLE	418
MRPP ENABLE	418
MRPP ERRP COMPATIBLE	418
MRPP POLL-TIME	419
MRPP RING	419
MRPP RING PRIMARY-PORT	419
MRPP RING SECONDARY-PORT	420
NODE-MODE	420
SHOW MRPP	420
SHOW MRPP STATISTICS	421
11.2.COMMANDS FOR ULPP	421
CLEAR ULPP FLUSH COUNTER INTERFACE	421
CONTROL VLAN	421
DESCRIPTION	422
FLUSH {ENABLE DISABLE} ARP	422
FLUSH {ENABLE DISABLE} MAC	422
FLUSH {ENABLE DISABLE} MAC-VLAN	422
PREEMPTION DELAY	423
PREEMPTION MODE	423
PROTECT VLAN-REFERENCE-INSTANCE	423
SHOW ULPP FLUSH COUNTER INTERFACE	424
SHOW ULPP FLUSH-RECEIVE-PORT	424
SHOW ULPP GROUP	424
ULPP CONTROL VLAN	425
ULPP FLUSH {ENABLE DISABLE} ARP	425
ULPP FLUSH {ENABLE DISABLE} MAC	426
ULPP FLUSH {ENABLE DISABLE} MAC-VLAN	426
ULPP GROUP	426
ULPP GROUP {MASTER SLAVE}	427
ULPP GROUP <INTEGER> {MASTER SLAVE}	427
NO ULPP GROUP <INTEGER> {MASTER SLAVE}	427

11.3.COMMANDS FOR ULSM	427
SHOW ULSM GROUP	427
ULSM GROUP	427
ULSM GROUP {UPLINK DOWNLINK}.....	428
12.1.COMMANDS FOR MIRRORING CONFIGURATION	428
MONITOR SESSION SOURCE INTERFACE	428
MONITOR SESSION SOURCE INTERFACE ACCESS-LIST	429
MONITOR SESSION DESTINATION INTERFACE	429
SHOW MONITOR	430
MIRROR SAMPLE RATE	430
12.2.COMMANDS FOR SFLOW	430
SFLOW AGENT-ADDRESS	430
SFLOW ANALYZER	431
SFLOW COUNTER-INTERVAL	431
SFLOW DATA-LEN	431
SFLOW DESTINATION	432
SFLOW HEADER-LEN	432
SFLOW PRIORITY	432
SFLOW RATE	433
SHOW SFLOW	433
12.3.COMMANDS FOR RSPAN CONFIGURATION	434
REMOTE-SPAN	434
MONITOR SESSION REMOTE VLAN	435
MONITOR SESSION REFLECTOR-PORT	435
13.1 COMMANDS FOR SNTP	436
CLOCK TIMEZONE	436
SNTP POLLTIME	436
SNTP SERVER	436
SHOW SNTP	437
13.2 COMMANDS FOR NTP	437
NTP ACCESS-GROUP	437
NTP AUTHENTICATE	437
NTP AUTHENTICATION-KEY	438
NTP BROADCAST SERVER COUNT	438
NTP DISABLE	438
NTP ENABLE	439
NTP IPV6 MULTICAST CLIENT	439
NTP MULTICAST CLIENT	439
NTP SERVER	440
NTP SYN-INTERVAL	440

NTP TRUSTED-KEY	441
SHOW NTP STATUS	441
SHOW NTP SESSION	441
13.3 COMMANDS FOR SUMMER TIME	442
CLOCK SUMMER-TIME ABSOLUTE	442
CLOCK SUMMER-TIME RECURRING	443
CLOCK SUMMER-TIME RECURRING	444
14.1 SHOW	445
CLEAR HISTORY ALL-USERS	445
CLEAR LOGGING	445
HISTORY ALL-USERS MAX-LENGTH	445
LOGGING	445
LOGGING EXECUTED-COMMANDS	446
LOGGING LOGHOST SEQUENCE-NUMBER	446
LOGGING SOURCE-IP	447
PING	447
PING6	448
SHOW BOOT-FILES	450
SHOW FLASH	450
SHOW HISTORY	450
SHOW HISTORY ALL-USERS	451
SHOW LOGGING BUFFERED	451
SHOW LOGGING EXECUTED-COMMANDS STATE	452
SHOW LOGGING SOURCE	452
SHOW RUNNING-CONFIG	452
SHOW RUNNING-CONFIG CURRENT-MODE	453
SHOW STARTUP-CONFIG	453
SHOW SWITCHPORT INTERFACE	453
SHOW TCP	454
SHOW TCP IPV6	454
SHOW TELNET LOGIN	455
SHOW UDP	455
SHOW UDP IPV6	456
SHOW VERSION	456
TRACEROUTE	456
TRACEROUTE6	457
RELOAD AFTER	457
RELOAD CANCEL	458
SHOW RELOAD	458
CLEAR CPU-RX-STAT PROTOCOL	458
CPU-RX-RATELIMIT PROTOCOL	459
CPU-RX-RATELIMIT TOTAL	459
SHOW CPU-RX PROTOCOL	459

15.1.COMMANDS FOR POE CONFIGURATION	460
POWER INLINE ENABLE (GLOBAL)	460
POWER INLINE ENABLE (PORT)	460
POWER INLINE HIGH-INRUSH	460
POWER INLINE LEGACY	461
POWER INLINE MAX (GLOBAL)	461
POWER INLINE MAX (PORT)	461
POWER INLINE POLICE	462
POWER INLINE PRIORITY	462
POWER INLINE MONITOR INTERVAL	462
POWER INLINE MONITOR {ON OFF}	463
POWER INLINE MONITOR {ON OFF}	463
POWER INLINE POWER-OFF	463
POWER INLINE RESET INTERVAL	463
15.2.POE MONITORING AND DEBUGGING	463
SHOW POWER INLINE	463
SHOW POWER INLINE INTERFACE ETHERNET	464
16.1.COMMANDS FOR RIP	465
ACCEPT-LIFETIME	465
CLEAR IP RIP ROUTE	466
DEFAULT-INFORMATION ORIGINATE	467
DEFAULT-METRIC	467
DISTANCE	467
DISTRIBUTE-LIST	468
IP RIP AGGREGATE-ADDRESS	468
IP RIP AUTHENTICATION KEY-CHAIN	469
IP RIP AUTHENTICATION MODE	469
IP RIP AUTHENTICATION STRING	469
IP RIP AUTHENTICATION STRING <TEXT>	470
NO IP RIP AUTHENTICATION STRING	470
IP RIP AUTHENTICATION CISCO-COMPATIBLE	470
IP RIP RECEIVE-PACKET	470
IP RIP RECEIVE VERSION	471
IP RIP SEND-PACKET	471
IP RIP SEND VERSION	471
IP RIP SPLIT-HORIZON	472
KEY	472
KEY CHAIN	472
KEY-STRING	473
MAXIMUM-PREFIX	473
NEIGHBOR	474
NETWORK	474

OFFSET-LIST	474
PASSIVE-INTERFACE	475
RCV-BUFFER-SIZE	475
REDISTRIBUTE	475
ROUTE	476
ROUTER RIP	476
SEND-LIFETIME	477
TIMERS BASIC	478
VERSION	478
SHOW IP PROTOCOLS RIP	479
SHOW IP RIP	480
SHOW IP RIP DATABASE	480
SHOW IP RIP INTERFACE	481
SHOW IP RIP AGGREGATE	481
SHOW IP RIP REDISTRIBUTE	482
DEBUG RIP	482
DEBUG RIP REDISTRIBUTE ROUTE RECEIVE	483
DEBUG RIP REDISTRIBUTE MESSAGE SEND	483
16.2. COMMANDS FOR OSPF	483
AREA AUTHENTICATION	483
AREA DEFAULT-COST	484
AREA FILTER-LIST	484
AREA NSSA	485
AREA RANGE	485
AREA STUB	486
AREA VIRTUAL-LINK	486
AUTO-COST REFERENCE-BANDWIDTH	487
COMPATIBLE RFC1583	488
CLEAR IP OSPF PROCESS	488
DEFAULT-INFORMATION ORIGINATE	488
DEFAULT-METRIC	489
DISTANCE	489
DISTRIBUTE-LIST	490
FILTER-POLICY	490
HOST AREA	491
IP OSPF AUTHENTICATION	491
IP OSPF AUTHENTICATION-KEY	492
IP OSPF COST	492
IP OSPF DATABASE-FILTER	492
IP OSPF DEAD-INTERVAL	493
IP OSPF DISABLE ALL	493
IP OSPF HELLO-INTERVAL	493
IP OSPF MESSAGE-DIGEST-KEY	494
IP OSPF MTU	494

IP OSPF MTU-IGNORE	495
IP OSPF NETWORK	495
IP OSPF PRIORITY	496
IP OSPF RETRANSMIT-INTERVAL	496
IP OSPF TRANSMIT-DELAY	497
KEY	497
KEY CHAIN	497
LOG-ADJACENCY-CHANGES DETAIL	498
MAX-CONCURRENT-DD	498
NEIGHBOR	498
NETWORK AREA	499
OSPF ABR-TYPE	499
OSPF ROUTER-ID	500
OVERFLOW DATABASE	500
OVERFLOW DATABASE EXTERNAL	501
PASSIVE-INTERFACE	501
REDISTRIBUTE	501
REDISTRIBUTE OSPF	502
ROUTER OSPF	502
SUMMARY-ADDRESS	503
TIMERS SPF	503
SHOW IP OSPF	503
SHOW IP OSPF BORDER-ROUTERS	505
SHOW IP OSPF DATABASE	505
SHOW IP OSPF INTERFACE	506
SHOW IP OSPF NEIGHBOR	506
SHOW IP OSPF REDISTRIBUTE	507
SHOW IP OSPF ROUTE	508
SHOW IP OSPF VIRTUAL-LINKS	508
SHOW IP ROUTE PROCESS-DETAIL	509
SHOW IP PROTOCOLS	509
DEBUG OSPF EVENTS	510
DEBUG OSPF IFSM	510
DEBUG OSPF LSA	510
DEBUG OSPF NFSM	511
DEBUG OSPF NSM	511
DEBUG OSPF PACKET	511
DEBUG OSPF ROUTE	512
DEBUG OSPF REDISTRIBUTE MESSAGE SEND	512
DEBUG OSPF REDISTRIBUTE ROUTE RECEIVE	512
CAPABILITY RESTART GRACEFUL	513
DEBUG OSPF EVENTS GR	513
OSPF GRACEFUL-RESTART GRACE-PERIOD	513
OSPF GRACEFUL-RESTART HELPER MAX-GRACE-PERIOD	514

OSPF GRACEFUL-RESTART HELPER NEVER	514
SHOW IP OSPF GRACEFUL-RESTART	514
16.3. COMMANDS FOR BGP	515
AGGREGATE-ADDRESS	515
BGP AGGREGATE-NEXTHOP-CHECK	516
BGP ALWAYS-COMPARE-MED	516
BGP ASNOTATION ASDOT	516
BGP BESTPATH AS-PATH IGNORE	517
BGP BESTPATH COMPARE-CONFED-ASPATH	517
BGP BESTPATH COMPARE-ROUTERID	517
BGP BESTPATH MED	518
BGP CLIENT-TO-CLIENT REFLECTION	518
BGP CLUSTER-ID	519
BGP CONFEDERATION IDENTIFIER	519
BGP CONFEDERATION PEERS	519
BGP DAMPENING	520
BGP DEFAULT	520
BGP DETERMINISTIC-MED	521
BGP ENFORCE-FIRST-AS	521
BGP FAST-EXTERNAL-FAILOVER	521
BGP INBOUND-ROUTE-FILTER	522
BGP INBOUND-MAX-ROUTE-NUM	522
BGP LOG-NEIGHBOR-CHANGES	522
BGP NETWORK IMPORT-CHECK	523
BGP RFC1771-PATH-SELECT	523
BGP RFC1771-STRICT	523
BGP ROUTER-ID	524
BGP SCAN-TIME	524
CLEAR IP BGP	524
CLEAR IP BGP DAMPENING	525
CLEAR IP BGP FLAP-STATISTICS	525
DISTANCE	525
DISTANCE BGP	526
IP AS-PATH ACCESS-LIST	526
IP COMMUNITY-LIST	526
IP EXTCOMMUNITY-LIST	527
NEIGHBOR ACTIVATE	527
NEIGHBOR ADVERTISEMENT-INTERVAL	528
NEIGHBOR ALLOWAS-IN	528
NEIGHBOR ATTRIBUTE-UNCHANGED	529
NEIGHBOR CAPABILITY	529
NEIGHBOR CAPABILITY ORF PREFIX-LIST	530
NEIGHBOR COLLIDE-ESTABLISHED	530
NEIGHBOR DEFAULT-ORIGINATE	531

NEIGHBOR DESCRIPTION	531
NEIGHBOR DISTRIBUTE-LIST	531
NEIGHBOR DONT-CAPABILITY-NEGOTIATE	532
NEIGHBOR EBGP-MULTIHOP	532
NEIGHBOR ENFORCE-MULTIHOP	533
NEIGHBOR FILTER-LIST	533
NEIGHBOR INTERFACE	534
NEIGHBOR MAXIMUM-PREFIX	534
NEIGHBOR NEXT-HOP-SELF	535
NEIGHBOR OVERRIDE-CAPABILITY	535
NEIGHBOR PASSIVE	536
NEIGHBOR PEER-GROUP (CREATING)	536
NEIGHBOR PEER-GROUP(CONFIGURING GROUP MEMBERS)	537
NEIGHBOR PORT	537
NEIGHBOR PREFIX-LIST	537
NEIGHBOR REMOTE-AS	538
NEIGHBOR REMOVE-PRIVATE-AS	538
NEIGHBOR ROUTE-MAP	539
NEIGHBOR ROUTE-REFLECTOR-CLIENT	539
NEIGHBOR ROUTE-SERVER-CLIENT	540
NEIGHBOR SEND-COMMUNITY	540
NEIGHBOR SHUTDOWN	541
NEIGHBOR SOFT-RECONFIGURATION INBOUND	541
NEIGHBOR STRICT-CAPABILITY-MATCH	541
NEIGHBOR TIMERS	542
NEIGHBOR TIMERS CONNECT	542
NEIGHBOR UNSUPPRESS-MAP	543
NEIGHBOR UPDATE-SOURCE	543
NEIGHBOR VERSION 4	544
NEIGHBOR WEIGHT	544
NETWORK (BGP)	544
REDISTRIBUTE (BGP)	545
REDISTRIBUTE OSPF	545
ROUTER BGP	545
TIMERS BGP	546
SHOW IP BGP	546
SHOW IP BGP ATTRIBUTE-INFO	547
SHOW IP BGP COMMUNITY	547
SHOW IP BGP COMMUNITY-INFO	547
SHOW IP BGP COMMUNITY-LIST	548
SHOW IP BGP DAMPENING	548
SHOW IP BGP FILTER-LIST	549
SHOW IP BGP INCONSISTENT-AS	550
SHOW IP BGP NEIGHBORS	550

SHOW IP BGP PATHS	551
SHOW IP BGP PREFIX-LIST	551
SHOW IP BGP QUOTE-REGEXP	552
SHOW IP BGP REDISTRIBUTE	552
SHOW IP BGP NEIGHBORS	553
SHOW IP BGP REGEXP	553
SHOW IP BGP ROUTE-MAP	553
SHOW IP BGP SCAN	554
SHOW IP BGP SUMMARY	554
SHOW IP BGP VIEW	555
SHOW IP BGP VIEW NEIGHBORS	555
DEBUG BGP	555
DEBUG BGP REDISTRIBUTE MESSAGE SEND	556
DEBUG BGP REDISTRIBUTE ROUTE RECEIVE	556
BGP GRACEFUL-RESTART	556
BGP GRACEFUL-RESTART RESTART-TIME	557
BGP GRACEFUL-RESTART STALE-PATH-TIME	557
BGP SELECTION-DEFERRAL-TIME	557
NEIGHBOR CAPABILITY GRACEFUL-RESTART	558
NEIGHBOR RESTART-TIME	558

1.1 Commands for Basic Configuration

authentication line

Command	authentication line {console vty web} login {local radius tacacs} no authentication line {console vty web} login	
Parameter	console	Log on the switch through the console serial port
	vty	Log on the switch through the vty(SSH or Telnet)
	web	Log on the switch through the web
Default	No configuration is enabled for the console login method by default. Local authentication is enabled for the VTY and Web login method by default.	
Mode	Global Mode	
Usage Guide	<p>This command can configure the authentication methods for Console, VTY, and Web login separately.</p> <p>The authentication method can be any one or combination of Local. RADIUS and TACACS.</p> <p>Preferences from left to right when the login method is combined configuration.</p> <p>If the user has passed the authentication method, the authentication method of the lower preference is ignored.</p> <p>As long as pass an authentication method, the user can log in.</p> <p>AAA function and RADIUS server should be configured before the RADIUS authentication can be used.</p> <p>If local authentication is configured without configuring a local user, the user will be able to log on to the switch through the console method.</p> <p>They all support the following authentication methods.</p> <p>Local: Use the local user account database for authentication.</p> <p>Tacacs: Authentication using remote Tacas server.</p> <p>Radius: Authentication using remote Radius server.</p> <p>no command restores default authentication.</p>	
Example	<p>Configure Telnet and ssh login methods to Local and RADIUS authentication methods.</p> <p>Switch(config)# authentication line vty login local radius lists</p>	

banner

Command	banner motd<LINE> no banner motd	
Parameter	<LINE>	The information displayed when the authentication is successful, length limit from 1 to

	100 characters
Default	Do not show the information when the authentication is successful.
Mode	Global Mode
Usage Guide	This command is used to configure the information displayed when the login authentication of a telnet or console user is successful, the no command configures that the information is not displayed when the authentication is successful.
Example	Display "Welcome" after authentication is successful. Switch(config)# banner motd Welcome

boot img

Command	boot img <img-file-url> {primary backup}	
Parameter	<img-file-url>	Full path to the img file
	primary	First entry to the img document
	backup	Second entry to the img document
Default	The factory original configuration only specifies the first booting IMG file, it is nos.img file in the FLASH, without the second booting IMG file.	
Mode	admin Mode	
Usage Guide	<p>This command is used to configure the first and second img files used by the switch next boot.</p> <p>The first and second img files can only use .img files stored in switch.</p> <ol style="list-style-type: none"> 1. The file path comprises of three parts: device prefix used as the root directory (flash:/), sub-directory, and the file name. No space is allowed in each part or between two parts. 2. The suffix of all file names should be .img. 3. The length of the full file path should not be longer than 128 characters, while the file name can not be longer than 80 characters. 	
Example	Set flash:/nos.img as the second booting IMG file used in the next booting of the switch. Switch#boot img flash:/nos.img backup	

boot startup-config

Command	boot startup-config {NULL <file-url> }	
Parameter	NULL	Use the factory primitive configuration as the next reboot boot configuration
	<file-url>	Is the full path of CFG file used in the next booting.
Default	None.	
Mode	admin Mode	

Usage Guide	<p>This command is used to configure the CFG file used in the next booting of the switch.</p> <p>Configure the CFG file used in the next booting can only use .cfg files stored in the switch.</p> <ol style="list-style-type: none"> 1. The file path comprises of three parts: device prefix used as the root directory (flash:/), sub-directory, and the file name. No space is allowed in each part or between two parts. 2. The suffix of all file names should be .cfg. 3. The length of the full file path should not be longer than 128 characters, while the file name can not be longer than 80 characters.
Example	<p>Set flash:/ startup.cfg as the CFG file used in the next booting of the switch.</p> <pre>Switch# boot startup-config flash:/ startup.cfg</pre>

clock set

Command	clock set <HH:MM:SS> <YYYY.MM.DD>	
Parameter	<HH:MM:SS>	Time, HH effective range 0 to 23, MM and SS 0 to 59
	<YYYY.MM.DD>	Year, month and date, and YYYY valid range is 1970 to 2038, MM is month 1 to 12, DD is date 1 to 31
Default	By default, upon first time start-up, it is defaulted to 2006.1.1 0: 0: 0.	
Mode	admin Mode	
Usage Guide	<p>This command is used to configure switch system time and date.</p> <p>The switch cannot continue timing with power off, hence the current date and time must be first set at environments where exact time is required.</p>	
Example	<p>To set the switch current date and time to 2002.8.1 23: 0: 0.</p> <pre>Switch#clock set 23:0:0 2002.8.1</pre>	

config

Command	config [terminal]	
Parameter	[terminal]	indicates terminal configuration
Default	None.	
Mode	admin Mode.	
Usage Guide	<p>This command is used to switch from admin management mode to config global configuration mode.</p>	
Example	<p>Enter config global configuration mode from admin management mode.</p> <pre>Switch#config</pre>	

disable

Command	disable	
Parameter	none	none
Default	None.	
Mode	admin Mode.	
Usage Guide	This command is used for switch exit admin mode back to general user mode.	
Example	Exit admin mode back to general user mode. Switch#disable Switch>	

enable

Command	enable [<1-15>]	
Parameter	[<1-15>]	User Permission Level
Default	None.	
Mode	User mode/ admin mode	
Usage Guide	<p>Use enable command to enter Admin Mode from User Mode, or change the privilege level of the users.</p> <p>To prevent unauthorized access of non-admin user, user authentication is required (i.e. Admin user password is required) when entering Admin Mode from User Mode.</p> <p>If the correct Admin user password is entered, Admin Mode access is granted; if 3 consecutive entry of Admin user password are all wrong, it remains in the User Mode. When the user's privilege is changed from the low level to the high level, it needs to authenticate the password of the corresponding level, or else it will not authenticate the password.</p> <p>Set the Admin user password under Global Mode with "enable password" command.</p>	
Example	Enter management mode from user mode. Switch>enable Switch#	

enable password

Command	enable password [level <1-15>] [0 7] <password> no enable password [level <1-15>]
---------	--

Parameter	[level <1-15>]	used to specify the privilege level, the default level is 15
	[0 7]	If enter option 0 on password settings,the password is not encrypted; If enter option 7 on password settings,the password is encrypted
	<password>	the password for the user
Default	This password is empty by system default.	
Mode	Global Mode	
Usage Guide	Configure the password used for enter Admin Mode from the User Mode. Configure this password to prevent unauthorized entering Admin Mode. It is recommended to set the password at the initial switch configuration. Also, it is recommended to exit Admin Mode with “exit” command when the administrator needs to leave the terminal for a long time. The “no enable password” command deletes this password.	
Example	Configure the command for general users to enter the admin mode by rule as test. Switch(config)#enable password 0 test	

end

Command	end	
Parameter	none	none
Default	None.	
Mode	Except user mode / admin mode	
Usage Guide	This command is used to configure the command for general users to enter the admin mode by rule as test.	
Example	Quit VLAN mode and return to Admin mode. Switch(config-vlan1)#end Switch#	

exec-timeout

Command	exec-timeout <minutes> [<seconds>] no exec-timeout	
Parameter	<minutes>	the time value shown in minute and ranges between 0~35791
	[<seconds>]	the time value shown in seconds and ranges between 0~59
Default	Default timeout is 10 minutes.	
Mode	Global mode	
Usage Guide	This command is used Configure the timeout of exiting admin mode. Timeout exit admin management mode, need to enter management	

	code and password to enter admin management mode again. When the timeout is set to 0, the timeout timer is disabled. "no exec-timeout" command to restore default values.
Example	Set the admin mode timeout value to 5 minutes, 30 seconds. Switch(config)#exec-timeout 5 30

exit

Command	exit	
Parameter	none	none
Default	None.	
Mode	All Modes	
Usage Guide	This command is used quit current mode and return to it's previous mode.	
Example	Quit global mode to it's previous mode Switch(config)#exit Switch#	

help

Command	help	
Parameter	none	none
Default	None.	
Mode	All Modes	
Usage Guide	An instant online help provided by the switch. Help command displays information about the whole help system, including complete help and partial help. The user can type in '?' any time to get online help.	
Example	Get help in global mode. Switch(config)#help CLI provides advanced help feature. When you need help, anytime at the command line please press '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.	

hostname

Command	hostname <hostname> no hostname	
Parameter	<hostname>	the string for the prompt, up to 64 characters are allowed
Default	The default prompt is relative with the switch.	

Mode	Global Mode
Usage Guide	Use this command, set the prompt in the switch command line interface. The no operation cancels the configuration.
Example	Set the prompt to "Test". Switch(config)#hostname Test Test(config)#

ip host

Command	ip host <hostname> <ip_addr> no ip host {<hostname> all}	
Parameter	<hostname>	the string for the prompt, up to 64 characters are allowed
	<ip_addr>	the corresponding IP address for the host name, takes a dot decimal format
	all	all of the host name
Default	None.	
Mode	Global Mode	
Usage Guide	By using this command, you can set the mapping relationship between the host and the IP address. Set the association between host and IP address, which can be used in commands like "ping <host>". The "no ip host" parameter of this command will delete the mapping.	
Example	Set IP address of a host with the hostname of "beijing" to 200.121.1.1. Switch(config)#ip host beijing 200.121.1.1	

ipv6 host

Command	ipv6 host <hostname> <ipv6_addr> no ipv6 host { <hostname> all}	
Parameter	<hostname>	the string for the prompt, up to 64 characters are allowed
	<ipv6_addr>	the corresponding IPv6 address for the host name, takes a dot decimal format
	all	all of the host name
Default	None.	
Mode	Global Mode	
Usage Guide	By using this command, you can set the mapping relationship between the host and the IPv6 address. Set the association between host and IPv6 address, which can be used in commands like "traceroute6 <host>". The "no ip host" parameter of this command will delete the mapping.	

Example	Set the IPv6 address of the host named beijing to 2001:1:2:3::1. Switch(config)#ipv6 host beijing 2001:1:2:3::1
---------	--

ip http server

Command	ip http server no ip http server	
Parameter	none	none
Default	Enable.	
Mode	Global Mode	
Usage Guide	Use this command to enable Web configuration. The “no ip http server” command disables Web configuration.	
Example	Enable Web Server function and enable Web configurations. Switch(config)#ip http server	

login

Command	login no login	
Parameter	none	none
Default	No login by default.	
Mode	Global Mode	
Usage Guide	By using this command, users have to enter the password set by password command to enter normal user mode with console. No login cancels this restriction.	
Example	Enable password Switch(config)#login	

password

Command	password [0 7] <password> no password	
Parameter	[0 7]	if input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted
	<password>	password for the user
Default	This password is empty by system default.	
Mode	Global Mode	
Usage Guide	With this command, configure the password used for enter normal user mode on the console. The “no password” command deletes this password.	
Example	Configure the password used to enter normal user mode as test, password is not encrypted.	

	Switch(config)#password 0 test
--	--------------------------------

privilege

Command	privilege mode level <1-15> LINE no privilege mode level <1-15> LINE	
Parameter	mode	register mode of the command, 'Tab' or '?' is able to show all register modes
	<1-15>	level, its range between 1 and 15
	LINE	the command needs to be configured, it supports the command abbreviation
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Use this command to configure the permission level for the specified command.</p> <p>This function cannot change the command itself.</p> <p>LINE must be the whole command format, the command with the abbreviation format must be analyzed successfully.</p> <p>Can choose to set the level of the NO command, but it does not affect the result.</p> <p>When using a no command, the LINE must be a configured command line.</p> <p>If the command line with the parameter, the parameter must be matched with the configured command.</p> <p>The no command restores the original level of the command.</p>	
Example	<p>Change the level of show ip route command to level 5.</p> <p>Restore the original level of the show ip route command.</p> <p>Switch(config)#privilege exec level 5 show ip route</p> <p>Switch(config)#no privilege exec level 5 show ip route</p>	

reload

Command	reload	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	The user can use this command to restart the switch continuously.	
Example	<p>Hot restart switch.</p> <p>Switch(config)#reload</p>	

service password-encryption

Command	service password-encryption
---------	-----------------------------

	no service password-encryption	
Parameter	none	none
Default	No service password-encryption by system default.	
Mode	Global Mode	
Usage Guide	The current unencrypted passwords as well as the coming passwords configured by password, enable password, ip ftp and username command will be encrypted by executed this command. no service password-encryption cancels this function however encrypted passwords remain unchanged.	
Example	Encrypt system passwords. Switch(config)#service password-encryption	

service terminal-length

Command	service terminal-length <0-512> no service terminal-length	
Parameter	<0-512>	Columns of characters displayed on each screen of vty, ranging between 0-512
Default	None.	
Mode	Global Mode	
Usage Guide	Use this command, configure the columns of characters displayed on each screen of the terminal. The columns of characters displayed on each screen on the telnet.ssh client and the Console will be following this configuration. The “no service terminal-length” command cancels the screen shifting operation.	
Example	Set the number of vty threads to 20. Switch(config)#service terminal-length 20	

sysContact

Command	sysContact <LINE> no sysContact	
Parameter	<LINE>	the prompt character string, range from 0 to 255 characters
Default	The default is factory setting.	
Mode	Global Mode	
Usage Guide	With this command, the user can set the factory contact mode bases the fact instance. The “no sysContact” command reset the switch to factory settings.	
Example	Set the factory contact mode to test. Switch(config)#sysContact test	

sysLocation

Command	sysLocation<LINE> no sysLocation	
Parameter	<LINE>	the prompt character string, range from 0 to 255 characters
Default	The default is factory setting.	
Mode	Global Mode	
Usage Guide	With this command,the user can set the factory address bases the fact instance. The “no sysLocation” command reset the switch to factory settings.	
Example	Set the factory address to test. Switch(config)#sysLocation test	

set default

Command	set default	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	Reset the switch to factory settings. That is to say, all configurations made by the user to the switch will disappear. When the switch is restarted, the prompt will be the same as when the switch was powered on for the first time. Note: After the command, “write” command must be executed to save the operation. The switch will reset to factory settings after restart.	
Example	Restore factory settings and restart. Switch#set default Are you sure? [Y/N] = y Switch#write Switch#reload	

set boot password

Command	set boot password no set boot password	
Parameter	none	none
Default	None.	
Mode	Global Mode	
Usage Guide	Under the img mode, configure the password of entering the bootrom mode next time; under the global mode, input this command and the password according to the prompt and confirm it, then successfully to configure. Notice: the characters length of the password is from 3 to 32.	

	The no command cancels the password.
Example	Sets the password when entering boot mode. Switch(config)#set boot password New password :***** Confirm password :***** Set password success!

setup

Command	setup	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	Switch provides a Setup Mode, in which the user can configure IP addresses, etc.	
Example	Enter setup mode. Switch#setup	

show clock

Command	show clock	
Parameter	none	none
Default	None.	
Mode	Admin Mode.	
Usage Guide	Displays the current system clock.	
Example	Displays the current system clock. Switch#show clock Current time is TUE AUG 22 11: 00: 01 2002	

show cpu usage

Command	show cpu usage [<slotno>]	
Parameter	[<slotno>]	Specify slots
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display current, past 5 seconds, past 30 seconds, past 5 minutes CPU usage by this command. Only the chassis switch uses slotno parameter which is used to show the CPU usage rate of the card on specified slot, if there is no parameter, the default is current card.	
Example	Show the current usage rate of CPU. Switch#show cpu usage Last 5 second CPU IDLE: 87% Last 30 second CPU IDLE: 89%	

	Last 5 minute CPU IDLE: 89% From running CPU IDLE: 89%
--	---

show cpu utilization

Command	show cpu utilization	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	This command is used to show CPU utilization rate in the past 5 seconds, 30 seconds and 5 minutes. .	
Example	Displays CPU utilization. Switch#show cpu utilization Last 5 second CPU USAGE: 9% Last 30 second CPU USAGE: 11% Last 5 minute CPU USAGE: 11% From running CPU USAGE: 11%	

show memory usage

Command	show memory usage [<slotno>]	
Parameter	[<slotno>]	Specify slots
Default	None.	
Mode	Admin Mode	
Usage Guide	Show memory usage rate. Only the chassis switch uses slotno parameter which is used to show the memory usage rate of card on the specified slot, if there is no parameter, the default is current card.	
Example	Show the current usage rate of the memory. Switch#show memory usage The memory total 128 MB, free 58914872 bytes, usage is 56.10%	

show privilege

Command	show privilege	
Parameter	none	none
Default	None.	
Mode	Global Mode	
Usage Guide	Show privilege of the current user.	
Example	Show privilege of the current user. Switch(config)#show privilege Current privilege level is 15	

show privilege mode LINE

Command	show privilege mode LINE	
Parameter	mode	register mode of the command, 'Tab' or '?' is able to show all register modes
	LINE	the command needs to be configured, it supports the command abbreviation
Default	None.	
Mode	Admin mode/Global mode	
Usage Guide	<p>Show the level of the specified command.</p> <p>LINE must be the whole command format, the abbreviation format is used to the command which can be analyzed successfully.</p> <p>For half-baked command, false command about writing and command that abbreviation cannot be analyzed successfully, the level of them cannot be shown.</p>	
Example	<p>Show the level of privilege command.</p> <p>Switch(config)#show privilege exec show ip route</p> <p>The command : show ip route</p> <p>Privilege is : 15</p>	

show tech-support

Command	show tech-support [no-more]	
Parameter	[no-more]	Display the operational information and the task status of the switch directly, do not connect the user by "more".
Default	None.	
Mode	Admin mode/Global mode	
Usage Guide	<p>This command is used to collect the relative information when the switch operation is malfunctioned.</p> <p>Display the operational information and the task status of the switch.</p> <p>The technique specialist use this command to diagnose whether the switch operate normally.</p>	
Example	<p>Displays the operational information and the task status of the switch.</p> <p>Switch#show tech-support</p>	

show version

Command	show version	
Parameter	none	none
Default	None.	
Mode	Admin mode/Global mode	
Usage Guide	<p>This command is used to show the version of the switch, it includes the hardware version and the software version information.</p>	
Example	<p>Display the version information of the switch.</p> <p>Switch#show version</p>	

username

Command	username <username> [privilege <privilege>] [password [0 7]<password>] no username <username>	
Parameter	<username>	the username, its range should not exceed 32 characters
	<privilege>	the maximum privilege level of the commands that the user is able to execute, its value is limited between 1 and 15, and 1 by default
	[0 7]	If input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted (Use 32 bits password encrypted by MD5)
	<password>	password for the user
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Configure local login username and password along with its privilege level.</p> <p>16 local users at most can be configured through this command, and the maximum length of the password should be no less than 32.</p> <p>The user can log in user and priority after the command configures, before issuing</p> <p>the command authentication line console login local, it should be made sure that at one user has be configured as preference level of 15, in order to login the switch and make configuration changes in privileged mode and global mode.</p> <p>If there are no configured local users with preference level of 15, while only Local authentication is configured for the Console login method, the switch can be login without any authentication. When using the HTTP method to login the switch, only users with preference level of 15 can login the switch, users with preference level other than 15 will be denied.</p> <p>The no command delete user.</p>	
Example	<p>Configure an administrator account named admin, with the preference level as 15. And configure two normal accounts with its preference level as 1. Then enable local authentication method.</p> <pre>Switch(config)#username admin privilege 15 password 0 admin Switch(config)# username user1 privilege 1 password 7 4a7d1ed414474e4033ac29ccb8653d9b Switch(config)# username user2 password 0 user2 Switch(config)# authentication line console login local</pre>	

web-auth privilege <1-15>

Command	web-auth privilege <1-15> no web-auth privilege	
Parameter	<1-15>	Appoint the level of logging in the switch by web and the range is from 1 to 15
Default	The default level is 15.	
Mode	Global Mode	
Usage Guide	Configure the level of logging in the switch by web. After configured the level of logging in the switch by web, only the user with the level that is equal to or higher than it can login in the switch by web.	
Example	Configure the level of logging in the switch by web as 10. Switch(config)# web-auth privilege 10	

write

Command	write	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	Save the currently configured parameters to the Flash memory. After a set of configuration with desired functions, the setting should be saved to the specified configuration file, so that the system can revert to the saved configuration automatically in the case of accidentally powered off or power failure. This is the equivalent to the copy running-config startup-config command.	
Example	Save the current configuration. Swich#write	

write running-config

Command	write running-config [<startup-config-file-name>]	
Parameter	[<startup-config-file-name>]	the full path of the cfg file
Default	None.	
Mode	Admin Mode	
Usage Guide	Save the current running config as .cfg file to Flash Memory.	

	<p>The file path comprises of two parts: device prefix used as the root directory (flash:/)and the file name. No space is allowed in each part or between two parts.</p> <p>The suffix of all file names should be .cfg.</p> <p>The length of the full file path should not be longer than 128 characters, while the file name cannot be longer than 80 characters.</p>
Example	<p>Save the current running config as .cfg file with name of 123.</p> <p>Switch#write running-config 123.cfg</p>

1.2 Commands for Telnet

aaa authorization config-commands

Command	aaa authorization config-commands no aaa authorization config-commands	
Parameter	none	none
Default	By default,disable.	
Mode	Global Mode	
Usage Guide	<p>Enable command authorization function for the login user with VTY (login with Telnet and SSH).</p> <p>Only enabling this command and configuring command authorization manner, it will request to authorize when executing some command.</p> <p>The no command disables this function.</p>	
Example	<p>Enable VTY command authorization function.</p> <p>Switch(config)#aaa authorization config-commands</p>	

accounting exec

Command	accounting line {console vty} exec {start-stop stop-only none} method1 [method2...] no accounting line {console vty} exec	
Parameter	console	log in through serial port
	vty	log in through telnet or ssh
	start-stop	sends the accounting start or the accounting stop when the user is logging or exit the login
	stop-only	sends the accounting stop when the user exits the login only
	none	does not send the accounting start or the accounting stop
	method	the list of the accounting method, it only supports tacacs keyword; tacacs uses the remote TACACS+ server to count
Default	By default there is no accounting.	

Mode	Global Mode
Usage Guide	Configure the list of the accounting method for the login user with VTY (login with Telnet and SSH) and Console. console and vty login method are able to set the corresponding accounting method respectively, the accounting method only supports TACACS+ method currently. The no command restores the default accounting method.
Example	Configure the login accounting with the telnet method. Switch(config)#accounting line vty exec start-stop tacacs

accounting command

Command	accounting line {console vty} command <1-15> {start-stop stop-only none} method1 [method2...] no accounting line {console vty} command <1-15>	
Parameter	console	log in through serial port
	vty	log in through telnet or ssh
	command <1-15>	the level of the accounting command
	start-stop	sends the accounting start or the accounting stop when the user is logging or exit the login
	stop-only	sends the accounting stop when the user exits the login only
	none	does not send the accounting start or the accounting stop
	method	the list of the accounting method, it only supports tacacs keyword; tacacs uses the remote TACACS+ server to count
Default	By default there is no accounting method.	
Mode	Global Mode	
Usage Guide	Configure the list of the command accounting method with VTY (login with Telnet and SSH) and Console. The no command restores the default accounting method. console and vty login method are able to set the corresponding command accounting method respectively, the accounting method only supports TACACS+ method currently. Only the stop information of the accounting is recorded, whether command accounting configures start-stop method or stop-only method. The no command restores the default accounting method.	
Example	Configure command audit methods through telnet login, command level 15. Switch(config)#authorization line vty command 15 start-stop tacacs	

authentication ip access-class

Command	authentication ip access-class {<num-std> <name>} no authentication ip access-class	
Parameter	<num-std>	the access-class number for standard numeric ACL, ranging between 1-99
	<name>	the access-class name for standard ACL, the character string length is ranging between 1 and 32
Default	The binding ACL to Telnet/SSH/Web function is closed by default.	
Mode	Global Mode	
Usage Guide	Binding standard IP ACL protocol to login with Telnet/SSH/Web. The no form command will cancel the binding ACL.	
Example	Binding standard IP ACL protocol to access-class 1. Switch(config)#authentication ip access-class 1 in	

authentication enable

Command	authentication enable method1 [method2...] no authentication enable	
Parameter	method	the list of the authentication method, it must be among local, tacacs and radius keywords; local:uses the local database to authenticate; tacacs:uses the remote TACACS+ authentication server to authenticate; radius:uses the remote RADIUS authentication server to authenticate
Default	The local authentication is enable command by default.	
Mode	Global Mode	
Usage Guide	<p>Configure the list of the enable authentication method.</p> <p>The enable authentication method can be any one or combination of Local,RADIUS and TACACS.</p> <p>When login method is configuration in combination, the preference goes from left to right.</p> <p>If the users have passed the authentication method, authentication method of lower preferences will be ignored.</p> <p>To be mentioned, if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authentication method (Exception: if the local authentication method failed, it will attempt the next authentication method); it will attempt the next authentication method if it receives nothing.</p> <p>And AAA function RADIUS server should be configured before the RADIUS</p>	

	configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used. The no command restores the default authentication method.
Example	Configure the enable authentication method to be tacacs and local. Switch(config)#authentication enable tacacs local

authentication ipv6 access-class

Command	authentication ipv6 access-class {<num-std> <name>} no authentication ipv6 access-class	
Parameter	<num-std>	the access-class number for standard numeric ACL, ranging between 500-599
	<name>	the access-class name for standard ACL, the character string length is ranging between 1 and 32
Default	The binding ACL to Telnet/SSH/Web function is closed by default.	
Mode	Global Mode	
Usage Guide	Binding standard IPv6 ACL protocol to login with Telnet/SSH/Web. The no form command will cancel the binding ACL.	
Example	Binding standard IP ACL protocol to access-class 500. Switch(config)#authentication ipv6 access-class 500 in	

authentication line login

Command	authentication line {console vty web} login method1 [method2...] no authentication line {console vty web} login	
Parameter	console	log in through serial port
	vty	log in through telnet or ssh
	web	log in through web
	method	the list of the authentication method, it must be among local, tacacs and radius keywords; local:uses the local database to authenticate; tacacs:uses the remote TACACS+ authentication server to authenticate; radius:uses the remote RADIUS authentication server to authenticate
Default	No configuration is enabled for the console login method by default. Local authentication is enabled for the VTY and Web login method by default.	
Mode	Global Mode	
Usage Guide	Configure VTY (login with Telnet and SSH), Web and Console, so as to select the list of the authentication method for the login user. Authentication method can be any one or combination of Local, RADIUS and TACACS. When login method is configuration in combination, the preference goes from left to right.	

	<p>If the users have passed the authentication method, authentication method of lower preferences will be ignored.</p> <p>if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authentication method (Exception: if the local authentication method failed, it will attempt the next authentication method);</p> <p>it will attempt the next authentication method if itreceives nothing.</p> <p>And AAA function RADIUS server should be configured before the RADIUS configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used.</p> <p>The authentication line console login command is exclusive with the "login" command. The authentication line console login command configures the switch to use the Console login method. And the login command makes the Console login to use the passwords configured by the password command for authentication.</p> <p>If local authentication is configured while no local users are configured, users will be able to login the switch via the Console method.</p> <p>The no form command restores the default authentication method.</p>
Example	<p>Configure the telnet and ssh login with the remote RADIUS authentication.</p> <p>Switch(config)#authentication line vty login radius</p>

authentication securityip

Command	<p>authentication securityip <ip-addr></p> <p>no authentication securityip <ip-addr></p>	
Parameter	<ip-addr>	<p>the trusted IP address of the client in dotted decimal format</p> <p>which can login the switch</p>
Default	No trusted IP address is configured by default.	
Mode	Global Mode	
Usage Guide	<p>To configure the trusted IP address for Telnet and HTTP login method. IP address of the client which can login the switch is not restricted before the trusted IP address is not configured.</p> <p>After the trusted IP address is configured,only clients with trusted IP addresses are able to login the switch.</p> <p>Up to 32 trusted IP addresses can be configured in the switch.</p> <p>The no form of this command will remove the trusted IP address configuration.</p>	
Example	<p>To configure 192.168.1.21 as the trusted IP address.</p> <p>Switch(config)#authentication securityip 192.168.1.21</p>	

authentication securityipv6

Command	authentication securityipv6 <ipv6-addr> no authentication securityipv6 <ipv6-addr>	
Parameter	<ip-addr>	the security IPv6 address which can login the switch
Default	No security IPv6 addresses are configured by default.	
Mode	Global Mode	
Usage Guide	To configure the security IPv6 address for Telnet and HTTP login method. IPv6 address of the client which can login the switch is not restricted before the security IPv6 address is not configured. After the security IPv6 address is configured, only clients with security IPv6 addresses are able to login the switch. Up to 32 security IPv6 addresses can be configured in the switch. The no form of this command will remove the specified configuration.	
Example	Configure the security IPv6 address is 2001:da8:123:1::1. Switch(config)#authentication securityipv6 2001:da8:123:1::1	

authorization

Command	authorization line {console vty web} exec method [method...] no authorization line {console vty web} exec	
Parameter	console	log in through serial port
	vty	log in through telnet or ssh
	web	log in through web
	method	the list of the authentication method, it must be among local, tacacs and radius keywords; local:uses the local database to authenticate; tacacs:uses the remote TACACS+ authentication server to authenticate; radius:uses the remote RADIUS authentication server to authenticate
Default	There is no authorization method by default.	
Mode	Global Mode	
Usage Guide	Configure the list of the authorization method for the login user with VTY (login with Telnet and SSH), Web and Console. And authorization method can be any one or combination of	

	<p>Local,RADIUS or TACACS.</p> <p>When login method is configuration in combination, the preference goes from left to right.</p> <p>If the users have passed the authorization method, authorization method of lower preferences will be ignored.</p> <p>if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authorization method; it will attempt the next authorization method if it receives nothing.</p> <p>And AAA function RADIUS server should be configured before the RADIUS configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used.</p> <p>The local users adopt username command permission while authorization command is not configured, the users login the switch via RADIUS/TACACS method and works under common mode.</p> <p>The no command restores the default authorization method.</p>
Example	<p>Configure the telnet authorization method to RADIUS.</p> <p>Switch(config)#authorization line vty exec radius</p>

clear line vty <0-31>

Command	clear line vty <0-31>	
Parameter	<0-31>	appointed line
Default	None.	
Mode	Admin Mode	
Usage Guide	<p>After inputting this command, there is need to judge for this command, "Confirm[Y/N]: ", when inputting "Y" or "y", run to delete; when inputting "? ", do not run to delete, print the notice information only. When inputting other characters, do not run to delete.</p>	
Example	<p>Admin users who are forced to log in through VTY (using Telnet or SSH login) are off line.</p> <p>Switch#clear line vty 0</p> <p>Confirm[Y/N]:y</p> <p>[OK]</p>	

authorization line vty command

Command	authorization line vty command <1-15> {local radius tacacs} (none)
---------	---

	no authorization line vty command <1-15>	
Parameter	command <1-15>	Level scope of authorization orders 1~15
	local	Authorization is granted locally
	radius	Authorization for remote radius
	tacacs	Authorization for remote tacacs
	none	Authorization mode is empty
Default	The authorization manner is not configured as default.	
Mode	Global Mode	
Usage Guide	<p>Configure command authorization manner and authorization selection priority of login user with VTY (login with Telnet and SSH). The enabling authorization method can be any one or combination of Local. RADIUS and TACACS.</p> <p>When using combination authorization manners, the priority of the front authorization manner is the highest and the others are in descending order.</p> <p>If the authorization with high priority passed, it is successful to configure command and the back authorization manner will be ignored.</p> <p>As long as one authorization manner receives a clear response of the corresponding agreement. Whether it is received or refused, the next authorization manner will not be attempted. If the clear response is not received, try the next manner.</p> <p>When using RADIUS authorization, AAA function must be enabled and configure RADIUS server. when using TACACS authorization, TACACS server must be configured.</p> <p>None is the manner of escaping and it only can be the last manner. This manner returns to passed authorization directly and it is successful to configure the command.</p> <p>The no command recovers to be default manner.</p>	
Example	<p>Configure level 1 command authorization manner of telnet login user as TACACS.</p> <pre>Switch(config)#authorization line vty command 1 tacacs</pre>	

crypto key clear rsa

Command	crypto key clear rsa	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	This command is used to clear the secret key of the ssh and close the ssh service.	
Example	<p>Clear the secret key of the ssh and close the ssh service.</p> <pre>Switch#crypto key clear rsa</pre> <p>ssh host key is cleared successfully.</p>	

	ssh is closed successfully.
--	-----------------------------

terminal length

Command	terminal length <0-512> terminal no length	
Parameter	<0-512>	Length of characters displayed in each screen, ranging between 0-512 (0 refers to non-stop display)
Default	Default Length is 25.	
Mode	Admin Mode	
Usage Guide	Set length of characters displayed in each screen on terminal, so that the-More-message will be shown when displayed information exceeds the screen. Press any key to show information in next screen. The "terminal no length" cancels the screen switching operation and display content once in all.	
Example	Configure length of characters in each display to 20. Switch#terminal length 20	

telnet

Command	telnet [vrf <vrf-name>] {<ip-addr> <ipv6-addr> host <hostname>}[<port>]	
Parameter	<vrf-name>	the specific VRF name
	<ip-addr>	the IP address of the remote host, shown in dotted decimal notation
	<ipv6-addr>	the IPv6 address of the remote host
	<hostname>	the name of the remote host, containing max 64 characters
	<port>	the port number, ranging between 0 and 65535
Default	None.	
Mode	Admin Mode	
Usage Guide	This command is used when the switch is applied as Telnet client, for logging on remote host to configure. When a switch is applied as a Telnet client, it can only establish one TCP connection with the remote host. To connect to another remote host, the current TCP connection must be disconnected with a hotkey "CTRL+ \". To telnet a host name, mapping relationship between the host name and the IP/IPv6 address should be previously configured. For required commands please refer to ip host and ipv6 host. In case a host corresponds to both an IPv4 and an IPv6 addresses, the IPv6 should be preferred when telneting this host name.	
Example	The switch telnets to a remote host whose IP address is 20.1.1.1.	

	<pre>Switch#telnet 20.1.1.1 23 Connecting Host 20.1.1.1 Port 23... Service port is 23 Connected to 20.1.1.1 login:123 password:*** router></pre>
--	---

telnet server enable

Command	telnet server enable no telnet server enable	
Parameter	none	none
Default	Telnet server function is enabled by default.	
Mode	Global Mode	
Usage Guide	<p>Enable the Telnet server function in the switch This command is available in Console only. The administrator can use this command to enable or disable the Telnet client to login to the switch. The “no telnet server enable” command disables the Telnet function in the switch.</p>	
Example	<p>Disable the Telnet server function in the switch. Switch(config)#no telnet server enable</p>	

telnet-server max-connection

Command	telnet-server max-connection {<max-connection-number> default}	
Parameter	<max-connection-number>	the max connection number supported by the Telnet service, ranging from 5 to 16
	default	restore the default configuration
Default	The system default value of the max connection number is 5.	
Mode	Global Mode	
Usage Guide	Configure the max connection number supported by the Telnet service of the switch.	
Example	<p>Set the max connection number supported by the Telnet service as 10. Switch(config)#telnet-server max-connection 10</p>	

ssh-server authentication-retries

Command	ssh-server authentication-retries <authentication-retries> no ssh-server authentication-retries	
Parameter	<authentication-retries>	the number of times for retrying

		authentication, valid range is 1 to 10
Default	The number of times for retrying SSH authentication is 3 by default.	
Mode	Global Mode	
Usage Guide	Configure the number of times for retrying SSH authentication. The “no ssh-server authentication-retries” command restores the default number of times for retrying SSH authentication.	
Example	Set the time for retrying SSH authentication to 5. Switch(config)#ssh-server authentication-retries 5	

ssh-server enable

Command	ssh-server enable no ssh-server enable	
Parameter	none	none
Default	SSH function is disabled by default.	
Mode	Global Mode	
Usage Guide	Enable SSH function on the switch. In order that the SSH client can log on the switch, the users need to configure the SSH user and enable SSH function on the switch. The “no ssh-server enable” command disables SSH function.	
Example	Enable SSH function on the switch. Switch(config)#ssh-server enable	

ssh-server host-key create rsa

Command	ssh-server host-key create rsa [modulus < modulus >]	
Parameter	< modulus >	the modulus which is used to compute the host key; valid range is 768 to 2048. The default value is 1024
Default	The system uses the key generated when the ssh-server is started at the first time.	
Mode	Global Mode	
Usage Guide	This command is used to generate a new SSH service host rsa key. When SSH client logs on the server, the new host key is used for authentication. After the new host key is generated and “write” command is used to save the configuration, the system uses this key for authentication all the time. Because it takes quite a long time to compute the new key and some clients are not compatible with the key generated by the modulus 2048, it is recommended to use the key which is generated by the default modulus 1024. No command disables SSH service.	

Example	Generate new host key. Switch(config)#ssh-server host-key create rsa
---------	---

ssh-server max-connection

Command	ssh-server max-connection {<max-connection-number> default}	
Parameter	<max-connection-number>	the max connection number supported by the SSH service, ranging from 5 to 16.
	default	restore default
Default	The system default value of the max connection number is 5.	
Mode	Global Mode	
Usage Guide	Configure the max connection number supported by the SSH service of the switch.	
Example	Set the max connection number supported by the SSH service as 10. Switch(config)#ssh-server max-connection 10	

ssh-server timeout

Command	ssh-server timeout <timeout> no ssh-server timeout	
Parameter	<timeout>	timeout value; valid range is 10 to 600 seconds
Default	SSH authentication timeout is 180 seconds by default.	
Mode	Global Mode	
Usage Guide	Configure timeout value for SSH authentication. The “no ssh-server timeout” command restores the default timeout value for SSH authentication.	
Example	Set SSH authentication timeout to 240 seconds. Switch(config)#ssh-server timeout 240	

show crypto key

Command	show crypto key	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	Show the secret key of ssh.	
Example	Show the secret key of ssh. Switch#show crypto key	

show ssh-server

Command	show ssh-server	
Parameter	none	none
Default	None.	
Mode	Admin Mode	

Usage Guide	Display SSH state and users which log on currently.
Example	Display SSH state and users which log on currently. Switch#show ssh-server ssh server is enabled ssh-server timeout 180s ssh-server authentication-retries 3 ssh-server max-connection number 6 ssh-server login user number 2

show telnet login

Command	show telnet login	
Parameter	none	none
Default	None.	
Mode	Admin Mode	
Usage Guide	Display the information of the Telnet client which currently establishes a Telnet connection with the switch.	
Example	Display Telnet client information. Switch#show telnet login Authenticate login by local Login user: aa	

show users

Command	show users													
Parameter	none	none												
Default	None.													
Mode	Admin Mode													
Usage Guide	Show the user information who logs in through telnet or ssh. It includes line number, user name and user IP. Because 16 telnet users and 16 ssh users are supported at most currently, vty0-15 are used for telnet, and 16-31 are used for ssh.													
Example	Displays user information. Switch#show users <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Line</th> <th>User</th> <th>Location</th> </tr> </thead> <tbody> <tr> <td>vtty 16</td> <td>a</td> <td>192.168.1.1</td> </tr> <tr> <td>vtty 0</td> <td>admin</td> <td>192.168.1.2</td> </tr> <tr> <td>vtty 17</td> <td>mab</td> <td>192.168.1.13</td> </tr> </tbody> </table>		Line	User	Location	vtty 16	a	192.168.1.1	vtty 0	admin	192.168.1.2	vtty 17	mab	192.168.1.13
Line	User	Location												
vtty 16	a	192.168.1.1												
vtty 0	admin	192.168.1.2												
vtty 17	mab	192.168.1.13												

	vty 1	test	192.168.1.40
--	-------	------	--------------

who

Command	who	
Parameter	none	none
Default	None.	
Mode	All configuration modes	
Usage Guide	Show the current login users with vty.	
Example	Show the current login users with vty. Switch#who Telnet user a login from 192.168.1.20	

1.3 Commands for Configuring Switch IP

interface vlan

Command	interface vlan <vlan-id> no interface vlan <vlan-id>	
Parameter	<vlan-id>	the VLAN ID of an existing VLAN, ranging from 1 to 4094
Default	None.	
Mode	Global Mode	
Usage Guide	This command is used enter the VLAN interface configuration mode Users should first make sure the existence of a VLAN before configuring it. User "exit" command to quit the VLAN interface configuration mode back to the global configuration mode. the no operation of this command will delete the existing VLAN interface.	
Example	Enter the VLAN interface configuration mode of VLAN1. Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#	

ip address

Command	ip address <ip-address> <mask> [secondary] no ip address [<ip-address> <mask>] [secondary]	
Parameter	<ip-address>	the IP address in dot decimal format
	<mask>	the subnet mask in dot decimal format
	[secondary]	indicates the IP configured is a secondary IP address
Default	No IP address is configured upon switch shipment.	
Mode	VLAN Interface Mode	

Usage Guide	<p>Set the IP address and mask for the specified VLAN interface.</p> <p>A VLAN interface must be created first before the user can assign an IP address to the switch.</p> <p>The no command deletes the specified IP address setting.</p>
Example	<p>Set 10.1.128.1/24 as the IP address of VLAN1 interface.</p> <pre>Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip address 10.1.128.1 255.255.255.0 Switch(Config-if-Vlan1)#exit Switch(config)#</pre>

ipv6 address

Command	<p>ipv6 address <ipv6address prefix-length> [eui-64]</p> <p>no ipv6 address <ipv6address prefix-length> [eui-64]</p>	
Parameter	<ipv6address >	the prefix of an IPV6 address
	<prefix-length>	the length of the prefix of an IPV6 address, ranging from 3 to 128
	[eui-64]	means that the eui64 interface id of the interface will automatically create an IPV6 address
Default	No IPv6 address is configured upon switch shipment.	
Mode	VLAN Interface Mode	
Usage Guide	<p>Configure aggregatable global unicast address, site-local address and link-local address for the interface.</p> <p>The prefix of an IPV6 address should not be a multicast address, or other kinds of IPV6 addresses with specific usage.</p> <p>Different layer-three VLAN interfaces are forbidden to share a same address prefix. As for any global unicast address, the prefix should be limited in the range from 2001:: to 3fff ::, with a length no shorter than 3. And the prefix length of a site-local address or a link-local address should not be shorter than 10.</p> <p>The no command deletes the specified IPv6 address setting.</p>	
Example	<p>Configure an IPV6 address at the layer-three interface of VLAN1: set the prefix as 2001:3f:ed8::99, the length of which is 64.</p> <pre>Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ipv6 address 2001:3f:ed8::99/64 Switch(Config-if-Vlan1)#exit Switch(config)#</pre>	

ip bootp-client enable

Command	<p>ip bootp-client enable</p> <p>no ip bootp-client enable</p>	
Parameter	none	none

Default	BootP client function is disabled by default.
Mode	VLAN Interface Mode
Usage Guide	<p>Enable the switch to be a BootP Client and obtain IP address and gateway address through BootP negotiation.</p> <p>Obtaining IP address through BootP, Manual configuration and DHCP are mutually exclusive, enabling any two methods for obtaining IP address is not allowed.</p> <p>To obtain IP address via BootP, a DHCP server or a BootP server is required in the network.</p> <p>The no command disables the BootP Client function and releases the IP address obtained in BootP.</p>
Example	<pre>Get IP address through BootP. Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip bootp-client enable Switch(Config-if-Vlan1)#exit Switch(config)#</pre>

ip dhcp-client enable

Command	ip dhcp-client enable no ip dhcp-client enable	
Parameter	none	none
Default	By default, the dhcp service is disabled.	
Mode	VLAN Interface Mode	
Usage Guide	<p>Enables the switch to be a DHCP client and obtain IP address and gateway address through DHCP negotiation.</p> <p>To obtain IP address via DHCP, a DHCP server is required in the network.</p> <p>Obtaining IP address by DHCP, Manual configuration and BootP are mutually exclusive, enabling any 2 methods for obtaining an IP address is not allowed.</p> <p>The no command disables the DHCP client function and releases the IP address obtained in DHCP.</p>	
Example	<pre>Getting an IP address through DHCP. Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip dhcp-client enable Switch(Config-if-Vlan1)#exit Switch(config)#</pre>	

1.4 Commands for SNMP

rmon enable

Command	rmon enable
---------	-------------

	no rmon enable	
Parameter	none	none
Default	RMON is enabled by default.	
Mode	Global Mode	
Usage Guide	This command is used to enable RMON remote network monitoring protocol. The no command disables RMON.	
Example	Disable RMON. Switch(config)#no rmon enable	

rmon history

Command	rmon history history-id interface (ethernet IFNAME IFNAME) ((buckets <1-50>) (interval <1-3600>) (owner WORD)) no rmon history history-id	
Parameter	history-id ethernet IFNAME IFNAME buckets interval owner	Specify RMON History Control Entry ID, valid range is : <1-65535> IFNAME is the name of the interface, for example 1/0/1 IFNAME is the name of the interface, for example ethernet1/0/1 The maximum number of entries for storing sampling statistics results Sampling interval time, unit:s/second Specify the user requesting RMON information (optional parameter), valid range is: <1-31> character
Default	Buckets default 50 Interval default 1800	
Mode	Global Mode	
Usage Guide	This command can regularly collect data from the specified port and save the collected information in a history table for future reference. no rmon history <1-65535> Delete configured RMON history control	
Example	Add or modify RMON history control. Switch(config)#rmon history 1 interface ethernet 1/0/1 buckets 5 interval 50	

rmon event

Command	rmon event event-id ((log WORD log trap WORD) (description WORD) (trap WORD) (owner WORD)) no rmon event event-id	
Parameter	event-id log trap WORD	Specify RMON event control entry ID, valid range is: <1-65535> Generate event logs

	Description owner	Generate alarms for events Simultaneously generating event logs and alarms Specify the group name. valid range is: <1-31> character Specify the description information of the event (optional parameter), valid range is: <1-127> character Specify the user requesting RMON information (optional parameter), valid range is: <1-31> character
Default	Default, no event triggered.	
Mode	Global Mode	
Usage Guide	This command is used when an event exceeds the alarm threshold, and the device can record logs or generate alarms, or both. no rmon event <1-65535> Delete configured RMON events	
Example	Configure simultaneous logging and alarm generation. Switch(config)# rmon event 1 log trap rw	

rmon alarm

Command	rmon alarm alarm-id interface(ethernet IFNAME IFNAME) counter sample { absolute delta }rising rising-threshold rising-event falling falling-threshold falling-event startup {rising falling rising-falling} [owner owner] no rmon alarm alarm-id	
Parameter	alarm-id ethernet IFNAME IFNAME counter Sample { absolute delta } rising-threshold rising-event falling-threshold falling-event {rising falling rising-falling}	Specify RMON alarm entry ID, valid range is: <1-65535> IFNAME is the name of the interface, for example 1/0/1 IFNAME is the name of the interface, for example ethernet1/0/1 The specified counter type, include (broadcast-pkts、collisions、crc-align-errors、drop-events、fragments、jabbers、multicast-pkts、octets、oversize-pkts、pkts、pkts1024to1518octets、pkts128to255octets、pkts256to511octets、pkts512to1023octets、pkts64octets、pkts65to127octets、undersize-pkts) Specify the alarm query time interval, valid range is: <1-2147483647> None Specify rise threshold, valid range is: <1-2147483647> Specify the ascending event entry number, valid range is: <1-65535> Specify descent threshold, valid range is: <1-2147483647> Specify the descent event entry number, valid range is: <1-65535> Rising:rising trigger event, falling:descent trigger event, rising-falling: Both rising and falling will trigger events
Default	None.	

Mode	Global Mode
Usage Guide	<p>This command is used to configure RMON, which can monitor the specified alarm variables at a specified sampling interval. When the value of the monitored data exceeds the defined threshold, an alarm event will be generated.</p> <p>absolute: Absolute value sampling refers to the device obtaining the values of alarm nodes at sampling intervals, and directly comparing the values of alarm nodes or calculated values with the upper and lower thresholds to trigger corresponding events.</p> <p>delta: Change value sampling: The device samples alarm nodes according to the sampling interval and subtracts the value obtained from the previous sampling time point from the current sampling time point to obtain the change value of the alarm node within the sampling interval. The change value of the alarm node or the calculated value is directly compared with the upper and lower threshold to trigger the corresponding event.</p> <p>The set up threshold must be greater than the down threshold.</p> <p>Rising: Rising trigger event, when the value of the alarm variable is greater than or equal to the upper limit threshold, a upper limit alarm event is triggered;</p> <p>Falling: Descent trigger event, When the value of the alarm variable is less than or equal to the lower limit threshold, a lower limit alarm event is triggered.</p> <p>When the value of the alarm variable is greater than or equal to the upper limit threshold, a upper limit alarm event is triggered;</p> <p>rising-falling: Both rising and falling events will trigger events, and the calculated values will be compared with the configured upper and lower thresholds to trigger the corresponding events. The rising and falling events will be triggered alternately.</p> <p>This configuration requires first enabling snmp server and configuring RMON events</p> <p>no rmon alarm <1-65535> Delete the configured RMON alarm entry.</p>
Example	<p>Configure rising trigger event alarms.</p> <pre>Switch(config)#snmp-server enable Switch(config)#rmon event 1 log Switch(config)# rmon alarm 1 interface ethernet 1/0/1 broadcast-pkts 10 absolute rising 2000 1 falling 200 1 startup rising</pre>

show rmon history

Command	<pre>show rmon history history-id statistic show rmon history history-id show rmon history all</pre>	
Parameter	<pre>statistic history-id all</pre>	<p>Viewing RMON Statistical Table Information</p> <p>Specify RMON History Control Entry ID, valid range is: <1-65535></p>

		View configuration information for all historical control entries in RMON
Default	None.	
Mode	Global Mode	
Usage Guide	<p>when the RMON function is not working properly and needs to be viewed, debugged, or located, this operation can be used.</p> <p>show rmon history history-id statistic view statistical information for RMON history control entries</p> <p>show rmon history history-id view configuration information for RMON historical control entries</p>	
Example	<p>View statistical information for RMON history control entries.</p> <p>Switch(config)#show rmon history 1 statistic</p>	

show rmon event

Command	<pre>show rmon event event -id show rmon event all</pre>	
Parameter	<pre>event -id all</pre>	<p>Specify RMON event control entry ID, valid range is: <1-65535></p> <p>View configuration information for all event control entries in RMON</p>
Default	None.	
Mode	Global Mode	
Usage Guide	This command is used to view configuration information for event control entries.	
Example	<p>View the configuration information of the RMON specified event control entry.</p> <p>Switch(config)#show rmon event 1</p>	

show rmon event log

Command	<pre>show rmon event event -id log</pre>	
Parameter	<pre>event -id log</pre>	<p>Specify RMON event control entry ID, valid range is: <1-65535></p> <p>Generate event logs</p>
Default	None.	
Mode	Global Mode	
Usage Guide	This command is used to view the log of events generated by the specified event entry.	
Example	<p>View the log of events generated by the specified event entry.</p> <p>Switch(config)#show rmon event 1 log</p>	

show rmon alarm

Command	<pre>show rmon alarm alarm-id</pre>
---------	-------------------------------------

	show rmon alarm all	
Parameter	alarm-id all	Specify RMON alarm entry ID, valid range is: <1-65535> View the configuration information of all RMON alarm control entries
Default	None.	
Mode	Global Mode	
Usage Guide	This command is used to view the configuration information of the RMON alarm control entry.	
Example	View the configuration information of the specified RMON alarm control entry. Switch(config)#show rmon alarm 1	

clear rmon statistics

Command	clear rmon statistics interface (ethernet IFNAME IFNAME)	
Parameter	ethernet IFNAME IFNAME	IFNAME is the name of the interface, for example 1/0/1 IFNAME is the name of the interface, for example ethernet1/0/1
Default	None.	
Mode	Admin Mode	
Usage Guide	This command is used to clear interface RMON statistics table information.	
Example	Clear RMON statistics table information for interface ethernet 1/0/1. Switch(config)#clear rmon statistics interface ethernet 1/0/24	

show private-mib oid

Command	show private-mib oid	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Show the original oid of the private mib. Check the beginning oid of the private mib by show private-mib oid command.	
Example	Show the original oid of the private mib. Switch#show private-mib oid Private MIB OID:1.3.6.1.4.1.6339	

show snmp

Command	show snmp	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display all SNMP counter information.	
Example	Display all SNMP counter information. Switch#show snmp 0 SNMP packets input 0 Bad SNMP version errors 0 Unknown community name 0 Illegal operation for community name supplied 0 Encoding errors 0 Number of requested variables 0 Number of altered variables 0 Get-request PDUs 0 Get-next PDUs 0 Set-request PDUs 0 SNMP packets output 0 Too big errors (Max packet size 1500) 0 No such name errors 0 Bad values errors 0 General errors 0 Get-response PDUs 0 SNMP trap PDUs	

show snmp engineid

Command	show snmp engineid	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display the engine ID commands.	
Example	Display the engine ID commands. Switch#show snmp engineid SNMP engineID:3138633303f1276c	

show snmp group

Command	show snmp group
---------	-----------------

Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display the group information .	
Example	Display the group information . Switch#show snmp group Group Name:initial Security Level:no Authno Priv Read View:one Write View:<no writeview specified> Notify View:one	

show snmp mib

Command	show snmp mib	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display all MIB supported by the switch.	
Example	Display all MIB supported by the switch. Switch#show snmp mib	

show snmp status

Command	show snmp status	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display SNMP configuration information.	
Example	Display SNMP configuration information. Switch#show snmp status Trap enable RMON enable Community Information: V1/V2c Trap Host Information: V3 Trap Host Information: Security IP Information:	

show snmp user

Command	show snmp user	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	

Usage Guide	Display the user information commands.
Example	Display the user information commands. Switch#show snmp user User name: initials Engine ID: 1234567890 Auth Protocol:MD5 Priv Protocol:DES-CBC Row status:active

show snmp view

Command	show snmp view	
Parameter	none	none
Default	None.	
Mode	Admin and configuration mode	
Usage Guide	Display the view information.	
Example	Display the view information. Switch#show snmp view View Name :readview 1. -Included active 2. Excluded active	

snmp-server community

Command	snmp-server community {ro rw} {0 7} <string> [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}] [read <read-view-name>] [write <write-view-name>] no snmp-server community {ro rw} {0 7} <string> [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}]	
Parameter	{ro rw}	the specified access mode to MIB, ro for read-only and rw for read-write
	{0 7}	if key option is set as 0, the specified community string is not encrypted, if key option is set as 7, the specified community string is encrypted
	<string>	the configured community string
	<num-std>	the access-class number for standard numeric ACL, ranging between 1-99
	<name>	the access-class name for standard ACL, the character string length is ranging between 1-32
	<ipv6-num-std>	the access-class number for standard numeric IPv6 ACL, ranging between 500-599
	<ipv6-name>	the access-class name for standard IPv6 ACL, the

		character string length is ranging between 1-32
	<read-view-name>	the name of readable view which includes 1-32 characters
	<write-view-name>	the name of writable view which includes 1-32 characters
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Configure the community string for the switch.</p> <p>The switch supports up to 4 community strings. It can realize the access-control for specifically community view by binding the community name to specifically readable view or writable view.</p> <p>The no command deletes the configured community string.</p>	
Example	<p>Add a community string named “private” with read-write permission.</p> <p>Switch(config)#snmp-server community rw 0 private</p> <p>Delete the community string named “private”.</p> <p>Switch(config)#no snmp-server community 0 private</p>	

snmp-server enable

Command	snmp-server enable no snmp-server enable	
Parameter	none	none
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Enable the SNMP proxy server function on the switch.</p> <p>To perform configuration management on the switch with network manage software, the SNMP proxy server function has to be enabled with this command.The “no snmp-server enable” command disables the SNMP proxy server function.</p>	
Example	<p>Enable the SNMP proxy server function on the switch.</p> <p>Switch(config)#snmp-server enable</p>	

snmp-server enable traps

Command	snmp-server enable traps no snmp-server enable traps	
Parameter	none	none
Default	By default forbid to send Trap message.	
Mode	Global Mode	
Usage Guide	<p>Enable the switch to send Trap message.</p> <p>When Trap message is enabled, if Down/Up in device ports or of system occurs,the device will send Trap messages to NMS that receives Trap messages.</p> <p>The no command disables the switch to send Trap message.</p>	
Example	<p>Enable to send Trap messages.</p>	

	Switch(config)#snmp-server enable traps
--	---

snmp-server engineid

Command	snmp-server engineid <engine-string> no snmp-server engineid	
Parameter	<engine-string>	the engine ID shown in 1-32 digit hex characters
Default	Default value is the company ID plus local MAC address.	
Mode	Global Mode	
Usage Guide	Configure the engine ID. The “no” form of this command restores to the default engine ID.	
Example	Set current engine ID to A66688999F Switch(config)#snmp-server engineid A66688999F	

snmp-server group

Command	snmp-server group <group-string> {NoauthNopriv AuthNopriv AuthPriv} [[read <read-string>] [write <write-string>] [notify <notify-string>]] [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}] no snmp-server group <group-string> {NoauthNopriv AuthNopriv AuthPriv} [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}]	
Parameter	<group-string>	group name which includes 1-32 characters
	NoauthNopriv	Applies the non recognizing and non encrypting safety level
	AuthNopriv	Applies the recognizing but non encrypting safety level
	AuthPriv	Applies the recognizing and encrypting safety level
	<read-string>	Name of readable view which includes 1-32 characters
	<write-string>	Name of writable view which includes 1-32 characters
	<notify-string>	Name of trappable view which includes 1-32 characters
	<num-std>	the access-class number for standard numeric ACL, ranging between 1-99
	<name>	the access-class name for standard ACL, the character string length is ranging between 1-32
	<ipv6-num-std>	the access-class number for standard numeric IPv6 ACL, ranging between 500-599
<ipv6-name>	the access-class name for standard IPv6 ACL, the character string length is ranging between 1-32	

Default	None.
Mode	Global Mode
Usage Guide	<p>This command is used to configure a new group.</p> <p>There is a default view “v1defaultviewname” in the system. It is recommended to use this view as the view name of the notification. If the read or write view name is empty, corresponding operation will be disabled.</p> <p>The “no” form of this command deletes this group.</p>
Example	<p>Create a group CompanyGroup, with the safety level of recognizing and encrypting, the read viewname is readview, and the writing is disabled.</p> <p>Switch (config)#snmp-server group CompanyGroup AuthPriv read readview</p>

snmp-server host

Command	<pre>snmp-server host { <host-ipv4-address> <host-ipv6-address> } {v1 v2c v3 {NoauthNopriv AuthNopriv AuthPriv}} <user-string> no snmp-server host { <host-ipv4-address> <host-ipv6-address> } {v1 v2c v3 {NoauthNopriv AuthNopriv AuthPriv}} <user-string></pre>	
Parameter	<host-ipv4-address>	IP address of NMS management station which receives Trap message
	<host-ipv6-address>	IPv6 address of NMS management station which receives Trap message
	v1 v2c v3	the version number when sending the trap
	NoauthNopriv	Applies the non recognizing and non encrypting safety level
	AuthNopriv	Applies the recognizing but non encrypting safety level
	AuthPriv	Applies the recognizing and encrypting safety level
	<user-string>	the community character string applied when sending the Trap message at v1/v2, and will be the user name at v3
Default	None.	
Mode	Global Mode	
Usage Guide	<p>As for the v1/v2c versions this command configures the IPv4 or IPv6 address and Trap community character string of the network management station receiving the SNMP Trap message. And for v3 version, this command is used for receiving the network management station IPv4 or IPv6 address and the Trap user name and safety level.</p> <p>The Community character string configured in this command is the</p>	

	<p>default community string of the RMON event group. If the RMON event group has no community character string configured, the community character string configured in this command will be applied when sending the Trap of RMON, and if the community character string is configured, its configuration will be applied when sending the RMON trap. This command allows to configure IPv4 or IPv6 addresses of SNMP management station that receive Trap message at the same time, but IPv4 and IPv6 addresses of v1 and v2c version are less than 8 in all.</p> <p>The “no” form of this command cancels this IPv4 or IPv6 address.</p>
Example	<p>Configure an IP address to receive Trap.</p> <pre>Switch(config)#snmp-server host 1.1.1.5 v1 usertrap</pre>

snmp-server securityip

Command	<pre>snmp-server securityip {<ipv4-address> <ipv6-address>} no snmp-server securityip {<ipv4-address> <ipv6-address>}</pre>	
Parameter	<ipv4-address>	NMS security IPv4 address, dotted decimal notation
	<ipv6-address>	NMS security IPv6 address, colon hexadecimal
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Configure security IPv4 or IPv6 address allowed to access NMS management station</p> <p>It is only the consistency between NMS administration station IPv4 or IPv6 address and security IPv4 or IPv6 address configured by the command, so it send SNMP packet could be processed by switch, the command only applies to SNMP. Allows configuration the IPv4 or IPv6 address of the network manage station receiving the SNMP Trap message, but the IP addresses are less than 20 in all.</p> <p>The no command deletes security IPv4 or IPv6 address configured.</p>	
Example	<p>Configure security IP address of NMS management station.</p> <pre>Switch(config)#snmp-server securityip 1.1.1.5</pre>	

snmp-server securityip enable

Command	<pre>snmp-server securityip {enable disable}</pre>	
Parameter	enable disable	SNMP security ip configuration enabled or disabled
Default	Enable the security IP address authentication function.	
Mode	Global Mode	
Usage Guide	<p>Enable/disable the security IP address authentication on NMS management station.</p>	
Example	<p>Disable the security IP address authentication function.</p> <pre>Switch(config)#snmp-server securityip disable</pre>	

snmp-server trap-source

Command	snmp-server trap-source {<ipv4-address> <ipv6-address>} no snmp-server trap-source {<ipv4-address> <ipv6-address>}	
Parameter	<ipv4-address>	IPv4 address is used to send trap packet in dotted decimal notation
	<ipv6-address>	IPv6 address is used to send trap packet in colon hexadecimal
Default	None.	
Mode	Global Mode	
Usage Guide	Set the source IPv4 or IPv6 address which is used to send trap packet. If there is no configuration, select the source address according to the interface address sent by actual trap packet, when configure the IP address, adopt the configured source address as the source address of trap packet. The no command deletes the configuration.	
Example	Set the IP address which is used to send trap packet. Switch(config)#snmp-server trap-source 1.1.1.5	

snmp-server user

Command	snmp-server user <use-string> <group-string> [{authPriv [auth {md5 sha} <word>]} {authNoPriv [{3des aes des} <word>]} [auth {md5 sha} <word>]}] [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}] no snmp-server user <user-string> [access {<num-std> <name>}] [ipv6-access {<ipv6-num-std> <ipv6-name>}]	
Parameter	<use-string>	the user name containing 1-32 characters
	<group-string>	the name of the group the user belongs to, containing 1-32 characters
	authPriv	use DES for the packet encryption
	authNoPriv	not use DES for the packet encryption
	auth	perform packet authentication
	md5	packet authentication using HMAC MD5 algorithm
	sha	packet authentication using HMAC SHA algorithm
	3des	packet authentication using 3DES to encrypt
	aes	packet authentication using AES to encrypt
	des	packet authentication using DES to encrypt
	<word>	user password, containing 8-32 character
	<num-std>	the access-class number for standard numeric ACL, ranging between 1-99
	<name>	the access-class name for standard ACL, the

		character string length is ranging between 1-32
	<ipv6-num-std >	the access-class number for standard numeric IPv6 ACL, ranging between 500-599
	<ipv6-name>	the access-class name for standard IPv6 ACL, the character string length is ranging between 1-32
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Add a new user to an SNMP group.</p> <p>If the encryption and authentication is not selected, the default settings will be no encryption and no authentication. If the encryption is selected, the authentication must be done. When deleting a user, if correct username and incorrect group name is inputted, the user can still be deleted.</p> <p>The "no" form of this command deletes this user.</p>	
Example	<p>Add a new user tester in the UserGroup with HMAC md5 for authentication, the password is hellohello;Delete an User</p> <pre>Switch (config)#snmp-server user tester UserGroup authNoPriv auth md5 hellohello Switch (config)#no snmp-server user tester</pre>	

snmp-server view

Command	snmp-server view <view-string> <oid-string> {include exclude} no snmp-server view <view-string> [<oid-string>]	
Parameter	<view-string>	view name, containing 1-32 characters
	<oid-string>	OID number or corresponding node name, containing 1-255 characters
	include exclude	include/exclude this OID
Default	None.	
Mode	Global Mode	
Usage Guide	<p>This command is used to create or renew the view information.</p> <p>The command supports not only the input using the character string of the variable OID as parameter. But also supports the input using the node name of the parameter.</p> <p>the "no" form of this command deletes the view information.</p>	
Example	<p>Create a view named readview, include iso nodes but not iso.3 nodes, and then delete them.</p> <pre>Switch(config)#snmp-server view readview iso include Switch(config)#snmp-server view readview iso.3 exclude Switch(config)#no snmp-server view readview</pre>	

switchport updown notification enable

Command	switchport updown notification enable
---------	---------------------------------------

	no switchport updown notification enable	
Parameter	none	none
Default	Send the trap message to the port of IP/DOWN event as default.	
Mode	Port Mode	
Usage Guide	<p>Enable/disable the function of sending the trap message to the port of UP/DOWN event.</p> <p>This command can control to send the trap message when the port happens the UP/DOWN event or not. As default, send the trap message to all the ports of UP/DOWN event after enabled snmp trap.</p> <p>The no command deletes the configuration.</p>	
Example	<p>Disable the function of sending the trap message to the port 1/0/1 of the UP/DOWN event.</p> <pre>Switch(config)#in e 1/0/1 Switch(config-if-ethernet1/0/1)#no switchport updown notification enable Switch(config-if-ethernet1/0/1)#show running-config current-mode Interface Ethernet1/0/1 no switchport updown notification enable</pre>	

1.5 Commands for Switch Upgrade

copy (FTP)

Command	copy <source-url> <destination-url> [ascii binary]	
Parameter	<source-url>	the location of the source files or directories to be copied
	<destination-url> >	the destination address to which the files or directories to be copied
	ascii	ASCII standards will be adopted
	binary	File transfer will be in binary mode (default transfer method)
Default	None.	
Mode	Admin Mode	
Usage Guide	<p>This command is used to transfer files by TFP.</p> <p>When URL represents an FTP address, its form should be: ftp://<username>:<password>@{<ipaddress> <ipv6address> <hostname> }/ <filename>,a mongst <username> is the FTP user name, <password> is the FTP user password, <ipaddress> <ipv6address> is the IPv4 or IPv6 address of the FTP server/client,<hostname> is the name of the host mapping with the IPv6 address, it does not support the file download and upload with hosts mapping with IPv4 addresses, <filename> is the name of the FTP upload/download file.</p>	

	<p>Special keywords of the filename</p> <table border="1"> <tr> <td>keywords</td> <td>explain</td> </tr> <tr> <td>running-config</td> <td>Running configuration files</td> </tr> <tr> <td>startup-config</td> <td>It means the reboot configuration files when using copy running-config startup-config command</td> </tr> <tr> <td>nos.img</td> <td>System files</td> </tr> <tr> <td>boot.rom</td> <td>System startup files</td> </tr> <tr> <td>stacking/nos.img</td> <td>As destination address, execute system files upgrade for in stacking mode</td> </tr> <tr> <td>stacking/nos.rom</td> <td>As destination address, execute system startup files upgrade Slave in stacking mode</td> </tr> </table> <p>This command supports command line hints, namely if the user can enter commands in following forms: copy <filename> ftp:// or copy ftp:// <filename> and press Enter, following hints will be provided by the system:</p> <pre>ftp server ip/ipv6 address [x.x.x.x]/[x:x::x:x] > ftp username> ftp password> ftp filename> Requesting for FTP server address, user name, password and file name</pre>	keywords	explain	running-config	Running configuration files	startup-config	It means the reboot configuration files when using copy running-config startup-config command	nos.img	System files	boot.rom	System startup files	stacking/nos.img	As destination address, execute system files upgrade for in stacking mode	stacking/nos.rom	As destination address, execute system startup files upgrade Slave in stacking mode
keywords	explain														
running-config	Running configuration files														
startup-config	It means the reboot configuration files when using copy running-config startup-config command														
nos.img	System files														
boot.rom	System startup files														
stacking/nos.img	As destination address, execute system files upgrade for in stacking mode														
stacking/nos.rom	As destination address, execute system startup files upgrade Slave in stacking mode														
Example	<p>Save images in the FLASH to the FTP server of 10.1.1.1, FTP server username is Switch, password is superuser:</p> <pre>Switch#copy nos.img ftp://Switch:superuser@10.1.1.1/nos.img</pre> <p>Obtain system file nos.img from the FTP server 10.1.1.1, the username is Switch, password is superuser</p> <pre>Switch#copy ftp://Switch:superuser@10.1.1.1/nos.img nos.img</pre> <p>Save the running configuration files.</p> <pre>Switch#copy running-config startup-config</pre>														

copy (TFTP)

Command	copy <source-url> <destination-url> [ascii binary]	
Parameter	<source-url>	the location of the source files or directories to be copied
	<destination-url>	the destination address to which the files or directories to be copied
	ascii	ASCII standards will be adopted
	binary	File transfer will be in binary mode (default transfer method)

Default	None.										
Mode	Admin Mode										
Usage Guide	<p>This command is used to transfer files by TFTP.</p> <p>When URL represents a TFTP address, its form should be: tftp://{<ipaddress> <ipv6address> <hostname>}/<filename>, amongst <ipaddress> <ipv6address> is the IPv4 or IPv6 address of the TFTP server/client, <hostname> is the name of the host mapping with the IPv6 address, it does not support the file download and upload with hosts mapping with IPv4 addresses, <filename> is the name of the TFTP upload/download file.</p> <p>Special keyword of the filename</p> <table border="1"> <thead> <tr> <th>keywords</th> <th>explain</th> </tr> </thead> <tbody> <tr> <td>running-config</td> <td>Running configuration files</td> </tr> <tr> <td>startup-config</td> <td>It means the reboot configuration files when using copy running-config startup-config command</td> </tr> <tr> <td>nos.img</td> <td>System files</td> </tr> <tr> <td>boot.rom</td> <td>System startup files</td> </tr> </tbody> </table> <p>This command supports command line hints, namely if the user can enter commands in following forms: copy <filename> tftp:// or copy tftp:// <filename> and press Enter, following hints will be provided by the system:tftp server ip/ipv6 address[x.x.x.x]/[x:x::x:x]>tftp filename> Requesting for TFTP server address, file name</p>	keywords	explain	running-config	Running configuration files	startup-config	It means the reboot configuration files when using copy running-config startup-config command	nos.img	System files	boot.rom	System startup files
keywords	explain										
running-config	Running configuration files										
startup-config	It means the reboot configuration files when using copy running-config startup-config command										
nos.img	System files										
boot.rom	System startup files										
Example	<p>Save images in the FLASH to the TFTP server of 10.1.1.1 Switch#copy nos.img tftp://10.1.1.1/nos.img</p> <p>Obtain system file nos.img from the TFTP server 10.1.1.1 Switch#copy tftp://10.1.1.1/nos.img nos.img</p> <p>Save the running configuration files Switch#copy running-config startup-config</p>										

ftp-dir

Command	ftp-dir <ftp-server-url>	
Parameter	<ftp-server-url>	ftp server address
Default	None.	
Mode	Admin Mode	
Usage Guide	<p>Browse the file list on the FTP server.</p> <p>The form of <ftp-server-url> is : tftp://<username>:<password>@{ <ip4address> <ip6address> },</p>	

	amongst <username> is the FTP user name, <password> is the FTP user password, { <ipv4address> <ipv6address> } is the IPv4 or IPv6 address of the FTP server.
Example	Browse the list of the files on the server with the FTP client, the username is "Switch", the password is "superuser". Switch#ftp-dir ftp://Switch:superuser @10.1.1.1

ftp-server enable

Command	ftp-server enable no ftp-server enable	
Parameter	none	none
Default	FTP server is not started by default.	
Mode	Global Mode	
Usage Guide	This command is used to start the FTP server. When FTP server function is enabled, the switch can still perform ftp client functions.The "no ftp-server enable" command shuts down FTP server and prevents FTP user from logging in.	
Example	Enable FTP server services. Switch(config)# ftp-server enable	

ftp-server timeout

Command	ftp-server timeout <seconds>	
Parameter	<seconds>	the idle time threshold (in seconds) for FTP connection, the valid range is 5 to 3600
Default	The system default is 600 seconds.	
Mode	Global Mode	
Usage Guide	This command is used to configure FTP data connection idle time. When FTP data connection idle time exceeds this limit, the FTP management connection will be disconnected.	
Example	Modify the idle threshold to 100 seconds. Switch(config)#ftp-server timeout 100	

ip ftp

Command	ip ftp username <username> password [0 7] <password> no ip ftp username <username>	
Parameter	<username>	the username of the FTP link, its range should not exceed 32 characters
	[0 7]	0 means password is not encrypted ,7 means password is encrypted
	<password>	FTP link password
Default	The system uses anonymous FTP links by default.	

Mode	Global Mode
Usage Guide	Configure the username and password for logging in to the FTP. The no operation of this command will delete the configured username and password simultaneously.
Example	Configure the username as Switch and the password as superuser. Switch(config)#ip ftp username Switch password 0 superuser

show ftp

Command	show ftp	
Parameter	none	none
Default	None.	
Mode	Admin and Global Mode	
Usage Guide	Display the parameter settings for the FTP server.	
Example	Display the parameter settings for the FTP server. Switch#show ftp Timeout : 600	

show tftp

Command	show tftp	
Parameter	none	none
Default	None.	
Mode	Admin and Global Mode	
Usage Guide	Display the parameter settings for the TFTP server.	
Example	Display the parameter settings for the TFTP server. Switch#show tftp timeout : 60 Retry Times : 10	

tftp-server enable

Command	tftp-server enable no tftp-server enable	
Parameter	none	none
Default	Disable TFTP Server.	
Mode	Global Mode	
Usage Guide	This command is used to start the TFTP server.	

	The “no ftp-server enable” command shuts down TFTP server and prevents TFTP user from logging in.
Example	Start the TFTP server. Switch(config)#tftp-server enable

tftp-server retransmission-number

Command	tftp-server retransmission-number <number>
Parameter	<number> the time to re-transfer, the valid range is 1 to 20
Default	Retransmit 5 times.
Mode	Global Mode
Usage Guide	Set the retransmission time for TFTP server.
Example	Modify the retransmission to 10 times. Switch(config)#tftp-server retransmission-number 10

tftp-server transmission-timeout

Command	tftp-server transmission-timeout <seconds>
Parameter	<seconds> the timeout value, the valid range is 5 to 3600s
Default	The system default timeout setting is 600 seconds.
Mode	Global Mode
Usage Guide	Set the transmission timeout value for TFTP server.
Example	Modify the timeout value to 60 seconds. Switch(config)#tftp-server transmission-timeout 60

1.6 Commands for File System

cd

Command	cd <directory>
Parameter	<directory> the sub-directory name, a sequence of consecutive characters whose length ranges from 1 to 80
Default	The default working directory is Flash.
Mode	Admin Mode
Usage Guide	Change the working directory for the storage device. After this command implemented, the current storage device will switch to the new working directory, which can be viewed by the “pwd” command.
Example	Change the working directory of the current storage device to flash. Switch#cd flash: Switch#pwd flash: /

copy

Command	copy <source-file-url > <dest-file-url>	
Parameter	<source-file-url>	The source address of the file or directory to be copied
	<dest-file-url>	The destination address of the file or directory to be copied
Default	None.	
Mode	Admin Mode	
Usage Guide	<p>Copy a designated file on the switch and store it as a new file. When users operate on files stored in backup master board and line cards under IMG mode, URLs of the source file and the destination file should take such a form as described in the following requirements.</p> <ol style="list-style-type: none"> The prefix of the source file URL should be in one of the following forms: <ul style="list-style-type: none"> starting with "flash:/" "ftp://username:pass@server-ip/file-name" "tftp://server-ip/file-name" The prefix of the destination file URL should be in one of the following forms: <ul style="list-style-type: none"> starting with "flash:/" "ftp://username:pass@server-ip/file-name" "tftp://server-ip/file-name" <p>when the prefix of the source file URL is ftp:// or tftp://, that of the destination file URL should not be either of them.</p> <p>To use this command, the designated source file should exist, and the destination file should not be named the same as any existing directory or file, otherwise, there might be a prompt warning about a failed copy operation or an attempt to overwrite an existing file.</p> <p>If the source and destination files are in different directories, with this command implemented, users can copy files from other directories into the current one.</p>	
Example	<p>Copy the file "flash:/nos.img" and store it as "flash/ 6.1.11.0.img".</p> <pre>Switch#copy flash:/nos.img flash:/nos-6.1.11.0.img Copy flash:/nos.img to flash:/nos-6.1.11.0.img? [Y:N] y Copied file flash:/nos.img to flash:/nos-6.1.11.0.img</pre>	

delete

Command	delete <file-url>	
Parameter	<file-url>	the full path of the file to be deleted
Default	None.	
Mode	Admin Mode	
Usage Guide	Delete the designate file on the storage device.	

Example	Delete file flash:/nos.img. Switch#delete flash:/nos5.img Delete file flash:/nos5.img?[Y:N]y Deleted file flash:/nos.img
---------	---

dir

Command	dir [WORD]	
Parameter	[WORD]	the name of the shown directory. There may be the following formats: directory name, slot-xx#directory name, flash:/directory name, cf:/directory name.
Default	No <WORD> means to display information of the current working directory.	
Mode	Admin Mode	
Usage Guide	Display the information of the designated directory on the storage device. This command does not support a recursive display of all sub-directories.	
Example	Display information of the directory "flash:/". Switch#dir flash:/ nos.img 2,449,496 1980-01-01 00:01:06 ---- startup-config 2,064 1980-01-01 00:30:12 ---- Total 7, 932, 928 byte(s) in 4 file(s), free 4, 966, 400 byte(s) Switch#	

pwd

Command	pwd	
Parameter	none	none
Default	The default directory is flash.	
Mode	Admin Mode	
Usage Guide	Display the current working directory.	
Example	Display the current working directory. Switch#pwd flash:/	

rename

Command	rename <source-file-url> <new-filename >	
Parameter	<source-file-url>	the source file, in which whether specifying or not its path are both acceptable
	<new-filename >	filename without specifying its path

Default	None.
Mode	Admin Mode
Usage Guide	Rename a designated file on the switch. When using this command, if the new file name is not used as that of any existing directory or file, the rename operation can be done, or a prompt will indicate its failure.
Example	Change the name of file "nos.img" in the current working directory to "nos-6.1.11.0.img". Switch# rename nos5.img nos-6.1.11.0.img Rename flash:/nos5.img to flash:/nos-6.1.11.0.img ok!

2.1. Commands for Ethernet Port Configuration

Bandwidth

Command	bandwidth control <bandwidth> {transmit receive both} no bandwidth control
parameter	bandwidth is the bandwidth limit, which is shown in kbps between 1-1000000K
default	Disable bandwidth restrictions by default
Mode	Port Configuration Mode
Usage Guide	Use the bandwidth control <bandwidth>[both receive transmit] command to set the bandwidth rate. Use the no bandwidth control restore default configuration
Example	Set the bandwidth limit of 1/0/1-8 port is 40000K. Switch(config)#interface ethernet 1/0/1-8 Switch(Config-If-Port-Range)#bandwidth control 40000 both

clear counters interface

Command	clear counters [interface {ethernet <interface-list> vlan <vlan-id> port-channel <port-channel-number> <interface-name>}]
parameter	interface-list stands for the Ethernet port number;
	vlan-id stands for the VLAN interface number;
	port-channel-number for trunk interface number;
	interface-name for interface name, such as port-channel 1.
default	Port statistics default not cleared
Mode	Admin Mode
Usage Guide	If no port is specified, statistics for all ports are cleared.
Example	Clearing the statistics for Ethernet port1/0/1. Switch#clear counters interface ethernet 1/0/1

Description

Command	description <string> no description	
parameter	string	is a character string, which should not exceeds 200 characters
default	No port name by default	
Mode	Port Mode	
Usage Guide	This command is for helping the user manage switches, such as the user assign names according to the port application, e.g. financial as the name of 1/0/1-2 ports which is used by financial department, engineering as the name of 1/0/9 ports which belongs to the engineering department, while the name of 1/0/12 ports is assigned with Server, which is because they connected to the server. In this way the port distribution state will be brought to the table.	
Example	Specify the description of 1/0/1-2 port as financial. Switch(config)#interface ethernet 1/0/1-2 Switch(Config-If-Port-Range)#description financial	

interface ethernet

Command	interface ethernet <interface-list>	
parameter	interface-list	stands for port number.
default		
Mode	Global Mode	
Usage Guide	This command can be used to enter port configuration mode and run exit command to exit Ethernet port mode to global mode.	
Example	Entering the Ethernet Port Mode for ports 1/0/1, 1/0/4-5, 1/0/8。 Switch(config)#interface ethernet 1/0/1;1/0/4-5;1/0/8 Switch(Config-If-Port-Range)#	

flow control

Command	flow control no flow control
parameter	-
default	Disable port traffic control by default
Mode	Port Mode
Usage Guide	After the flow control function is enabled, the port will notify the sending

	device to slow down the sending speed to prevent packet loss when traffic received exceeds the capacity of port cache. Ports support IEEE802.3X flow control; the ports work in half-duplex mode, supporting back-pressure flow control. If flow control results in serious HOL, the switch will automatically start HOL control (discarding some packets in the COS queue that may result in HOL) to prevent drastic degradation of network performance.
Example	Enabling the flow control function in ports 1/0/1-8. Switch(config)#interface ethernet 1/0/1-8 Switch(Config-If-Port-Range)#flow control

Loopback

Command	loopback no loopback
parameter	-
default	By default, disable loop testing in the Ethernet port
Mode	Port Mod
Usage Guide	Loopback test can be used to verify the Ethernet ports are working normally. After loopback has been enabled, the port will assume a connection established to itself, and all traffic sent from the port will be received at the very same port.
Example	Enabling loopback test in Ethernet ports 1/0/1-8. Switch(config)#interface ethernet 1/0/1-8 Switch(Config-If-Port-Range)#loopback

Negotiation

Command	negotiation {on off}
parameter	-
default	Auto-negotiation is enabled by default.
Mode	Port configuration Mode
Usage Guide	This command applies to 1000Base-FX interface only. The negotiation command is not available for 1000Base-TX or 100Base-TX interface. To change the negotiation mode, speed and duplex mode of 1000Base-TX port, use speed-duplex command instead.
Example	Port 21 of Switch1 is connected to port 21 of Switch2, the following will disable the negotiation for both ports. Switch1(config)#interface ethernet1/0/21 Switch1(Config-If-Ethernet1/0/21)#negotiation off Switch2(config)#interface ethernet1/0/21 Switch2(Config-If-Ethernet1/0/21)#negotiation off

Port-rate-statistics interval

Command	port-rate-statistics interval <interval-value>	
parameter	interval-value	The interval of port-rate-statistics, unit is second, ranging from 5 to 600 with the configuration step of 5.
default	Only port-rate-statistics of 5 seconds and 5 minutes are displayed.	
Mode	Global Mode	
Usage Guide	This command can be used to set the port rate statistics interval time.	
Example	Count the interval of port-rate-statistics as 20 seconds. Switch(config)#port-rate-statistics interval 20	

rate-violation

Command	rate-violation [broadcast multicast unicast all] <200-2000000> no rate-violation	
parameter	broadcast	broadcast packet
	multicast	multicast packet
	unicast	unicast packet
	all	all packets
	<200-2000000>	the number of packets allowed to pass per second.
default	There is no limit for the packet reception rate.	
Mode	Port Mode	
Usage Guide	This command is mainly used to detect the abnormal port flow. For example, when there are a large number of broadcast packets caused by a loopback, which affect the processing of other tasks, the port will be shut down or block to ensure the normal processing of the switch. This command needs to associate with rate-violation control command.	
Example	Set the rate-violation of port 1/0/8-10 (GB ports) as 10000pps, it will be shutdown after rate-violation and the port recovery time as 1200 seconds, when the packet reception rate exceeds 10000, the port will but shut down, and then, after 1200 seconds, the port will be UP again. Switch(config)#interface ethernet 1/0/8-10 Switch(Config-Port-Range)#rate-violation unicast 10000 Switch(Config-Port-Range)#rate-violation control shutdown recovery 1200	

rate-violation control

Command	rate-violation control [shutdown recovery <0-86400> block] no rate-violation control	
parameter	shutdown	A port is shutdown after rate-violation
	recovery	After a period of time the port can recover Shutdown to UP again.

	block	A port is block after rate-violation, this parameter and MSTP, EAPS(MRPP), Loopback Detection, ULPP are mutually exclusive. If other modules set STP state, this function can not be set to block mode.
	<0-86400>	Automatic recovery time
default	There is no control operation for rate-violation.	
Mode	Port Mode	
Usage Guide	This command is mainly used to the control operation after rate-violation.	
Example	<p>After set the rate-violation of the unicast packet of port 1/8-10 (GB ports) as 10000pps, the port will be block.</p> <pre>Switch(Config)#interface ethernet 1/0/8-10 Switch(Config-Port-Range)#rate-violation unicast 10000 Switch(Config-Port-Range)#rate-violation control block</pre>	

show interface

Command	<pre>show interface [ethernet <interface-number> port-channel <port-channel-number> vlan <vlan-id> <interface-name>] [detail] show interface ethernet status show interface ethernet counter {packet rate}</pre>	
parameter	interface-number	is the port number of the Ethernet,
	port-channel-number	is the number of the aggregation interface
	vlan-id	is the VLAN interface number, the value range from 1 to 4094
	interface-name	is the name of the interface such as port-channel1
	detail	show the detail of the port
default	Information not displayed by default	
Mode	Admin and Configuration Mode.	
Usage Guide	Use this command to view interface-related configuration information	
Example	<pre>Show the information of VLAN 1 . Vlan1 is up, line protocol is up, dev index is 11001 Device flag 0x1003(UP BROADCAST MULTICAST) Time since last status change:0w-0d-1h-14m-57s (4497 seconds) IPv4 address is: 192.168.2.1 255.255.255.0 (Primary) VRF Bind: Not Bind Hardware is EtherSVI, address is 00-1f-ce-10-b0-1a MTU is 1500 bytes , BW is 0 Kbit Encapsulation ARPA, loopback not set 5 minute input rate 244 bits/sec, 0 packets/sec 5 minute output rate 0 bits/sec, 0 packets/sec The last 5 second input rate 0 bits/sec, 0 packets/sec</pre>	

	<p>The last 5 second output rate 0 bits/sec, 0 packets/sec</p> <p>Input packets statistics:</p> <p>Input queue 0/600, 0 drops</p> <p>1012 packets input, 193127 bytes, 0 no buffer</p> <p>0 input errors, 0 CRC, 0 oversize, 0 undersize</p> <p>0 jabber, 0 fragments</p> <p>Output packets statistics:</p> <p>448 packets output, 108316 bytes, 0 underruns</p> <p>0 output errors, 0 collisions</p>
--	---

Shutdown

Command	Shutdown
parameter	-
default	Ethernet port is open by default.
Mode	Port Mode.
Usage Guide	When Ethernet port is shut down, no data frames are sent in the port, and the port status displayed when the user types the "show interface" command is "down".
Example	<p>Opening ports 1/0/1-8.</p> <p>Switch(config)#interface ethernet1/0/1-8</p> <p>Switch(Config-If-Port-Range)#no shutdown</p>

speed-duplex

Command	<p>speed-duplex {auto [10 [100 [1000]] [auto full half]] force10-half force10-full force100-half force100-full force100-fx [module-type {auto-detected no-phy-integrated phy-integrated}] {{force1g-half force1g-full} [nonegotiate [master slave]]}}</p> <p>no speed-duplex</p>	
parameter	auto	is the auto speed and duplex negotiation
	10	10kbps
	100	100kbps
	1000	1000kbps
	force10-half	is the forced 10Mbps at half-duplex mode
	force10-full	is the forced 10Mbps at full-duplex mode
	force100-half	is the forced 100Mbps at half-duplex mode
	force100-full	is the forced 100Mbps at full-duplex mode
	force1g-half	is the forced 1000Mbps at half-duplex mode
	force1g-full	is the forced 1000Mbps at full-duplex mode
	force100-fx	is the forced 100Mbps at full-duplex mode
	auto-detected	automatic detection

	no-phy-integrated	there is no phy-integrated 100Base-FX module
	phy-integrated	phy-integrated 100Base-FX module
	nonegotiate	disables auto-negotiation forcibly for 1000Mb port
	master	forces the 1000Mb port to be master mode
	slave	Forces the 1000Mb port to be slave mode
default	Auto-negotiation for speed and duplex mode is set by default	
Mode	Port Mode	
Usage Guide	<p>This command is configured the port speed and duplex mode. When configuring port speed and duplex mode, the speed and duplex mode must be the same as the setting of the remote end, i.e., if the remote device is set to auto-negotiation, then auto-negotiation should be set at the local port. If the remote end is in forced mode, the same should be set in the local end.</p> <p>1000Gb ports are by default master when configuring nonegotiate mode. If one end is set to master mode, the other end must be set to slave mode.</p> <p>force1g-half is not supported yet.</p>	
Example	<p>Port 1 of Switch1 is connected to port 1 of Switch2, the following will set both ports in forced 100Mbps at half-duplex mode.</p> <pre>Switch1(config)#interface ethernet1/0/1 Switch1(Config-If-Ethernet1/0/1)#speed-duplex force100-half Switch2(config)#interface ethernet1/0/1 Switch2(Config-If-Ethernet1/0/1)#speed-duplex force100-half</pre>	

storm-control

Command	storm-control { kbps pps } no storm-control pps	
parameter	kbps	means the unit of limit is kbits/s
	pps	means the limit unit is packets/s.
default	The default is kbps.	
Mode	Global Mode	
Usage Guide	Configure the kbps or pps as the limit mode in global mode, then set broadcast, multicast or unknown unicast limit value in port mode.	
Example	<p>Setting ports 1-8 allow 1000kbit broadcast packets per second.</p> <pre>Switch(config)#storm-control kbps Switch(config-if-port-range)#storm-control broadcast 1000</pre>	

storm-control

Command	storm-control { unicast broadcast multicast } <value> no storm-control { unicast broadcast multicast }	
parameter	unicast	to limit unicast traffic for unknown destination
	broadcast	to limit broadcast traffic.
	multicast	to limit multicast traffic

	value	Limit the flow rate per second, PPS range from 1 to 1488095; kbps range from 1 to 1000000.
default	No limit is set by default. So, broadcasts, multicasts and unknown destination unicasts are allowed to pass at line speed.	
Mode	Port Mode	
Usage Guide	All ports in the switch belong to a same broadcast domain if no VLAN has been set. The switch will send the above mentioned three traffics to all ports in the broadcast domain, which may result in broadcast storm and so may greatly degrade the switch performance. Enabling Broadcast Storm Control can better protect the switch from broadcast storm. If the allowed traffic is set to 1000kbps, this means allow 1000 kbit per second and suppress the rest. The switch supports two kind of speed limit, it includes kbps which is limit by bandwidth and pps which is limit by the numbers of packets. It only can select one from the two ways and cannot set the two way in the same time (by global mode)Broadcast suppression is similar to bandwidth control. There is granularity limitation for the chip; the switch support 16Kbps granularities. If the <Kbits> that user input is not the integer times of 16, the system will adjust to the integer times of 16 automatically and print the true limit value to user.	
Example	Setting ports 1-8 allow 1000kbit broadcast packets per second. Switch(config-if-port-range)#storm-control broadcast 1000	

storm-control bypass

Command	storm-control bypass {arp bpdu igmp rma rek } <enable disable >	
parameter	arp	means the protocol packets of arp-request
	bpdu	means bpdu protocol packets
	igmp	means igmp protocol packets
	rma	means multicast address is the saved multicast packets
	rek	means the special private packets that realtak used
	enable	enable some protocol to limit filter function
	disable	disable some protocol to broadcast limit filter function.
default	Disable	
Mode	Global Mode.	
Usage Guide	Configure broadcast limit filter function of some protocol in global mode, then configure broadcast limit in port mode. At this moment, the protocol packets flow from the port cannot be limited.	
Example	Configure arp protocol filter function to make the arp-request data packets thatfrom 1 port in cannot be limited. Switch (config)#storm-control bypass arp enable Switch(config-if-ethernet1/0/1)#storm-control broadcast 1000	

virtual-cable-test

Command	virtual-cable-test interface ethernet <interface-list>
---------	--

parameter	interface-list	Port ID
default	-	
Mode	Admin Mode.	
Usage Guide	<p>The RJ-45 port connected with the twisted pair under test should be in accordance with the wiring sequence rules of IEEE802.3, or the wire pairs in the test result may not be the actual ones. On a 100M port, only two pairs are used: (1, 2) and (3, 6), whose results are the only effective ones. If a 1000M port is connected to a 100M port, the results of (4, 5) and (7, 8) will be of no meaning. The result may have deviations according to the type of the twisted pair, the temperature, working voltage and other conditions. When the temperature is 20 degree Celsius, and the voltage is stable without interference, and the length of the twisted pair is not longer than 100 meters, a deviation of +/-2 meters is allowed. When the port is at Link UP status, a deviation of +/-10 meters is allowed. Notice: the test procedure will block all data flow on the line for 5-10 seconds, and then restore the original status.</p> <p>568A wiring sequence: (1 green white, 2 green), (3 orange white, 6 orange), (4 blue, 5 blue white), (7 brown white, 8 brown).</p> <p>568B wiring sequence: (1 orange white, 2 orange), (3 green white, 6 green), (4 blue, 5 blue white), (7 brown white, 8 brown).</p>	
Example	<p>Test the link status of the twisted pair connected to the 1000M port 1/0/1.</p> <pre>Switch#virtual-cable-test interface ethernet 1/0/1 Interface Ethernet1/0/1: ----- Cable pairs Cable status Length (meters) ----- (1, 2) well 1 (3, 6) well 1 (4, 5) well 1 (7, 8) well 1</pre>	

switchport discard packet

Command	switchport discard packet { all untag } no switchport discard packet { all untag }	
parameter	all	means it does not receive any packet including untag, tag and the deal packet
	untag	means it does not receive untag
default	The default does not have the restriction.	
Mode	Port Mode	
Usage Guide	This command is not suggested to be configured only if there is the special requirement.	
Example	<p>Configure the port of 1/0/8 not to receive all packets.</p> <pre>Switch(config)#interface ethernet 1/0/8 Switch(config-if-ethernet1/0/8)#switchport discard packet all</pre>	

switchport flood-control

Command	switchport flood-control { bcast mcast ucast } no switchport flood-control { bcast mcast ucast }	
parameter	bcast	prevents that broadcast packets cannot be transmitted to the specified port
	mcast	prevents that unknown multicast packets cannot be transmitted to the specified port
	ucast	prevents that unknown unicast packets cannot be transmitted to the specified port
default	Switch transmits broadcast, unknown multicast and unknown unicast packets to other port in broadcast domain.	
Mode	Port configuration mode.	
Usage Guide	<p>This command takes effect for 100M and 1000M ports; it is also takes effect for Access, Trunk and Hybrid ports. When this command is valid, the port will allow unicast or multicast flow to pass after port learned the corresponding unicast mac or multicast mac.</p> <p>This command only control that broadcast, multicast and unknown unicast packets sent by other ports cannot be transmitted to the specified port, but it cannot control these packets from the specified port. For example, set switchport flood-control bcast command in port 1/0/1, broadcast packets cannot be transmitted from other ports to port 1/0/1, but port 1/0/1 can receive and transmit broadcast packets.</p>	
Example	<p>Configure flood-control of bcast and mcast for port 1/0/1 or port 1/0/8-10 respectively.</p> <pre>Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport flood-control bcast Switch(config)#interface ethernet 1/0/8-10 Switch(config-if-port-range)#switchport flood-control mcast</pre>	

switchport flood-forwarding

Command	switchport flood-forwarding mcast no switchport flood-forwarding mcast	
parameter	mcast	prevents that unknown multicast packets can be transmitted to the specified port.
default	Switch transmits unknown multicast packets to other port in broadcast domain.	
Mode	Port Mode	
Usage Guide	<p>This command takes effect for 100M and 1000M ports; it is also takes effect for Access, Trunk and Hybrid ports. The command is usually combined with ip imgp snooping, ip imgp snooping does not supports unknown multicast and broadcast, it can transfer unknown multicast flow after configure switchport flood-forwarding mcast.</p>	
Example	<p>Set switch 1/0/1 port broadcast flood-forwarding.</p> <pre>switch#</pre>	

	<pre>switch#confi switch(config)#interface ethernet 1/0/1 switch(config-if-ethernet1/0/1)# switchport flood-forwarding mcast switch(config-if-ethernet1/0/1)#exit switch(config)#</pre>
--	---

2.2 Commands for Port Isolation Function

isolate-port group

Command	<pre>isolate-port group <WORD> no isolate-port group <WORD></pre>	
parameter	WORD	is the name identification of the group, no longer than 32 characters
default	-	
Mode	Global Mode	
Usage Guide	<p>Users can create different port isolation groups based on their requirements. For example, if a user wants to isolate all downlink ports in a vlan of a switch, he can implement that by creating a port isolation group and adding all downlink ports of the vlan into it. No more than 16 port isolation groups can a switch have. When the users need to change or redo the configuration of the port isolation group, he can delete the existing group with the no operation of this command.</p>	
Example	<pre>Create a port isolation group and name it as "test". Switch>enable Switch#config Switch(config)#isolate-port group test</pre>	

isolate-port group switchport interface

Command	<pre>isolate-port group <WORD> switchport interface [ethernet] <IFNAME> no isolate-port group <WORD> switchport interface [ethernet] <IFNAME></pre>	
parameter	WORD	is the name identification of the group, no longer than 32 characters
	IFNAME	is the name of the interface
default	-	
Mode	Global Mode or Vlan Configuration Mode	
Usage Guide	<p>Users can add Ethernet ports into a port isolation group according to their requirements, the isolation group can isolation it from each other (Global mode) in all vlan, it also can isolate it from each other (vlan mode) in some vlan or remove them from a port isolation group according to their requirements. When an Ethernet port is a member of more than one port isolate group, it will be isolated from every port of all groups it belongs to.</p>	
Example	<pre>Add Ethernet ports 1/0/1-2 and 1/0/5 into a port isolation group named as "test", add Ethernet ports 1/0/3-4 into a port isolation group named as "1" in vlan10. Switch(config)#isolate-port group test switchport interface ethernet 1/0/1-2; 1/0/5 Switch(config-vlan10)#isolate-port group 1 switchport interface ethernet 1/0/3-4</pre>	

show isolate-port group

Command	show isolate-port group [<WORD>]	
parameter	WORD	the name identification of the group, no longer than 32 characters
default	Display the configuration of all port isolation groups.	
Mode	Admin Mode and Global Mode	
Usage Guide	Users can view the configuration of port isolation with this command.	
Example	Display the port isolation configuration of the port isolation group named as "test". Switch(config)#show isolate-port group test Isolate-port group test The isolate-port Ethernet1/0/5 The isolate-port Ethernet1/0/2	

2.3.Commands for Port Loopback Detection Function

loopback-detection control

Command	loopback-detection control {shutdown block } no loopback-detection control	
parameter	shutdown	set the control method as shutdown, which means to close down the port if a port loopback is found.
	block	set the control method as block, which means to block a port by allowing bpdv and loopback detection messages only if a port loopback is found.
default	Disable the function of loopback diction control.	
Mode	Port Mode.	
Usage Guide	Enable loopback detection control on the port, which is disabled by the NO operation of this command.	
Example	Enable the function of loopback detection control under port1/2 mode. Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#loopback-detection control shutdown Switch(Config-If-Ethernet1/0/2)#no loopback-detection control	

loopback-detection control-recovery timeout

Command	loopback-detection control-recovery timeout <0-3600>	
parameter	0-3600	second is recovery time for be controlled state, 0 is not recovery state.
default	The recovery is not automatic by default.	
Mode	Global Configuration Mode.	

Usage Guide	When a port detects a loopback and works in control mode, the ports always work in control mode and not recover. The port will not sent packet to detection in shutdown mode, however, the port will sent loopback-detection packet to detection whether have loopback in block or learning mode. If the recovery time is configured, the ports will recovery normal state when the overtime is time-out. The recovery time is a useful time for shutdown control mode, because the port can keep on detection loopback in the other modes, so suggest not to use this command.
Example	Enable automatic recovery of the loopback-detection control mode after 30s. Switch(config)#loopback-detection control-recovery timeout 30

loopback-detection interval-time

Command	loopback-detection interval-time <loopback> <no-loopback> no loopback-detection interval-time	
parameter	loopback	the detection interval if any loopback is found, ranging from 5 to 300, in seconds.
	no-loopback	the detection interval if no loopback is found, ranging from 1 to 30, in seconds.
default	The default value is 5s with loopbacks existing and 3s otherwise.	
Mode	Global Mode	
Usage Guide	When there is no loopback detection, the detection interval can be relatively shorter, for too short a time would be a disaster for the whole network if there is any loopback. So, a relatively longer interval is recommended when loopbacks exist.	
Example	Set the loopback diction interval as 35, 15. Switch(config)#loopback-detection interval-time 35 15	

loopback-detection specified-vlan

Command	loopback-detection specified-vlan <vlan-list> no loopback-detection specified-vlan [<vlan-list>]	
parameter	vlan-list	VLAN ID
default	Disable the function of detecting the loopbacks through the port.	
Mode	Port Mode	
Usage Guide	If a port can be a TRUNK port of multiple Vlans, the detection of loopbacks can be implemented on the basis of port+Vlan, which means the objects of the detection can be the specified Vlans on a port. If the port is an ACCESS port, only one Vlan on the port is allowed to be checked despite the fact that multiple Vlans can be configured. This function is not supported under Port-channel.	
Example	Enable the function of loopback detection under port 1/2 mode. Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#switchport mode trunk Switch(Config-If-Ethernet1/0/2)#switchport trunk allowed vlan all	

	Switch(Config-If-Ethernet1/0/2)#loopback-detection specified-vlan 1;3;5-20
	Switch(Config-If-Ethernet1/0/2)#no loopback-detection specified-vlan 1;3;5-20

show loopback-detection

Command	show loopback-detection [interface <interface-list>]	
parameter	interface-list	the list of ports to be displayed, for example: ethernet 1/0/1.
default	-	
Mode	Admin and Configuration Mode.	
Usage Guide	Display the state and result of loopback detection on ports with this command.	
Example	Display the state of loopback detection on port 4. Switch(config)#show loopback-detection interface Ethernet 1/0/4 loopback detection config and state information in the switch! PortName Loopback Detection Control Mode Is Controlled Ethernet1/4 Enable Shutdown No	

2.4.Commands for ULDP

uldp aggressive-mode

Command	uldp aggressive-mode no uldp aggressive-mode
parameter	-
default	Global Configuration Mode and Port Configuration Mode.
Mode	Normal mode.
Usage Guide	The ULDP working mode can be configured only if it is enabled globally. When ULDP aggressive mode is enabled globally, all the existing fiber ports will work in aggressive mode. For the copper ports and fiber ports which are available after the configuration is available, aggressive mode should be enabled in port configuration mode.
Example	To enable ULDP aggressive mode globally. Switch(config)#uldp aggressive-mode

uldp enable

Command	uldp {enable disable}
parameter	-
default	By default ULDP is not configured.
Mode	Global Configuration Mode and Port Configuration Mode.

Usage Guide	ULDP can be configured for the ports only if ULDP is enabled globally. If ULDP is enabled globally, it will be effect for all the existing fiber ports. For copper ports and fiber ports which are available after ULDP is enabled, this command should be issued in the port configuration mode to make ULDP be effect.
Example	Enable ULDP in global configuration mode. Switch(config)#uldp enable

uldp hello-interval

Command	uldp hello-interval <integer> no uldap hello-interval	
parameter	integer	The interval for the Hello messages, with its value limited between 5 and 100 seconds, 10 seconds by default.
default	10 seconds by default.	
Mode	Global Configuration Mode.	
Usage Guide	Interval for hello messages can be configured only if ULDP is enabled globally, its value limited between 5 and 100 seconds.	
Example	To configure the interval of Hello messages to be 12 seconds. Switch(config)#uldp hello-interval 12	

uldp manual-shutdown

Command	uldp manual-shutdown no uldap manual-shutdown	
parameter	-	
default	Auto mode.	
Mode	Global Configuration Mode	
Usage Guide	This command can be issued only if ULDP has been enabled globally	
Example	To enable manual shutdown globally. Switch(config)#uldp manual-shutdown	

uldp recovery-time

Command	uldp recovery-time<integer> no uldap recovery-time	
parameter	integer	the time out value for the ULDP recovery timer. Its value is limited between 30 and 86400 seconds.

default	0 is set by default which means the recovery is disabled.
Mode	Global Configuration Mode.
Usage Guide	If an interface is shutdown by ULDP, and the recovery timer times out, the interface will be reset automatically. If the recovery timer is set to 0, the interface will not be reset.
Example	To set the recovery timer to be 600 seconds. Switch(config)#uldp recovery-time 600

uldp reset

Command	uldp reset
parameter	-
default	-
Mode	Globally Configuration Mode and Port Configuration Mode.
Usage Guide	This command can only be effect only if the specified interface is disabled by ULDP.
Example	To reset all the port which are disabled by ULDP. Switch(config)#uldp reset

show uldp

Command	show uldp [interface ethernet<interface-name>]																															
parameter	interface-name	is the interface name.																														
default	-																															
Mode	Admin and Configuration Mode.																															
Usage Guide	If no parameters are appended, the global ULDP information will be displayed. If the interface name is specified, information about the interface and its neighbors will be displayed along with the global information.																															
Example	<p>To display the global ULDP information.</p> <pre>Switch(config)#show uldp uldp enable uldp hello interval is 10 uldp shut down mode is AUTO uldp global work mode is NORMAL the total number of the port is 4</pre> <p>-----</p> <table border="1"> <thead> <tr> <th>PortName</th> <th>PhyLink</th> <th>LineProto</th> <th>WorkMode</th> <th>PortState</th> <th>NeighborNum</th> </tr> </thead> <tbody> <tr> <td>Ethernet1/0/25</td> <td>UP</td> <td>DOWN</td> <td>NORMAL</td> <td>INACTIVE</td> <td>0</td> </tr> <tr> <td>Ethernet1/0/26</td> <td>UP</td> <td>DOWN</td> <td>NORMAL</td> <td>INACTIVE</td> <td>0</td> </tr> <tr> <td>Ethernet1/0/27</td> <td>UP</td> <td>DOWN</td> <td>NORMAL</td> <td>INACTIVE</td> <td>0</td> </tr> <tr> <td>Ethernet1/0/28</td> <td>UP</td> <td>DOWN</td> <td>NORMAL</td> <td>INACTIVE</td> <td>0</td> </tr> </tbody> </table>		PortName	PhyLink	LineProto	WorkMode	PortState	NeighborNum	Ethernet1/0/25	UP	DOWN	NORMAL	INACTIVE	0	Ethernet1/0/26	UP	DOWN	NORMAL	INACTIVE	0	Ethernet1/0/27	UP	DOWN	NORMAL	INACTIVE	0	Ethernet1/0/28	UP	DOWN	NORMAL	INACTIVE	0
PortName	PhyLink	LineProto	WorkMode	PortState	NeighborNum																											
Ethernet1/0/25	UP	DOWN	NORMAL	INACTIVE	0																											
Ethernet1/0/26	UP	DOWN	NORMAL	INACTIVE	0																											
Ethernet1/0/27	UP	DOWN	NORMAL	INACTIVE	0																											
Ethernet1/0/28	UP	DOWN	NORMAL	INACTIVE	0																											

	0 -----
--	------------

2.5.Commands for LLDP Function

clear lldp remote-table

Command	clear lldp remote-table
parameter	-
default	Do not clear the entries.
Mode	Port Configuration Mode
Usage Guide	Clear the Remote table entries on this port.
Example	Clear the Remote table entries on this port. Switch(Config-If-Ethernet 1/0/1)# clear lldp remote-table

lldp enable

Command	lldp {enable disable}
parameter	-
default	Disable LLDP function.
Mode	Global Mode
Usage Guide	If LLDP function is globally enabled, it will be enabled on every port.
Example	Enable LLDP function on the switch. Switch(config)#lldp enable

lldp enable (port)

Command	lldp {enable disable}
parameter	-
default	Default Open
Mode	Port Configuration Mode.
Usage Guide	When LLDP is globally enabled, it will be enabled on every port, the switch on a port is used to disable this function when it is unnecessary on the port.
Example	Disable LLDP function of port on the port ethernet 1/0/5 of the switch. Switch(config)#in ethernet 1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp disable

lldp management-address tlv

Command	lldp management-address tlv [A.B.C.D] no lldp management-address tlv	
parameter	A.B.C.D	it is the optional parameter, and it is the management address that user appoints for the port, it must be the unicast IPv4 address

default	Disable
Mode	Port Mode
Usage Guide	User can choose the feat management IPv4 address according to the configuration. If user appointed the management address when enable the function, this address will be used to send the management address TLV; if user does not appoint the management address, choose the IPv4 address from the VLAN layer3 as the management address to send the management address TLV. When the address is not appointed, if there is no feat address, the management address TLV information will not be sent.
Example	Enable the management address TLV function of ethernet 1/0/1 and appoint the address. Switch1(Config-If-Ethernet1/0/1)#lldp management-address tlv 192.168.24.32

lldp mode

Command	lldp mode <send receive both disable>	
parameter	send	Configure the LLDP function as only being able to send messages.
	receive	Configure the LLDP function as only being able to receive messages.
	both	Configure the LLDP function as being able to both send and receive messages.
	disable	Configure the LLDP function as not being able to send or receive messages.
default	The operating state of the port is "both".	
Mode	Port Configuration Mode.	
Usage Guide	Choose the operating state of the lldp Agent on the port.	
Example	Configure the state of port ethernet 1/0/5 of the switch as "receive". Switch(config)#in ethernet 1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp mode receive	

lldp msgTxHold

Command	lldp msgTxHold <value> no lldp msgTxHold	
parameter	value	is the aging time multiplier, ranging from 2 to 10.
default	the value of the multiplier is 4 by default.	
Mode	Global Mode.	
Usage Guide	After configuring the multiplier, the aging time is defined as the product of the multiplier and the interval of sending messages, and its maximum value is 65535 seconds.	
Example	Set the value of the aging time multiplier as 6. Switch(config)#lldp msgTxHold 6	

lldp neighbors max-num

Command	lldp neighbors max-num <value> no lldp neighbors max-num	
parameter	value	is the configured number of entries, ranging from 5 to 500.

default	The maximum number of entries can be stored in Remote MIB is 100.
Mode	Port Configuration Mode.
Usage Guide	The maximum number of entries can be stored in Remote MIB.
Example	Set the Remote as 200 on port ethernet 1/0/5 of the switch. Switch(config)#in ethernet 1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp neighbors max-num 200

lldp notification interval

Command	lldp notification interval <seconds> no lldp notification interval	
parameter	seconds	is the time interval, ranging from 5 to 3600 seconds.
default	The time interval is 5 seconds.	
Mode	Global Mode.	
Usage Guide	After configuring the notification time interval, a “trap” message will be sent at the end of this time interval whenever the Remote Table changes.	
Example	Set the time interval of sending Trap messages as 20 seconds. Switch(config)#lldp notification interval 20	

lldp tooManyNeighbors

Command	lldp tooManyNeighbors {discard delete}	
parameter	discard	discard the current message.
	delete	Delete the message with the least TTL in the Remoter Table
default	Discard	
Mode	Port Configuration Mode	
Usage Guide	When the Remote MIB is full, Discard means to discard the received message; Delete means to the message with the least TTL in the Remoter Table.	
Example	Set port ethernet 1/0/5 of the switch as delete. Switch(config)#in ethernet 1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp tooManyNeighbors delete	

lldp transmit delay

Command	lldp transmit delay <seconds> no lldp transmit delay
---------	---

parameter	seconds	is the time interval, ranging from 1 to 8192 seconds.
default	The interval is 2 seconds by default.	
Mode	Global Mode	
Usage Guide	When the messages are being sent continuously, a sending delay is set to prevent the Remote information from being updated repeatedly due to sending messages simultaneously.	
Example	Set the delay of sending messages as 3 seconds. Switch(config)#lldp transmit delay 3	

lldp transmit optional tlv

Command	lldp transmit optional tlv [portDesc] [sysName] [sysDesc] [sysCap] no lldp transmit optional tlv	
parameter	portDesc	the description of the port
	sysName	the system name
	sysDesc	The description of the system
	sysCap	the capability of the system
default	The messages carry no optional TLV by default	
Mode	Port Configuration Mode	
Usage Guide	When configuring the optional TLV, each TLV can only appear once in a message, portDesc optional TLV represents the name of local port; sysName optional TLV represents the name of local system; sysDesc optional TLV represents the description of local system; sysCap optional TLV represents the capability of local system.	
Example	Configure that port ethernet 1/0/5 of the switch carries portDesc and sysCap TLV. Switch(config)#in ethernet 1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp transmit optional tlv portDesc sysCap	

lldp trap

Command	lldp trap <enable disable>	
parameter	-	
default	The Trap function is disabled on the specified port by default	
Mode	Port Configuration Mode	
Usage Guide	The function of sending Trap messages is enabled on the port.	
Example	Enable the Trap function on port ethernet 1/0/5 of the switch. Switch(config)#in ethernet1/0/5 Switch(Config-If-Ethernet1/0/5)#lldp trap enable	

lldp tx-interval

Command	lldp tx-interval <integer> no lldp tx-interval	
---------	---	--

parameter	integer	is the interval of sending updating messages, ranging from 5 to 32768 seconds.
default	30s	
Mode	Global Mode	
Usage Guide	<p>After configuring the interval of sending messages, LLDP messages can only be received after a period as long as configured. The interval should be less than or equal with half of aging time, for a too long interval will cause the state of being aged and reconstruction happen too often; while a too short interval will increase the flow of the network and decrease the bandwidth of the port. The value of the aging time of messages is the product of the multiplier and the interval of sending messages. The maximum aging time is 65535 seconds.</p> <p>When tx-interval is the default value and transmit delay is configured via some commands, tx-interval will become four times of the latter, instead of the default 40.</p>	
Example	<p>Set the interval of sending messages as 40 seconds.</p> <pre>Switch(config)#lldp tx-interval 40</pre>	

show debugging lldp

Command	show debugging lldp	
parameter	-	
default	-	
Mode	Admin and Configuration Mode	
Usage Guide	With show debugging lldp, all ports with lldp debug enabled will be displayed.	
Example	<p>Display all ports with lldp debug enabled.</p> <pre>Switch(config)#show debugging lldp ====BEGINNING OF LLDP DEBUG SETTINGS==== debug lldp packets interface Ethernet1/0/1 =====END OF DEBUG SETTINGS=====</pre>	

show lldp

Command	show lldp	
parameter	-	
default	Do not display the configuration information of global LLDP.	
Mode	Admin Mode, Global Mode.	
Usage Guide	Users can check all the configuration information of global LLDP by using "show lldp".	
Example	<p>Check the configuration information of global LLDP after it is enabled on the switch.</p> <pre>Switch(config)#show lldp -----LLDP GLOBAL INFORMATION----- LLDP has been enabled globally. LLDP enabled port : Ethernet1/0/1 Ethernet1/0/7 LLDP interval :30</pre>	

	LLDP txTTL :120 LLDP NotificationInterval :5 LLDP txDelay :2 LLDP-MED FastStart Repeat Count :4 -----END-----
--	---

show lldp interface ethernet

Command	show lldp interface ethernet <IFNAME>	
parameter	IFNAME	Interface name
default	Do not display the configuration information of LLDP on the port.	
Mode	Admin Mode, Global Mode.	
Usage Guide	Users can check the configuration information of LLDP on the port by using “show lldp interface ethernet XXX”.	
Example	Check the configuration information of LLDP on the port after LLDP is enabled on the switch. Switch (config-if-ethernet1/0/1)#show lldp int e 1/0/1 Port name :Ethernet1/0/1 LLDP Agent Adminstatus : Both LLDP Operation TLV : default LLDP Management Address TLV status : unenable LLDP Trap Status : disable LLDP maxRemote :100 LLDP Overflow handle : discard LLDP interface remote status : Free lldp dot3 TLV: MED Optional TLV : default MED Trap Status:Disable MED TLV Transmit Status:Disable MED Fast Transmit Status:Disable *****	

show lldp neighbors interface ethernet

Command	show lldp neighbors interface ethernet < IFNAME >	
parameter	IFNAME	Interface name
default	Do not display the LLDP neighbor information of the port.	
Mode	Admin Mode, Global Mode.	
Usage Guide	Users can check the configuration information of LLDP on the port by using “show lldp interface ethernet XXX”.	
Example	Check the LLDP neighbor information of the port after LLDP is enabled on the port. Switch (config-if-ethernet1/0/1)#show lld nei int e 1/0/1 Port name : Ethernet1/0/1 Port Remote Counter : 1	

TimeMark :92 ChassisIdSubtype :4 ChassisId :00-e0-4c-00-00-00 PortIdSubtype :Local PortId :gi1 Lldp Port Pvid TLV : Lldp port Pvid : 1 *****

show lldp traffic

Command	show lldp traffic
parameter	-
default	Do not display the statistics of LLDP data packets.
Mode	Admin Mode, Global Mode.
Usage Guide	Users can check the statistics of LLDP data packets by using “show lldp traffic”.
Example	Check the statistics of LLDP data packets after LLDP is enabled on the switch. Switch(config)#show lldp traffic <pre> PortName Ageouts FramesDiscarded FramesInErrors FramesIn FramesOut TLVsDiscarded TLVsUnrecognized ----- Ethernet1/0/1 0 0 0 43 42 0 0 Ethernet1/0/7 0 0 0 0 42 0 0 </pre>

2.6.Commands for Port Channel

interface port-channel

Command	interface port-channel <port-channel-number>	
parameter	port-channel-number	Port Channel Number
default	-	
Mode	Global Mode	
Usage Guide	Enable port channel configuration mode	
Example	Entering configuration mode for port-channel 1. Switch(config)#interface port-channel 1 Switch(Config-If-Port-Channel1)#	

lacp port-priority

Command	lacp port-priority <port-priority> no lacp port-priority
---------	---

parameter	port-priority	the port priority of LACP protocol, the range from 0 to 65535.
default	The default priority is 32768 by system.	
Mode	Port Mode.	
Usage Guide	Use this command to modify the port priority of LACP protocol, the no command restores the default value.	
Example	Set the port priority of LACP protocol. Switch(Config-If-Ethernet1/0/1)# lacp port-priority 30000	

lacp system-priority

Command	lacp system-priority <system-priority> no lacp system-priority	
parameter	system-priority	The system priority of LACP protocol, ranging from 0 to 65535.
default	The default priority is 32768.	
Mode	Global Mode	
Usage Guide	Use this command to modify the system priority of LACP protocol, the no command restores the default value.	
Example	Set the system priority of LACP protocol. Switch(config)#lacp system-priority 30000	

lacp timeout

Command	lacp timeout {short long} no lacp timeout	
parameter	-	
default	Long	
Mode	Port Mode	
Usage Guide	Set the timeout mode of LACP protocol.	
Example	Set the timeout mode as short in LACP protocol. Switch(Config-If-Ethernet1/0/1)#lacp timeout short	

load-balance

Command	load-balance {src-mac dst-mac dst-src-mac src-ip dst-ip dst-src-ip ingress-port dst-src-mac-ip} no load-balance	
parameter	src-mac	performs load-balance according to the source MAC
	dst-mac	performs load-balance according to the destination MAC
	dst-src-mac	performs load-balance according to the source and destination MAC
	src-ip	performs load-balance according to the source IP
	dst-ip	performs load-balance according to the destination IP
	dst-src-ip	performs load-balance according to the destination and source IP
	ingress-port	performs load-balance according to the destination and source mac and destination, source IP

	dst-src-mac-ip	performs load-balance according to the port of receive flow.
default	Perform load-balance according to the source MAC.	
Mode	Global mode.	
Usage Guide	Use port-channel to implement load-balance, user can configure the load-balance mode according to the requirements. If the specific load-balance mode of the command line is different with the current load-balance mode of port-group, then modify the load-balance of port-group as the specific load-balance of command line; otherwise return a message to notice that the current mode is already configured.	
Example	Set load-balance mode of port-group. Switch(config)# load-balance src-mac	

port-group

Command	port-group <port-group-number> no port-group <port-group-number>	
parameter	port-group-number	is the group number of a port channel from 1~128.
default	There is no port-group	
Mode	Global Mode	
Usage Guide	it can create 16 port group at most	
Example	Creating a port group. Switch(config)# port-group 1 Delete a port group. Switch(config)#no port-group 1	

port-group mode

Command	port-group <port-group-number> mode {active passive on} no port-group	
parameter	port-group-number	is the group number of port channel, from 1~128
	active	enables LACP on the port and sets it in Active mode
	passive	enables LACP on the port and sets it in Passive mode
	on	forces the port to join a port channel without enabling LACP.
default	Switch ports do not belong to a port channel by default; LACP not enabled by default.	
Mode	Port Mode	
Usage Guide	Add a physical port to the port channel NO remove the specified port from the port channel	
Example	Under the Port Mode of Ethernet1/0/1, add current port to "port-group 1" in "active" mode. Switch(Config-If-Ethernet1/0/1)#port-group 1 mode active	

show port-group

Command	show port-group [<port-group-number>] {brief detail }	
parameter	port-group-number	is the group number of port channel to be displayed, from 1~128
default	-	

Mode	All Configuration Mode										
Usage Guide	If the user does not input port-group-number, that means the information of all the existent port-group are showed; if the port channel corresponds to port-group-number parameter and is not exist, then print a error message, otherwise display the current port-channel information of the specified group number.										
Example	<p>Display summary information for port-group 1</p> <p>Switch#show port-group brief</p> <p>ID: port group number; Mode: port group mode such as on active or passive; Ports: different types of port number of a port group, the first is selected ports number, the second is standby ports number, and the third is unselected ports number.</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Mode</th> <th>Partner ID</th> <th>Ports</th> <th>Load-balance</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>active</td> <td>0x0000,00-00-00-00-00-00</td> <td>0,0,1</td> <td>src-mac</td> </tr> </tbody> </table>	ID	Mode	Partner ID	Ports	Load-balance	1	active	0x0000,00-00-00-00-00-00	0,0,1	src-mac
ID	Mode	Partner ID	Ports	Load-balance							
1	active	0x0000,00-00-00-00-00-00	0,0,1	src-mac							

2.7.Commands for MTU

Mtu

Command	mtu [<mtu-value>] no mtu	
parameter	mtu-value	the MTU value of frames that can be received, in byte, ranging from <1500-12270>. The corresponding frame size is <1518/1522-12288/12292>. Without setting is parameter, the allowed max frame size is 12288/12292.
default	MTU function not enabled by default	
Mode	Global Mode	
Usage Guide	Set switch of both ends mtu necessarily, or mtu frame will be dropped at the switch has not be set	
Example	Enable the mtu function of the switch. Switch(config)#mtu	

2.8.Commands for EFM OAM

clear ethernet-oam

Command	clear ethernet-oam [interface {ethernet } <IFNAME>]
---------	---

parameter	IFNAME	the name of the port needs to clear OAM statistic information
default	N/A	
Mode	Admin mode	
Usage Guide	N/A	
Example	Clear the statistic information of OAM packets and link event on all ports. Switch(config)#clear ethernet-oam	

ethernet-oam

Command	ethernet-oam no ethernet-oam	
parameter	-	
default	Disable	
Mode	Port mode	
Usage Guide	N/A	
Example	Enable ethernet-oam of Ethernet 1/0/4 Switch(config)#interface ethernet 1/0/4 Switch(Config-If-Ethernet1/0/4)#ethernet-oam	

ethernet-oam errored-frame threshold high

Command	ethernet-oam errored-frame threshold high {<high-frames> none} no ethernet-oam errored-frame threshold high	
parameter	high-frames	the high detection threshold of errored frame event, ranging from 2 to 4294967295.
	none	cancel the high threshold configuration.
default	none	
Mode	Port mode	
Usage Guide	During the specific detection period, serious link event is induced if the number of errored frame is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold can not be less than the low threshold	
Example	Configure the high threshold of errored frame event on Ethernet 1/0/4 to be 3000. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame threshold high 3000	

ethernet-oam errored-frame threshold low

Command	ethernet-oam errored-frame threshold low <low-frames> no ethernet-oam errored-frame threshold low	
---------	--	--

parameter	low-frames	the low detection threshold of errored frame event, ranging from 1 to 4294967295
default	1	
Mode	Port mode	
Usage Guide	During the specific detection period, errored frame event is induced if the number of errored frame is larger than or equal to the low threshold and the device notifies the peer by sending event notification OAMPDU. Note that the low threshold can not be larger than the high threshold.	
Example	Configure the low threshold of errored frame event on Ethernet 1/0/4 to 100. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame threshold low 100	

ethernet-oam errored-frame window

Command	ethernet-oam errored-frame window <seconds> no ethernet-oam errored-frame window	
parameter	seconds	is the time for counting the specified frame number, its range from 5 to 300, unit is 200ms
default	5	
Mode	Port mode	
Usage Guide	Detect the errored frame number of the port after the time of specific detection period. If the number of errored frame is larger than or equal to the threshold, bring the corresponding event and notify the peer through OAMPDU.	
Example	Configure the detection period of errored frame event on port1/0/4 to be 20s. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame window 100	

ethernet-oam errored-frame-seconds threshold high

Command	ethernet-oam errored-frame-seconds threshold high {<high-seconds> none} no ethernet-oam errored-frame-seconds threshold high	
parameter	high-seconds	the high detection threshold of errored frame period event,ranging from 2 to 4294967295.
	none	cancel the high threshold configuration.
default	none	
Mode	Port mode	
Usage Guide	During the specific detection period, serious link event is induced if the number of errored frame is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold can not be less than the low threshold.	
Example	Configure the high threshold of errored frame period event on port 1/0/4 to be 3000. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame-seconds threshold high 3000	

ethernet-oam errored-frame-seconds threshold Low

Command	ethernet-oam errored-frame-seconds threshold low <low-seconds> no ethernet-oam errored-frame-seconds threshold low	
---------	---	--

parameter	low-seconds	the low detection threshold of errored frame seconds event, ranging from 1 to 65535 seconds.
default	1	
Mode	Port mode	
Usage Guide	During the specific detection period, errored frame period event is induced if the number of errored frame is larger than or equal to the low threshold and the device notifies the peer by event notification OAMPDU. Note that the low threshold should not be larger than the high threshold.	
Example	Configure the low threshold of errored frame period event on port 1/0/4 to be 100. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame-seconds threshold low 100	

ethernet-oam errored-frame-seconds window

Command	ethernet-oam errored-frame-seconds window <seconds> no ethernet-oam errored-frame-seconds window	
parameter	seconds	is the time for counting the specified frame number, its range from 50 to 450, unit is 200ms.
default	300	
Mode	Port mode	
Usage Guide	Detect errored frame seconds of the port after the time of specific detection period. If the number of errored frame seconds is larger than or equal to the threshold, corresponding event is induced and the device notified the peer through OAMPDU.	
Example	Configure the detection period of errored frame seconds event on port 1/0/4 to be 120s. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-frame-seconds window 600	

ethernet-oam errored-symbol-period threshold High

Command	ethernet-oam errored-symbol-period threshold high {<high-symbols> none} no ethernet-oam errored-symbol-period threshold high	
parameter	high-symbols	the high detection threshold of errored symbol event, ranging from 2 to 18446744073709551615 symbols.
	none	cancel the high threshold configuration.
default	none	
Mode	Port mode	
Usage Guide	During the specific detection period, serious link event is induced if the number of errored symbols is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold should not be less than the low threshold.	
Example	Set the high threshold of errored symbol event on port 1/0/4 to none. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-symbol-period threshold high none	

ethernet-oam errored-symbol-period threshold Low

Command	ethernet-oam errored-symbol-period threshold low <low-symbols> no ethernet-oam errored-symbol-period threshold low	
---------	---	--

parameter	low-symbols	the low threshold of errored symbol event, ranging from 1 to 18446744073709551615 symbols.
default	1	
Mode	Port mode	
Usage Guide	During the specific detection period, errored symbol event is induced if the number of errored symbols is larger than or equal to the low threshold and the device notifies the peer by sending event notification OAMPDU. Note that the low threshold should not be larger than the high threshold.	
Example	Set the low threshold of errored symbol event on port 1/0/4 to be 5. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-symbol-period threshold low 5	

ethernet-oam errored-symbol-period window

Command	ethernet-oam errored-symbol-period window <seconds> no ethernet-oam errored-symbol-period window	
parameter	seconds	is the time for counting the specified frame number, its range from 5 to 300, unit is 200ms.
default	5	
Mode	Port mode	
Usage Guide	Detect errored symbols of the port after the time of specific detection period. If the number of errored symbols is larger than or equal to the threshold, corresponding event is induced and the device notified the peer through OAMPDU.	
Example	Set the detection period of errored symbol event on port 1/0/4 to be 2s. Switch(Config-If-Ethernet1/0/4)#ethernet-oam errored-symbol-period window 10	

ethernet-oam link-monitor

Command	ethernet-oam link-monitor no ethernet-oam link-monitor	
parameter	-	
default	Enable	
Mode	Port mode	
Usage Guide	Enable OAM to monitor local link errors. Generally link monitor is enabled when enabling OAM function of the port. When OAM link monitor is disabled, although local link error is not monitored, Event information OAMPDU from the peer is still normally received and processed.	
Example	Enable the link monitor of port 1/0/4. Switch(Config-If-Ethernet1/0/4)#ethernet-oam link-monitor	

ethernet-oam mode

Command	ethernet-oam mode {active passive} no ethernet-oam mode	
---------	--	--

parameter	active	active mode
	passive	passive mode
default	active mode	
Mode	Port mode	
Usage Guide	At least one of the two connected OAM entities should be configured to active mode. Once OAM is enabled, the working mode of OAM cannot be changed and you need to disable OAM function if you have to change the working mode.	
Example	Set the mode of OAM function on ethernet 1/0/4 to passive mode. Switch(Config-If-Ethernet1/0/4)#ethernet-oam mode passive	

ethernet-oam period

Command	ethernet-oam period <seconds> no ethernet-oam mode	
parameter	seconds	sending period, ranging from 1 to 2 seconds.
default	1s	
Mode	Port mode	
Usage Guide	Use this command to configure the transmission interval of Information OAMPDU which keep OAM connection normally.	
Example	Set the transmission interval of Information OAMPDU for ethernet 1/0/4 to be 2s. Switch(Config-If-Ethernet1/0/4)# ethernet-oam period 2	

ethernet-oam remote-failure

Command	ethernet-oam remote-failure no ethernet-oam remote-failure	
parameter	-	
default	Enable	
Mode	Port mode	
Usage Guide	With remote failure indication is enabled, if critical-event or link fault event is occurred locally, it will notify the peer by sending Information OAMPDU, log the fault information and send SNMP trap warning. When the remote failure indication is disabled, although local critical-event or link fault event is not monitored, failure indication information from the peer is still normally received and processed.	
Example	Enable remote failure indication of ethernet 1/0/4. Switch(Config-If-Ethernet1/0/4)#ethernet-oam remote-failure	

ethernet-oam remote-loopback

Command	ethernet-oam remote-loopback no ethernet-oam remote-loopback
---------	---

parameter	-
default	Disable
Mode	port mode
Usage Guide	Only OAM can send remote loopback reques in auto mode, the OAM work in passive mode can not send remote loopback; when remote OAM working in loopback mode, all packets except OAM PDU packets will back local port according to the same route (Notice: during OAM loopback, it can not communicate), administrator can check the link delay of loopback, shake and throughput capacity. It can do loopback configuration after create OAM link, if OAM link is broken during loopback, the loopback will be cancel automatically. The command mutex with ethernet-oam remote-loopback supported.
Example	Enable the remote OAM of port 1/0/4 to remote loopback mode. Switch(Config-If-Ethernet1/0/4)#ethernet-oam remote-loopback Normal forwarding will be suspended during the remote-loopback, are you sure to start remote-loopback? [Y/N]

ethernet-oam remote-loopback supported

Command	ethernet-oam remote-loopback supported no ethernet-oam remote-loopback supported
parameter	-
default	Disable
Mode	Port mode.
Usage Guide	The port that only enable loopback support function can receive OAM loopback reques and in loopback mode. So when enable remote and in OAM loopback, please ensure remote configured loopback support. The command mutex with ethernet-oam remote-loopback.
Example	Enable OAM loopback support function of ethernet 1/0/4 Switch(Config-If-Ethernet1/0/4)#ethernet-oam remote-loopback supported

ethernet-oam timeout

Command	ethernet-oam timeout <seconds> no ethernet-oam timeout
parameter	seconds the timeout ranging from 5 to 10 seconds.
default	5s
Mode	Port mode
Usage Guide	OAM connection will be disconnected if no OAMPDU is received after specified timeout.
Example	Set the timeout of OAM connection for ethernet 1/0/4 to be 6 seconds. Switch(Config-If-Ethernet1/0/4)#ethernet-oam timeout 6

show ethernet-oam

Command	show ethernet-oam [{local remote}] interface {ethernet } <IFNAME>
---------	---

parameter	IFNAME	the port that OAM connection information will be shown
default	N/A.	
Mode	Admin mode	
Usage Guide	N/A.	
Example	<p>Show overview information of Ethernet OAM connection.</p> <pre>Switch#show ethernet-oam Switch#show ethernet-oam Capability codes: L - Link Monitor, R - Remote Loopback U - Unidirection, V - Variable Retrieval ----- Interface Local-Mode Local-Capability Remote-MAC-Addr Remote-Mode Remote-Capability 1/0/1 active L</pre>	

show ethernet-oam events

Command	show ethernet-oam events {local remote} [interface {ethernet } <IFNAME>]	
parameter	IFNAME	the port that the statistic information of OAM link events needs to be shown
default	N/A.	
Mode	Admin mode	
Usage Guide	N/A.	
Example	<p>Show the statistic information of link events on Ethernet 1/0/1.</p> <pre>Switch#show ethernet-oam events local interface 1/0/1 ethernet1/0/1 link-events: OAM_local_errored-symbol-period-events: ----- event time stamp: 3539 errored symbol window(200ms): 5 errored symbol low threshold: 1 errored symbol high threshold: none errored symbol: 1200120 errored running total: 2302512542 event running total: 232 OAM_local_errored-frame-period-events: ----- event time stamp: 3539 errored frame window(200ms): 50 errored frame low threshold: 1 errored frame high threshold: none errored frame: 1200120 errored running total: 2302512542 event running total: 52 OAM_local_errored-frame-events: ----- event time stamp: 3539 errored frame window(200ms): 5 errored frame low threshold: 1 errored frame high threshold: none errored frame: 1200120 errored running total: 2302512542 event running total: 75 OAM_local_errored-frame-seconds-summary-events: -----</pre>	

	event time stamp: 3520 errored frame seconds summary window(200ms): 300 errored frame low threshold: 1 errored frame high threshold: none errored frame: 1200120 errored running total: 2302512542 event running total: 232 OAM_local_link-fault: 0 OAM_local_dying gasp: 0 OAM_local_critical event: 0
--	---

show ethernet-oam link-events-configuration

Command	show ethernet-oam link-events-configuration [interface {ethernet } <IFNAME>]	
parameter	IFNAME	the port that the statistic information of OAM link events needs to be shown
default	N/A.	
Mode	Admin mode	
Usage Guide	N/A.	
Example	Show configuration of link events on ethernet 1/0/1. Switch#show ethernet-oam link-events-configuration interface ethernet 1/0/1 Ethernet1/0/1 link-monitor configuration: event high-threshold low-threshold window(200ms) ----- Err-symbol-Period none 1 2 Err-frame-Period none 1 10 Err-frame none 2 5 Err-frame-second-summary none 2 600 -----	

show ethernet-oam loopback status

Command	show ethernet-oam loopback status [interface {ethernet } <IFNAME>]	
parameter	IFNAME	means display the port of OAM loopback status information
default	-	
Mode	Admin mode	
Usage Guide	Displays the loopback status OAM all or specified ports of the switch	
Example	Display the OAM loopback status of all port. Switch(config)#show ethernet-oam loopback status OAM Loopback Status: Ethernet1/0/1: disable Ethernet1/0/2: disable Ethernet1/0/3: disable	

2.9.Commands for PORT SECURITY

clear port-security

Command	clear port-security {all configured dynamic sticky} [[address <mac-addr> interface <interface-id>] [vlan <vlan-id>]]	
parameter	all	All secure MAC entries on the interfaces
	configured	The configured secure MAC
	dynamic	The dynamic secure MAC learnt by the interface
	sticky	The secure MAC of sticky
	mac-addr	The specified secure MAC address
	interface-id	The secure MAC entries of the specified interface
	vlan-id	The specified VLAN
default	-	
Mode	Admin mode	
Usage Guide	Clear secure MACs on the interface	
Example	Clear all secure MACs on the interface Switch#clear port-security all	

show port-security

Command	show port-security [interface <interface-id>] [address vlan]	
parameter	interface-id	Show port-security configuration of the interface
	address	Show the secure address of the interface
	vlan	Show the maximum number of each VLAN configured on trunk/hybrid interface.
default	-	
Mode	Any modes	
Usage Guide	Display port security configuration.	
Example	Show all secure MACs on the interfaces. Switch# show port-security address interface ethernet 1/0/1	

switchport port-security

Command	switchport port-security no switchport port-security	
parameter	-	
default	Disable	
Mode	Port mode	
Usage Guide	Configure port security for the interface no disable port security with commands	
Example	Enable port-security on the interface. Switch(config-if- ethernet1/0/1)#switchport port-security	

switchport port-security mac-address

Command	switchport port-security mac-address <mac-address> [vlan <vlan-id>]	
---------	---	--

	no switchport port-security mac-address <mac-address> [vlan <vlan-id>]	
parameter	mac-address	Configure the specified MAC address as the static secure MAC.
	vlan-id	The specified VLAN of the MAC address, it only takes effect on trunk and hybrid interfaces.
default	No secure MAC is bound by the interface.	
Mode	Port mode	
Usage Guide	When configuring the static secure MAC, pay attention to the number of the current secure MAC whether exceed the maximum MAC limit allowed by the interface. If exceeding the maximum MAC limit, it will result in violation operation.	
Example	Configure the secure MAC address on the interface Switch (config-if- ethernet1/0/1)# switchport port-security mac-address 00-00-00-00-00-01	

switchport port-security maximum

Command	switchport port-security maximum <value> [vlan <vlan-list>] no switchport port-security maximum <value> [vlan <vlan-list>]	
parameter	value	Configure the maximum number of the secure MAC allowed by the interface, its range between 1 and 128. It is determined by the maximum MAC number of the device
	vlan-list	Configure the maximum value for the specified VLAN, it only takes effect on trunk and hybrid interfaces.
default	After enabling port-security, if there is no other configuration, the maximum number of the secure MAC is 1 on the interface. The interface number in VLAN is no limit by default	
Mode	Port mode	
Usage Guide	Pay attention to the coupling relation about the number between the interface and VLAN, set the maximum number configured by the interface as the standard firstly.	
Example	Configure the maximum number of the secure MAC on the interface. Switch(config-if- ethernet1/0/1)# switchport port-security maximum 100	

switchport port-security violation

Command	switchport port-security violation {protect recovery restrict shutdown} no switchport port-security violation	
parameter	protect	Protect mode, it will trigger the action that do not learn the new MAC, drop the package and do not send the warning
	recovery	After triggering the violation action of the port, the mac learning function can be recovered
	restrict	Restrict mode, it will trigger the action that do not learn the new MAC, drop the package, send snmp trap and record the configuration in syslog.
	shutdown	Shutdown mode is the default mode. Under this condition, the

		interface is disabled directly, send snmp trap and record the configuration in syslog.
default	shutdown	
Mode	Port mode	
Usage Guide	When exceeding the maximum number of the configured MAC addresses, MAC address accessing the interface does not belongs to this interface in MAC address table or a MAC address is configured to several interfaces in same VLAN, both of them will violate the security of the MAC address.	
Example	Configure violation mode as protect for the interface. Switch(config-if-ethernet1/0/1)#switchport port-security violation protect	

2.10.Commands for DDM

clear transceiver threshold-violation

Command	clear transceiver threshold-violation [interface ethernet <interface-list>]	
parameter	interface-list	The interface list that the threshold violation of the transceiver monitoring needs to be cleared.
default	-	
Mode	Admin mode	
Usage Guide	Clear threshold violations monitored by transceivers	
Example	Clear the threshold violation of the transceiver monitoring on port 21, 25, 26, 28. Switch#clear transceiver threshold-violation interface ethernet 1/0/21;25-26;28	

show transceiver

Command	show transceiver [interface ethernet <interface-list>] [detail]																			
parameter	interface-list	The interface list that the monitoring of the transceiver needs to be shown.																		
	detail	Show the detailed monitoring of the transceiver.																		
default	-																			
Mode	User mode, admin mode and global mode																			
Usage Guide	Displays the transceiver's detailed monitoring information.																			
Example	Show the brief DDM information of all ports. Switch#show transceiver <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Interface</th> <th>Temp (°C)</th> <th>Voltage (V)</th> <th>Bias (mA)</th> <th>RX Power (dBm)</th> <th>TX Power (dBm)</th> </tr> </thead> <tbody> <tr> <td>1/0/25</td> <td>33</td> <td>3.31</td> <td>6.11</td> <td>-30.54(A-)</td> <td>-6.01</td> </tr> <tr> <td>1/0/26</td> <td>33</td> <td>5.00 (W+)</td> <td>6.11</td> <td>-20.54(W-)</td> <td>-6.02</td> </tr> </tbody> </table>		Interface	Temp (°C)	Voltage (V)	Bias (mA)	RX Power (dBm)	TX Power (dBm)	1/0/25	33	3.31	6.11	-30.54(A-)	-6.01	1/0/26	33	5.00 (W+)	6.11	-20.54(W-)	-6.02
Interface	Temp (°C)	Voltage (V)	Bias (mA)	RX Power (dBm)	TX Power (dBm)															
1/0/25	33	3.31	6.11	-30.54(A-)	-6.01															
1/0/26	33	5.00 (W+)	6.11	-20.54(W-)	-6.02															

show transceiver threshold-violation

Command	show transceiver threshold-violation [interface ethernet <interface-list>]
---------	--

parameter	interface-list	The interface list that the transceiver monitoring needs to be shown.																																				
default	-																																					
Mode	Admin mode and global mode																																					
Usage Guide	Show the transceiver monitoring																																					
Example	<p>Show the transceiver monitoring</p> <p>Switch(config)#show transceiver threshold-violation interface ethernet 1/0/25-26</p> <p>Ethernet 1/0/25 transceiver threshold-violation information:</p> <p>Transceiver monitor is enabled. Monitor interval is set to 30 minutes.</p> <p>The current time is Jan 02 12:30:50 2010.</p> <p>The last threshold-violation time is Jan 01 1:30:50 2010.</p> <p>Brief alarm information:</p> <p>RX loss of signal</p> <p>RX power low</p> <p>Detail diagnostic and threshold information:</p> <p>Diagnostic Threshold</p> <table border="1"> <thead> <tr> <th></th> <th>Realtime Value</th> <th>High Alarm</th> <th>Low Alarm</th> <th>High Warn</th> <th>Low Warn</th> </tr> </thead> <tbody> <tr> <td>Temperature (°C)</td> <td>33</td> <td>70</td> <td>0</td> <td>70</td> <td>0</td> </tr> <tr> <td>Voltage (V)</td> <td>7.31</td> <td>10.00</td> <td>0.00</td> <td>5.00</td> <td>0.00</td> </tr> <tr> <td>Bias current (mA)</td> <td>3.11</td> <td>10.30</td> <td>0.00</td> <td>5.00</td> <td>0.00</td> </tr> <tr> <td>RX Power (dBm)</td> <td>-30.54(A-)</td> <td>9.00</td> <td>-25.00 (-34)</td> <td>9.00</td> <td>-25.00</td> </tr> <tr> <td>TX Power (dBm)</td> <td>-1.01</td> <td>9.00</td> <td>-12.05</td> <td>9.00</td> <td>-10.00</td> </tr> </tbody> </table> <p>Ethernet 1/0/26 transceiver threshold-violation information:</p> <p>Transceiver monitor is disabled. Monitor interval is set to 30 minutes.</p> <p>The last threshold-violation doesn't exist.</p>			Realtime Value	High Alarm	Low Alarm	High Warn	Low Warn	Temperature (°C)	33	70	0	70	0	Voltage (V)	7.31	10.00	0.00	5.00	0.00	Bias current (mA)	3.11	10.30	0.00	5.00	0.00	RX Power (dBm)	-30.54(A-)	9.00	-25.00 (-34)	9.00	-25.00	TX Power (dBm)	-1.01	9.00	-12.05	9.00	-10.00
	Realtime Value	High Alarm	Low Alarm	High Warn	Low Warn																																	
Temperature (°C)	33	70	0	70	0																																	
Voltage (V)	7.31	10.00	0.00	5.00	0.00																																	
Bias current (mA)	3.11	10.30	0.00	5.00	0.00																																	
RX Power (dBm)	-30.54(A-)	9.00	-25.00 (-34)	9.00	-25.00																																	
TX Power (dBm)	-1.01	9.00	-12.05	9.00	-10.00																																	

transceiver-monitoring

Command	transceiver-monitoring {enable disable}	
parameter	-	
default	Disable	
Mode	Port mode	
Usage Guide	Enable/disable transceiver monitoring	
Example	<p>Enable the transceiver monitoring of ethernet1/0/1.</p> <p>Switch(config-if-ethernet1/0/1)#transceiver-monitoring enable</p>	

transceiver-monitoring interval

Command	transceiver-monitoring interval <minutes>	
	no transceiver-monitoring interval	
parameter	minutes	The interval of the transceiver monitoring needs to be set.
default	15 minutes	
Mode	Global mode	
Usage Guide	sets the interval for transceiver monitoring. No command sets the interval to the	

	default interval of 15 minutes.
Example	Set the interval of the transceiver monitoring as 1 minute. Switch(config)#transceiver-monitoring interval 1

transceiver threshold

Command	transceiver threshold {default {temperature voltage bias rx-power tx-power} {high-alarm low-alarm high-warn low-warn} {<value> default}}	
parameter	default	Restore the threshold as the default threshold set by the manufacturer. If the monitoring index is not specified, restore all thresholds, if the monitoring index is specified, restore the corresponding threshold only.
	temperature	The monitoring index—temperature
	voltage	The monitoring index—voltage
	bias	The monitoring index—bias current
	rx-power	The monitoring index—receiving power
	tx-power	The monitoring index—sending power
	high-alarm	High-alarm of the monitoring index, namely there is alarm with A+ if exceeding the threshold.
	low-alarm	Low-alarm of the monitoring index, namely there is alarm with Aif exceeding the threshold.
	high-warn	High-warn of the monitoring index, namely there is warning with W+ if exceeding the threshold.
low-warn	Low-warn of the monitoring index, namely there is warning with W- if exceeding the threshold.	
default	The threshold is set by the manufacturer	
Mode	Port mode	
Usage Guide	<p>The range of the threshold parameters is shown for each monitoring index in the following:</p> <p>Temperature: -128.00~128.00 °C Voltage: 0.00~7.00 V Bias current: 0.00~140.00 mA x-power: -50.00~9.00 dBm tx-power: -50.00~9.00 dBm</p> <p>The maximum length of the threshold parameter configured by the user is 20 bits. After the user configured a parameter threshold, the threshold set by the manufacturer will be labeled with the bracket when showing the threshold, and decide whether give an alarm according to the user's configuration.</p>	
Example	Configure tx-power threshold of the fiber module, the low-warn threshold is configured as -12 on ethernet1/0/1. Switch(config-if-ethernet1/0/1)#transceiver threshold tx-power low-warn -12	

2.11.Commands for LLDP-MED

civic location

Command	civic location {dhcp server switch endpointDev} <country-code> no civic location	
parameter	dhcp server	Set device type to be DHCP server
	switch	Set device type to be Switch
	endpointDev	Set device type to be LLDP-MED Endpoint
	country-code	Set country code which consist of 2 letters, such as DE or US, it should accord the country code of ISO 3166 standard.
default	No location with Civic Address LCI format is configured on the port.	
Mode	Port mode	
Usage Guide	Configure device type and country code of the location with Civic Address LCI format and enter Civic Address LCI address mode to configure the more detailed location.	
Example	Configure device type as switch and country code as US for the location with Civic Address LCI format on Ethernet 19. Switch(Config-If-Ethernet1/0/19)# civic location switch US Switch(Med-Civic)#	

{description-language | province-state | city | county | street | locationNum | location | floor | room | postal | otherInfo}

Command	{description-language province-state city county street locationNum location floor room postal otherInfo} <address> no {description-language province-state city county street locationNum location floor room postal otherInfo}	
parameter	description-language	language for describing location, such as 'English'
	province-state	state, canton, region, province prefecture, and so on, such as 'clara'
	city	city, such as 'New York'
	county	county, parish, such as 'santa clara'
	street	street, such as '1301 Shoreway Road'
	locationNum	house number, such as '9'
	location	name and occupant of a location, such as 'Carrillo's Holiday Market'
	floor	floor number, such as '13'
	room	room number, such as '1308'
	postal	postal/zip code, such as '10027-1234'
	otherInfo	Additional location information, such as 'South Wing'
address	detailed address information, it cannot exceed 250 characters	
default	No detailed information of the location with Civic Address LCI is configured on the port.	
Mode	Civic Address LCI address mode	
Usage Guide	With this command, configure the detailed information of the location with Civic Address LCI on the port, it is able to configure 10 kinds of address types at most.	
Example	Configure the detailed location information in Civic Address LCI address mode.	

	Switch(Med-Civic)# city Beijing Switch(Med-Civic)# street shangdi
--	--

ecs location

Command	ecs location <tel-number> no ecs location	
parameter	tel-number	location characters with ECS ELIN format, such as emergent telephone number, it is character string with the length between 10 and 25.
default	No location with ECS ELIN format is configured.	
Mode	Port mode	
Usage Guide	Length range of the location character string between 10 and 25 with ECS ELIN format.	
Example	Configure the location of ECS ELIN format on port 19. Switch(Config-If-Ethernet1/0/19)# ecs location 880-445-3381	

lldp med fast count

Command	lldp med fast count <value> no lldp med fast count	
parameter	value	The number of sending the packets fast, its range from 1 to 10, unit is entries.
default	4	
Mode	Global mode	
Usage Guide	With this command, set the number for sending the packets fast.	
Example	Set the number of quick packages to 5 Switch(config)#lldp med fast count 5	

lldp med trap

Command	lldp med trap {enable disable}
parameter	-
default	Disable
Mode	Port mode
Usage Guide	Enable or disable LLDP-MED TRAP of the port.
Example	Enable LLDP-MED TRAP of the port 19. Switch(Config-If-Ethernet1/0/19)# lldp med trap enable

lldp transmit med tlv all

Command	lldp transmit med tlv all no lldp transmit med tlv all
parameter	-
default	Port does not enable the function for Sending LLDP-MED TLV.
Mode	Port mode
Usage Guide	After configuring this command, if the port is able to send LLDP-MED TLV, the sent LLDP packets with LLDP-MED TLV supported by all switches. However, LLDP packets sent by the port without any LLDP-MED TLV after the switch configured the corresponding no command.
Example	Port 19 enables the function for sending LLDP-MED TLV. Switch(Config-If-Ethernet1/0/19)# lldp transmit med tlv all

lldp transmit med tlv capability

Command	lldp transmit med tlv capability no lldp transmit med tlv capability
parameter	-
default	The function is disabled for sending LLDP-MED Capability TLV.
Mode	Port mode
Usage Guide	After configuring this command, if the port is able to send LLDP-MED TLV, the sent LLDP packets with LLDP-MED Capability TLV. However, LLDP packets sent by the port without LLDP-MED Capability TLV after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV is the important LLDP-MED TLV, if do not configure the port to send LLDP-MED Capability TLV firstly, other LLDP-MED TLV will not be sent.
Example	Port 19 enables the function for sending LLDP-MED Capability TLV. Switch(Config-If-Ethernet1/0/19)# lldp transmit med tlv capability

lldp transmit med tlv extendPoe

Command	lldp transmit med tlv extendPoe no lldp transmit med tlv extendPoe
parameter	-
default	The function is disabled for sending LLDP-MED Extended Power-Via-MDI TLV.
Mode	Port mode
Usage Guide	Configure specified port to send LLDP-MED extended power supply - Via-MDITLV. No command disables the function.
Example	Port 19 enables the function for sending LLDP-MED Extended Power-Via-MDI TLV. Switch(Config-If-Ethernet1/0/19)# lldp transmit med tlv extendPoe

lldp transmit med tlv location

Command	lldp transmit med tlv location
---------	--------------------------------

	no lldp transmit med tlv location
parameter	-
default	Disable
Mode	Port Mode
Usage Guide	Configure the specified port to send LLDP-MED Location Identification TLV. After configured this command, if the port has the capability of sending LLDP-MED TLV, the LLDP packets sent from the port will include LLDP-MED Location Identification TLV. Otherwise, the LLDP packets sent from the port will not include LLDP-MED Location Identification TLV by the no command even if the port has the capability of sending LLDP-MED TLV. Notice: Before configuring this function, the capability of sending LLDP-MED Capability TLV must be configured. If the device does not support POE or the POE function of the port is disabled by the command, this TLV will not be sent.
Example	Enable the port 19 to send LLDP-MED Location Identification TLV. Switch(Config-If-Ethernet1/0/19)#lldp transmit med tlv location

lldp transmit med tlv inventory

Command	lldp transmit med tlv inventory no lldp transmit med tlv inventory
parameter	-
default	The function is disabled for sending LLDP-MED Inventory Management TLVs
Mode	Port mode
Usage Guide	After configuring this command, if the port is able to send LLDP-MED TLV, LLDP packets with LLDP-MED Inventory Management TLVs sent by the port. However, LLDP packets without LLDP-MED Inventory Management TLVs sent by the port after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV sent by the port must be configured before sending LLDP-MED Inventory Management TLVs, or else the configuration cannot be successful.
Example	Port 19 enables the function for sending LLDP-MED Inventory Management TLVs. Switch(Config-If-Ethernet1/0/19)# lldp transmit med tlv inventory

lldp transmit med tlv networkPolicy

Command	lldp transmit med tlv networkPolicy no lldp transmit med tlv networkPolicy
parameter	-
default	The function is disabled for sending LLDP-MED Network Policy TLV.
Mode	Port mode
Usage Guide	After configuring this command, if the port is able to send LLDP-MED TLV, LLDP packets with LLDP-MED Network Policy TLV sent by the port. However, LLDP packets without LLDP-MED Network Policy TLV sent by the port after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV sent by the port must be configured before sending LLDP-MED Network Policy TLV, or else the configuration cannot be successful.

Example	Port 19 enables the function for sending LLDP-MED Network Policy TLV. Switch(Config-If-Ethernet1/0/19)# lldp transmit med tlv networkPolicy
---------	--

network policy

Command	network policy {voice voice-signaling guest-voice guest-voice-signaling softphone-voice video-conferencing streaming-video video-signaling} [status {enable disable}] [tag {tagged untagged}] [vid {<vlan-id> dot1p}] [cos <cos-value>] [dscp <dscp-value>] no network policy {voice voice-signaling guest-voice guest-voice-signaling softphone-voice video-conferencing streaming- video video-signaling}	
parameter	status	Whether the network policy is usable.
	enable	Network Policy of the specified application type has been defined, enable is the default value of the network policy.
	disable	Network Policy of the specified application type has been defined, disable is the default value of the network policy
	tag	Configure the specified application to uses tagged or untagged VLAN method
	tagged	Configure the flow of the specified application to use the tagged vlan method, here, the fields (such as VLAN ID, Layer2 priority and DSCP value) are take effect
	untagged	Configure the flow without tag for the specified application, the fields (such as VLAN ID, Layer2 priority) are ignored, only DSCP value field takes effect. Untagged is the default value of VLAN method.
	vid	Configure VLAN ID that the specified application belongs to
	vlan-id	Configure the value of VLAN ID, its range from 1 to 4094
	dot1p	Configure the specified application to tag the flow by using 802.1p priority, at the same time, use vlan 0 to load the flow.
	cos	Configure the priority of Ethernet frame for VLAN
	cos-value	Configure the value of Ethernet frame priority for VLAN, its range from 0 to 7, the default value is 5.
	dscp	Configure DSCP of VLAN.
	dscp-value	DSCP value input by the user, its range from 0 to 63, the default value is 46
default	No network policy is configured on the port.	
Mode	Port mode	
Usage Guide	User is able to configure the network policy of many kinds on a port, but their application types cannot repeat, and a kind of network policy corresponds to a LLDP-MED network policy TLV. If user configures multi-policy for a port, it will send multi-LLDP-MED network policy TLV to a LLDP packet. If user does not configure any network policy, no LLDP-MED network policy TLV is sent to LLDP packet.	
Example	Configure the network policy with the application type of voice on port 19.	

Switch(Config-If-Ethernet1/0/19)# network policy voice tag tagged vid 2 cos 6 dscp 23

show lldp

Command	show lldp
parameter	-
default	-
Mode	Admin mode
Usage Guide	Show the global LLDP and LLDP-MED configuration
Example	Show the global LLDP and LLDP-MED configuration Switch#show lldp -----LLDP GLOBAL INFORMATIONS----- LLDP has been enabled globally. LLDP enabled port : Ethernet1/0/19 LLDP interval :5 LLDP txTTL :20 LLDP NotificationInterval :5 LLDP txDelay :1 LLDP-MED FastStart Repeat Count :4 -----END-----

show lldp [interface ethernet <IFNAME>

Command	show lldp [interface ethernet <IFNAME>]
parameter	IFNAME Port name
default	-
Mode	Admin mode
Usage Guide	Show LLDP and LLDP-MED configurations on the current port.
Example	Show LLDP and LLDP-MED configuration of the port 19. Switch#show lldp interface ethernet 1/0/19 Port name :Ethernet1/0/19 LLDP Agent Adminstatus : Both LLDP Operation TLV : default LLDP Trap Status : disable LLDP maxRemote :100 LLDP Overflow handle : discard LLDP interface remote status : Free MED Optional TLV : capabilities networkPolicy location power inventory MED Trap Status:Enable MED TLV Transmit Status:Disable MED Fast Transmit Status:Disable

show lldp neighbors

Command	show lldp neighbors [interface ethernet <IFNAME>]
parameter	IFNAME Port number; for example :1/0/1

default	-
Mode	Admin mode
Usage Guide	With this command, checking LLDP and LLDP-MED information of the neighbors after the port received LLDP packets sent by the neighbors.
Example	Show the neighbor information on port 1. Switch #show lldp neighbors interface ethernet 1/0/1 Port name : Ethernet1/0/1 Port Remote Counter : 1 TimeMark :20 ChassisIdSubtype :4 ChassisId :00-03-0f-00-00-02 PortIdSubtype :Local PortId :3 PortDesc :Ethernet1/0/1 SysName :switch SysDesc :switch Device, Compiled Feb 12 17:39:53 2011 SoftWare Version 6.2.30.0 BootRom Version 4.0.1 HardWare Version Device serial number Copyright (C) 2001-2011 by Vendor. All rights reserved

show lldp traffic

Command	show lldp traffic
parameter	-
default	-
Mode	Admin Mode.
Usage Guide	After the port received the LLDP packets from the neighbor, this command can be used to view the statistics of the sent and received packets of LLDP and LLDP-MED.
Example	View the statistics of the sent and received packets after the LLDP function is enabled. Switch(config)#show lldp traffic PortName Ageouts FramesDiscarded FramesInErrors FramesIn FramesOut TLVsDiscarded TLVsUnrecognized ----- ----- Ethernet1/0/1 0 0 0 7 0

2.12.Commands for bpdu-tunnel

bpdu-tunnel-protocol

Command	bpdu-tunnel-protocol{stp gvrp dot1x user-defined-protocol <name>} no bpdu-tunnel-protocol {stp gvrp dot1x user-defined-protocol <name>}	
parameter	stp	enable bpdu-tunnel-protocol of stp function in port.
	gvrp	enable bpdu-tunnel-protocol of avrp function in port.
	dot1x	enable bpdu-tunnel-protocol of dot1x function in port.
	name	enable bpdu-tunnel-protocol of neme function in port, the protocol name range from 1 to 32 bytes, and it made up with character, data, underline and the head and tail character can not be underline
default	-	
Mode	Port Mode.	
Usage Guide	When finished configure bpdu-tunnel-protocol destination MAC address of some protocol, users can enable bpdu-tunnel-protocol function of protocol in port. Stp, gvrp or dot1x function mutex with bpdu-tunnel-protocol function in port, namely, if configured stp, gvrp or dot1x function in port, the bpdu-tunnel-protocol function of the protocol configured failed; if configured bpdu-tunnel-protocol function of this protocol in port, stp, gvrp or dot1x function can not configured in port.	
Example	Configure bpdu-tunnel-protocol to enable stp protocol in port 1/0/1. Switch(Config-If-Ethernet1/0/1)# bpdu-tunnel-protocol stp	

bpdu-tunnel-protocol group-mac

Command	bpdu-tunnel-protocol {stp gvrp dot1x} {group-mac <mac> default-group-mac} no bpdu-tunnel-protocol {stp gvrp dot1x}	
parameter	stp	configure bpdu-tunnel-protocol mac of stp protocol;
	gvrp	configure bpdu-tunnel-protocol mac of gvrp protocol;
	dot1x	configure bpdu-tunnel-protocol mac of dot1x protocol;
	mac	bpdu-tunnel-protocol mac address must be multicast address and it can not be protocodl saved address, namely address between 01-80-c2-00-00-00 and 01-80-c2-00-00-30;
	default-group-mac	the default mac address is 01-00-0c-cd-00-02.
default	-	
Mode	Global Mode.	
Usage Guide	This command must be configured before configure bpdu-tunnel-protocol in port.	
Example	Configure 01-01-00-0c -00-02 bpdu-tunnel-protocol of stp protocol. Switch(Config)# bpdu-tunnel-protocol stp group-mac 01-01-00-0c -00-02	

bpdu-tunnel-protocol protocol-mac

Command	bpdu-tunnel-protocol user-defined-protocol <name> protocol-mac <mac> {group-mac <mac> default-group-mac} no bpdu-tunnel-protocol user-defined-protocol <name>
---------	--

parameter	name	it is the protocol name and the protocol name includes 1 to 32 characters, and it makes up with character, data and underline, the head and tail character can not be underline;
	group-mac <mac>	it is the address of bpdu-tunnel-protocol mac and it must be multicast address, and it is not protocol saved address, namely the address between 01-80-c2-00-00-00 and 01-80-c2-00-00-30
	protocol-mac <mac>	it is the mac address of protocol;
	default-group-mac	The default mac address is 01-00-0c-cd-00-02
default	-	
Mode	Global Mode	
Usage Guide	The command must be configured before bpdu-tunnel-protocol in port.	
Example	Configure 01-01-00-0c-00-03 to be the bpdu-tunnel-protocol of mrpp protocol. Switch(Config)# bpdu-tunnel-protocol user-defined-protocol mrpp protocol-mac 00-03-0f-00-00-02 group-mac 01-01-00-0c -00-03	

bpdu-tunnel-protocol ethernetii

Command	bpdu-tunnel-protocol user-defined-protocol <name> protocol-mac <mac> escape-type ethernetii protocol-type <type> {group-mac <mac> default-group-mac} no bpdu-tunnel-protocol user-defined-protocol <name>	
parameter	name	it is the protocol name and the protocol name includes 1 to 32 characters, and it makes up with character, data and underline, the head and tail character can not be underline;
	protocol-mac <mac>	it is the mac address of protocol;
	type	the value of protocol and the format is xx-xx
	group-mac <mac>	it is the address of bpdu-tunnel-protocol mac and it must be multicast address, and it is not protocol saved address, namely the address between 01-80-c2-00-00-00 and 01-80-c2-00-00-30;
	default-group-mac	The default mac address is 01-00-0c-cd-00-02.
default	-	
Mode	Global Mode	
Usage Guide	The command must be configured before bpdu-tunnel-protocol in port.	
Example	Configure 01-01-00-0c-00-04 to be the bpdu-tunnel-protocol of lldp protocol. Switch(Config)# bpdu-tunnel-protocol user-defined-protocol lldp protocol-mac 01-80-c2-00-00-0e escape-type ethernetii protocol-type 88-cc group-mac 01-01-00-0c -00-04	

bpdu-tunnel-protocol snap

Command	bpdu-tunnel-protocol user-defined-protocol <name> protocol-mac <mac> escape-type snap {oui <oui> } protocol-type <type> {group-mac <mac> default-group-mac}
---------	---

	no bpd-tunnel-protocol user-defined-protocol <name>	
parameter	name	it is the protocol name and the protocol name includes 1 to 32 characters, and it makes up with character, data and underline, the head and tail character can not be underline
	protocol-mac <mac>	it is the mac address of protocol
	oui	the value of oui and the format is xx-xx-xx
	type	the value of protocol and the format is xx-xx
	group-mac <mac>	it is the address of bpd-tunnel-protocol mac and it must be multicast address, and it is not protocol saved address, namely the address between 01-80-c2-00-00-00 and 01-80-c2-00-00-30
	default-group-mac	The default mac address is 01-00-0c-cd-00-02
default	-	
Mode	Global Mode	
Usage Guide	The command must be configured before bpd-tunnel-protocol in port.	
Example	Configure 01-01-00-0c-00-05 to be the bpd-tunnel-protocol of Apple Talk protocol. Switch(Config)# bpd-tunnel-protocol user-defined-protocol lldp protocol-mac 00-03-c2-00-00-05 escape-type snap oui 08-00-07 protocol-type 80-9b group-mac 01-01-00-0c -00-05	

bpdu-tunnel-protocol llc

Command	bpdu-tunnel-protocol user-defined-protocol <name> protocol-mac <mac> escape-type llc dsap <dsap> ssap <ssap> {group-mac <mac> default-group-mac} no bpd-tunnel-protocol user-defined-protocol <name>	
parameter	name	it is the protocol name and the protocol name includes 1 to 32 characters, and it makes up with character, data and underline, the head and tail character can not be underline
	protocol-mac <mac>	it is the mac address of protocol
	dsap	The dsap value of protocol and it ranges from 0 to 255
	ssap	The ssap value of protocol and it ranges from 0 to 255;
	group-mac <mac>	it is the address of bpd-tunnel-protocol mac and it must be multicast address, and it is not protocol saved address, namely the address between 01-80-c2-00-00-00 and 01-80-c2-00-00-30
	default-group-mac	The default mac address is 01-00-0c-cd-00-02
default	-	
Mode	Global Mode	
Usage Guide	The command must be configured before bpd-tunnel-protocol in port.	
Example	Configure 01-01-00-0c-00-06 to be the bpd-tunnel-protocol of NetBIOS protocol. Switch(Config)# bpd-tunnel-protocol user-defined-protocol lldp protocol-mac 00-03-c2-00-00-06 escape-type llc dsap 240 ssap 224 group-mac 01-01-00-0c -00-06	

2.13.Commands for EEE Energy-saving

eee enable

Command	eee enable no eee enable
parameter	-
default	-
Mode	Port Mode
Usage Guide	It supports that configure EEE energy-saving function for the appointed port. There is not the EEE energy-saving function on port as default. After configuring the port to enable EEE energy-saving function, the port will enter the energy-saving state if stop to send packets to the port, the state of port is down. When sending packets to the port, the mode will changed from power saving mode to normal mode.
Example	Enable EEE energy-saving function: Switch(config-if-ethernet1/0/1)#eee enable

2.14.Commands for LED shut-off

port-led shutoff time-range

Command	port-led shutoff time-range <time-range-name> no port-led shutoff	
parameter	time-range-name	it is the name of the time-range defined by user, it is made up by 1 to 64 characters including letters, numbers, underlines. The first and last characters cannot be the underlines
default	-	
Mode	Global Configuration Mode	
Usage Guide	The LED shut-off function of the port can make all the LEDs off according to the configured time-range by user no matter what the link-act status is. It can save power. When there is no configured time-range, the default is all the times; when the range is exceeded, the port LED can be on according to the link-act status	
Example	Configure all the LEDs to be off in t1. switch(config)#: port-led shutoff time-range t1	

3.1 MAC Address Table

clear collision-mac-address-table

Syntax	clear collision-mac-address-table	
Parameter	none	

Default	none
Mode	Admin Mode
Usage	If enable the function of the hash collision mac table that issued ffp (mac-address-table avoid-collision), the mac cannot be cleared.
Example	Clear the hash collision mac table. Switch#clear collision-mac-address-table

clear mac-address-table dynamic

Syntax	clear mac-address-table dynamic [address <mac-addr>] [vlan <vlan-id>] [interface [ethernet portchannel] <interface-name>]	
Parameter	<mac-addr>	MAC address will be deleted
	<vlan-id>	Vlan id
	<interface-name>	port name for forwarding the MAC packets
Default	None	
Mode	Admin mode.	
Usage	Delete all dynamic address entries which exist in MAC address table, except application, system entries. MAC address entries can be classified according to different sources, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically.	
Example	Delete all dynamic MAC Switch#clear mac-address-table dynamic	

mac-address-learning enable | disable

Syntax	mac-address-learning (enable disable) (vlan <vlan-id> interface ethernet <interface-name>)	
Parameter	enable	Enable MAC learning through port
	disable	Disable MAC learning through port
	<vlan-id>	VLAN ID,range:1-4094
	<interface-name>	Port name
Default	all port auto learning mac address	
Mode	Global mode	
Usage	After disabling the MAC address learning function of the port, the port will not be able to automatically learn the MAC address, and the user can manage it by statically adding the MAC address.	
Example	Disable the MAC learning function of port 8 Switch#config Switch(config)#mac-address-learning disable interface ethernet 1/0/8	

mac-address-table aging-time

Syntax	mac-address-table aging-time <0 aging-time> no mac-address-table aging-time	
Parameter	0	0 to disable aging.
	aging-time	aging-time seconds, range from 10 to 1000000;
Default	Default aging-time is 300 seconds.	
Mode	Global Mode.	
Usage	If no destination address of the packets is same with the address entry in aging-time, the address entry will get aged. The user had better set the aging-time according to the network condition, it usually use the default value.	
Example	Set the aging-time to 600 seconds. Switch#config Switch(config)#mac-address-table aging-time 600	

mac-address-table static | blackhole

Syntax	mac-address-table {static blackhole} address <mac-addr> vlan <vlan-id> [interface ethernet <interface-name>] [source destination both] no mac-address-table {static blackhole dynamic} [address <mac-addr>] [vlan <vlan-id>] [interface ethernet <interface-name>]	
Parameter	static	static entries
	blackhole	filter entries, which is for discarding frames from specific MAC address, it can filter source address, destination address or the both. When choose the filter entries, blackhole address can't based on port, and not configure to interface;
	dynamic	dynamic address entries
	<mac-addr>	MAC address to be added or deleted
	<vlan-id>	vlan number
	<interface-name>	name of the port transmitting the MAC data packet
	source	based on source address filter
	destination	based on destination address filter
	both	based on source address and destination address filter, the default is both
Default	When VLAN interface is configured and is up, the system will generate a static address mapping entry of which the inherent MAC address corresponds to the VLAN number.	
Mode	Global Mode	
Usage	In certain special applications or when the switch is unable to dynamically learn the MAC address, users can use this command to manually establish mapping relation between the MAC address and port and VLAN. no mac-address-table command is for deleting all dynamic, static, filter MAC address entries existing in the switch MAC address list, except application, system entries. MAC address entries can be classified according to the different source, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically. STATIC is the static MAC address entries (including blackhole entries) added by user. APPLICATION is	

	<p>the static MAC address entries added by application protocol (such as dot1x, security port...). SYSTEM is the additive static MAC address entries according to VLAN interface. When adding STATIC entries, it can cover the conflictive DYNAMIC, except APPLICATION, SYSTEM entries.</p> <p>After configure the static multicast MAC by this command, the multicast MAC traffic will be forwarded to the specified port of the specified VLAN.</p>
Example	<p>Port 1/0/1 belongs to VLAN200, and establishes address mapping with MAC address 00-03-0f-f0-00-18.</p> <pre>Switch#config Switch(config)#mac-address-table static address 00-03-0f-f0-00-18 vlan 200 interface ethernet 1/0/1</pre>

I2-address-table static-multicast address

Syntax	<p>I2-address-table static-multicast address {<ip-addr> <mac-addr>} vlan <vlan-id> interface [ethernet <interface-name>] port-channel <port-channel-id> no I2-address-table static-multicast (address {<ip-addr> <mac-addr>} vlan <vlan-id>) [interface (ethernet <interface-name>] port-channel <port-channel-id>]]</p>	
Parameter	<ip-addr>	IP address add or delete IP address
	<mac-addr>	add or delete MAC address
	<interface-name>	port that transfer MAC data packets
	<port-channel-id>	aggregate port name of transfer MAC data packets
	<vlan-id>	VLAN number
Default	When VLAN interface is configured and is up, the system will generate a static address mapping entry of which the inherent MAC address corresponds to the VLAN number	
Mode	Global Mode	
Usage	<p>In certain special applications or when the switch is unable to dynamically learn the MAC address, users can use this command to manually establish mapping relation between the MAC address and port and VLAN.</p> <p>After configure the static multicast MAC by this command, the multicast MAC traffic will be forwarded to the specified port of the specified VLAN.</p>	
Example	<p>Configure a static multicast ip 232.0.0.1, the egress is ethernet 1/0/1.</p> <pre>Switch#config Switch(config)# I2-address-table static-multicast address 232.0.0.1 vlan 200 interface ethernet 1/0/1</pre>	

show collision-mac-address-table

Syntax	show collision-mac-address-table	
Parameter	None	
Default	None	
Mode	Global Mode.	
Usage	If enable the function of the hash collision mac table that issued ffp (mac-address-table avoid-collision), the collision mac which issued ffp use * to sign.	

Example	Switch#clear mac-notification statistics Switch#
---------	---

mac-address-table notification

Syntax	mac-address-table notification no mac-address-table notification
Parameter	none
Default	Disable
Mode	Global Mode
Usage	This command is used with trap switch of snmp. When disabling the MAC address notification, other configuration can be shown, but the function is invalid .
Example	Enable the MAC address notification. Switch#config Switch(config)#mac-address-table notification Switch(config)#

mac-address-table notification history-size

Syntax	mac-address-table notification history-size <0-500> no mac-address-table notification history-size
Parameter	history-size data length of sending the notification, its range from 1 to 500
Default	10
Mode	Global Mode
Usage	After the global switch is disabled, this command is also able to be configured sequentially.
Example	Change the maximum history-size to be 256. Switch#config Switch(config)#mac-address-table notification history-size 256

mac-address-table notification interval

Syntax	mac-address-table notification interval <1-30> no mac-address-table notification interval
Parameter	interval interval for sending the notification, unit is second, its range from 0 to 30.
Default	30s
Mode	Global Mode
Usage	After the global switch is disabled, this command is also able to be configured sequentially.
Example	Configure the interval as 30s for sending the MAC address notification Switch#config Switch(config)#mac-address-table notification interval 30

mac-notification

Syntax	mac-notification {added all removed} no mac-notification	
Parameter	added	added MAC address
	all	added and the removed MAC addresses
	removed	removed MAC address
Default	No MAC address notification.	
Mode	Port mode	
Usage	After the global switch is disabled, this command is also able to be configured sequentially.	
Example	Send the trap notification after the MAC address is added to Ethernet 1/0/1. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# mac-notification added	

show mac-notification summary

Syntax	show mac-notification summary	
Parameter	none	
Default	Do not show the summary.	
Mode	Admin mode	
Usage	With this command, check the configuration of MAC address and the sending status of MAC notification trap.	
Example	Switch#show mac-notification summary MAC address notification:enabled MAC address snmp traps:disabled MAC address notification interval = 5 MAC address notification history log size = 10 MAC address added = 0 MAC address removed = 0 MAC address moved = 0 MAC address snmp traps generated = 0	

snmp-server enable traps mac-notification

Syntax	snmp-server enable traps mac-notification no snmp-server enable traps mac-notification	
Parameter	none	
Default	Disable trap notification globally.	
Mode	Global Mode	
Usage	This command is used with MAC notification switch. When the switch is disabled, other	

	configuration can be shown, but the function is invalid.
Example	Enable the trap notification of MAC address Switch#config Switch(config)#snmp-server enable traps mac-notification

4.1 VLAN

vlan

Syntax	vlan WORD no vlan																																																																																																																										
Parameter	WORD	WORD is the VLAN ID to be created/deleted, valid range is 1 to 4094, connect with ';' and '-'.																																																																																																																									
Default	Only VLAN1 is set by default.																																																																																																																										
Mode	Global Mode																																																																																																																										
Usage	VLAN1 is the default VLAN and cannot be configured or deleted by the user. The maximal VLAN number is 4094. It should be noted that dynamic VLANs learnt by GVRP cannot be deleted by this command.																																																																																																																										
Example	<p>Create VLAN100 and enter the configuration mode for VLAN 100. Display the status for the current VLAN;</p> <pre>Switch#config Switch(config)#vlan 100 Switch#show vlan</pre> <table border="1"> <thead> <tr> <th>VLAN Name</th> <th>Type</th> <th>Media</th> <th>Ports</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>default</td> <td>Static</td> <td>ENET</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/2</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/3</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/4</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/5</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/6</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/7</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/8</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/9</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/10</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/11</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/12</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/13</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/14</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/15</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/16</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/17</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/18</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/19</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/20</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/21</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/22</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/23</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/24</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/25</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/26</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/27</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/28</td> </tr> <tr> <td>100</td> <td>VLAN0100</td> <td>Static</td> <td>ENET</td> </tr> </tbody> </table> <p>Switch#</p>			VLAN Name	Type	Media	Ports	1	default	Static	ENET				Ethernet1/0/2				Ethernet1/0/3				Ethernet1/0/4				Ethernet1/0/5				Ethernet1/0/6				Ethernet1/0/7				Ethernet1/0/8				Ethernet1/0/9				Ethernet1/0/10				Ethernet1/0/11				Ethernet1/0/12				Ethernet1/0/13				Ethernet1/0/14				Ethernet1/0/15				Ethernet1/0/16				Ethernet1/0/17				Ethernet1/0/18				Ethernet1/0/19				Ethernet1/0/20				Ethernet1/0/21				Ethernet1/0/22				Ethernet1/0/23				Ethernet1/0/24				Ethernet1/0/25				Ethernet1/0/26				Ethernet1/0/27				Ethernet1/0/28	100	VLAN0100	Static	ENET
VLAN Name	Type	Media	Ports																																																																																																																								
1	default	Static	ENET																																																																																																																								
			Ethernet1/0/2																																																																																																																								
			Ethernet1/0/3																																																																																																																								
			Ethernet1/0/4																																																																																																																								
			Ethernet1/0/5																																																																																																																								
			Ethernet1/0/6																																																																																																																								
			Ethernet1/0/7																																																																																																																								
			Ethernet1/0/8																																																																																																																								
			Ethernet1/0/9																																																																																																																								
			Ethernet1/0/10																																																																																																																								
			Ethernet1/0/11																																																																																																																								
			Ethernet1/0/12																																																																																																																								
			Ethernet1/0/13																																																																																																																								
			Ethernet1/0/14																																																																																																																								
			Ethernet1/0/15																																																																																																																								
			Ethernet1/0/16																																																																																																																								
			Ethernet1/0/17																																																																																																																								
			Ethernet1/0/18																																																																																																																								
			Ethernet1/0/19																																																																																																																								
			Ethernet1/0/20																																																																																																																								
			Ethernet1/0/21																																																																																																																								
			Ethernet1/0/22																																																																																																																								
			Ethernet1/0/23																																																																																																																								
			Ethernet1/0/24																																																																																																																								
			Ethernet1/0/25																																																																																																																								
			Ethernet1/0/26																																																																																																																								
			Ethernet1/0/27																																																																																																																								
			Ethernet1/0/28																																																																																																																								
100	VLAN0100	Static	ENET																																																																																																																								

name (vlan)

Syntax	name NAME no name																																																																		
Parameter	NAME	specified name string.																																																																	
Default	The default VLAN name is vlanXXX, where xxx is VID.																																																																		
Mode	VLAN Configuration Mode.																																																																		
Usage	The switch can specify names for different VLANs, making it easier for users to identify and manage VLANs.																																																																		
Example	<pre>Specify the name of VLAN100 as 100 Switch#config Switch(config)# vlan 100 Switch(config-vlan100)#name 100 Switch# show vlan</pre> <table border="1"> <thead> <tr> <th>VLAN Name</th> <th>Type</th> <th>Media</th> <th>Ports</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>default</td> <td>Static</td> <td>ENET</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/2 Ethernet1/0/3</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/4 Ethernet1/0/5</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/6 Ethernet1/0/7</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/8 Ethernet1/0/9</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/10 Ethernet1/0/11</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/12 Ethernet1/0/13</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/14 Ethernet1/0/15</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/16 Ethernet1/0/17</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/18 Ethernet1/0/19</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/20 Ethernet1/0/21</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/22 Ethernet1/0/23</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/24 Ethernet1/0/25</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/26 Ethernet1/0/27</td> </tr> <tr> <td></td> <td></td> <td></td> <td>Ethernet1/0/28</td> </tr> </tbody> </table>			VLAN Name	Type	Media	Ports	1	default	Static	ENET				Ethernet1/0/2 Ethernet1/0/3				Ethernet1/0/4 Ethernet1/0/5				Ethernet1/0/6 Ethernet1/0/7				Ethernet1/0/8 Ethernet1/0/9				Ethernet1/0/10 Ethernet1/0/11				Ethernet1/0/12 Ethernet1/0/13				Ethernet1/0/14 Ethernet1/0/15				Ethernet1/0/16 Ethernet1/0/17				Ethernet1/0/18 Ethernet1/0/19				Ethernet1/0/20 Ethernet1/0/21				Ethernet1/0/22 Ethernet1/0/23				Ethernet1/0/24 Ethernet1/0/25				Ethernet1/0/26 Ethernet1/0/27				Ethernet1/0/28
VLAN Name	Type	Media	Ports																																																																
1	default	Static	ENET																																																																
			Ethernet1/0/2 Ethernet1/0/3																																																																
			Ethernet1/0/4 Ethernet1/0/5																																																																
			Ethernet1/0/6 Ethernet1/0/7																																																																
			Ethernet1/0/8 Ethernet1/0/9																																																																
			Ethernet1/0/10 Ethernet1/0/11																																																																
			Ethernet1/0/12 Ethernet1/0/13																																																																
			Ethernet1/0/14 Ethernet1/0/15																																																																
			Ethernet1/0/16 Ethernet1/0/17																																																																
			Ethernet1/0/18 Ethernet1/0/19																																																																
			Ethernet1/0/20 Ethernet1/0/21																																																																
			Ethernet1/0/22 Ethernet1/0/23																																																																
			Ethernet1/0/24 Ethernet1/0/25																																																																
			Ethernet1/0/26 Ethernet1/0/27																																																																
			Ethernet1/0/28																																																																

switchport interface

Syntax	switchport interface [ethernet portchannel] [<interface-name interface-list>] no switchport interface [ethernet portchannel] [<interface-name interface-list>]	
Parameter	ethernet	Ethernet port to be added
	portchannel	link-aggregation port to be added
	interface-name	port name, such as e1/0/1. If this option is selected, ethernet or portchannel should not be.
	interface-list	port list to be added or deleted, “;” and “-” are supported, for example: ethernet1/0/1;3;4-7;8.
Default	A newly created VLAN contains no port by default.	
Mode	VLAN Mode	
Usage	Access ports are normal ports and can join a VLAN, but a port can only join one VLAN for a time.	
Example	Assign Ethernet port 1, 3, 4-7 of VLAN100.	

```

Switch#config
Switch(config)#vlan 100
Switch(config-vlan100)#switchport interface ethernet 1/0/1;3;4-7
Set the port Ethernet1/0/1 access vlan 100 successfully
Set the port Ethernet1/0/3 access vlan 100 successfully
Set the port Ethernet1/0/4 access vlan 100 successfully
Set the port Ethernet1/0/5 access vlan 100 successfully
Set the port Ethernet1/0/6 access vlan 100 successfully
Set the port Ethernet1/0/7 access vlan 100 successfully
Switch#show vlan
VLAN Name          Type            Media        Ports
-----
1    default          Static          ENET         Ethernet1/0/2      Ethernet1/0/8
                                     Ethernet1/0/9      Ethernet1/0/10
                                     Ethernet1/0/11     Ethernet1/0/12
                                     Ethernet1/0/13     Ethernet1/0/14
                                     Ethernet1/0/15     Ethernet1/0/16
                                     Ethernet1/0/17     Ethernet1/0/18
                                     Ethernet1/0/19     Ethernet1/0/20
                                     Ethernet1/0/21     Ethernet1/0/22
                                     Ethernet1/0/23     Ethernet1/0/24
                                     Ethernet1/0/25     Ethernet1/0/26
                                     Ethernet1/0/27     Ethernet1/0/28
100  VLAN0100          Static          ENET         Ethernet1/0/1      Ethernet1/0/3
                                     Ethernet1/0/4      Ethernet1/0/5
                                     Ethernet1/0/6      Ethernet1/0/7
Switch#

```

switchport forbidden vlan

Syntax	switchport forbidden vlan (WORD all add WORD except WORD remove WORD)	
Parameter	WORD	add the vlanList as forbidden vlan and cover the previous configuration
	all	set all VLANs as forbidden vlan
	add WORD	add vlanList to the current forbidden vlanList
	except WORD	set all VLANs as forbidden vlan except vlanList
	Remove WORD	remove vlan specified by vlanList from current forbidden vlanList
Default	Forbidden vlanList is empty	
Mode	Port mode	
Usage	Tag the corresponding position for forbidden vlanList and clear allow vlanList flags in ports. A port leaves these VLANs if it joins them statically, and it sends message to GVRP module to enable corresponding registered machine of the port to enter forbidden mode.	

	show running-config display current setting
Example	<p>Port quits the corresponding VLAN and the corresponding registered machine of GVRP to enter forbidden mode.</p> <pre> Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode hybrid Switch(config-if-ethernet1/0/1)#switchport forbidden vlan all Set the port Ethernet1/0/1 mode Hybrid successfully Switch#show running-config no service password-encryption hostname Switch sysLocation Default sysContact Default username admin privilege 15 password 0 admin authentication line console login local snmp-server enable vlan 1;100 Interface Ethernet1/0/1 switchport mode hybrid switchport forbidden vlan 1-4094 Interface Ethernet1/0/2 Interface Ethernet1/0/3 switchport mode trunk switchport trunk native vlan 100 Interface Ethernet1/0/4 Interface Ethernet1/0/5 Interface Ethernet1/0/6 Interface Ethernet1/0/7 Interface Ethernet1/0/8 Interface Ethernet1/0/9 Switch# </pre>

switchport mode

Syntax	switchport mode (access hybrid trunk tunnel)	
Parameter	access	Access port.
	hybrid	Hybrid port.
	trunk	Trunk port.
	tunnel	Tunnel port.
Default	The port is in Access mode by default.	
Mode	Port Mode.	

Usage	<p>Ports in trunk mode is called Trunk ports. Trunk ports can allow traffic of multiple VLANs to pass through. VLAN in different switches can be interconnected with the Trunk ports. Ports under access mode are called Access ports. An access port can be assigned to one and only one VLAN at a time. Hybrid ports can allow traffic of multiple VLANs to pass through, receive and send the packets of multiple VLANs, used to connect switch, or user's computer. When Hybrid ports and Trunk ports receive the data, the deal way is same, but the deal way is different in sending the data. Because Hybrid ports can allow the packets of multiple VLANs to send with no tag, however, Trunk ports can only allow the packets of the default VLAN to send with no tag. The attribute of ports can not directly convert between Hybrid and Trunk, it must configure to be access at first, then configure to be Hybrid or Trunk. When the Trunk or Hybrid attribute is cancelled, the port attribute restores the default (access) attribute and belongs to vlan1.</p> <p>show switchport interface display setting</p>
Example	<p>Set port 1 to hybrid mode.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# switchport mode hybrid Set the port Ethernet1/0/1 mode Hybrid successfully Switch(config-if-ethernet1/0/1)#show switchport interface ethernet 1/0/1 Ethernet1/0/1 Type :Universal Mode :Hybrid Port VID :1 Switch(config-if-ethernet1/0/1)#</pre>

switchport hybrid native vlan

Syntax	<pre>switchport hybrid native vlan <vlan-id> no switchport hybrid native vlan</pre>		
Parameter	<table border="1"> <tr> <td><vlan-id></td> <td>VLAN ID (e.g. 100), PVID of Hybrid port.</td> </tr> </table>	<vlan-id>	VLAN ID (e.g. 100), PVID of Hybrid port.
<vlan-id>	VLAN ID (e.g. 100), PVID of Hybrid port.		
Default	The default PVID of Hybrid port is 1.		
Mode	Port Mode.		
Usage	<p>When an untagged frame enters a Hybrid port, it will be added a tag of the native PVID which is set by this command, and is forwarded to the native VLAN.</p> <p>show switchport interface display setting。</p>		
Example	<p>Set the native vlan to 100 for a Hybrid port.</p> <pre>Switch#config Switch(config) # interface ethernet 1/0/2 Switch(config-if-ethernet1/0/2)#switchport mode hybrid Switch(config-if-ethernet1/0/2)#switchport hybrid native vlan 100 Switch# show switchport interface ethernet 1/0/2 Ethernet1/0/2 Type :Universal</pre>		

	Mode :Hybrid Port VID :100 Switch#
--	--

switchport hybrid allowed vlan

Syntax	switchport hybrid allowed vlan (WORD all add WORD except WORD remove WORD) (tag untag) no switchport hybrid allowed vlan	
Parameter	WORD	Set vlan List to allowed vlan, and the late configuration will cover the previous configuration;
	all	Set all VLANs to allowed vlan;
	add WORD	Add vlanList to the existent allowed vlanList;
	except WORD	Set all VLANs to allowed vlan except the configured vlanList;
	Remove WORD	Delete the specific VLAN of vlanList from the existent allow vlanList;
	tag	Join the specific VLAN with tag mode;
	untag	Join the specific VLAN with untag mode.
Default	Deny all VLAN traffic to pass.	
Mode	Port Mode.	
Usage	<p>The user can use this command to set the VLANs whose traffic allowed to pass through the Hybrid port, traffic of VLANs not included are prohibited. The difference between tag and untag mode by setting allowed vlan: set VLAN to untag mode, the frame sent via hybrid port without VLAN tag; set VLAN to tag mode, the frame sent via hybrid port with corresponding VLAN tag. The same VLAN can not be allowed with tag and untag mode by a Hybrid port at the same time. If configure the tag (or untag) allowed VLAN to untag (or tag) allowed VLAN, the last configuration will cover the previous.</p> <p>show switchport interface display setting。</p>	
Example	<pre>Set hybrid port allowed vlan 1,100 with tag mode Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode hybrid Set the port Ethernet1/0/1 mode Hybrid successfully Switch(config-if-ethernet1/0/1)#switchport hybrid allowed vlan 1;100 tag set the Hybrid port Ethernet1/0/1 tag allowed vlan successfully Switch#show switchport interface ethernet 1/0/1 Ethernet1/0/1 Type :Universal Mode :Hybrid Port VID :1 Hybrid tag allowed Vlan: 1;100 Switch#</pre>	

switchport access vlan

Syntax	switchport access vlan <valn-id> no switchport access vlan	
Parameter	< valn-id >	VLAN ID (e.g. 100),valid range is 1 to 4094.
Default	All ports belong to VLAN1 by default.	
Mode	Port Mode.	
Usage	<p>Only ports in Access mode can join specified VLANs, and an Access port can only join one VLAN at a time.</p> <p>The “no switchport access vlan” command deletes the current port from the specified VLAN, and the port will be partitioned to VLAN1.</p> <p>show switchport interface display setting</p>	
Example	<p>Add some Access port to VLAN100.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode access Set the port Ethernet1/0/1 mode Access successfully Switch(config-if-ethernet1/0/1)# switchport access vlan 100 Set the port Ethernet1/0/1 access vlan 100 successfully Switch#show switchport interface ethernet 1/0/1 Ethernet1/0/1 Type :Universal Mode :Access Port VID :100 Switch#</pre>	

switchport trunk allowed vlan

Syntax	switchport trunk allowed vlan (WORD all add WORD except WORD remove WORD) (tag untag) no switchport trunk allowed vlan	
Parameter	WORD	specified VIDs ,the range from 1 to 4094;
	all	all VIDs
	add WORD	add assigned VIDs behind allow vlan;
	except WORD	all VID add to allow vlan except assigned VIDs;
	Remove WORD	delete assigned allow vlan from allow vlan list.
Default	Trunk port allows all VLAN traffic by default.	
Mode	Port Mode.	
Usage	<p>The user can use this command to set the VLAN traffic allowed to passthrough the Trunk port; traffic of VLANs not included are prohibited.</p> <p>show switchport interface display setting.</p>	

Example	<pre> Set Trunk port to allow traffic of VLAN1, 3-5 Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# switchport trunk allowed vlan 1;3-5 set the trunk port Ethernet1/0/1 allowed vlan successfully. Switch#show switchport interface ethernet 1/0/1 Ethernet1/0/1 Type :Universal Mode :Trunk Port VID :1 Trunk allowed Vlan: 1;3-5 Switch# </pre>
---------	---

switchport trunk native vlan

Syntax	<pre> switchport trunk native vlan <vlan-id> no switchport trunk allowed vlan </pre>
Parameter	<vlan-id> PVID for Trunk port.
Default	The default PVID of Trunk port is 1.
Mode	Port Mode.
Usage	<p>PVID concept is defined in 802.1Q. PVID in Trunk port is used to tag untagged frames. When an untagged frame enters a Trunk port, the port will tag the untagged frame with the native PVID set with this commands for VLAN forwarding.</p> <pre> show switchport interface display setting </pre>
Example	<pre> Set the native VLAN for a Trunk port to 100. Switch#config Switch(config)#interface ethernet 1/0/3 Switch(config-if-ethernet1/0/3)# switchport trunk native vlan 100 Set the port Ethernet1/0/3 native vlan 100 successfully Switch#show switchport interface ethernet 1/0/3 Ethernet1/0/3 Type :Universal Mode :Trunk Port VID :100 Trunk allowed Vlan: 1-4094 </pre>

switchport mode trunk allow-null

Syntax	switchport mode trunk allow-null
Parameter	none
Default	access mode.
Mode	Port mode
Usage	Configure the port as trunk, enable it to leave all VLANs and clear allow-list.

	show switchport interface display setting
Example	<pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# switchport mode trunk allow-null Set the port Ethernet1/0/1 mode Trunk successfully Switch#show switchport interface ethernet 1/0/1 Ethernet1/0/1 Type :Universal Mode :Trunk Port VID :1 switchport mode trunk allow-null Switch#</pre>

vlan ingress enable

Syntax	<pre>vlan ingress enable no vlan ingress enable</pre>
Parameter	none
Default	Enable VLAN ingress filtering function.
Mode	Port Mode.
Usage	<p>After VLAN ingress filtering is enabled on the port, when the system receives data it will check source port first, and forwards the data to the destination port if it is the VLAN member port, or else drop the data.</p> <pre>show running-config display setting</pre>
Example	<p>Disable VLAN ingress rules on the port.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# no vlan ingress enable Switch# show running-config no service password-encryption hostname Switch sysLocation Default sysContact Default username admin privilege 15 password 0 admin authentication line console login local snmp-server enable vlan 1 Interface Ethernet1/0/1 no vlan ingress enable Interface Ethernet1/0/2 Switch#</pre>

vlan-translation enable

Syntax	vlan-translation enable no vlan-translation enable
Parameter	none
Default	VLAN translation has not been enabled on the port by default.
Mode	Port Mode.
Usage	vlan-translation and dot1q-tunnel are mutually exclusive, it is recommended to enable vlan-translation on trunk port and manually disable port filtering. show vlan-translation display setting
Example	Enable VLAN translation function on port1. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# vlan-translation enable Switch# show vlan-translation Interface Ethernet1/0/1: vlan-translation is enable, miss drop is not set Switch#

vlan-translation

Syntax	vlan-translation <old-valn-id> to <new-vlan-id> {in out} no vlan-translation <old-valn-id> {in out}	
Parameter	old-valn-id	original VLAN ID
	new-vlan-id	translated VLAN ID
	in	ingress translation
	out	outgress translation.
Default	There is no VLAN translation relation.	
Mode	Port Mode.	
Usage	The command is for configuring the translation relation of the VLAN translation function. The data packets will be matched according to the configured translation relations, and its VLAN ID will be changed to the one in the configured item once matched, while forward the packets of the original VLAN if not match. This command cannot be used with dot1q-tunnel enable at the same time. show vlan-translation display setting	
Example	Move the VLAN100 data entered from the port1 to VLAN2 after ingress translation. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# vlan-translation enable Switch(config-if-ethernet1/0/1)#vlan-translation 100 to 2 in Switch# show vlan-translation Interface Ethernet1/0/1: vlan-translation is enable, miss drop is not set vlan-translation 100 to 2 in Switch#	

vlan-translation miss drop

Syntax	vlan-translation miss drop {in out both} no vlan-translation miss drop {in out both}	
Parameter	in	entrance
	out	export
	both	two-way
Default	Not miss drop when translation failed.	
Mode	Port Mode.	
Usage	During translate the mapping relation between original VID and present VID, if not configure related translation, the default is not packets miss. After using the command, it will miss data packets when translation failed. show vlan-translation display setting	
Example	set port 1 translation failed and miss packets in entrance. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# vlan-translation enable Switch(config-if-ethernet1/0/1)#vlan-translation miss drop in Switch# show vlan-translation Interface Ethernet1/0/1: vlan-translation is enable, miss drop is set in	

dot1q-tunnel enable

Syntax	dot1q-tunnel enable no dot1q-tunnel enable	
Parameter	none	
Default	Dot1q-tunnel function disabled on the port by default.	
Mode	Port Mode.	
Usage	After enabling dot1q-tunnel on the port, data packets without VLAN tag (referred to as tag) will be packed with a tag when entering through the port; those with tag will be packed with an external tag. The TPID in the tag is the global configuration TPID. its default value is 0x8100, and the VLAN ID is the VLAN ID the port belongs to. Data packets with double tags will be forwarded according to MAC address and external tag, till the external tag is removed when transmitted outside from the access port. Since the length of the data packet may be over sized when packed with external tag, it is recommended to use this command associating the Jumbo function. Normally this command is used on access ports. This command can not be used when vlan-translation enabled. show dot1q-tunnel display setting	
Example	Join port1 into VLAN3, enable dot1q-tunnel function. Switch#config	

	<pre>Switch(config)#vlan 3 Switch(config-vlan3)#switchport interface ethernet 1/0/1 Switch(config-vlan3)#exit Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# dot1q-tunnel enable Switch# show dot1q-tunnel Interface Ethernet1/0/1: dot1q-tunnel is enable</pre>
--	--

dot1q-tunnel selective enable

Syntax	<pre>dot1q-tunnel selective enable no dot1q-tunnel selective enable</pre>
Parameter	none
Default	Do not enable selective QinQ.
Mode	Port mode
Usage	<p>Enable selective QinQ command should associates with hybrid mode, and it should not be used with dot1q-tunnel enable synchronously.</p> <p>show running-config display setting</p>
Example	<pre>Enable dot1q-tunnel selective enable of port1. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# dot1q-tunnel selective enable Switch# show running-config no service password-encryption hostname Switch sysLocation Default sysContact Default username admin privilege 15 password 0 admin authentication line console login local snmp-server enable vlan 1;3 Interface Ethernet1/0/1 dot1q-tunnel selective enable Interface Ethernet1/0/2 Interface Ethernet1/0/3 Switch#</pre>

dot1q-tunnel selective s-vlan

Syntax	<pre>dot1q-tunnel selective s-vlan <s-vlan> c-vlan <c-vid-list> no dot1q-tunnel selective s-vlan <s-vlan> c-vlan <c-vid-list></pre>	
Parameter	<s-vlan>	SP VLAN ID
	<c-vid-list>	range of user's VLAN ID.
Default	There is no mapping relation.	

Mode	Port mode
Usage	This command is used to configure the mapping relation for selective QinQ. If packets match the mapping relation, they will be tagged with SP vlan tag as the outer VLAN tag. show running-config display setting
Example	<p>Packets of VLAN 3 through VLAN 5 are tagged with the tag of VLAN 1 as the outer VLAN tag on Ethernet1/0/1.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# dot1q-tunnel selective s-vlan 1 c-vlan 3-5 Switch(config-if-Ethernet1/0/1)# dot1q-tunnel selective enable Switch# show running-config no service password-encryption hostname Switch sysLocation Default sysContact Default username admin privilege 15 password 0 admin authentication line console login local snmp-server enable vlan 1;3 Interface Ethernet1/0/1 dot1q-tunnel selective s-vlan 1 c-vlan 3-5 dot1q-tunnel selective enable Interface Ethernet1/0/2 Interface Ethernet1/0/3 Interface Ethernet1/0/4 Interface Ethernet1/0/5 Interface Ethernet1/0/6</pre>

garp timer join

Syntax	garp timer join <200-500>	
Parameter	<200-500>	millisecond
Default	200 ms	
Mode	Global mode	
Usage	Check whether the value satisfy the range. If so, modify the value of garp timer to the specified value, otherwise return a configuration error. show garp timer display setting	
Example	<p>Set the value of garp join timer as 210ms.</p> <pre>Switch#config Switch(config)# garp timer join 210 Switch#show garp timer GARP join timer value is : 210 (ms) GARP leave timer value is : 600 (ms) GARP leaveall timer value is : 10000 (ms)</pre>	

garp timer leave

Syntax	garp timer leave <500-1200>	
Parameter	<500-1200>	millisecond
Default	600ms	
Mode	Global mode	
Usage	Check whether the value satisfy the range. If so, modify the value of garp timer to the specified value, otherwise return a configuration error. show garp timer display setting	
Example	Set the value of garp leave timer as 700ms. Switch#config Switch(config)#garp time leave 700 Switch#show garp timer GARP join timer value is : 210 (ms) GARP leave timer value is : 700 (ms) GARP leaveall timer value is : 10000 (ms)	

garp timer leaveall

Syntax	garp timer leaveall <5000-60000>	
Parameter	<500-60000>	millisecond
Default	10000ms	
Mode	Global mode	
Usage	Check whether the value satisfy the range. If so, modify the value of garp leaveAll timer to the specified value, otherwise return a configuration error. show garp timer display setting	
Example	Set the value of garp leaveAll as 20000ms. Switch#config Switch(config)#garp time leaveall 20000 Switch(config)#show garp timer GARP join timer value is : 210 (ms) GARP leave timer value is : 700 (ms) GARP leaveall timer value is : 20000 (ms) Switch#	

no garp timer

Syntax	no garp timer (join leave leaveall)	
Parameter	join	join timer
	leave	leave timer
	leaveall	leaveAll timer
Default	200 600 10000 milliseconds for join leave leaveall timer respectively.	
Mode	Global mode	

Usage	Check whether the default value satisfy the range. If so, modify the value of garp join leave leaveAll timer to the default value, otherwise return a configuration error. show garp timer join display setting
Example	Restore garp timer join to the default value. Switch#config Switch(config)# no garp timer join Switch(config)# show garp timer join GARP join timer value is : 200 (ms) Switch#

gvrp(Global)

Syntax	gvrp no gvrp
Parameter	none
Default	Disabled.
Mode	Global mode
Usage	Enable GVRP function globally and only in this way GVRP module can work normally. show running-config display setting
Example	Enable GVRP function globally. Switch#config Switch(config)#gvrp Switch(config)#show running-config no service password-encryption hostname Switch sysLocation Default sysContact Default username admin privilege 15 password 0 admin authentication line console login local snmp-server enable vlan 1 gvrp Interface Ethernet1/0/1 Switch#

gvrp(Port)

Syntax	gvrp no gvrp
Parameter	none
Default	Disabled
Mode	Port mode
Usage	GVRP function can only be enabled on trunk and hybrid ports, and enabling GVRP will return an error on access port. After GVRP enabled on port, this port will be added to

	GVRP (i.e. adding corresponding state machine to GVRP of the port). show gvrp port-member display setting
Example	Enable GVRP of port. Switch#config Switch(config)# interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode hybrid Set the port Ethernet1/0/1 mode Hybrid successfully Switch(config-if-ethernet1/0/1)#gvrp Switch#show gvrp port-member Ports which were enabled gvrp included: Ethernet1/0/1

private-vlan

Syntax	private-vlan {primary isolated community} no private-vlan	
Parameter	primary	set current VLAN to Primary VLAN
	isolated	set current VLAN to Isolated VLAN
	community	set current VLAN to Community VLAN
Default	Private VLAN is not configured by default.	
Mode	VLAN mode	
Usage	<p>There are three Private VLANs: Primary VLAN, Isolated VLAN and Community VLAN. Ports in Primary there are three Private VLANs: Primary VLAN, Isolated VLAN and Community VLAN can communicate with ports of Isolated VLAN and Community VLAN related to this Primary VLAN; Ports in Isolated VLAN are isolated between each other and only communicate with ports in Primary VLAN they related to; ports in Community VLAN can communicate both with each other and with Primary VLAN ports they related to; there is no communication between ports in Community VLAN and port in Isolated VLAN.</p> <p>Only VLANs containing empty Ethernet ports can be set to Private VLAN, and only the Private VLANs configured with associated private relationships can set the Access Ethernet ports their member ports. Normal VLAN will clear its Ethernet ports when set to Private VLAN.</p> <p>It is to be noted Private VLAN messages will not be transmitted by GVRP.</p> <p>show vlan private-vlan display setting</p>	
Example	<p>Set VLAN100, 200, 300 to private vlans, with respectively primary, Isolated, Community types.</p> <p>Switch#config Switch(config)#vlan 100;200;300 Switch(config)#vlan 100 Switch(config-vlan100)#private-vlan primary Note:This will remove all the access ports from vlan 100 Switch(config-vlan100)#vlan 200 Switch(config-vlan200)#private-vlan isolated</p>	

	<p>Note:This will remove all the access ports from vlan 200</p> <pre>Switch(config-vlan200)#vlan 300 Switch(config-vlan300)#private-vlan community</pre> <p>Note:This will remove all the access ports from vlan 300</p> <pre>Switch# show vlan private-vlan</pre> <table border="1"> <thead> <tr> <th>VLAN Name</th> <th>Type</th> <th>Asso VLAN Ports</th> </tr> </thead> <tbody> <tr> <td>100 VLAN0100</td> <td>Primary</td> <td></td> </tr> <tr> <td>200 VLAN0200</td> <td>Isolate</td> <td></td> </tr> <tr> <td>300 VLAN0300</td> <td>Community</td> <td></td> </tr> </tbody> </table> <pre>Switch#</pre>	VLAN Name	Type	Asso VLAN Ports	100 VLAN0100	Primary		200 VLAN0200	Isolate		300 VLAN0300	Community	
VLAN Name	Type	Asso VLAN Ports											
100 VLAN0100	Primary												
200 VLAN0200	Isolate												
300 VLAN0300	Community												

private-vlan association

Syntax	<pre>private-vlan association <secondary-vlan-list> no private-vlan association</pre>													
Parameter	<secondary-vlan-list>	<p>Sets Secondary VLAN list which is associated to Primary VLAN. There are two types of Secondary VLAN: Isolated VLAN and Community VLAN. Users can set multiple Secondary VLANs by ','.</p>												
Default	There is no Private VLAN association by default.													
Mode	VLAN Mode.													
Usage	<p>This command can only used for Private VLAN. The ports in Secondary VLANs which are associated to Primary VLAN can communicate to the ports in Primary VLAN. Before setting Private VLAN association, three types of Private VLANs should have no member ports; the Private VLAN with Private VLAN association can't be deleted. When users delete Private VLAN association, all the member ports in the Private VLANs whose association is deleted are removed from the Private VLANs.</p> <pre>show vlan private-vlan display setting</pre>													
Example	<p>Associate Isolated VLAN200 and Community VLAN300 to Primary VLAN100.</p> <pre>Switch#config Switch(config)# vlan 100 Switch(config-vlan100)#private-vlan association 200;300</pre> <p>Set vlan 100 associated vlan successfully</p> <pre>Switch(config-vlan100)#show vlan private-vlan</pre> <table border="1"> <thead> <tr> <th>VLAN Name</th> <th>Type</th> <th>Asso VLAN Ports</th> </tr> </thead> <tbody> <tr> <td>100 VLAN0100</td> <td>Primary</td> <td>200 300</td> </tr> <tr> <td>200 VLAN0200</td> <td>Isolate</td> <td>100</td> </tr> <tr> <td>300 VLAN0300</td> <td>Community</td> <td>100</td> </tr> </tbody> </table> <pre>Switch#</pre>		VLAN Name	Type	Asso VLAN Ports	100 VLAN0100	Primary	200 300	200 VLAN0200	Isolate	100	300 VLAN0300	Community	100
VLAN Name	Type	Asso VLAN Ports												
100 VLAN0100	Primary	200 300												
200 VLAN0200	Isolate	100												
300 VLAN0300	Community	100												

show dot1q-tunnel

Syntax	Show dot1q-tunnel
Parameter	none
Default	None.
Mode	Admin and Configuration Mode.
Usage	This command is used for displaying the information of the ports at dot1q-tunnel state.
Example	Display current dot1q-tunnel state. Switch#show dot1q-tunnel Interface Ethernet1/0/1: dot1q-tunnel is enable Switch#

show garp timer

Syntax	Show garp timer [join leave leaveall]	
Parameter	join	join timer
	leave	leave timer
	leaveall	leaveAll timer
Default	200 600 10000 milliseconds for join leave leaveAll timer respectively.	
Mode	Admin mode	
Usage	Show the corresponding value of the timer specified in the command.	
Example	Show the value of all garp timers currently. Switch# show garp timer GARP join timer value is : 200 (ms) GARP leave timer value is : 600 (ms) GARP leaveall timer value is : 10000 (ms) Switch#	

show gvrp fsm information

Syntax	show gvrp fsm information interface (ethernet port-channel IFNAME)	
Parameter	ethernet	physical port
	port-channel	aggregate port
	IFNAME	port name
Default	MT for registered machine and VO for request state machine.	
Mode	Admin mode	
Usage	Show the corresponding state of all registered machines and request state machines.	
Example	Show the state of all state machines. Switch# show gvrp fsm information interface ethernet 1/0/1 VA:Very anxious Active member, AA:Anxious Active member, QA:Quiet Active member VP:Very anxious Passive member, AP:Anxious Passive member, QP:Quiet Passive member VO:Very anxious Observer, AO:Anxious Observer, QO:Quiet Observer	

<p>LA:Leaving Active member, LO:leaving Observer IN:In, LV:Leaving, MT:Empty INR:In Registration fixed, LVR:Leaving Registration fixed, MTR:Empty Registration fixed INF:In, registration forbidden, LVF:Leaving, registration forbidden, MTF:Empty, registration forbidden Ethernet1/0/1 gvrp fsm information:</p> <pre> Index VLANID Applicant Registrar ----- ----- - 1 1 Qa MT Switch# </pre>
--

show gvrp leaveAll fsm information

Syntax	show gvrp leaveAll fsm information interface (ethernet port-channel IFNAME)	
Parameter	ethernet	physical port
	port-channel	aggregate port
	IFNAME	port name
Default	Passive	
Mode	Admin mode	
Usage	Check the state of leaveAll state machine	
Example	<p>Show the state of leaveAll state machine on port. Switch# show gvrp fsm information interface ethernet 1/0/1</p> <pre> Interface LeaveAll fsm ----- - Ethernet1/0/1 Passive Switch# </pre>	

show gvrp leavetimer running information

Syntax	show gvrp leavetimer running information [vlan <1-4094>]interface (ethernet port-channel IFNAME)	
Parameter	<1-4094>	Vlan tag
	ethernet	physical port
	port-channel	aggregate port
	IFNAME	port name
Default	leavetimer is disabled.	
Mode	Admin mode	
Usage	Show running state and expiration time of each leave timer.	
Example	<p>Show running state and expiration time of each leave timer on current port. Switch# show gvrp leavetimer running information interface ethernet 1/0/1</p> <pre> VLANID running state expired time ----- - Switch# </pre>	

show gvrp port-member

Syntax	show gvrp [active] port-member	
Parameter	active	port is in active state
Default	GVRP is disabled on port.	
Mode	Admin mode	
Usage	Show all ports (enable GVRP) saved in GVRP.	
Example	Show all ports with GVRP enabled. Switch#show gvrp port-member Ports which were enabled gvrp included: Ethernet1/0/1 Switch#	

show gvrp port registered vlan

Syntax	show gvrp port [dynamic static] registered vlan interface (Ethernet port-channel IFNAME)	
Parameter	dynamic	dynamic registration
	static	static registration
	Ethernet	physical port
	port-channel	aggregate port
	port IFNAME	port name
Default	No dynamic or static registration VLANs on port.	
Mode	Admin mode	
Usage	Show the corresponding VLANs of the registered machines by dynamic or static registration.	
Example	Show all dynamic or static registration VLANs on current port. Switch#show gvrp port registered vlan interface ethernet 1/0/1 Current port dynamic registered vlan included: Current port static registered vlan included: Switch#	

show gvrp timer running information

Syntax	show gvrp timer (join leaveall) running information interface (ethernet port-channel IFNAME)	
Parameter	join	join timer
	leaveall	leaveAll timer
	Ethernet	physical port
	port-channel	aggregate port

	port IFNAME	port name
Default	Join timer is disabled and leaveAll timer is enabled	
Mode	Admin mode	
Usage	Check running state of join leaveAll timer on port.	
Example	Show running state and expiration time of each timer. Switch#show gvrp timer join running information interface ethernet 1/0/1 Current port's jointimer running state is: UP Current port's jointimer expired time is: 0.2 s Switch#	

show gvrp vlan registerd port

Syntax	show gvrp vlan <1-4094> registerd port	
Parameter	<1-4094>	Vlan tag
Default	No ports with specified VLAN registered.	
Mode	admin mode	
Usage	none	
Example	Show all ports with current VLAN registered. Switch#show gvrp vlan 100 registerd port Ethernet1/0/3 (T) Ethernet1/0/4 (T) Ethernet1/0/5 (T) Ethernet1/0/6 (T) Ethernet1/0/7 (T) Ethernet1/0/8 (T) Ethernet1/0/9 (T) Ethernet1/0/10 (T) Switch#	

show vlan

Syntax	show vlan [brief summary] [id <vlan-id>] [name <vlan-name>] [internal usage [id <vlan-id> name <vlan-name>]]	
Parameter	brief	brief information;
	summary	VLAN statistics
	<vlan-id>	for VLAN ID of the VLAN to display status information, the valid range is 1 to 4094;
	<vlan-name>	is the VLAN name for the VLAN to display status information, valid length is 1 to 11 characters.
Default	none	
Mode	Admin Mode and Configuration Mode.	
Usage	If no <vlan-id> or <vlan-name> is specified, then information for all VLANs in the switch will be displayed.	
Example	Display the status for the current VLAN; display statistics for the current VLAN. Switch#show vlan VLAN Name Type Media Ports ----- 1 default Static ENET Ethernet1/0/2 Ethernet1/0/3	

	<pre> Ethernet1/0/4 Ethernet1/0/5 Ethernet1/0/6 Ethernet1/0/7 Ethernet1/0/8 Ethernet1/0/9 Ethernet1/0/10 Ethernet1/0/11 Ethernet1/0/12 Ethernet1/0/13 Ethernet1/0/14 Ethernet1/0/15 Ethernet1/0/16 Ethernet1/0/17 Ethernet1/0/18 Ethernet1/0/19 Ethernet1/0/20 Ethernet1/0/21 Ethernet1/0/22 Ethernet1/0/23 Ethernet1/0/24 Ethernet1/0/25 Ethernet1/0/26 Ethernet1/0/27 Ethernet1/0/28 Switch#show vlan summary The max. Vlan entries: 4094 Existing Vlan: Universal Vlan: 1 Private Vlan: 100 200 300 Total Existing Vlan:4 Switch# </pre>												
	<table border="1"> <thead> <tr> <th>displayed information</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>VLAN</td> <td>VLAN ID</td> </tr> <tr> <td>Name</td> <td>VLAN name</td> </tr> <tr> <td>Type</td> <td>VLAN type, statically configured or dynamically learned.</td> </tr> <tr> <td>Media</td> <td>VLAN interface type: Ethernet</td> </tr> <tr> <td>Ports</td> <td>Access port within a VLAN</td> </tr> </tbody> </table>	displayed information	Explanation	VLAN	VLAN ID	Name	VLAN name	Type	VLAN type, statically configured or dynamically learned.	Media	VLAN interface type: Ethernet	Ports	Access port within a VLAN
displayed information	Explanation												
VLAN	VLAN ID												
Name	VLAN name												
Type	VLAN type, statically configured or dynamically learned.												
Media	VLAN interface type: Ethernet												
Ports	Access port within a VLAN												

show vlan-translation

Syntax	show vlan-translation
Parameter	None
Default	none
Mode	Admin and Configuration Mode.
Usage	Display the information of all the ports at VLAN-translation state.
Example	<pre> Display current VLAN translation state information. Switch#show vlan-translation Interface Ethernet1/0/1: vlan-translation is enable, miss drop is not set </pre>

vlan-translation n-to-1

Syntax	vlan-translation n-to-1 <WORD> to <new-vlan-id> no vlan-translation n-to-1 <WORD>	
Parameter	<WORD>	original VLAN ID, its range from 1 to 4094, connect them with ‘;’ and ‘-’. If there are two VLANs with different range are translated into different VLAN ID in the same port, two VLAN ranges should not be superposed.
	<new-vlan-id>	translated VLAN ID,its range from 1 to 4094.
Default	Disable	
Mode	Port mode	
Usage	Multi-to-One VLAN translation is used to network edge to map multiple VLANs to one VLAN of backbone network. When data traffic returns from backbone network to network edge, it will restore VLAN of network edge to implement Multi-to-One VLAN translation and save VLAN resource of backbone network. Note: When using this function, the device must establish the original and the translated VLAN firstly, and enabling the downlink port of this function and the uplink port for connecting backbone network, which must be join in the original and the translated VLAN with tagged mode. This function should not be used with dot1q-tunnel and VLAN translation at the same time Note: Multi-to-One VLAN translation should be enabled after MAC learning. show vlan-translation n-to-1 display setting。	
Example	<p>On Ethernet 1/0/1, translate the data traffic from VLAN with the range between 1 to 5 into VLAN 100, and translate the data traffic (belongs to VLAN with the range between 1 to 5) out from VLAN100 into the corresponding VLAN ID, connect the uplink port of the backbone network as Ethernet 1/0/5.</p> <pre>Switch#config Switch(config)#vlan 1;5;100 Switch(config)#vlan 2-4 Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode trunk Set the port Ethernet1/0/1 mode Trunk successfully Switch(config-if-ethernet1/0/1)#vlan-translation n-to-1 1-5 to 100 Switch(config-if-ethernet1/0/1)#interface ethernet 1/0/5 Switch(config-if-ethernet1/0/5)#switchport mode trunk Set the port Ethernet1/0/5 mode Trunk successfully Switch#show vlan-translation n-to-1 Ethernet1/0/1: vlan-translation n-to-1 enable vlan-translation n-to-1 1-5 to 100</pre>	

show vlan-translation n-to-1

Syntax	show vlan-translation n-to-1 <interface-name>	
Parameter	<interface-name>	Specify the name of the port which will be shown. If there is no parameter, show all port configurations with this function.
Default	There is no Multi-to-One VLAN translation information.	

Mode	Admin mode.
Usage	If appointed vlan when show, it will display the n-to-1 translation of specified vlan, if not appointed vlan, it will display all n-to-1 information.
Example	Show all port configurations with Multi-to-One VLAN translation function. Switch#show vlan-translation n-to-1 Ethernet1/0/1: vlan-translation n-to-1 enable vlan-translation n-to-1 1-5 to 100

dynamic-vlan mac-vlan prefer

Syntax	dynamic-vlan mac-vlan prefer
Parameter	None
Default	MAC-based VLAN is preferred by default.
Mode	Global Mode.
Usage	Configure the preference of dynamic-vlan on switch. The default priority sequence is MAC-based VLAN.IP-subnet-based VLAN.Protocol-based VLAN, namely the preferred order when several dynamic VLAN is available. After the IP-subnet-based VLAN is set to be preferred and the user wish to restore to preferring the MAC-based VLAN, please use this command. show dynamic-vlan prefer display setting。
Example	Set the MAC-based VLAN preferred. Switch#config Switch(config)#dynamic-vlan mac-vlan prefer Switch#show dynamic-vlan prefer Mac Vlan/Voice Vlan IP Subnet Vlan Protocol Vlan

dynamic-vlan subnet-vlan prefer

Syntax	dynamic-vlan subnet-vlan prefer
Parameter	None
Default	MAC-based VLAN is preferred by default.
Mode	Global Mode.
Usage	Configure the preference of dynamic-vlan on switch. The default priority sequence is MAC-based VLAN. IP-subnet-based VLAN. Protocol-based VLAN, namely the preferred order when several dynamic VLAN is available. This command is used to set to preferring the IP-subnet-based VLAN. show dynamic-vlan prefer display setting。
Example	Set the IP-subnet-based VLAN preferred. Switch#config Switch(config)#dynamic-vlan subnet-vlan prefer Switch(config)#show dynamic-vlan prefer

	IP Subnet Vlan Mac Vlan/Voice Vlan Protocol Vlan
--	--

mac-vlan vlan

Syntax	mac-vlan vlan <vlan-id> no mac-vlan vlan <vlan-id>	
Parameter	<vlan-id>	<vlan-id> is the number of the specified VLAN.
Default	No MAC VLAN is configured by default.	
Mode	Global Mode.	
Usage	Set specified VLAN for MAC VLAN. show mac-vlan display setting.	
Example	Set VLAN100 to MAC VLAN. Switch#config Switch(config)#mac-vlan vlan 100 Switch#show vlan <pre> VLAN Name Type Media Ports ----- 1 default Static ENET Ethernet1/0/1 Ethernet1/0/3 Ethernet1/0/5 Ethernet1/0/7 Ethernet1/0/9 Ethernet1/0/11 Ethernet1/0/13 Ethernet1/0/15 Ethernet1/0/17 Ethernet1/0/19 Ethernet1/0/21 Ethernet1/0/23 Ethernet1/0/25 Ethernet1/0/27 100 VLAN0100 UserDynam ENET </pre>	

mac-vlan

Syntax	mac-vlan mac <mac-addrss> <mac-mask> vlan <vlan-id> priority <priority-id> no mac-vlan {mac <mac-addrss> <mac-mask> all}	
Parameter	<mac-addrss>/<mac-mask>	mac-address/mac-mask format:XX-XX-XX-XX-XX-XX
	<vlan-id>	vlan-id is the ID of the VLAN with a valid range of 1~4094
	<priority-id>	priority-id is the level of priority and is used in the VLAN tag with a valid range of 0~7

Default	No MAC address joins the VLAN by default.												
Mode	Global Mode												
Usage	With this command user can add specified MAC address to specified VLAN. If there is a non VLAN label data packet enters from the switch port from the specified MAC address, it will be assigned with specified VLAN ID so sent enter specified VLAN. Their belonging VLAN are the same no matter which port did they enter through. The command does not have any interfere on the VLAN label data packet. show mac-vlan display setting												
Example	Add network device of MAC address as 00-03-0f-11-22-33 to VLAN 100. Switch#config Switch(config)#mac-vlan vlan 100 Switch(config)#mac-vlan mac 00-03-0f-11-22-33 ff-ff-ff-ff-ff-ff vlan 100 priority 0 Switch#show mac-vlan <table border="1"> <thead> <tr> <th>Mac-Address</th> <th>Mac-Mask</th> <th>VLAN_ID</th> <th>Priority</th> </tr> </thead> <tbody> <tr> <td>-----</td> <td>-----</td> <td>-----</td> <td>-----</td> </tr> <tr> <td>00-03-0f-11-22-33</td> <td>ff-ff-ff-ff-ff-ff</td> <td>100</td> <td>0</td> </tr> </tbody> </table>	Mac-Address	Mac-Mask	VLAN_ID	Priority	-----	-----	-----	-----	00-03-0f-11-22-33	ff-ff-ff-ff-ff-ff	100	0
Mac-Address	Mac-Mask	VLAN_ID	Priority										
-----	-----	-----	-----										
00-03-0f-11-22-33	ff-ff-ff-ff-ff-ff	100	0										

protocol-vlan

Syntax	protocol-vlan mode (ethernetII snap) etype <etype-id> vlan <vlan-id> [priority <priority-id>] protocol-vlan mode llc dsap <dsap-id> ssap <ssap-id> vlan <vlan-id> no protocol-vlan (mode ((ethernetII snap) etype <etype-id>) all} no protocol-vlan mode llc dsap <dsap-id> ssap <ssap-id>							
Parameter	<etype-id>	etype-id is the type of the packet protocol, with a valid range of 1536~65535;						
	<vlan-id>	vlan-id is the ID of VLAN, the valid range is 1~4094。						
	<priority-id>	priority-id is the priority, the range is 0~7						
	<dsap-id>/<ssap-id>	dsap-id is Dsap ID, ssap-id is Ssap ID, the range is 0-255						
Default	No protocol joined the VLAN by default							
Mode	Global Mode							
Usage	The command adds specified protocol into specified VLAN. If there is any non VLAN label packet from specified protocol enters through the switch port, it will be assigned with specified VLAN ID and enter the specified VLAN. No matter which port the packets go through, their belonging VLAN is the same. The command will not interfere with VLAN labeled data packets. It is recommended to configure ARP protocol together with the IP protocol or else some application may be affected. show protocol -vlan display setting。							
Example	Assign the IP protocol data packet encapsulated by the EthernetII to VLAN200 Switch#config Switch(config)#protocol-vlan mode ethernetII etype 1536 vlan 200 Switch#show protocol-vlan <table border="1"> <thead> <tr> <th>Protocol_Type</th> <th>VLAN_ID</th> <th>Priority</th> </tr> </thead> <tbody> <tr> <td>-----</td> <td>-----</td> <td>-----</td> </tr> </tbody> </table>		Protocol_Type	VLAN_ID	Priority	-----	-----	-----
Protocol_Type	VLAN_ID	Priority						
-----	-----	-----						

	mode ethernetii etype 0x600	200	0
	mode ethernetii etype 0x60e	1	7
	mode snap etype 0x613	1	1
	mode llc dsap 0x1 ssap 0x1	1	0

show dynamic-vlan prefer

Syntax	show dynamic-vlan prefer
Parameter	None
Default	Mac Vlan/Voice Vlan
Mode	Admin Mode and Configuration Mode.
Usage	Display the dynamic VLAN preference.
Example	Display current dynamic VLAN preference. Switch#show dynamic-vlan prefer Mac Vlan/Voice Vlan IP Subnet Vlan Protocol Vlan

show mac-vlan interface

Syntax	show mac-vlan interface
Parameter	None
Default	None
Mode	Admin Mode and other configuration Mode.
Usage	Display the ports of enabling MAC-based VLAN, the character in the bracket indicate the ports mode, A means Access port, T means Trunk port, H means Hybrid port.
Example	Display the ports of enabling MAC-based VLAN currently. Switch#show mac-vlan Ports ----- Ethernet1/0/1(A) Ethernet1/0/2(A) Ethernet1/0/3(A) Ethernet1/0/4(A) Ethernet1/0/5(A) Ethernet1/0/6(A) Ethernet1/0/7(A) Ethernet1/0/8(A) Ethernet1/0/9(A) Ethernet1/0/10(A) Ethernet1/0/11(A) Ethernet1/0/12(A) Ethernet1/0/13(A) Ethernet1/0/14(A) Ethernet1/0/15(A) Ethernet1/0/16(A) Ethernet1/0/17(A) Ethernet1/0/18(A) Ethernet1/0/19(A) Ethernet1/0/20(A) Ethernet1/0/21(A) Ethernet1/0/22(A) Ethernet1/0/23(A) Ethernet1/0/24(A) Ethernet1/0/25(A) Ethernet1/0/26(A) Ethernet1/0/27(A) Ethernet1/0/28(A)

show protocol-vlan

Syntax	show protocol-vlan															
Parameter	None															
Default	None															
Mode	Admin Mode and Configuration Mode															
Usage	Display the configuration of Protocol-based VLAN on the switch.															
Example	Display the configuration of the current Protocol-based VLAN. Switch#show protocol-vlan <table><thead><tr><th>Protocol_Type</th><th>VLAN_ID</th><th>Priority</th></tr></thead><tbody><tr><td>mode ethernetii etype 0x600</td><td>200</td><td>0</td></tr><tr><td>mode ethernetii etype 0x60e</td><td>1</td><td>7</td></tr><tr><td>mode snap etype 0x613</td><td>1</td><td>1</td></tr><tr><td>mode llc dsap 0x1 ssap 0x1</td><td>1</td><td>0</td></tr></tbody></table>	Protocol_Type	VLAN_ID	Priority	mode ethernetii etype 0x600	200	0	mode ethernetii etype 0x60e	1	7	mode snap etype 0x613	1	1	mode llc dsap 0x1 ssap 0x1	1	0
Protocol_Type	VLAN_ID	Priority														
mode ethernetii etype 0x600	200	0														
mode ethernetii etype 0x60e	1	7														
mode snap etype 0x613	1	1														
mode llc dsap 0x1 ssap 0x1	1	0														

show subnet-vlan

Syntax	show subnet-vlan									
Parameter	None									
Default	None									
Mode	Admin Mode and other Configuration Mode.									
Usage	Display the configuration of the IP-subnet-based VLAN on the switch.									
Example	Display the configuration of the current IP-subnet-based VLAN. Switch#show subnet-vlan <table><thead><tr><th>IP-Address</th><th>Mask</th><th>VLAN_ID</th></tr></thead><tbody><tr><td>192.168.5.2</td><td>255.255.255.0</td><td>100</td></tr><tr><td>0</td><td></td><td></td></tr></tbody></table>	IP-Address	Mask	VLAN_ID	192.168.5.2	255.255.255.0	100	0		
IP-Address	Mask	VLAN_ID								
192.168.5.2	255.255.255.0	100								
0										

show subnet-vlan interface

Syntax	show subnet-vlan interface
Parameter	None
Default	None
Mode	Admin Mode and other Configuration Mode.
Usage	Display the port of enabling IP-subnet-based VLAN, the character in the bracket indicate the ports mode, A means Access port, T means Trunk port, H means Hybrid port.
Example	Display the port of enabling IP-subnet-based VLAN currently.

	<pre>Switch#show subnet-vlan interface Ports ----- Ethernet1/0/1(A) Ethernet1/0/2(A) Ethernet1/0/3(A) Ethernet1/0/4(A) Ethernet1/0/5(A) Ethernet1/0/6(A) Ethernet1/0/7(A) Ethernet1/0/8(A) Ethernet1/0/9(A) Ethernet1/0/10(A) Ethernet1/0/11(A) Ethernet1/0/12(A) Ethernet1/0/13(A) Ethernet1/0/14(A) Ethernet1/0/15(A) Ethernet1/0/16(A) Ethernet1/0/17(A) Ethernet1/0/18(A) Ethernet1/0/19(A) Ethernet1/0/20(A) Ethernet1/0/21(A) Ethernet1/0/22(A) Ethernet1/0/23(A) Ethernet1/0/24(A) Ethernet1/0/25(A) Ethernet1/0/26(A) Ethernet1/0/27(A) Ethernet1/0/28(A)</pre>
--	--

subnet-vlan

Syntax	<pre>subnet-vlan ip-address <ipv4-addrss> mask <subnet-mask> vlan <vlan-id> priority <priority-id> no subnet-vlan {ip-address <ipv4-addrss> mask <subnet-mask> all}</pre>	
Parameter	<ipv4-addrss>	ipv4-address is the IPv4 address shown in dotted decimal notation; the valid range of each section is 0~255;
	<subnet-mask>	subnet-mask is the subnet mask code shown in dotted decimal notation; the valid range of each section is 0~255;
	<vlan-id>	vlan-id is the VLAN ID with a valid range of 1~4094
	<priority-id>	priority-id is the priority applied in the VLAN tag with a valid range of 0~7;
Default	No IP subnet joined the VLAN by default.	
Mode	Global Mode.	
Usage	<p>This command is used for adding specified IP subnet to specified VLAN. When packet without VLAN label and from the specified IP subnet enters through the switch port, it will be matched with specified VLAN id and enters specified VLAN. These packets will always come to the same VLAN no matter through which port did they enter. This command will not interfere with VLAN labeled data packets.</p> <p>show subnet-vlan display setting.</p>	
Example	<pre>Add the network equipment with IP subnet of 192.168.1.1/24 to VLAN 300 Switch#config Switch(config)#vlan 300 Switch(config-vlan300)#exit Switch(config)#subnet-vlan ip-address 192.168.1.1 mask 255.255.255.0 vlan 300 priority 0</pre>	

switchport voice-vlan enable

Syntax	switchport voice-vlan enable no switchport voice-vlan enable
Parameter	none
Default	Voice VLAN is enabled by default.
Mode	Port Mode.
Usage	When voice equipment is added to the Voice VLAN, the Voice VLAN is enabled globally by default. This command disables Voice VLAN on specified port to meet specified application of the user. show voice-vlan display setting.
Example	<p>Disable the Voice VLAN function on port2.</p> <pre>Switch#config Switch(config)# interface ethernet 1/0/2 Switch(config-if-ethernet1/0/2)# no switchport voice-vlan enable Switch(config-if-ethernet1/0/2)# show voice-vlan Voice VLAN ID:100 Ports ----- Ethernet1/0/1(A) Ethernet1/0/3(A) Ethernet1/0/4(A) Ethernet1/0/5(A) Ethernet1/0/6(A) Ethernet1/0/7(A) Ethernet1/0/8(A) Ethernet1/0/9(A) Ethernet1/0/10(A) Ethernet1/0/11(A) Ethernet1/0/12(A) Ethernet1/0/13(A) Ethernet1/0/14(A) Ethernet1/0/15(A) Ethernet1/0/16(A) Ethernet1/0/17(A) Ethernet1/0/18(A) Ethernet1/0/19(A) Ethernet1/0/20(A) Ethernet1/0/21(A) Ethernet1/0/22(A) Ethernet1/0/23(A) Ethernet1/0/24(A) Ethernet1/0/25(A) Ethernet1/0/26(A) Ethernet1/0/27(A) Ethernet1/0/28(A)</pre> <p>Voice name Mac-Address Mask Priority</p>

voice-vlan

Syntax	voice-vlan mac <mac-address> mask <mac-mask> priority <priority-id> [name <voice-name>] no voice-vlan {mac <mac-address> mask <mac-mask> name <voice-name> all}	
Parameter	<mac-address>	Mac-address is the voice equipment MAC address, shown in "xx-xx-xx-xx-xx-xx" format;
	<mac-mask>	mac-mask is the last eight digit of the mask code of the MAC

		address, the valid values are: 0xff, 0xfe, 0xfc, 0xf8, 0xf0, 0xe0, 0xc0, 0x80, 0x0;
	<priority-id>	priority-id is the priority of the voice traffic, the valid range is 0–7;
	<voice-name>	the voice-name is the name of the voice equipment, which is to facilitate the equipment management;
Default	This command will add a specified voice equipment into the Voice VLAN, if a non VLAN labeled data packet from the specified voice equipment enters through the switch port, then no matter through which port the packet enters, it will belongs to Voice VLAN. The command will not interfere with the packets of VLAN labels.	
Mode	Global Mode.	
Usage	This command will add a specified voice equipment into the Voice VLAN, if a non VLAN labeled data packet from the specified voice equipment enters through the switch port, then no matter through which port the packet enters, it will belongs to Voice VLAN. The command will not interfere with the packets of VLAN labels. show voice-vlan display setting.	
Example	<p>Add the 256 sets of voice equipments of the R&D department with MAC address ranging from 00-03-0f-11-22-00 to 00-03-0f-11-22-ff to the Voice VLAN.</p> <pre> Switch#config Switch(config)#vlan 100 Switch(config-vlan100)#exit Switch(config)#voice-vlan vlan 100 Switch(config)#voice-vlan mac 00-03-0f-11-22-00 mask 0 priority 5 name R&D Switch(config)#show voice-vlan Voice VLAN ID:100 Ports Ethernet1/0/1(A) Ethernet1/0/2(A) Ethernet1/0/3(A) Ethernet1/0/4(A) Ethernet1/0/5(A) Ethernet1/0/6(A) Ethernet1/0/7(A) Ethernet1/0/8(A) Ethernet1/0/9(A) Ethernet1/0/10(A) Ethernet1/0/11(A) Ethernet1/0/12(A) Ethernet1/0/13(A) Ethernet1/0/14(A) Ethernet1/0/15(A) Ethernet1/0/16(A) Ethernet1/0/17(A) Ethernet1/0/18(A) Ethernet1/0/19(A) Ethernet1/0/20(A) Ethernet1/0/21(A) Ethernet1/0/22(A) Ethernet1/0/23(A) Ethernet1/0/24(A) Ethernet1/0/25(A) Ethernet1/0/26(A) Ethernet1/0/27(A) Ethernet1/0/28(A) Voice name Mac-Address Mask Priority R&D 00-03-0f-11-22-00 00-00-00-00-00-00 5 </pre>	

voice-vlan vlan

Syntax	voice-vlan vlan <vlan-id> no voice-vlan		
Parameter	<vlan-id>	Vlan id is the number of the specified VLAN.	
Default	No Voice VLAN is configured by default.		
Mode	Global Mode.		
Usage	Set specified VLAN for Voice VLAN, There can be only one Voice VLAN at the same time. The voice VLAN can not be applied concurrently with MAC-based VLAN. show voice-vlan display setting.		
Example	Set VLAN100 to Voice VLAN. Switch#config Switch(config)#vlan 100 Switch(config-vlan100)#exit Switch(config)#voice-vlan vlan 100 Switch(config)#show voice-vlan Voice VLAN ID:100 Ports ----- Ethernet1/0/1(A) Ethernet1/0/3(A) Ethernet1/0/4(A) Ethernet1/0/5(A) Ethernet1/0/6(A) Ethernet1/0/7(A) Ethernet1/0/8(A) Ethernet1/0/9(A) Ethernet1/0/10(A) Ethernet1/0/11(A) Ethernet1/0/12(A) Ethernet1/0/13(A) Ethernet1/0/14(A) Ethernet1/0/15(A) Ethernet1/0/16(A) Ethernet1/0/17(A) Ethernet1/0/18(A) Ethernet1/0/19(A) Ethernet1/0/20(A) Ethernet1/0/21(A) Ethernet1/0/22(A) Ethernet1/0/23(A) Ethernet1/0/24(A) Ethernet1/0/25(A) Ethernet1/0/26(A) Ethernet1/0/27(A) Ethernet1/0/28(A) Voice name Mac-Address Mask Priority ----- ----- ----- -----		

5.1.Commands for MSTP

Abort

Command	abort
parameter	-
default	-
Mode	MSTP Region Mode

Usage Guide	This command is to quit MSTP region mode without saving the current configuration. The previous MSTP region configuration is valid.
Example	Quit MSTP region mode without saving the current configuration. Switch(Config-Mstp-Region)#abort Switch(config)#

Exit

Command	exit
parameter	-
default	-
Mode	MSTP Region Mode
Usage Guide	This command is to quit MSTP region mode with saving the current configuration.
Example	Quit MSTP region mode with saving the current configuration. Switch(Config-Mstp-Region)#exit Switch(config)#

instance vlan

Command	instance <instance-id> vlan <vlan-list> no instance <instance-id> [vlan <vlan-list>]	
parameter	instance-id	sets the instance number. The valid range is from 0 to 64
	vlan-list	sets consecutive or non-consecutive VLAN numbers. "-" refers to consecutive numbers, and ";" refers to non-consecutive numbers
default	Before creating any Instances, there is only the instance 0, and VLAN 1~4094 all belong to the instance 0.	
Mode	MSTP Region Mode	
Usage Guide	This command sets the mappings between VLANs and instances. Only if all the mapping relationships and other attributes are same, the switches are considered in the same MSTP region. Before setting any instances, all the VLANs belong to the instance 0. MSTP can support maximum 64 MSTIs (except for CISTs). CIST can be treated as MSTI 0. All the other instances are considered as instance 1 to 64.	
Example	Map VLAN1-10 and VLAN 100-110 to Instance 1. Switch(config)#spanning-tree mst configuration Switch(Config-Mstp-Region)#instance 1 vlan 1-10;100-110	

Name

Command	name <name> no name	
parameter	name	is the MSTP region name. The length of the name should be less than 32 characters
default	Default MSTP region name is the MAC address of this bridge.	

Mode	MSTP Region Mode
Usage Guide	This command is to set MSTP region name. The bridges with same MSTP region name and same other attributes are considered in the same MSTP region.
Example	Set MSTP region name to mstp-test. Switch(config)#spanning-tree mst configuration Switch(Config-Mstp-Region)#name mstp-test

revision-level

Command	revision-level <level> no revision-level
parameter	level is revision level. The valid range is from 0 to 65535
default	The default revision level is 0.
Mode	MSTP Region Mode
Usage Guide	This command is to set revision level for MSTP configuration. The bridges with same MSTP revision level and same other attributes are considered in the same MSTP region.
Example	Set revision level to 2000. Switch(config)#spanning-tree mst configuration Switch(Config-Mstp-Region)# revision-level 2000

spanning-tree

Command	spanning-tree no spanning-tree
parameter	-
default	MSTP is not enabled by default.
Mode	Global Mode and Port Mode
Usage Guide	If the MSTP is enabled in global mode, the MSTP is enabled in all the ports except for the ports which are set to disable the MSTP explicitly
Example	Enable the MSTP in global mode, and disable the MSTP in the interface1/0/2. Switch(config)#spanning-tree Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#no spanning-tree

spanning-tree cost

Command	spanning-tree cost <cost> no spanning-tree cost
parameter	cost sets path cost. The valid range is from 1 to 200,000,000.

default	<p>By default, the port cost is relevant to the port bandwidth.</p> <table border="1"> <tr> <td>For the aggregation ports, the default costs are as below:</td> <td>Default Path Cost</td> <td>Suggested Range</td> </tr> <tr> <td>10Mbps</td> <td>2000000</td> <td>2000000-20000000</td> </tr> <tr> <td>100Mbps</td> <td>200000</td> <td>200000-2000000</td> </tr> <tr> <td>1GMbps</td> <td>20000</td> <td>20000-200000</td> </tr> </table> <p>For the aggregation ports, the default costs are as below:</p> <table border="1"> <tr> <td>Port Type</td> <td>Allowed Number Of Aggregation Ports</td> <td>Default Port Cost</td> </tr> <tr> <td>10Mbps</td> <td>N</td> <td>2000000/N</td> </tr> <tr> <td>100Mbps</td> <td>N</td> <td>200000/N</td> </tr> <tr> <td>1GMbps</td> <td>N</td> <td>20000/N</td> </tr> </table>	For the aggregation ports, the default costs are as below:	Default Path Cost	Suggested Range	10Mbps	2000000	2000000-20000000	100Mbps	200000	200000-2000000	1GMbps	20000	20000-200000	Port Type	Allowed Number Of Aggregation Ports	Default Port Cost	10Mbps	N	2000000/N	100Mbps	N	200000/N	1GMbps	N	20000/N
For the aggregation ports, the default costs are as below:	Default Path Cost	Suggested Range																							
10Mbps	2000000	2000000-20000000																							
100Mbps	200000	200000-2000000																							
1GMbps	20000	20000-200000																							
Port Type	Allowed Number Of Aggregation Ports	Default Port Cost																							
10Mbps	N	2000000/N																							
100Mbps	N	200000/N																							
1GMbps	N	20000/N																							
Mode	Port Mode																								
Usage Guide	By setting the port cost, users can control the cost from the current port to the root bridge in order to control the elections of port and the designated port of the instance.																								
Example	On the port1/0/2, set the port cost is 3000000. Switch(Config-If-Ethernet1/0/2)#spanning-tree cost 3000000																								

spanning-tree digest-snooping

Command	spanning-tree digest-snooping no spanning-tree digest-snooping
parameter	-
default	Don't use the authentication string of partner port.
Mode	Port Mode
Usage Guide	<p>According to MSTP protocol, the region authentication string is generated by MD5 algorithm with public authentication key, instance ID, VLAN ID. Some manufactory don't use the public authentication key, this causes the incompatibility. After the command is executed the port can use the authentication string of partner port, realize compatibility with these manufactories equipment.</p> <p>Because the authentication string is related to instance ID and VLAN ID, the command may cause recognizing the equipment that with different instance and VLAN relation as in the same region. Before the command is executed, make sure that instance and VLAN relation is accord for all the equipment. If there are more than one equipment connected, all the connected ports should execute this command.</p>
Example	Configure the authentication string of partner port.

	Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#spanning-tree digest-snooping Switch(Config-If-Ethernet1/0/2)#
--	--

spanning-tree format

Command	spanning-tree format {standard privacy auto} no spanning-tree format	
parameter	standard	The packet format provided by IEEE
	privacy	Privacy packet format, which is compatible with CISCO equipments.
	auto	Auto identified packet format, which is determined by checking the format of the received packets.
default	Auto Packet Format.	
Mode	Port Mode	
Usage Guide	<p>As the CISCO has adopted the packet format different with the one provided by IEEE, while many companies also adopted the CISCO format to be CISCO compatible, we have to provide support to both formats. The standard format is originally the one provided by IEEE, and the privacy packet format is CISCO compatible. In case we are not sure about which the packet format is on partner, the AUTO configuration will be preferred so to identify the format by the packets they sent. The AUTO packet format is set by default in the concern of better compatibility with previous products and the leading companies. The packet format will be privacy format before receiving the partner packet when configured to AUTO.</p> <p>When the format is not AUTO and the received packet format from the partner does not match the configured format, we set the state of the port which receives the unmatched packet to DISCARDING to prevent both sides consider themselves the root which leads to circuits.</p> <p>When the AUTO format is set, and over one equipment which is not compatible with each other are connected on the port (e.g. a equipment running through a HUB or Transparent Transmission BPDU is connected with several equipments running MSTP), the format alter counts will be recorded and the port will be disabled at certain count threshold. The port can only be re-enabled by the administrator.</p>	
Example	<p>Configure port message format as the message format of IEEE.</p> <pre>Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#spanning-tree format standard Switch(Config-If-Ethernet1/0/2)#</pre>	

spanning-tree forward-time

Command	spanning-tree forward-time <time> no spanning-tree forward-time	
parameter	time	is forward delay time in seconds. The valid range is from 4 to 30

default	The forward delay time is 15 seconds by default
Mode	Global Mode
Usage Guide	When the network topology changes, the status of the port is changed from blocking to forwarding. This delay is called the forward delay. The forward delay is co working with hello time and max age. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly. $2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$ $\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$
Example	In global mode, set MSTP forward delay time to 20 seconds. Switch(config)#spanning-tree forward-time 20

spanning-tree hello-time

Command	spanning-tree hello-time <time> no spanning-tree hello-time	
parameter	time	is Hello time in seconds. The valid range is from 1 to 10
default	Hello Time is 2 seconds by default	
Mode	Global Mode	
Usage Guide	This command is used to set the interval bpdus switch sending, command "no spanning-tree hello-time" restore default configuration. Hello time is the interval that the switch sends BPDUs. Hello time is co working with forward delay and max age. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly. $2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$ $\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$	
Example	Set MSTP hello time to 5 seconds in global mode. Switch(config)#spanning-tree hello-time 5	

spanning-tree link-type p2p

Command	spanning-tree link-type p2p {auto force-true force-false} no spanning-tree link-type	
parameter	auto	sets auto-negotiation
	force-true	forces the link as point-to-point type
	force-false	forces the link as non point-to-point type.
default	The link type is auto by default; The MSTP detects the link type automatically.	
Mode	Port Mode	
Usage Guide	For configuring port link types, command "no spanning-tree link-type" restore default configuration. When the port is full-duplex, MSTP sets the port link type as point-to-point; When the port is half-duplex, MSTP sets the port link type as shared.	
Example	Force the port 1/0/7-8 as point-to-point type. Switch(config)#interface ethernet 1/0/7-8 Switch(Config-Port-Range)#spanning-tree link-type p2p force-true	

spanning-tree maxage

Command	spanning-tree maxage <time> no spanning-tree maxage	
parameter	time	is max aging time in seconds. The valid range is from 6 to 40.
default	The max age is 20 seconds by default.	
Mode	Global Mode	
Usage Guide	<p>this command is used to configure bpdu maximum aging time, command "no spanning-tree maxage" restore default configuration. The lifetime of BPDU is called max age time. The max age is co working with hello time and forward delay. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly.</p> <p>$2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$ $\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$</p>	
Example	<p>In global mode, set max age time to 25 seconds.</p> <pre>Switch(config)#spanning-tree maxage 25</pre>	

spanning-tree max-hop

Command	spanning-tree max-hop <hop-count> no spanning-tree max-hop	
parameter	hop-count	sets maximum hops. The valid range is from 1 to 40
default	The max hop is 20 by default.	
Mode	Global Mode	
Usage Guide	<p>This command is used to set BPDU maximum number of hops, and the command "no spanning-tree max-hop" is used to restore the default configuration. The MSTP uses max-age to count BPDU lifetime. In addition, MSTP also uses max-hop to count BPDU lifetime. The max-hop is degressive in the network. The BPDU has the max value when it initiates from MSTI root bridge. Once the BPDU is received, the value of the max-hop is reduced by 1. When a port receives the BPDU with max-hop as 0, it drops this BPDU and sets itself as designated port to send the BPDU.</p>	
Example	<p>Set max hop to 32.</p> <pre>Switch(config)#spanning-tree max-hop 32</pre>	

spanning-tree mcheck

Command	spanning-tree mcheck	
parameter	-	
default	The port is in the MSTP mode by default	
Mode	Port Mode	

Usage Guide	<p>If a network which is attached to the current port is running IEEE 802.1D STP, the port converts itself to run in STP mode. The command is used to force the port to run in the MSTP mode. But once the port receives STP messages, it changes to work in the STP mode again.</p> <p>This command can only be used when the switch is running in IEEE802.1s MSTP mode. If the switch is running in IEEE802.1D STP mode, this command is invalid.</p>
Example	<p>Force the port 1/0/2 to run in the MSTP mode.</p> <pre>Switch(Config-If-Ethernet1/0/2)#spanning-tree mcheck</pre>

spanning-tree mode

Command	spanning-tree mode {mstp stp rstp} no spanning-tree mode	
parameter	mstp	sets the switch in IEEE802.1s MSTP mode
	stp	sets the switch in IEEE802.1D STP mode
	rstp	sets the switch in IEEE802.1D RSTP mode
default	The switch is in the MSTP mode by default	
Mode	Global Mode	
Usage Guide	<p>This command is used to configure the spanning tree mode and the command "no spanning-tree mode" is used to restore the default mode. When the switch is in IEEE802.1D STP mode, it only sends standard IEEE802.1D BPDU and TCN BPDU. It drops any MSTP BPDUs.</p>	
Example	<p>Set the switch in the STP mode.</p> <pre>Switch(config)#spanning-tree mode stp</pre>	

spanning-tree mst configuration

Command	spanning-tree mst configuration no spanning-tree mst configuration	
parameter	-	
default	-	
Mode	Global Mode	
Usage Guide	<p>Whether the switch is in the MSTP region mode or not, users can enter the MSTP mode, configure the attributes, and save the configuration. When the switch is running in the MSTP mode, the system will generate the MST configuration identifier according to the MSTP configuration. Only if the switches with the same MST configuration identifier are considered as in the same MSTP region.</p>	
Example	<p>Enter MSTP region mode.</p> <pre>Switch(config)#spanning-tree mst configuration Switch(Config-Mstp-Region)#</pre>	

spanning-tree mst cost

Command	spanning-tree mst <instance-id> cost <cost> no spanning-tree mst <instance-id> cost		
parameter	instance-id	sets the instance ID. The valid range is 0-64	
	cost	sets path cost, different cost formats have different ranges. For the default dot1t mode the valid range is 1-200,000,000, and for dot1d is 1-65535.	
default	By default, the port cost is relevant to the port bandwidth.		
	Port Type	Default Path Cost	Suggested Range
	10Mbps	2000000	2000000-20000000
	100Mbps	200000	200000-2000000
	1GMbps	20000	20000-200000
	For the aggregation ports, the default costs are as below:		
	Port Type	Allowed Number Of Aggregation Ports	Default Port Cost
	10Mbps	N	2000000/N
	100Mbps	N	200000/N
	1GMbps	N	20000/N
Port Speed	Port Type	Port Cost	
		802.1D-2008	802.1T
0		65535	200000000
10Mbps	Half- duplex	100	2,000,000
	Full- duplex	99	1,999,999
	aggregation link with 2 ports	95	1,000,000
	aggregation link with 3 ports	95	666,666
	aggregation link with 4 ports	95	500,000
100Mbps	Half- duplex	19	200,000
	Full- duplex	18	199,999
	aggregation link with 2 ports	15	100,000
	aggregation link with 3 ports	15	66,666
	aggregation link with 4 ports	15	50,000

	1000Mbps	Full- duplex aggregation link with 2 ports	4 3 3	20,000 10,000 6,666
		aggregation link with 3 ports	3	5,000
		aggregation link with 4 ports		
Mode	Port Mode			
Usage Guide	By setting the port cost, users can control the cost from the current port to the root bridge in order to control the elections of root port and the designated port of the instance.			
Example	On the port1/0/2, set the MSTP port cost in the instance 2 to 3000000. Switch(Config-If-Ethernet1/0/2)#spanning-tree mst 2 cost 3000000			

spanning-tree cost-format

Command	spanning-tree cost-format {dot1d dot1t}	
	-	
default	count path-cost with dot1t format.	
Mode	Global mode.	
Usage Guide	There are two formats about cost value: they are dot1d marked on IEEE802.1d-2008 and dot1t marked on IEEE802.1t, but path-cost ranges of them are different, dot1d range from 1 to 65535, and dot1t range from 1 to 200,000,000.	
Example	Set the cost format in global mode. Switch(config)#spanning-tree cost-format dot1d	

spanning-tree mst loopguard

Command	spanning-tree [mst <instance-id>] loopguard no spanning-tree [mst <instance-id>] loopguard	
parameter	instance-id	MSTP instance ID.
default	Disable loopguard function	
Mode	Port Mode	
Usage Guide	The command can avoid root port or alternate port to be changed as designated port due to invalid unilateralism link. When the receiving timer is time, the configured port with loopguard is set as block state.	
Example	Configure port 1/0/2 as loopguard mode for instance 0. Switch(Config)#interface ethernet 1/0/2 Switch(Config-Ethernet-1/0/2)#spanning-tree mst 0 loopguard Switch(Config-Ethernet-1/0/2)#	

spanning-tree mst port-priority

Command	spanning-tree mst <instance-id> port-priority <port-priority> no spanning-tree mst <instance-id> port-priority	
parameter	instance-id	sets the instance ID. The valid range is from 0 to 64
	port-priority	sets port priority. The valid range is from 0 to 240. The value should be the multiples of 16, such as 0, 16, 32...240.
default	The default port priority is 128	
Mode	Port Mode	
Usage Guide	By setting the port priority, users can control the port ID of the instance in order to control the root port and designated port of the instance. The lower the value of the port priority is, the higher the priority is.	
Example	Set the port priority as 32 on the port 1/0/2 for the instance 1. Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#spanning-tree mst 1 port-priority 32	

spanning-tree mst priority

Command	spanning-tree mst <instance-id> priority <bridge-priority> no spanning-tree mst <instance-id> priority	
parameter	instance-id	sets instance ID. The valid range is from 0 to 64;
	port-priority	sets the switch priority. The valid range is from 0 to 61440. The value should be the multiples of 4096, such as 0, 4096, 8192...61440
default	The default bridge priority is 32768	
Mode	Global Mode	
Usage Guide	By setting the bridge priority, users can change the bridge ID for the specified instance. And the bridge ID can influence the elections of root bridge and designated port for the specified instance.	
Example	Set the priority for Instance 2 to 4096. Switch(config)#spanning-tree mst 2 priority 4096	

spanning-tree mst rootguard

Command	spanning-tree [mst <instance-id>] rootguard no spanning-tree [mst <instance-id>] rootguard	
parameter	instance-id	MSTP instance ID
default	Disable rootguard function	
Mode	Port Mode	
Usage Guide	The command is used in Port Mode, if the port is configured to be a rootguard port, it is forbidden to be a MSTP root port. If superior BPDU packet is received from a rootguard port, MSTP did not recalculate spanning-tree, and just set the status of the port to be root_inconsistent (blocked).If no superior BPDU packet is received from a blocked rootguard port, the port status will restore to be forwarding. The rootguard function can maintain a relative stable spanning-tree topology when a new switch is added to the network.	

Example	<p>Enable rootguard function for port 1/0/2 in instance 0.</p> <pre>Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#spanning-tree mst 0 rootguard Switch(Config-If-Ethernet1/0/2)#</pre>
---------	--

spanning-tree portfast

Command	spanning-tree portfast [bpdufilter bpduguard] [recovery <30-3600>] no spanning-tree portfast	
parameter	bpdufilter	configure the border port mode as BPDU filter
	bpduguard	configure the border port mode as BPDU guard
	recovery	configure the border port can be recovered automatically after implement bpduguard violation operation
	<30-3600>	the recovery time, do not recover it by default
default	All the ports are non-boundary ports by default when enabling MSTP	
Mode	Port Mode	
Usage Guide	Set the current port as boundary port, and BPDU filter. BPDU guard as specified mode or default mode; the command “no spanning-tree portfast” sets the current port as non-boundary port. When a port is set to be a boundary port, the port converts its status from discarding to forwarding without bearing forward delay. Once the boundary port receives the BPDU, the port becomes a non-boundary port.	
Example	Configure the border port mode as BPDU guard, the recovery time as 60s. <pre>Switch(config)#interface ethernet 1/0/2 Switch(Config-If-Ethernet1/0/2)#spanning-tree portfast bpduguard recovery 60 Switch(Config-If-Ethernet1/0/2)#</pre>	

spanning-tree port-priority

Command	spanning-tree port-priority <port-priority> no spanning-tree port-priority	
parameter	port-priority	sets port priority. The valid range is from 0 to 240. The value should be the multiples of 16, such as 0, 16, 32, 48...240
default	The default port priority is 32768	
Mode	Port Mode	
Usage Guide	By setting the port priority to designated port. The lower the value of the port priority is, the higher the priority is.	
Example	Set the port priority as 4096 on the port 1. <pre>Switch(Config-If-Ethernet1/0/1)#spanning-tree port-priority 4096</pre>	

spanning-tree priority

Command	spanning-tree priority <bridge-priority> no spanning-tree priority	
parameter	bridge-priority	is the priority of the bridging switch. Its value should be round times of 4096 between 0 and 61440, such as 0, 4096, 8192...

	61440.
default	Default priority is 32768
Mode	Global Mode
Usage Guide	The bridge ID can be altered by changing the priority of the switch. Further, the priority information can also be used for voting of the root bridge and the specified ports. The bridge priority value of the switch is smaller, however the priority is higher.
Example	Configure the priority is 4096. Switch(config)#spanning-tree priority 4096

spanning-tree rootguard

Command	spanning-tree rootguard no spanning-tree rootguard	
parameter	/	
default	Port is non-root port	
Mode	Port Mode	
Usage Guide	The command is used in Port Mode, if the port is configured to be a rootguard port, it is forbidden to be a MSTP root port. If superior BPDU packet is received from a rootguard port, MSTP did not recalculate spanning-tree, and just set the status of the port to be root_inconsistent (blocked). If no superior BPDU packet is received from a blocked rootguard port, the port status will restore to be forwarding. The rootguard function can maintain a relative stable spanning-tree topology when a new switch is added to the network.	
Example	Set the port 1 is root port. Switch(Config-If-Ethernet1/0/1)#spanning-tree rootguard	

spanning-tree tcflush (Global mode)

Command	spanning-tree tcflush {enable disable protect} no spanning-tree tcflush	
parameter	enable	The spanning-tree flush once the topology changes.
	disable	The spanning tree don't flush when the topology changes.
	protect	the spanning-tree flush not more than one time every ten seconds.
default	Enable	
Mode	Global mode	
Usage Guide	Configure the spanning-tree flush mode once the topology changes. "no spanning-tree tcflush" restores to default setting. According to MSTP, when topology changes, the port that send change message clears MAC/ARP table (FLUSH). In fact it is not needed for some network environment to do FLUSH with every topology change. At the same time, as a method to avoid network assault, we allow the network administrator to configure FLUSH mode by the command.	
Example	Configure the spanning-tree flush mode once the topology changes is not flush to TC. Switch(config)#spanning-tree tcflush disable Switch(config)#	

spanning-tree tflush (Port mode)

Command	spanning-tree tflush {enable disable protect} no spanning-tree tflush	
parameter	enable	The spanning-tree flush once the topology changes
	disable	The spanning tree don't flush when the topology changes
	protect	the spanning-tree flush not more than one time every ten seconds
default	Default enable mode	
Mode	Port Mode	
Usage Guide	Configure the spanning-tree flush mode for port once the topology changes. "no spanning-tree tflush" restores to default setting. According to MSTP, when topology changes, the port that send change message clears MAC/ARP table (FLUSH). In fact it is not needed for some network environment to do FLUSH with every topology change. At the same time, as a method to avoid network assault, we allow the network administrator to configure FLUSH mode by the command.	
Example	Configure the spanning-tree flush mode once the topology change is not flush to TC. Switch(config)#spanning-tree tflush disable	

spanning-tree transmit-hold-count

Command	spanning-tree transmit-hold-count <tx-hold-count-value> no spanning-tree transmit-hold-count	
parameter	tx-hold-count-value	ranging from 1 to 20, the default value is 10
default	10	
Mode	Global Mode	
Usage Guide	Set the max number for sending BPDU within the Hello Time interval to control BPDU flow. The variable is used to whole MST bridge.	
Example	Set the max transmit-hold-count as 20. Switch(config)#spanning-tree transmit-hold-count 20	

show mst-pending

Command	show mst-pending
parameter	-
default	-
Mode	Admin Mode
Usage Guide	In the MSTP region mode, display the configuration of the current MSTP region such as

	MSTP name, revision, VLAN and instance mapping.
Example	<pre> Display the configuration of the current MSTP region. Switch(config)#spanning-tree mst configuration Switch(Config-Mstp-Region)#show mst-pending Name switch Revision 0 Instance Vlans Mapped ----- 00 1-29, 31-39, 41-4093 03 30 04 40 05 4094 ----- Switch(Config-Mstp-Region)# </pre>

show spanning-tree

Command	show spanning-tree [mst [<instance-id>]] [interface <interface-list>] [detail]	
parameter	instance-id	sets interface list
	interface-list	sets the instance ID. The valid range is from 0 to 64
	detail	sets the detailed spanning-tree information
default	-	
Mode	Admin and Configuration Mode	
Usage Guide	This command can display the MSTP information of the instances in the current bridge.	
Example	<pre> Display the bridge MSTP. Switch#sh spanning-tree ***** Process 0 ***** -- MSTP Bridge Config Info -- Standard : IEEE 802.1s Bridge MAC : 00:1f:ce:10:b0:1b Bridge Times : Max Age 20, Hello Time 2, Forward Delay 15 Force Version: 3 ##### Instance 0 ##### Self Bridge Id : 32768.00:1f:ce:10:b0:1b Root Id : this switch Ext.RootPathCost : 0 Region Root Id : this switch Int.RootPathCost : 0 Root Port ID : 0 </pre>	

Current port list in Instance 0:	
Ethernet1/0/12 Ethernet1/0/20 (Total 2)	
PortName	ID ExtRPC IntrRPC State Role DsgBridge
DsgPort	

Ethernet1/0/12	128.012 0 0 FWD DSGN 32768.001fce10b01b
128.012	
Ethernet1/0/20	128.020 0 0 FWD DSGN 32768.001fce10b01b
128.020	
Display information	describe
MSTP Bridge Config Info	/
Standard	STP version
Bridge MAC	Bridge MAC address
Bridge Times	Max Age, Hello Time and Forward Delay of the bridge
Force Version	Version of STP
Instance 0	/
Self Bridge Id	The priority and the MAC address of the current bridge for the current instance
Root Id	The priority and the MAC address of the root bridge for the current instance
Ext.RootPathCost	Total cost from the current bridge to the root of the entire network
Int.RootPathCost	Cost from the current bridge to the region root of the current instance
Root Port ID	Root port of the current instance on the current bridge
Current port list in Instance 0	
PortName	Port name
ID	Port priority and port index
ExtRPC	Port cost to the root of the entire network
IntrRPC	Cost from the current port to the region root of the current instance
State Role	Port status of current instance
DsgBridge	Upward designated bridge of the current port in the current instance
DsgPort	Upward designated port of the current port in the current instance

show spanning-tree mst config

Command	show spanning-tree mst config
parameter	-
default	-

Mode	Admin Mode
Usage Guide	In the Admin mode, this command can show the parameters of the MSTP configuration such as MSTP name, revision, VLAN and instance mapping.
Example	<p>Display the configuration of the MSTP on the switch.</p> <pre>Switch#show spanning-tree mst config Name Revision 0 Instance Vlans Mapped ----- 00 1-4094 -----</pre>

spanning-tree process

Command	spanning-tree process <process-id> no spanning-tree process <process-id>	
parameter	process-id	the range is 1-31
default	-	
Mode	Global Mode	
Usage Guide	Create the new mstp process. Multiple mstp processes can be configured on one device and each process is standalone. The process 0 exists only as default.	
Example	<p>Create the new mstp process 1.</p> <pre>Switch(config)#spanning-tree process 1</pre>	

spanning-tree tc-notify process0

Command	spanning-tree tc-notify process0 no spanning-tree tc-notify process0	
parameter	-	
default	-	
Mode	mstp process mode	
Usage Guide	When there is a change in mstp process N, the device will receive the tc packet, at the same time, the process N will notify tc to the instance in mstp process 0 on the shared link. It makes the process 0 refresh the table entry for ensuring the traffic not to break off.	
Example	<p>Configure to notify TC of process 1 to process 0.</p> <pre>Switch(Config-Mstp-Process-1)#spanning-tree tc-notify process0</pre>	

spanning-tree binding-process

Command	spanning-tree binding-process <process-id> no spanning-tree binding-process <process-id>	
parameter	process-id	the range is 1-31.

default	All the ports belong to process 0
Mode	Port Mode
Usage Guide	Configure the port to join the appointed mstp process N. The port will enter into process N from the process 0. This command is mutually exclusive to the shared port configuration command (link-share).
Example	Add the Ethernet1/0/2 into process 1. Switch(Config-If-Ethernet1/0/2)#spanning-tree binding-process 1

spanning-tree binding-process link-share

Command	spanning-tree binding-process < process-id > link-share no spanning-tree binding-process < process-id > link-share	
parameter	process-id	the range is 1-31
default	The port is only in the mstp calculating of process 0	
Mode	Port Mode	
Usage Guide	Configure the port belong to the shared port of process N. Except for process 0, the configured port can be in the mstp calculating of multiple processes, but the port status can be only configured by process 0. This command can be configured for more than once.	
Example	Configure the Ethernet1/0/2 as the shared port of process 1 and 0. Switch(Config-If-Ethernet1/0/2)#spanning-tree binding-process 1 link-share	

5.2.ERPS Configuration

ethernet tcn-propagation erps to {erps | stp}

Command	ethernet tcn-propagation erps to {erps stp} no ethernet tcn-propagation erps to	
parameter	erps	topology changing sends the R-APS event packets to notify the connection ring of this device
	stp	topology changing sends the stp packets to notify the stp topology connected to this device
default	ERPS ring topology changing only takes effect in this ring but does not send the notification packets	
Mode	Global Mode	
Usage Guide	Configure the topology changing transmission notification method supported by this device as the appointed method. The ERPS ring instance detects the changing, it will send the notification packets. If configured erps method, it will send the R-APS event packets to other ERPS rings; if configured stp method, it will send the stp packets outward.	
Example	Configure to send R-APS event notification to the interconnection ring after the topology changing. Switch(config)#ethernet tcn-propagation erps to erps	

	<p>Configure to send STP notification to the interconnection ring after the topology changing.</p> <pre>Switch(config)#ethernet tcn-propagation erps to stp</pre> <p>Delete the topology changing transmission notification method.</p> <pre>Switch(config)#no ethernet tcn-propagation erps to</pre>
--	---

erps-ring <ring-name>

Command	<pre>erps-ring < ring-name ></pre> <pre>no erps-ring < ring-name ></pre>	
parameter	ring-name	the ERPS ring name created. The maximum character number is 64 and it is made up with letters, numbers and the underlines. The first and last character cannot be the underline
default	Do not configure any ERPS ring.	
Mode	Global Mode	
Usage Guide	Create a ERPS ring and enter ERPS ring configuration mode. enter ERPS ring configuration mode if the ERPS ring already exists. no command delete ERPS ring.	
Example	<pre>Create the ERPS ring of ring1</pre> <pre>Switch(config)#erps-ring 1</pre> <pre>Switch(config-erps-ring)#</pre> <pre>Delete the EPRS ring of ring1</pre> <pre>Switch(config)#no erps-ring 1</pre>	

version {v1 | v2}

Command	<pre>version {v1 v2}</pre> <pre>no version</pre>	
parameter	v1	means to support v1 which is released in 2008-06 and the amendment (2009-04)
	v2	means to support v2 which is released in 2010-03 and the amendment (2010-06)
default	V2	
Mode	ERPS Ring Configuration Mode	
Usage Guide	<p>This command is used to configure the supporting version of the ERPS loop, no the command is restored to the default state of the v2.</p> <p>If configured ERPS ring to support v1, this ring will not support multi-instance. ERPS ring instance does not support the management commands of MS, FS, etc. and the non-revertive switch is not effective. It only support revertive switch.</p> <p>If configured ERPS ring to support v1, the instance of this ring will deal with the ERPS packets according to the v1 format. Package the R-APS packets and resolve the fields according to v1 format. The fields defined by v2 will not be dealt.</p>	
Example	<pre>Configure the ERPS ring of ring1 to support v1</pre> <pre>Switch(config)#erps-ring ring1</pre> <pre>Switch(config-erps-ring)#version v1</pre>	

	Delete v1 supported by the ERPS ring of ring1 Switch(config)#erps-ring ring1 Switch(config-erps-ring)#no version
--	--

open-ring

Command	open-ring no open-ring
parameter	-
default	Default Configuration ERPS Subrings
Mode	ERPS Ring Configuration Mode
Usage Guide	If the ERPS ring instance has been configured on the ring, there will be the message of "Can't config open-ring on ERPS ring which has ERPS instance, please delete ERPS instance firstly!" Otherwise, enter into the next step. Configure this ERPS ring type as sub ring.
Example	Configure the ERPS ring of ring1 as sub ring of open type. Switch(config)#erps-ring 1 Switch(config-erps-ring)#open-ring Delete the configuration of the sub ring of open type. Switch(config)#erps-ring 1 Switch(config-erps-ring)#no open-ring

raps-virtual-channel {with | without}

Command	raps-virtual-channel {with without}	
parameter	with	the R-APS virtual channel is existed in this ERPS ring
	without	the R-APS virtual channel is not existed in this ERPS ring
default	The R-APS virtual channel is not existed in ERPS ring	
Mode	ERPS Ring Configuration Mode	
Usage Guide	Configure if there is the R-APS virtual channel in ERPS ring according to the configuration. Inputting: Success or error. If there is not R-APS virtual channel on the ERPS ring, the R-APS channel of all the instances of ERPS ring will be unblocked forever and it only blocks the data channel; otherwise, the R-APS channel and the data channel will be blocked at the same time.	
Example	Configure that there is R-APS virtual channel in the ERPS sub ring of ring1. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#raps-virtual-channel with	

erps-ring <ring-name> port0 [port1-none]

Command	erps-ring <ring-name> port0 [port1] no erps-ring <ring-name> port0	
parameter	ring-name	ERPS ring name, the maximum string is 64, and it is made up with letters, numbers and underlines; the first and last characters cannot be underlines

	port1-none	there is only the port0 on this ERPS ring node, no port1 and it is the interconnection node
default	Do not configure port0 on ERPS ring	
Mode	Port Mode	
Usage Guide	this command is used to configure the port as the port of the specified ERPS ring. If this ERPS ring is not open-ring type, the port1-none cannot be configured. Check if the ERPS ring configuration is integral; if it is integral, check if the ERPS instance configuration is integral; if it is integral, activate the instance as active and run the protocol.	
Example	Configure e 1/0/1 as the port0 of ERPS ring1 Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#erps-ring ring1 port0 Delete the e 1/0/1 as port0 of ERPS ring1 Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#no erps-ring ring1 port0	

erps-ring <ring-name> port1

Command	erps-ring <ring-name> port1 no erps-ring <ring-name> port1	
parameter	ring-name	ERPS ring name, the maximum string is 64, and it is made up with letters, numbers and underlines; the first and last characters cannot be underlines
default	Do not configure port1 on ERPS ring	
Mode	Port Mode	
Usage Guide	This command is used to configure the port as the port of the specified ERPS ring. Check if the ERPS ring configuration is integral; if it is integral, check if the ERPS instances configuration is integral; if it is integral, activate the instance as active and run the protocol.	
Example	Configure e 1/0/1 as the port1 of ERPS ring1 Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#erps-ring ring1 port1 Delete the e 1/0/1 as the port1 of ERPS ring1 Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#no erps-ring ring1 port1	

failure-detect {cc | physical-link-or-cc} domain <domain-name> service {< ma-name > | number < ma-num > | pvlan < vlan-id >} mep <mep-id> rmep<rmep-id>

Command	{port0 port1} failure-detect {cc physical-link-or-cc} domain <domain-name> service {< ma-name > number < ma-num > pvlan < vlan-id >} mep <mep-id> rmep<rmep-id> no {port0 port1} failure-detect
---------	--

parameter	{port0 port1}	parameter selection. Port0 means the fault detection type of port0. Port1 means the fault detection type of port1
	{cc physical-link-or-cc}	parameter selection. cc means that the ERPS ring port detection is cc report fault. physical-link-or-cc means that the ERPS ring port detection is cc report fault and physical link fault.
	<domain-name>	the cfm domain name of ERPS ring port detection
	< ma-name >	the service name that cfm belongs to of ERPS ring port detection.
	<mep-id>	the local mep id that cfm monitored of ERPS ring port detection
	<rmep-id>	the remote mep id that cfm monitored of ERPS ring port detection
default	ERPS ring port only detects the physical link fault as default	
Mode	ERPS Ring Configuration Mode	
Usage Guide	<p>Configure the fault detection type of ERPS ring ports. If it is detected as cc type, the maintenance domain, maintenance set that cc belongs to and the monitoring link (it is conditioned with (mep-id, rmep-id)) should be appointed. The premise of this configuration is that the corresponding ring port has been joined into ERPS ring. The no command deletes the fault detection type of ERPS ring ports.</p> <p>Configure the fault detection type of ERPS ring ports as the appointed type. If the type is cc, save the configured md, ma, mep and rmep information to use for matching after receiving the cfm fault notification.</p>	
Example	<p>Configure the detection type of ERPS ring1 port0as cc.</p> <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#port0 failure-defect cc domain domain1 service service1 mep 1 rmep 2</pre> <p>Delete this configuration.</p> <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#no port0 failure-defect</pre>	

erps-instance <instance-id>

Command	erps-instance <instance-id> no erps-instance <instance-id>	
parameter	instance-id	id of ERPS ring, the range is 1 to 48
default	Do not configure any ERPS ring instance	
Mode	ERPS Ring Configuration Mode	
Usage Guide	<p>Create the ERPS ring instance and enter into the ERPS ring instance configuration Mode.</p> <p>If the ERPS ring supports v1, there will be the message of “Doesn't support multiple ERPS</p>	

	instance capability on the ring running version 1!" when configured more than one ERPS instance.
Example	<p>Configure the ERPS ring instance 1 on ERPS ring1.</p> <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#</pre> <p>Delete the ERPS ring instance 1 on ERPS ring1.</p> <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#no erps-instance 1</pre>

Description

Command	description <instance-name> no description <instance-name>	
parameter	instance-name	ERPS instance name, the maximum string is 64, and it is made up with letters, numbers and underlines; the first and last characters cannot be underlines. The no command deletes the ERPS instance name.
default	Do not configure the ERPS instance name as default	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the description string for the ERPS instance.	
Example	<p>Configure the ERPS instance1 name on ring1 as instance1.</p> <pre>Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)# description instance1</pre> <p>Delete this name of instance1.</p> <pre>Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)# no description</pre>	

ring-id <ring-id>

Command	ring-id <ring-id> no ring-id <ring-id>	
parameter	ring-id	ERPS ring id and the range is 1 to 64
default	The MAC address is 01-19-A7-00-00-01 as default	
Mode	ERPS Instance Configuration Mode.	
Usage Guide	Configure the last byte of R-APS packets destination MAC address sent by ERPS ring node to carry ring-id. If ERPS ring supports v1, ring-id only can be configured as 1. The no command configures it not to carry the ring-id, it means that the MAC is 01-19-A7-00-00-01.	
Example	<p>Configure the last byte of R-APS packets destination MAC address sent by ERPS ring1 instance2 to carry the ring-id 2.</p> <pre>Switch(config)#erps-ring 1</pre>	

	<pre>Switch(config-erps-ring)#erps-instance 2 Switch(config-erps-ring-inst-2)#ring-id 2 Configure the last byte of R-APS packets destination MAC address sent by ERPS ring1 instance2 not to carry the ring-id, it means the destination MAC is 01-19-A7-00-00-01. Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 2 Switch(config-erps-ring-inst-2)#no ring-id</pre>
--	---

rpl {port0 | port1} {owner | neighbour}

Command	<pre>rpl {port0 port1} {owner neighbour} no rpl {port0 port1}</pre>	
parameter	{port0 port1}	ERPS ring member ports
	{owner neighbour}	Owner: RPL owner Neighbour: RPL owner
default	None, it is the ordinary transmission node type.	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the member port of ERPS ring instance as RPL owner or RPL neighbour, the RPL node roles of different instances on the same ERPS ring cannot be configured on the same member port. The no command configures the member port of ERPS ring instance as the ordinary transmission port member.	
Example	Configure the port0 of ERPS ring1 instance1 as RPL owner node. <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)# rpl port0 owner</pre>	

non-revertive

Command	<pre>non-revertive no non-revertive</pre>	
parameter	-	
default	ERPS ring instance supports the revertive as default	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the ERPS ring instance as non-revertive. If this ERPS ring supports v1, this command is null and cannot be configured. The no command configures the ERPS ring instance as revertive. If this ERPS ring supports v1, this command is null. This command can be configured only on the RPL owner node of the sub ring.	
Example	Configure the ERPS ring1 instance1 to support the non-revertive. <pre>Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#non-revertive</pre>	

guard-timer <guard-times>

Command	guard-timer <guard-times> no guard-timer	
parameter	guard-times	the interval is 10ms and the range is 10ms to 2s
default	500ms	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the Guard timer. The guard timer is used for the Ethernet node to avoid the error handling and the close loop according to the outdated R-APS packets. In the starting time of the timer, any R-APS packets received (the R-APS packets that the Request/State="1110" are except) will be dropped. The no command configures the guard timer as the default value.	
Example	Configure the guard timer of ERPS ring1 instance1 as 1s. Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)guard-timer 100	

holdoff-timer < holdoff-times>

Command	holdoff -timer <holdoff-times> no holdoff -timer	
parameter	holdoff-times	the interval is 1s and the range is 0 to 10s
default	0s	
Mode	ERPS Instance Configuration Mode	
Usage Guide	This command is used to configure the delay timer, and the default configuration is restored in the form of No	
Example	Configure the Holdoff timer of ERPS ring1 instance1 as 5s. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#holdoff -timer 5	

wtr-timer <wtr-times>

Command	wtr-timer <wtr-times> no wtr-timer	
parameter	wtr-times	the interval is 1min and the range is from 1 to 12min
default	5min	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the WTR timer. WTR timer is used to avoid the frequent protection switching of RPL owner node because of the periodic (intermittent) default. When RPL owner port received the default recovery packets, after some time, and then check if the	

	default still existed on the other nodes and prevent blocking RPL owner port immediately to cause the chokepoint shocking. The no command configures the WTR timer as the default.
Example	Configure the WTR timer of ERPS ring1 instance1 as 10min. Switch(config)#erps-ring 1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#wtr-timer 10

protected-instance

Command	protected-instance <instance-list> no protected-instance <instance-list>	
parameter	instance-list	the MSTP instance list protected by ERPS ring instance, such as i, j-k. The number of the instances in the list is not limited.
default	ERPS ring instance does not protect any MSTP instance	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the protection instance of ERPS ring instance. ERPS ring instance can protect all the MSTP instances. The same instance cannot be quoted by multiple ERPS ring instances under the same topology. Under the same ERPS ring instance, run this command more than once to protect instance, the result will be accumulated. The no command deletes the protection instance of ERPS ring instance.	
Example	Configure the protection instance of ERPS ring1 instance1 as instance 2. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#protected-instance 2	

raps-mel <level-value>

Command	raps-mel <level-value> no raps-mel	
parameter	level-value	the level value of APS packets, range is from 0 to 7
default	Level is 7	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the level of R-APS channel of ERPS ring instance as the appointed level. If configured successfully, the mel field of the R-APS packet sent by this ERPS ring instance will be added as the appointed level and only the R-APS packets with the level that is larger than or same as the appointed level can be allowed passing by, or notify the error. The no command configures the level as the default of 7. The MEL field in the protocol packets is used to detect if the current packet can pass by.	
Example	Configure the level of R-APS channel of ERPS ring1 instance1 as 5. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)raps-mel 5	

control-vlan <vlan-id>

Command	control-vlan <vlan-id> no control-vlan	
parameter	vlan-id	vlan id of R-APS packets, range is from 2 to 4094
default	Do not configure any control vlan	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Configure the control vlan of R-APS packets of R-APS channel. In the ERPS ring instance, this vlan is only used to transmit ERPS protocol packets but not to forward the user business packets. It improves the ERPS protocol security. User makes sure the configuration uniqueness. This vlan is as the vlan tag when sending R-APS packets. The protection VLAN configuration of all the nodes in the instance must be identical. The no command deletes the control vlan.	
Example	Configure the control vlan of ERPS ring1 instance1 as vlan10. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)control-vlan 10	

forced-switch {port0 | port1}

Command	forced-switch {port0 port1}	
parameter	port0	means to run the forced switch configuration on port0 of the ring node
	port1	means to run the forced switch configuration on port1 of the ring node
default	No forced switch in ERPS ring instance	
Mode	ERPS Instance Configuration Mode	
Usage Guide	Run the forced switch on the port of ERPS ring node. Two or more forced switch are allowed existing at the same time in one ERPS ring instance. But only one forced switch command can be existed on one ring node. User should avoid using multiple forced switch in ERPS ring instance to cause the ERPS ring instance splitting. If the forced switch is on the current highest priority, block the data channel and R-APS channel of this ERPS ring instance on the appointed member port (port0 or port1), and unblock the other member port of this ring node; If this instance configuration is not integral, it is on the status of unactive, there will be the message of "The request is rejected because the ERP instance in unactive state!" otherwise, enter into the next step;	
Example	Run the forced switch configuration on the port0 of ERPS ring1 instance1. Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#force-switch port0	

manual-switch {port0 | port1}

Command	manual-switch {port0 port1}
---------	-------------------------------

parameter	port0	means to run the manual switch configuration on port0 of the ring node
	port1	means to run the manual switch configuration on port1 of the ring node
default	No manual switch in ERPS ring instance	
Mode	ERPS Instance Configuration Mode	
Usage Guide	<p>Run the manual switch on the port of ERPS ring node. Only one manual switch is allowed existing in one ERPS ring instance, and the premise is that there is no SF fault or FS command in ERPS ring instance.</p> <p>If this instance configuration is not integral, it is on the status of unactive, there will be the message of "The request is rejected because the ERP instance in unactive state!" otherwise, enter into the next step;</p>	
Example	<p>Run the manual switch configuration on the port0 of ERPS ring1 instance1.</p> <pre>Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#manual-switch port0</pre>	

clear command

Command	clear command
parameter	-
default	No clear command in ERPS ring instance.
Mode	ERPS Instance Configuration Mode
Usage Guide	<p>Run the clear command to the member port of ERPS ring node, it can clear the management command of the local activity: forced switch command and manual switch command; it can be also used to trigger the link switch under the revertive mode before WTR or WTB is time out; and trigger the link to switch from the standby link RPL back to the intrinsic link under the non-revertive mode after the fault recovery.</p> <p>If the forced or manual switch command has existed on the node of this ring instance, clear the switch command and keep the block status of the data channel and R-APS channel of the blocked member ports. And send the P-APS (NR) packets on the two member ports stably and steadily until received R-APS (NR, RB) packets and known the RPL is blocked. Or the higher level request happens on the ring (such as SF);</p> <p>If the local forced or manual switch has existed on the node of this ring instance, clear the command and then receive the R-APS (NR) packets whose node ID is larger than the local node ID. Unblock all the ring ports without SF fault and stop sending the R-APS (NR) packets on the two member ports.</p>
Example	<p>Run clear configuration on ERPS ring1 instance1.</p> <pre>Switch(config)#erps-ring ring1 Switch(config-erps-ring)#erps-instance 1 Switch(config-erps-ring-inst-1)#clear command</pre>

show erps ring {<ring-name> | brief}

Command	show erps ring {<ring-name> brief}
---------	--------------------------------------

parameter	ring-name	ERPS ring name
	brief	Show the ERPS ring main information
default	-	
Mode	Admin Mode	
Usage Guide	Read the ERPS ring information.	
Example	<pre>show all the ERPS rings information. Switch#show erps ring brief ethernet tcn-propagation erps to none. Ring-Name Ring-topo Port0 Port1 Version Inst-Count ----- ring1 major-ring V20</pre>	

show erps instance [ring <ring-name> [instance <instance-id>]]

Command	show erps instance [ring <ring-name> [instance <instance-id>]]					
parameter	ring-name	ERPS ring name				
	instance-id	ID of ERPS ring instance, range is from 1 to 48. If it is not appointed, show all the ERPS ring instances information.				
default	-					
Mode	Admin Mode					
Usage Guide	Show the ERPS ring instance information.					
Example	<pre>Show all the ERPS ring instances information. Switch#show erps instance ERPS Ring: 1 Instance: 1 Description: - Protected Instance: - Revertive mode: revertive R-APS MEL: 7 R-APS Virtual-Channel: with Control Vlan: - Ring ID: 1 Guard Timer(10ms): 50 Holdoff Timer(seconds): 0 WTR Timer(min): 5 ----- Port Role Port-Status ----- Port0 common blocked Port1 common blocked</pre> <table border="1" style="width: 100%; margin-top: 10px;"> <tr> <td>Display content</td> <td>analyze</td> </tr> <tr> <td>Description</td> <td>ERPS ring instance name</td> </tr> </table>		Display content	analyze	Description	ERPS ring instance name
Display content	analyze					
Description	ERPS ring instance name					

Protected Instance	MSTP instance protected by ERPS ring instance
Revertive mode	ERPS ring link mode: revertive, non-revertive
R-APS MEL	Level of R-APS channel, package R-APS packets
R-APS Virtual-Channel	If the ERPS ring is the sub ring, the R-APS virtual channel of the inherited ring: with, without
Ring ID	The ring-id number carried by the packets sent by ERPS ring instance, range is from 1 to 64.
Contral Vlan	R-APS channel vlan, package R-APS packet of tag
WTR_Timer	Wait to Restore timer, range is from 1 to 12min
Guard_Timer	Guard timer, range is from 10ms to 2s
Holdoff_Timer	Holdoff timer, range is from 0 to 10
Port	ERPS ring port information: port0, port1
Role	ERPS ring node roles: RPL Owner, RPL neighbor, Common
Port-Status	Blocked: port is in block status forwarding: port is in forwarding status

show erps status [ring <ring-name> [instance <instance-id>]]

Command	show erps status [ring <ring-name> [instance <instance-id>]]	
parameter	ring-name	ERPS ring name
	instance-id	ID of ERPS ring instance, range is from 1 to 48. If it is not appointed, show all the ERPS ring instances status information.
default	-	
Mode	Admin Mode	
Usage Guide	Show the status information of ERPS ring instance.	
Example	<p>Show all the ERPS ring instances status information.</p> <pre>Switch#show erps status ERPS ring: 1 instance: 1 status: Active: 0 Node State: - Time last topology change:Jan 00 00:00:00 1900 ----- Port Interface Port-Status Signal-Status R-APS-NodeId BPR ----- Port0 - - - - Port1 - - - - ERPS ring: 1 instance: 2 status: Active: 0 Node State: - Time last topology change:Jan 00 00:00:00 1900 -----</pre>	

Port	Interface	Port-Status	Signal-Status	R-APS-NodeId
BPR				

Port0	-	-	-	-
Port1	-	-	-	-
Display content		analyze		
Active		Current active status of ERPS ring instance: 1, 0		
Node State		Current status of ERPS ring instance: Idle, Protection, Forced-switch, Manual-switch, Pending.		
Time last topology change		Topology switching last time		
Port-Status		Blocked: the port is in block status Forwarding: the port is in forwarding status		
Signal-Status		ERPS ring port fault status: Non-failed: no fault Failed: fault happened		
R-APS-NodeId		The node ID information is the last bit of the MAC address		
BPR		The block link information carried by the receiving last R-APS saved by ERPS ring port, it is port0 or port1 which was blocked.		

show erps statistics [ring <ring-name> [instance <instance-id>]]

Command	show erps statistics [ring <ring-name> [instance <instance-id>]]	
parameter	ring-name	ERPS ring name
	instance-id	ID of ERPS ring instance, range is from 1 to 48. If it is not appointed, show the statistic information of all the ERPS ring instances of this device.
default	-	
Mode	Admin Mode	
Usage Guide	Show the statistic information of ERPS ring instance.	
Example	<p>Show the statistic information of ERPS ring instance.</p> <pre>Switch#show erps statistics Statistics for ERPS ring: 1 instance 1: R-APS Port0(Tx/Rx) Port1(Tx/Rx) ----- NR: 0 /0 0 /0 NR,RB: 0 /0 0 /0 SF: 0 /0 0 /0 MS: 0 /0 0 /0 FS: 0 /0 0 /0 EVENT: 0 /0 0 /0 ----- TOTAL: 0 /0 0 /0</pre>	

	Statistics for ERPS ring: 1 instance 2:			
	R-APS	Port0(Tx/Rx)	Port1(Tx/Rx)	

	NR:	0	/0	0 /0
	NR,RB:	0	/0	0 /0
	SF:	0	/0	0 /0
	MS:	0	/0	0 /0
	FS:	0	/0	0 /0
	EVENT:	0	/0	0 /0
	TOTAL:	0	/0	0 /0

clear erps statistics [ring <ring-name> [instance <instance-id>]]

Command	clear erps statistics [ring <ring-name> [instance <instance-id>]]	
parameter	ring-name	ERPS ring name
	instance-id	ID of ERPS ring instance, range is from 1 to 48. If it is not appointed, clear the statistic information of all the ERPS ring instances of this device
default	-	
Mode	Admin Mode	
Usage Guide	Clear the statistic information of ERPS.	
Example	Clear the statistic information of ERPS ring1 instance1. Switch#clear erps statistics ring 1 instance 1	

6.1 QOS

accounting

Syntax	Accounting no accounting	
Parameter	none	
Default	Do not set statistic function.	
Mode	Policy map configuration mode	
Usage	Set statistic function for the classified traffic. After enable this function, add statistic function to the traffic of the policy class map, the messages can only red or green when passing policy. When print statistic information, in packets means classify packets numbers and not support the classify of color.	
Example	Count the packets which satisfy c1 rule. Switch#config Switch(config)#class-map c1 Switch(config-classmap-c1)#exit Switch(config)#policy-map p1 Switch(config-policymap-p1)#class c1	

	<pre>Switch(config-policymap-p1-class-c1)#accounting Switch(config-policymap-p1-class-c1)#exit Switch(config-policymap-p1)#exit</pre>
--	---

class

Syntax	<pre>class <class-map-name> [insert-before <class-map-name>] no class <class-map-name></pre>	
Parameter	<class-map-name>	<class-map-name> is the class map name used by the class.
	insert-before <class-map-name>	insert-before <class-map-name> insert a new configured class to the front of a existent class to improve the priority of the new class.
Default	No policy class is configured by default.	
Mode	Policy map configuration mode	
Usage	<p>Associates a class to a policy map and enters the policy class map mode; the no command deletes the specified class.</p> <p>Before setting up a policy class, a policy map should be created and the policy map mode entered. In the policy map mode, classification and nexthop configuration can be performed on packet traffic classified by class map.</p>	
Example	<p>After add a policy class map c1 to the policy map, add a policy class map c2 and insert it to the front of c1.</p> <pre>Switch(config)#class-map c1 Switch(config-classmap-c1)#exit Switch(config)#class-map c2 Switch(config-classmap-c2)#exit Switch(config)#policy-map p1 Switch(config-policymap-p1)#class c1 Switch(config-policymap-p1-class-c1)#exit Switch(config-policymap-p1)#class c2 insert-before c1 Switch(config-policymap-p1-class-c2)#exit</pre>	

class-map

Syntax	<pre>class-map <class-map-name> no class-map <class-map-name></pre>	
Parameter	<class-map-name>	class map name
Default	No class map is configured by default.	
Mode	Global Mode	
Usage	Creates a class map and enters class map mode; the no command deletes the specified class map.	
Example	Creating and then deleting a class map named "c1".	

	<pre>Switch#config Switch(config)#class-map c1 Switch(config-classmap-c1)#exit Switch(config)#no class-map c1</pre>
--	---

clear mls qos statistics

Syntax	clear mls qos statistics (interface [ethernet] <interface-name>) (vlan <vlan-id>)	
Parameter	<vlan-id>	VLAN ID
	<interface-name>	interface name
Default	Do not set action.	
Mode	Admin Mode	
Usage	Clear accounting data of the specified ports or VLAN Policy Map. If there are no parameters, clear accounting data of all policy map.	
Example	<pre>Clear the Policy Map statistic of VLAN 100. Switch#clear mls qos statistics vlan 100</pre>	

drop

Syntax	drop no drop	
Parameter	none	
Default	None	
Mode	Policy class map configuration mode	
Usage	Drop the specified packet after configure this command.	
Example	<pre>Drop the packet which satisfy c1. Switch#config Switch(config)#policy-map p1 Switch(config-policymap-p1)#class c1 Switch(config-policymap-p1-class-c1)#drop Switch(config-policymap-p1-class-c1)#exit Switch(config-policymap-p1)#exit</pre>	

match

Syntax	<pre>match (access-group <acl-index-or-name> ip dscp <dscp-list> ip precedence <ip-precedence-list> ipv6 access-group <acl-index-or-name> ipv6 dscp <dscp-list> ipv6 flowlabel <flowlabel-list> vlan <vlan-list> cos <cos-list>) no match {access-group ip dscp ip precedence ipv6 access-group ipv6 dscp ipv6 flowlabel vlan cos }</pre>	
Parameter	<acl-index-or-name>	match specified IP ACL, MAC ACL or IPv6 standard ACL or MAC-IP ACL, the parameters are the number or name of the ACL;
	<dscp-list>	match specified DSCP value, the parameter is a list of DSCP

		consisting of maximum 8 DSCP values, the range is 0~63;
	<ip-precedence-list>	match specified IP Precedence, the parameter is a IP Precedence list consisting of maximum 8 IP Precedence values with a valid range of 0~7;
	ipv6 access-group <acl-index-or-name>	match specified IPv6 ACL, the parameter is the number or name of the IPv6 ACL;
	<flowlabel-list>	match specified IPv6 flow label, the parameter is IPv6 flow label value, the range is 0~1048575;
	<vlan-list>	match specified VLAN ID, the parameter is a VLAN ID list consisting of maximum 8 VLAN IDs, the range is 1~4094;
	<cos-list>	match specified CoS value, the parameter is a CoS list consisting of maximum 8 CoS, the range is 0~7;
Default	No match standard by default	
Mode	Class-map Mode	
Usage	<p>Configure the match standard of the class map; the no form of this command deletes the specified match standard.</p> <p>Only one match standard can be configured in a class map. When configuring the match ACL, permit rule as the match option, apply Policy Map action. Deny rule as the excluding option, do not apply Policy Map action. (The deny rule is not supported issuing in PBR, please pay attention to avoid it.) If configure another match rule after one was configured, the operation fails, but configure the same match rule will cover the previous.</p>	
Example	<p>Create a class-map named c1, and configure the class rule of this class-map to match packets with IP Precedence of 0.</p> <pre>Switch(config)#class-map c1 Switch(config-classmap-c1)#match ip precedence 0 Switch(config-classmap-c1)#exit</pre>	

mls qos aggregate-policy

Syntax	<pre>mls qos aggregate-policy <policer_name> <bits_per_second> burst-group <normal_burst_bytes> no mls qos aggregate-policy <policer_name></pre>	
Parameter	<policer_name>	it is the aggregate policy name.
	<bits_per_second>	it define the information rate, namely CIR, the unit is kbit per second, and it ranges from 1 to 10000000;
	<normal_burst_bytes >	it define the committed burst size, namely CBS, the unit is kilobyte, and it ranges from 1 to 8192, when the CBS more than the maximum of chips , it uses the biggest value that chip support to set hardware, CLI have not notice information;
Default	The default is no policy action.	
Mode	Global Mode	
Usage	Define a aggregate policy command. The no command delete mode configuration. It only supports single cylinder configuration, when configuring, if configured CBS,	

	not support configure color, green packets only supports transmit, red packets only supports drop.
Example	Set 10000 as CIR, CBS is 512. Switch (config)#policy burst 1 512 Switch(config)# mls qos aggregate-policy 1 1000 burst-group 1

mls qos cos

Syntax	mls qos cos <default-cos> no mls qos cos	
Parameter	<default-cos>	default CoS value for the port, the valid range is 0 to 7
Default	The default CoS value is 0	
Mode	Port Configuration Mode	
Usage	Configures the default CoS value of the port; the “no mls qos cos” command restores the default setting. Configure the default CoS value for switch port. In default configuration, the message ingress cos from this port are default value whether the message with tag. If the message without tag, the message cos value for tag is enacted.	
Example	Setting the default CoS value of ethernet port 1/0/1 to 7, i.e., packets coming in through this port will be assigned a default CoS value of 7 if no CoS value present . Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#mls qos cos 7	

mls qos map

Syntax	mls qos map (cos-intp <intp1...intp8> cos-dp <dp1...dp8> dscp-intp <in-dscp list> to <intp> dscp-dp <in-dscp list> to <dp> dscp-dscp <in-dscp list> to <out-dscp>) no mls qos map (cos-intp cos-dp dscp-intp dscp-dp dscp-dscp)	
Parameter	cos-intp <intp1...intp8>	defines the mapping from CoS to intp (queue) value, <intp1...intp8> are 8 intp value corresponding to the 0 to 7 CoS value, each intp value is delimited with space, ranging from 0 to 7;
	cos-dp<dp1...dp8>	defines the mapping from cos to intp (queue), <dp1...dp8> is 8 drop priority and it corresponding to the Cos value from 0 to 7, every drop priority is separated by space, and it ranges from 0 to 2;
	dscp-intp	defines the mapping from DSCP to intp (queue).
	dscp-dp	defines the mapping from dscp to drop priority.
	dscp-dscp	defines the mapping from entrance dscp to export dscp, <in-dscp list> is the input dscp value, the most is 8 and it separated by space from each other, and it ranges from 0 to 63, <out-dscp> is output dscp value and it ranges from 0 to 63.
Default	Default mapping values are: Default CoS-TO-INTP Map	

	<pre> COS: 0 1 2 3 4 5 6 7 INTP: 0 1 2 3 4 5 6 7 Default CoS-TO-DP Map CoS 0 1 2 3 4 5 6 7 DP 0 0 0 0 0 0 0 0 Default DSCP-TO-INTP Map d1 : d2 0 1 2 3 4 5 6 7 8 9 0: 0 0 0 0 0 0 0 0 0 1 1 1: 1 1 1 1 1 1 2 2 2 2 2: 2 2 2 2 3 3 3 3 3 3 3: 3 3 4 4 4 4 4 4 4 4 4: 5 5 5 5 5 5 5 5 6 6 5: 6 6 6 6 6 6 7 7 7 7 6: 7 7 7 7 Default DSCP-TO-DP Map d1 : d2 0 1 2 3 4 5 6 7 8 9 0: 0 0 0 0 0 0 0 0 0 0 1: 0 0 0 0 0 0 0 0 0 0 2: 0 0 0 0 0 0 0 0 0 0 3: 0 0 0 0 0 0 0 0 0 0 4: 0 0 0 0 0 0 0 0 0 0 5: 0 0 0 0 0 0 0 0 0 0 6: 0 0 0 0 Default DSCP-TO-DSCP Map d1 : d2 0 1 2 3 4 5 6 7 8 9 0: 0 1 2 3 4 5 6 7 8 9 1: 10 11 12 13 14 15 16 17 18 19 2: 20 21 22 23 24 25 26 27 28 29 3: 30 31 32 33 34 35 36 37 38 39 4: 40 41 42 43 44 45 46 47 48 49 5: 50 51 52 53 54 55 56 57 58 59 6: 60 61 62 63 </pre>
Mode	Global Mode
Usage	INTP means the chip internal priority setting. Because of the internal DSCP value have 64 and the chip internal priority (queue) only 8, the dscp-intp mapping need 8 continuum internal dscp mapping to the same INTP.
Example	Setting the CoS-to-INTP mapping value to the default 0 8 16 24 32 40 48 56 to 0 1 2 3 4 5 6 7. Switch(config)#mls qos map cos-intp 0 1 2 3 4 5 6 7

mls qos queue algorithm

Syntax	mls qos queue algorithm (sp wrr wdrr)
--------	---

	no mls qos queue algorithm	
Parameter	sp	The strict priority, the queue number of bigger, then the priority is higher
	wrr	Select wrr algorithm
	wdr	Select wdr algorithm.
Default	WRR	
Mode	Port Configuration Mode	
Usage	After configure this command, the queue management algorithm is set.	
Example	Setting the queue management algorithm as sp. switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#mls qos queue algorithm sp	

mls qos queue wdr weight

Syntax	mls qos queue wdr weight <weight1..weight8> no mls qos queue wdr weight	
Parameter	<weight1..weight8>	defines the queue weight, in Kbytes. For WDRR algorithm, this configuration is valid, but for SP algorithm, it is invalid. When the weight is 0, this queue adopts SP algorithm to manage, and WDRR algorithm turns into SP+WDRR algorithm. range:0-32767
Default	The queue weight is 10 20 40 80 160 320 640 1280.	
Mode	Port Configuration Mode	
Usage	If the queue weight is configured as 0, it uses SP algorithm to manage, while WRR turns into SWDRR. When removing the queue, the system will manage SP queue at first, then manage WDRR queue, SP queue executes the strict priority management mode, WDRR queue executes the weight rotation management mode.	
Example	Configure the queue weight as 10 10 20 20 40 40 80 80. Switch(interface-ethernet1/0/1)#mls qos queue wdr weight 10 10 20 20 40 40 80 80	

mls qos queue wrr weight

Syntax	mls qos queue wrr weight <weight1..weight8> no mls qos queue wrr weight	
Parameter	<weight1..weight8>	defines the queue weight, range: 0-127
Default	The queue weight is 1 2 3 4 5 6 7 8.	
Mode	Port Configuration Mode	
Usage	If the queue weight is configured as 0, it uses SP algorithm to manage, while WRR turns into SWDRR. When removing the queue, the system will manage SP queue at first, then manage WDRR queue, SP queue executes the strict priority management	

	mode, WDRR queue executes the weight rotation management mode.
Example	Configure the queue weight as 127 8 9 6 3 4 2 0。 Switch(interface-ethernet1/0/1)#mls qos queue wrr weight 127 8 9 6 3 4 2 0

mls qos queue bandwidth

Syntax	mls qos queue <queue-id> bandwidth <maximum-bandwidth> no mls qos queue <queue-id> bandwidth	
Parameter	<queue-id>	queue ID to configure the bandwidth guarantee, the different chip supports the different queue count, the range is different too, and the ranging from 1 to 8.
	<maximum-bandwidth> <h>	maximum-bandwidth, ranging from 0 to 128000, when input 0, it means the max-bandwidth function is not take effect. The minimum-bandwidth must not bigger than maximum-bandwidth.
Default	The queue bandwidth have no guarantee	
Mode	Port Configuration Mode	
Usage	The minimum-bandwidth guarantee and maximum-bandwidth limit can be configured at the different or same queue. The queue bandwidth pledge for egress is relative to management mode, for example: one port is the strict priority-queue, the highest priority is queue 8 now, it will satisfy this queue traffic when block is happened. But if user want the lower priority of queue having bandwidth, it can remain bandwidth via this command, the lower priority queue's minimum-bandwidth will be satisfied at first, then the excess bandwidth is managed according to SP.	
Example	Configure the maximum-bandwidth is 128kbps for ethernet1/0/2 queue1. Switch(config)#interface ethernet 1/0/2 Switch(config-if-ethernet1/0/2)# mls qos queue 1 bandwidth 128	

mls qos trust

Syntax	mls qos trust (cos dscp) no mls qos trust (cos dscp)	
Parameter	dscp	configures the port to trust DSCP status
	cos	configures the COS port to trust status.
Default	the default is trust COS value.	
Mode	Port Configuration Mode	
Usage	Configures the current port trust; the no command disables the current trust status of the port. trust dscp mode: Set the intp field based dscp-to-intp mapping. trust cos mode: Set the intp field based cos-to-intp mapping.	
Example	Set trust dscp of port 1/0/1, not trust cos. Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/1)# mls qos trust dscp Switch(config-if-ethernet1/1)#no mls qos trust cos	

Policy burst

Syntax	policy burst <burst_group> <normal_burst_bytes>	
Parameter	<burst_group>	burst_group id ranges from 1 to 2
	<normal_burst_bytes> >	The committed burst size – CBS (Committed Burst Size), in byte, ranging from 1 to 8192. When the configured CBS value exceeds the max limit of the chip, configure the hardware with max number supported by the chip without any CLI prompt;
Default	The default of normal_burst_bytes is 1024.	
Mode	Global Mode	
Usage	Configure burst-group in global mode and it supports 2 burst-group, then it can use burst-group in strategy classify table mode. It can return default configuration by set 1024 as default value.	
Example	Set burst-group 1 to define CBS as 512 bits Switch(config)#policy burst 1 512	

Policy

Syntax	policy <bits_per_second> burst-group <burst-group-id> no policy	
Parameter	<bits_per_second>	The committed information rate – CIR (Committed Information Rate), in Kbps, ranging from 1 to 10000000;
	<burst-group-id>	It is CBS burst-group id and it ranges from 1 to 2.
Default	No policy action.	
Mode	Policy class map configuration mode	
Usage	Support non-aggregate policy command of double color, the no command delete mode configuration. Configure information rate in policy class map configuration mode. Not support the color configuration and the default green packets is transmit, red packets drop.	
Example	Set information rate 1000 in policy class map configuration mode, the CBS is 512, the more than cir rate will send and do nothing for packets. Switch(config)#policy burst 1 512 Switch(config)#class-map cm Switch(config-classmap-cm)#match cos 0 Switch(config-classmap-cm)#exit Switch(config)#policy-map 1 Switch(config-policymap-1)#class cm Switch(config-policymap-1-class-cm)# policy 1000 burst-group 1	

Policy aggregate

Syntax	policy aggregate <aggregate-policy-name> no policy aggregate <aggregate-policy-name>	
Parameter	<aggregate-policy-name>	<aggregate-policy-name> is the policy set name.
Default	No policy is configured by default	
Mode	Policy class map configuration mode	
Usage	Police Map reference aggregate policy, applies an aggregate policy to classified traffic; the no command deletes the specified aggregate policy. The same policy set can be referred to by different policy class maps.	
Example	Create class-map, the match rule is the cos value is 0; policy-map is 1, enter the policy map mode, set the Policy and choose the color policy for the current list. Switch(config)#class-map cm Switch(config-classmap-cm)#match cos 0 Switch(config-classmap-cm)#exit Switch(config)#policy-map 1 Switch(config-policymap-1)#class cm Switch(config-policymap-1-class-cm)#policy aggregate color	

Policy-map

Syntax	policy-map <policy-map-name> ; no policy-map <policy-map-name>	
Parameter	<policy-map-name>	policy map name.
Default	No policy map is configured by default.	
Mode	Global Mode	
Usage	Creates a policy map and enters the policy map mode; the “no policy-map <policy-map-name>” command deletes the specified policy map. Policy class map operation can be done in policy map configuration mode.	
Example	Creating and deleting a policy map named “p1”. Switch(config)#policy-map p1 Switch(config-policymap-p1)#exit Switch(config)#no policy-map p1	

service-policy input

Syntax	service-policy input <policy-map-name> no service-policy input {<policy-map-name>}	
Parameter	input <policy-map-name>	input <policy-map-name> applies the specified policy map to the ingress direction of switch port. no command will delete all the policy maps applied on the ingress direction of the port if there is not the specified policy map name.
Default	No policy map is bound to port by default.	
Mode	Port Configuration Mode	

Usage	Applies a policy map to the specified port; the no command deletes the specified policy map applied to the port or deletes all the policy maps applied on the ingress direction of the port . Only one policy map can be applied to each direction of each port or VLAN interface.
Example	Bind policy p1 to ingress Ethernet port1/1. Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#service-policy input p1

service-policy input vlan

Syntax	service-policy input <policy-map-name> vlan <vlan-list> no service-policy input {<policy-map-name>} vlan < vlan-list>	
Parameter	input <policy-map-name>	input <policy-map-name> applies the specified policy map to the ingress direction of switch VLAN interface.
	vlan < vlan-list>	vlan <vlan-list> the vlan list of binding policy map.
Default	No policy map is bound to VLAN interface by default.	
Mode	Global Mode	
Usage	Applies a policy map to the specified VLAN interface; the no command deletes the specified policy map applied to the VLAN interface or deletes all the policy maps applied in the ingress direction of the vlan interface . Only one policy map can be applied to each direction of each port or VLAN interface.	
Example	Bind policy p1 to ingress of VLAN interface 2-4,6 Switch(config)#service-policy input p1 vlan 2-4;6	

set

Syntax	set (ip dscp <new-dscp> ip precedence <new-precedence> internal priority <new-inp> drop precedence <new-dp> cos <new-cos>) no set (ip dscp ip precedence internal priority drop precedence cos)	
Parameter	ip dscp <new-dscp>	new DSCP value, do not distinguish v4 and v6.
	ip precedence <new-precedence>	new IP Precedence.
	cos <new-cos>	new IP Precedence.
Default	Not assigning by default.	
Mode	Policy Class-map Mode	
Usage	Assign a new DSCP, IP Precedence for the classified traffic; the no form of this command delete assigning the new values. Only the classified traffic which matches the matching standard will be assigned with the new values.	
Example	Set the IP Precedence of the packets matching c1 class rule to 3. Switch(config)#policy-map p1 Switch(Config-PolicyMap-p1)#class c1 Switch(Config-PolicyMap-p1-Class-c1)#set ip precedence 3 Switch(Config-PolicyMap-p1-Class-c1)#exit	

	Switch(Config-PolicyMap-p1)#exit
--	----------------------------------

show class-map

Syntax	show class-map [<class-map-name>]	
Parameter	[<class-map-name>]	class map name
Default	None	
Mode	Admin Mode.	
Usage	Displays all configured class-map or specified class-map information.	
Example	Switch#show class-map	
	Class map name:cm, used by 1 time(s)	
	match cos: 0	
	Class map name:color, used by 0 time(s)	
	match cos: 0	
	Displayed information	Explanation
	Class map name:c1	Name of the Class map
	used by 1 times	Used times
	match acl name:1	Classifying rule for the class map

show policy-map

Syntax	show policy-map [<policy-map-name>]	
Parameter	<policy-map-name>	policy map name
Default	None	
Mode	Admin Mode.	
Usage	Displays all configured policy-map or specified policy-map information.	
Example	Switch#show policy-map	
	Policy Map 1, used by 0 time(s)	
	Class Map name: cm	
	Policy Map p1, used by 0 time(s)	
	Class Map name: c1	
	drop	
	set ip precedence 3	
	policy CIR: 2000 CBS: 512	
	conform-action:	
	transmit	
	exceed-action:	
	drop	
	Displayed information	Explanation
	Policy map name:c1	Name of policy map
	Class Map name: c1	Class Map name
	policy 20000 512	Policy implemented
	used by 0 port	Number of port that use the policy

show mls qos interface

Syntax	show mls qos {interface [<interface-id>] [policy queuing] vlan <vlan-id>} [begin include exclude <regular-expression>]															
Parameter	<interface-id>	port ID														
	<vlan-id>	VLAN ID														
	<regular-expression>	Regular expression														
Default	None															
Mode	Admin Mode.															
Usage	Displays QoS configuration information on a port. There is only red or green when packets passing police. In the print information, in packets means classify packets numbers and not supports the statistic information of color.															
Example	<pre>Switch#show mls qos interface ethernet 1/0/1 Ethernet1/0/1: Default COS: 0 Trust: DSCP Attached Policy Map for Ingress: p1 Egress Internal-Priority-TO-Queue map: INTP: 0 1 2 3 4 5 6 7 ----- Queue: 0 1 2 3 4 5 6 7 Queue Algorithm: WRR Queue weights: Queue 1 2 3 4 5 6 7 8 ----- WrrWeight 1 2 3 4 5 6 7 8 WdrrWeight 10 10 20 20 40 40 80 80 Bandwidth Guarantee Configuration: Queue 1 2 3 4 5 6 7 8 ----- MinBW(K) 0 0 0 0 0 0 0 0 MaxBW(K) 0 0 0 0 0 0 0 0</pre> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Displayed information</th> <th style="width: 50%;">Explanation</th> </tr> </thead> <tbody> <tr> <td>Ethernet1/0/1</td> <td>Port name</td> </tr> <tr> <td>default cos:0</td> <td>Default CoS value of the port</td> </tr> <tr> <td>Trust: COS</td> <td>The trust state of the port</td> </tr> <tr> <td>Attached Policy Map for Ingress: p1</td> <td>Policy name bound to port</td> </tr> <tr> <td>ClassMap</td> <td>ClassMap name</td> </tr> <tr> <td>classified</td> <td>Total data packets match this ClassMap. If there is no Accounting for Class Map, show NA</td> </tr> </tbody> </table>		Displayed information	Explanation	Ethernet1/0/1	Port name	default cos:0	Default CoS value of the port	Trust: COS	The trust state of the port	Attached Policy Map for Ingress: p1	Policy name bound to port	ClassMap	ClassMap name	classified	Total data packets match this ClassMap. If there is no Accounting for Class Map, show NA
Displayed information	Explanation															
Ethernet1/0/1	Port name															
default cos:0	Default CoS value of the port															
Trust: COS	The trust state of the port															
Attached Policy Map for Ingress: p1	Policy name bound to port															
ClassMap	ClassMap name															
classified	Total data packets match this ClassMap. If there is no Accounting for Class Map, show NA															

in-profile	Total in-profile data packets match this ClassMap. If there is no Accounting for Class Map, show NA
out-profile	Total out-profile data packets match this ClassMap. If there is no Accounting for Class Map, show NA
Internal-Priority-TO-Queue map::	Internal-Priority to queue mapping
Queue Algorithm:	WRR, WDDR or PQ queue out method
Queue weights	Queue weights Configuration
Bandwidth Guarantee Configuration	Bandwidth Guarantee Configuration

Switch(config)#show mls qos interface ethernet 1/0/1 queuing

Ethernet1/0/1:

Egress Internal-Priority-TO-Queue map:

INTP: 0 1 2 3 4 5 6 7

Queue: 0 1 2 3 4 5 6 7

Queue Algorithm: WRR

Queue weights:

Queue 1 2 3 4 5 6 7 8

WrrWeight 1 2 3 4 5 6 7 8
WdrrWeight 10 10 20 20 40 40 80 80

Bandwidth Guarantee Configuration:

Queue 1 2 3 4 5 6 7 8

MinBW(K) 0 0 0 0 0 0 0 0
MaxBW(K) 0 0 0 0 0 0 0 0

Displayed information	Explanation
Internal-Priority-TO-Queue map::	Internal-Priority to queue mapping
Queue Algorithm:	WRR, WDDR or PQ queue out method
Queue weights	Queue weights configuration
Bandwidth Guarantee Configuration	Bandwidth Guarantee Configuration

Switch # show mls qos interface ethernet 1/0/1 policy

Ethernet1/0/1:

Attached Policy Map for Ingress: p1

Displayed information	Explanation
Ethernet1/0/1	Port name
Attached Policy Map for Ingress: p1	Policy name bound to port
ClassMap	ClassMap name

	classified	Total data packets match this ClassMap.
	in-profile	Total in-profile data packets match this ClassMap.
	out-profile	Total out-profile data packets match this ClassMap.

show mls qos in (interface <interface-name> policy) | (vlan <vlan-id>)

Syntax	show mls qos in (interface <interface-name> policy) (vlan <vlan-id>)	
Parameter	<interface-name>	port name.
	<vlan-id>	VLAN ID
Default	None	
Mode	Admin Mode.	
Usage	Show the policy configuration information of the in direction of port or vlan. Show the policy configuration information of the in direction.	
Example	Show the policy configuration information of the in direction. Switch#show mls qos in interface ethernet1/0/1 policy Ethernet1/0/1: Attached Policy Map for Ingress: p1	

show mls qos maps

Syntax	show mls qos maps [cos-intp cos-dp dscp-intp dscp-dp dscp-dscp] [begin include exclude <regular-expression>]	
Parameter	cos-intp	The mapping from ingress L2 CoS to internal priority
	cos-dp	The mapping from ingress L2 CoS to drop priority
	dscp-intp	The mapping from ingress DSCP to internal priority
	dscp-dp	The mapping from ingress DSCP to drop priority
	dscp-dscp	The mapping from outgress internal to DSCP priority
Default	None	
Mode	Admin and Configuration Mode.	
Usage	Display the map configuration information of QoS.	
Example	Display configuration information of the mapping table. Switch#show mls qos maps Ingress COS-TO-Internal-Priority map: COS: 0 1 2 3 4 5 6 7 ----- INTP: 0 1 2 3 4 5 6 7 Ingress DSCP-TO-Internal-Priority map: d1 : d2 0 1 2 3 4 5 6 7 8 9	

0:	7	1	7	7	7	0	7	7	7	1
1:	1	1	1	1	1	1	2	1	2	2
2:	2	2	2	2	3	1	3	3	3	3
3:	3	3	4	1	4	4	4	4	4	4
4:	5	1	5	5	5	5	5	5	6	1
5:	6	6	6	6	6	6	7	1	7	7
6:	7	7	7	7						
Ingress COS-TO-Drop-Precedence map:										
COS: 0 1 2 3 4 5 6 7										
DP: 0 0 0 0 0 0 0 0										
Ingress DSCP-TO-DSCP map:										
d1 : d2	0	1	2	3	4	5	6	7	8	9
0:	0	1	2	3	4	5	6	7	8	9
1:	10	11	12	13	14	15	16	17	18	19
2:	20	21	22	23	24	25	26	27	28	29
3:	30	31	32	33	34	35	36	37	38	39
4:	40	41	42	43	44	45	46	47	48	49
5:	50	51	52	53	54	55	56	57	58	59
6:	60	61	62	63						
Ingress DSCP-TO-Drop-Precedence map:										
d1 : d2	0	1	2	3	4	5	6	7	8	9
0:	0	0	0	0	0	0	0	0	0	0
1:	0	0	0	0	0	0	0	0	0	0
2:	0	0	0	0	0	0	0	0	0	0
3:	0	0	0	0	0	0	0	0	0	0
4:	0	0	0	0	0	0	0	0	0	0
5:	0	0	0	0	0	0	0	0	0	0
6:	0	0	0	0						

show mls qos vlan

Syntax	show mls qos vlan <v-id>	
Parameter	<v-id>	VLAN ID
Default	None	
Mode	Admin Mode.	
Usage	Display configuration information of the QOS VLAN.	
Example	Switch#show mls qos vlan 1 Vlan 1: Attached Policy Map for Ingress: 1 Classmap classified(in packets) c1 0 Rule ID classified(in packets)	

show mls qos aggregate-policy

Syntax	show mls qos aggregate-policy [<aggregate-policy-name>]	
Parameter	<aggregate-policy-name>	aggregate policy name
Default	None	
Mode	Admin mode and configuration mode.	
Usage	Display all configured aggregate-policy or appointed aggregate-policy information.	
Example	Switch#show mls qos aggregate-policy a2 aggregate policy a2 CIR: 1000 CBS: 1024 conform-action: transmit exceed-action: drop Not used by any policy map	
	Displayed information	Explanation
	aggregate policy a2 CIR: 1000 CBS: 1024 conform-action: transmit exceed-action: drop	The configuration of aggregate policy.
	Not used by any Policy Map	The referenced times of aggregate policy.

Transmit

Syntax	transmit no transmit	
Parameter	none	
Default	Do not set the action.	
Mode	Policy class map configuration mode	
Usage	Send the packet directly after configure this command.	
Example	Send the packet which satisfy c1. Switch#config Switch(config)#policy-map p1 Switch(config-policy-map-p1)#class c1 Switch(config-policy-map-p1-class-c1)#transmit Switch(config-policy-map-p1-class-c1)#exit Switch(config-policy-map-p1)#exit	

access-group redirect to interface ethernet

Syntax	access-group <aclname> redirect to interface [ethernet] <IFNAME> no access-group <aclname> redirect	
Parameter	<aclname>	name of the flow , only supports digital standard IP ACL, digital extensive IP ACL, nomenclatural standard IP ACL, nomenclatural extensive IP ACL, digital standard MAC ACL, digital extensive MAC ACL, nomenclatural standard MAC ACL, nomenclatural extensive MAC, digital standard IPv6 ACL, and nomenclatural standard IPv6

		ACL. Parameters of Timerange and Portrange cannot be set in ACL; the type of ACL should be Permit.
	<IFNAME>	<IFNAME> the destination port of redirection
Default	None	
Mode	Port Configuration Mode	
Usage	Specify flow-based redirection; “no access-group <aclname> redirect” command is used to delete flow-based redirection. Flow-based redirection function enables the switch to transmit the data frames meeting some special condition to another specified port. Notice: Redirect does not support redirect flow to the port.	
Example	Redirecting the frames whose source IP is 192.168.1.111 received from port 1 to port 6 Switch(config)#access-list 1 permit host 192.168.1.111 Switch(config)# interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#access-group 1 redirect to interface ethernet 1/0/6	

show flow-based-redirect

Syntax	show flow-based-redirect [interface [ethernet] <IFNAME>]	
Parameter	<IFNAME>	display the information of the flow-based redirection configured in the ports listed in the interface-list.
Default	none	
Mode	Admin Mode and Configuration Mode.	
Usage	This command is used to display the information of current flow-based redirection in the system/port	
Example	Switch(config)#show flow-based-redirect Flow-based-redirect config on interface Ethernet1/0/1: RX flow (access-list 1) is redirected to interface Ethernet1/0/6	

Add

Syntax	add s-vid <new-vid> no add s-vid	
Parameter	s-vid <new-vid>	s-vid <new-vid> appointed VID of tunnel VLAN Tag.
Default	The default is not add tag.	
Mode	Policy classify table configuration mode	
Usage	Add specified tunnel tag for data packets of mapped classify table, the no command cancel configuration. After configured the command, add appointed tunnel tag or inner tag for packets of mapping classify table. When use QinQ function, the data packets that sent only have inner VLAN Tag or no Tag, it needs add s-vid commands to add appointed tunnel VLAN Tag, otherwise data have not tunnel VLAN in switch.	
Example	Add a VLAN Tag that VID is 2 to satisfied c1 classify rule packets. Switch#config Switch(config)#policy-map p1	

	Switch(config-policymap-p1)#class c1 Switch(config-policymap-p1-class-c1)#add s-vid 2
--	--

Match

Syntax	<p>match {access-group <acl-index-or-name> ip dscp <dscp-list> ip precedence <ip-precedence-list> ipv6 access-group <acl-index-or-name> ipv6 dscp <dscp-list> ipv6 flowlabel <flowlabel-list> vlan <vlan-list> cos <cos-list> }</p> <p>no match {access-group ip dscp ip precedence ipv6 access-group ipv6 dscp no match {access-group ip dscp ip precedence ipv6 access-group ipv6 dscp ipv6 flowlabel vlan cos }}</p>	
Parameter	access-group <acl-index-or-name>	match the specified IP ACL or MAC-IP ACL or standard IPV6 ACL, the parameters are the number or name of ACL
	ip dscp <dscp-list>	match the specified DSCP value, the parameter is a list of DSCP consisting of maximum 8 DSCP values, the ranging is 0 to 63
	ip precedence <ip-precedence-list>	match the specified IP Precedence, the parameter is a IP Precedence list consisting of maximum 8 IP Precedence values with a valid range of 0 to 7
	ipv6 access-group <acl-index-or-name>	match the specified IPv6 ACL, the parameter is the number or name of IPv6 ACL
	ipv6 flowlabel <flowlabel-list>	match the specified IPv6 flow label, the parameter is IPv6 flow label value, the ranging is 0 to 1048575
	vlan <vlan-list>	match the specified VLAN ID of the external VLAN Tag, the parameter is a VLAN ID list consisting of maximum 8 VLAN IDs, the ranging is 1 to 4094
	cos <cos-list>	match the specified CoS value, the parameter is a CoS list consisting of maximum 8 CoS values, the ranging is 0 to 7
Default	There is no match standard.	
Mode	Class-map Mode	
Usage	<p>Configure the match standard of the class map; the no command deletes the specified match standard.</p> <p>Only one match standard can be configured in a class map. When configuring the ACL match, permit rule is the match option, it will apply Policy Map action. Deny rule is the excluding option, it does not apply Policy Map action. If it has been configured other match rule, the operation is failure, but configuring the same match rule will cover the previous.</p>	
Example	<p>Create a class-map named c1, and configure the class rule of the class-map to match packets with IP Precedence of 0.</p> <pre>Switch(config)#class-map c1 Switch(config-classmap-c1)#match ip precedence 0 Switch(config-classmap-c1)#exit</pre>	

service-policy

Syntax	service-policy <policy-map-name> in no service-policy <policy-map-name> in	
Parameter	<policy-map-name>	The specified policy-map name of flexible QinQ
Default	No policy map is bound to port	
Mode	Port Configuration Mode	
Usage	Bind the specified policy of flexible QinQ to the ingress of the port, the no command cancels the binding. Only one policy map can be bound to each port, the function takes effect after the policy map is bound to a port. At present, do not support the configuration with add command and delete command in policy.	
Example	Apply policy-map p1 (p1 corresponds with the action that modify s-vid) to Ethernet port 1/0/1 for flexible QinQ. Switch(config-if-ethernet1/0/1)#dot1q-tunnel enable Switch(config-if-ethernet1/0/1)#service-policy p1 in	

Set

Syntax	set {s-vid <new-vid> cos <cos-list> drop-precedence <dp-list> internal-priority <inp-list> ip {dscp <dscp-list> precedence <pri-list>} s-tpid <tpid-list> } no set{s-vid cos drop-precedence internal-priority ip {dscp precedence} s-tpid }	
Parameter	<new-vid>	modify tunnel VID of VLAN Tag
	<cos-list>	modify cos value of packets
	<dp-list>	modify drop priority
	<inp-list>	modify inner priority
	<dscp-list> <pri-list>	modify ip dscp value or precedence value
	<tpid-list>	modify tunnel tpid value of packets
Default	Do not modify the value.	
Mode	Policy class map configuration mode	
Usage	Assign the new cos and vid value to the packets which match the class map, no command cancels the operation. Only modify the new value again for the classified flow that correspond the match standard.	
Example	Set an external VLAN Tag' VID as 3 for the packet which satisfy c2 class rule. Switch(config)#policy-map p1 Switch(config-policy-map-p1)#class c2 Switch(config-policy-map-p1-class-c2)#set s-vid 3 Switch(config-policy-map-p1-class-c2)#exit	

7.1.Commands for Layer 3 Interface

Description

Command	description <text> no description	
parameter	text	is the description information of VLAN interface, the length should not exceed 256 characters
default	Do not configure	
Mode	VLAN interface mode	
Usage Guide	The description information of VLAN interface behind description and shown under the configured VLAN.	
Example	Configure the description information of VLAN interface as test vlan. Switch(config)#interface vlan 2 Switch(config-if-vlan2)#description test vlan	

interface vlan

Command	interface vlan <vlan-id> no interface vlan <vlan-id>	
parameter	vlan-id	is the VLAN ID of the established VLAN, ranging from 1 to 4094.
default	No Layer 3 interface is configured upon switch shipment.	
Mode	Global Mode	
Usage Guide	this command is used to create the 3-layer interface, no the command is used to delete the 3-layer interface.	
Example	Create a VLAN interface (layer 3 interface). Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#	

no interface IFNAME

Command	no interface IFNAME	
parameter	IFNAME	Interface Name
default	-	
Mode	Global mode	
Usage Guide	This command is used to delete the layer 3 interface. It can deal with the situation that the interface name is spelt in special way. IFNAME can match multiple ways, such as vlan1, Vlan1, v1, V1 and etc.	
Example	Delete interface vlan1. (config)# no interface vlan1	

show ip route

Command	show ip route [database]	
parameter	database	is database information.
default	-	
Mode	Admin Mode	

Usage Guide	Show kernal routing table, include: routing type, destination network, mask, next-hop address, interface, etc.														
Example	<p>shows the routing table. Switch#show ip route Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP O - OSPF, IA - OSPF inter area N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2 E1 - OSPF external type 1, E2 - OSPF external type 2 i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area * - candidate default</p> <p>C 127.0.0.0/8 is directly connected, Loopback tag:0 Total routes are : 1 item(s)</p> <table border="1"> <tr> <td>Display information</td> <td>describe</td> </tr> <tr> <td>C –connected</td> <td>Direct route, namely the segment directly connected with the layer 3 switch</td> </tr> <tr> <td>S –static</td> <td>Static route, the route manually configured by users</td> </tr> <tr> <td>R - RIP derived</td> <td>RIP route, acquired by layer 3 switch through the RIP protocol.</td> </tr> <tr> <td>O - OSPF derived</td> <td>OSPF route, acquired by layer 3 switch through the OSPF protocol</td> </tr> <tr> <td>A- OSPF ASE</td> <td>Route introduced by OSPF</td> </tr> <tr> <td>B- BGP derived</td> <td>BGP route, acquired by the BGP protocol.</td> </tr> </table>	Display information	describe	C –connected	Direct route, namely the segment directly connected with the layer 3 switch	S –static	Static route, the route manually configured by users	R - RIP derived	RIP route, acquired by layer 3 switch through the RIP protocol.	O - OSPF derived	OSPF route, acquired by layer 3 switch through the OSPF protocol	A- OSPF ASE	Route introduced by OSPF	B- BGP derived	BGP route, acquired by the BGP protocol.
Display information	describe														
C –connected	Direct route, namely the segment directly connected with the layer 3 switch														
S –static	Static route, the route manually configured by users														
R - RIP derived	RIP route, acquired by layer 3 switch through the RIP protocol.														
O - OSPF derived	OSPF route, acquired by layer 3 switch through the OSPF protocol														
A- OSPF ASE	Route introduced by OSPF														
B- BGP derived	BGP route, acquired by the BGP protocol.														

7.2.Commands for IPv4/v6 configuration

clear ip traffic

Command	clear ip traffic
parameter	-
default	-
Mode	Admin Mode.
Usage Guide	Clear the statistic information of receiving and sending packets for IP kernel protocol, including the statistic of receiving packets, sending packets and dropping packets and the error information of receiving and sending packets for IP protocol, ICMP protocol, TCP protocol and UDP protocol.
Example	Clear statistic information of IP protocol. Switch#clear ip traffic

clear ipv6 neighbor

Command	clear ipv6 neighbors
parameter	-

default	-
Mode	Admin Mode.
Usage Guide	This command can not clear static neighbor
Example	Clear neighbor list. Switch#clear ipv6 neighbors

ip address

Command	ip address <ip-address> <mask> [secondary] no ip address [<ip-address> <mask>] [secondary]	
parameter	ip-address	is IP address, dotted decimal notation;
	mask	is subnet mask, dotted decimal notation;
	secondary	indicates that the IP address is configured as secondary IP address.
default	The system default is no IP address configuration.	
Mode	VLAN interface configuration mode	
Usage Guide	This command configures IP address on VLAN interface manually. If optional parameter secondary is not configured, then it is configured as the primary IP address of VLAN interface; if optional parameter secondary is configured, then that means the IP address is the secondary IP address of VLAN. One VLAN interface can only have one primary IP address and more than one secondary IP addresses. Primary IP and Secondary IP all can be used on SNMP/Web/Telnet management. Furthermore, the switch also provides BOOTP/DHCP manner to get IP address.	
Example	The IP address of switch VLAN1 interface is set to 192.168.1.10/24. Switch(Config-if-Vlan1)#ip address 192.168.1.10 255.255.255.0	

ip default-gateway

Command	ip default-gateway <A.B.C.D> no ip default-gateway <A.B.C.D>	
parameter	A.B.C.D	is gateway address, for example 10.1.1.10.
default	There is no default gateway.	
Mode	Global mode.	
Usage Guide	Configure the default gateway of the router to specify the default next hop address to which the packets will be sent.	
Example	Specifies the default gateway.Switch(config)# ip default-gateway 10.1.1.10	

ipv6 address

Command	ipv6 address <ipv6-address prefix-length> [eui-64] no ipv6 address <ipv6-address prefix-length> [eui-64]	
parameter	ipv6-address	is the prefix of IPv6 address, parameter
	prefix-length	is the prefix length of IPv6 address, which is between 3-128
	eui-64	means IPv6 address is generated automatically based on eui64 interface identifier of the interface.
default	-	

Mode	Interface Configuration Mode
Usage Guide	IPv6 address prefix cannot be multicast address or any other specific IPv6 address, and different layer 3 interfaces cannot configure the same address prefix. For global unicast address, the length of the prefix must be greater than or equal to 3. For site-local address and link-local address, the length of the prefix must be greater than or equal to 10.
Example	Configure an IPv6 address on VLAN1 Layer 3 interface: the prefix is 2001:3f:ed8::99 and the length of the prefix is 64. Switch(Config-if-Vlan1)#ipv6 address 2001:3f:ed8::99/64

ipv6 nd dad attempts

Command	ipv6 nd dad attempts <value> no ipv6 nd dad attempts	
parameter	value	is the Neighbor Solicitation Message number sent in succession by Duplicate Address Detection and the value of <value> must be in 0-10, NO command restores to default value 1.
default	The default request message number is 1	
Mode	Interface Configuration Mode	
Usage Guide	When configuring an IPv6 address, it is required to process IPv6 Duplicate Address Detection, this command is used to configure the ND message number of Duplicate Address Detection to be sent, value being 0 means no Duplicate Address Detection is executed.	
Example	The Neighbor Solicitation Message number sent in succession by interface when setting Duplicate Address Detection is 3. Switch(Config-if-Vlan1)# ipv6 nd dad attempts 3	

ipv6 nd ns-interval

Command	ipv6 nd ns-interval <seconds> no ipv6 nd ns-interval	
parameter	seconds	is the time interval of sending Neighbor Solicitation Message, <seconds> value must be between 1-3600 seconds, no command restores the default value 1 second.
default	The default Request Message time interval is 1 second.	
Mode	Interface Configuration Mode	
Usage Guide	The value to be set will include the situation in all routing announcement on the interface. Generally, very short time interval is not recommended.	
Example	Set Vlan1 interface to send out Neighbor Solicitation Message time interval to be 8 seconds. Switch(Config-if-Vlan1)#ipv6 nd ns-interval 8	

ipv6 neighbor

Command	ipv6 neighbor <ipv6-address> <hardware-address> interface
---------	---

	<i><interface-type interface-name></i> no ipv6 neighbor <i><ipv6-address></i>	
parameter	<i>ipv6-address</i>	is static neighbor IPv6 address
	<i>hardware-address</i>	is static neighbor hardware address
	<i>interface-type</i>	is Ethernet type,
	<i>interface-name</i>	is Layer 2 interface name
default	There is not static neighbor table entry	
Mode	Interface Configuration Mode	
Usage Guide	IPv6 address and multicast address for specific purpose and local address cannot be set as neighbor.	
Example	Set static neighbor 2001:1:2::4 on port E1/0/1, and the hardware MAC address is 00-03-0f-89-44-bc. Switch(Config-if-Vlan1)#ipv6 neighbor 2001:1:2::4 00-03-0f-89-44-bc interface Ethernet 1/0/1	

show ip interface

Command	show ip interface [<i><ifname></i> vlan <i><vlan-id></i>] brief									
parameter	<i>ifname</i>	Interface name								
	<i>vlan-id</i>	VLAN ID								
default	Show all brief information of the configured layer 3 interface when no parameter is specified.									
Mode	All modes.									
Usage Guide	This command is used to view brief information on the configured Layer 3 interface.									
Example	view brief information on vlan1 interface configuration. Switch#show ip interface vlan 1 brief <table border="1"> <thead> <tr> <th>Index</th> <th>Interface</th> <th>IP-Address</th> <th>Protocol</th> </tr> </thead> <tbody> <tr> <td>11001</td> <td>Vlan1</td> <td>192.168.2.1</td> <td>up</td> </tr> </tbody> </table>		Index	Interface	IP-Address	Protocol	11001	Vlan1	192.168.2.1	up
Index	Interface	IP-Address	Protocol							
11001	Vlan1	192.168.2.1	up							

show ip traffic

Command	show ip traffic
parameter	-
default	-
Mode	Admin Mode
Usage Guide	Display statistics for IP, ICMP, TCP, UDP packets received/sent.
Example	Displays statistics for IP packets. Switch#show ip traffic IP statistics: Rcvd: 3249810 total, 3180 local destination 0 header errors, 0 address errors 0 unknown protocol, 0 discards Frgs: 0 reassembled, 0 timeouts

0 fragment rcvd, 0 fragment dropped
 0 fragmented, 0 couldn't fragment, 0 fragment sent
 Sent: 0 generated, 3230439 forwarded
 0 dropped, 0 no route
 ICMP statistics:
 Rcvd: 0 total 0 errors 0 time exceeded
 0 redirects, 0 unreachable, 0 echo, 0 echo replies
 0 mask requests, 0 mask replies, 0 quench
 0 parameter, 0 timestamp, 0 timestamp replies
 Sent: 0 total 0 errors 0 time exceeded
 0 redirects, 0 unreachable, 0 echo, 0 echo replies
 0 mask requests, 0 mask replies, 0 quench
 0 parameter, 0 timestamp, 0 timestamp replies
 TCP statistics:
 TcpActiveOpens 0, TcpAttemptFails 0
 TcpCurrEstab 0, TcpEstabResets 0
 TcpInErrs 0, TcpInSegs 3180
 TcpMaxConn 0, TcpOutRsts 3
 TcpOutSegs 0, TcpPassiveOpens 8
 TcpRetransSegs 0, TcpRtoAlgorithm 0
 TcpRtoMax 0, TcpRtoMin 0
 UDP statics:
 UdpInDatagrams 0, UdpInErrors 0
 UdpNoPorts 0, UdpOutDatagrams 0

Display content	describe
IP statistics:	IP packet statistics
Rcvd: 3249810 total, 3180 local destination 0 header errors, 0 address errors 0 unknown protocol, 0 discards	Statistics of total packets received, number of packets reached local destination, number of packets have header errors, number of erroneous addresses, number of packets of unknown protocols; number of packets dropped.
Frgs: 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped 0 fragmented, 0 couldn't fragment, 0 fragment sent	Fragmentation statistics: number of packets reassembled, timeouts, fragments received, fragments discarded, packets that cannot be fragmented, number of fragments sent, etc.
Sent: 0 generated, 0 forwarded 0 dropped, 0 no route	Statistics for total packets sent, including number of local packets, forwarded packets, dropped packets and packets without route.

	ICMP statistics:	ICMP packet statistics.
	Rcvd: 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0 echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies	Statistics of total ICMP packets received and classified information
	Sent: 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0 echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies	Statistics of total ICMP packets sent and classified information
	TCP statistics:	TCP packet statistics.
	UDP statistics:	UDP packet statistics.

show ipv6 interface

Command	show ipv6 interface {brief <interface-name>}	
parameter	brief	is the brief summarization of IPv6 status and configuration
	<i>interface-name</i>	is Layer 3 interface name
default	-	
Mode	Admin and Configuration Mode	
Usage Guide	If only brief is specified, then information of all L3 is displayed, and you can also specify a specific Layer 3 interface.	
Example	View information ipv6 the vlan1 interface. Switch#show ipv6 interface Vlan1 Vlan1 is up, line protocol is up, dev index is 2004 Device flag 0x1203(UP BROADCAST ALLMULTI MULTICAST) IPv6 is enabled Link-local address(es): fe80::203:fff:fe00:10 PERMANENT Global unicast address(es): 3001::1 subnet is 3001::1/64 PERMANENT Joined group address(es): ff02::1 ff02::16 ff02::2 ff02::5 ff02::6 ff02::9 ff02::d	

	ff02::1:ff00:10 ff02::1:ff00:1 MTU is 1500 bytes ND DAD is enabled, number of DAD attempts is 1 ND managed_config_flag is unset ND other_config_flag is unset ND NS interval is 1 second(s) ND router advertisements is disabled ND RA min-interval is 200 second(s) ND RA max-interval is 600 second(s) ND RA hoplimit is 64 ND RA lifetime is 1800 second(s) ND RA MTU is 0 ND advertised reachable time is 0 millisecond(s) ND advertised retransmit time is 0 millisecond(s)												
	<table border="1"> <tr> <td>Display content</td> <td>describe</td> </tr> <tr> <td>Vlan1</td> <td>Layer 3 interface name</td> </tr> <tr> <td>[up/up]</td> <td>Layer 3 interface status</td> </tr> <tr> <td>dev index</td> <td>Internal index No.</td> </tr> <tr> <td>fe80::203:fff:fe00:10</td> <td>Automatically configured IPv6 address of Layer 3 interface</td> </tr> <tr> <td>3001::1</td> <td>Configured IPv6 address of Layer 3 interface</td> </tr> </table>	Display content	describe	Vlan1	Layer 3 interface name	[up/up]	Layer 3 interface status	dev index	Internal index No.	fe80::203:fff:fe00:10	Automatically configured IPv6 address of Layer 3 interface	3001::1	Configured IPv6 address of Layer 3 interface
Display content	describe												
Vlan1	Layer 3 interface name												
[up/up]	Layer 3 interface status												
dev index	Internal index No.												
fe80::203:fff:fe00:10	Automatically configured IPv6 address of Layer 3 interface												
3001::1	Configured IPv6 address of Layer 3 interface												

show ipv6 route

Command	show ipv6 route [database]	
parameter	database	is router database
default	-	
Mode	Admin and Configuration Mode	
Usage Guide	show ipv6 route only shows IPv6 kernal routing table (routing table in tcpip), database shows all routers except the local router.	
Example	Display IPv6 Routing Table. Switch#show ipv6 route IPv6 Routing Table Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF, I - IS-IS, B - BGP Timers: Uptime C ::1/128 via ::, Loopback, 02:55:37 tag:0	
	Display content	describe
	IPv6 Routing Table	IPv6 routing table status
	Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF, I - IS-IS, B - BGP > -	Abbreviation display sign of every entry

	selected route	
--	----------------	--

show ipv6 neighbors

Command	show ipv6 neighbors [{vlan ethernet} interface-number interface-name address <ipv6address>]	
parameter	{vlan ethernet} interface-number	specify the lookup based on interface
	ipv6address	specifies the lookup based on IPv6 address. It displays the whole neighbor table entry if without parameter.
default	-	
Mode	Admin and Configuration Mode	
Usage Guide	Displays neighbor table information. If there are no parameters, the entire neighbor table entry is displayed.	
Example	Check ipv6 Neighbor Table Information. Switch#show ipv6 neighbors IPv6 neighbour unicast items: 2, valid: 1, matched: 1, incomplete: 0, delayed: 0, manage items: 0	
	IPv6 Address	Hardware Addr Interface
	Port State Age-time(sec)	
	fe80::d8e4:a662:88e4:dc24	00-e0-4c-21-00-34 Vlan1
	Ethernet1/0/18 reachable 563	
	IPv6 neighbour table: 1 entries	
	Display content	describe
	IPv6 Addr	Neighbor IPv6 address
Hardware Addr	Neighbor MAC address	
Interface	Exit interface name	
Port	Exit interface name	
State	Neighbor status (reachable. statle. delay. probe. permanent. incomplete. unknow)	

show ipv6 traffic

Command	show ipv6 traffic
parameter	-
default	-
Mode	Admin and Configuration Mode
Usage Guide	Display IPv6 transmit packet statistics.
Example	Display IPv6 transmit packet statistics. Switch#show ipv6 traffic
	IPv6 statistics:
	Rcvd: 27 total, 21 local destination 0 header errors, 0 address errors

0 unknown protocol, 0 discards
 Frags: 0 reassembled, 0 timeouts
 0 fragment rcvd, 0 fragment dropped
 0 fragmented, 0 couldn't fragment, 0 fragment sent
 Sent: 24 generated, 0 forwarded
 0 dropped, 0 no route

ICMPv6 statistics:
 Rcvd: 21 total, 0 errors
 0 unreachable, 0 too big, 0 time exceeded, 0 parameter problems
 0 echo requests, 0 echo replies
 0 group queries, 0 group responses, 0 group reduces
 0 router solicits, 0 router adverts, 0 redirects
 9 neighbor solicits, 12 neighbor adverts
 Sent: 24 total, 0 errors
 0 unreachable, 0 too big, 0 time exceeded, 0 parameter problems
 0 echo requests, 0 echo replies
 0 group queries, 0 group responses, 0 group reduces
 0 router solicits, 0 router adverts, 0 redirects
 9 neighbor solicits, 9 neighbor adverts

TCP statistics:
 Rcvd: 0 total segments, 0 errors
 Sent: 0 total segments, 0 retransmitted segments

UDP statics:
 Rcvd: 0 total, 0 errors, 0 no port
 Sent: 0 total

Display content	describe
IPv6 statistics:	IPv6 data report statistics
Rcvd: 27 total, 21 local destination 0 header errors, 0 address errors 0 unknown protocol, 0 discards	IPv6 received packets statistics
Frags: 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped 0 fragmented, 0 couldn't fragment, 0 fragment sent	IPv6 fragmenting statistics
Sent: 24 total, 0 errors 0 unreachable, 0 too big, 0 time exceeded, 0 parameter problems 0 echo requests, 0 echo replies 0 group queries, 0 group responses, 0 group reduces 0 router solicits, 0 router adverts, 0 redirects 9 neighbor solicits, 9 neighbor adverts	IPv6 sent packets statistics

ip route

Command	<pre>ip route {<ip-prefix> <mask> <ip-prefix>/<prefix-length>} {<gateway-address> null0} [<distance>] no ip route {<ip-prefix> <mask> <ip-prefix>/<prefix-length>} [<gateway-address> <gateway-interface>] [<distance>]</pre>	
parameter	<i>ip-prefix</i>	Routing destination address, for example :1.1.1.1
	<i>mask</i>	Routing destination address subnet mask, for example :255.255.255.0
	<i>prefix-length</i>	Routing destination address prefix
	<i>gateway-address</i>	Address IP next hop, for example :1.1.1.1
	null0	Forwarding interface
	<i>distance</i>	Routing priority, size range :1-255
default	Default static routing has a priority of 1	
Mode	Global mode.	
Usage Guide	This command can be used to configure switch static routing. both the address and the forwarding interface are available by specifying the next hop IP the routing packet when configuring the next hop of the static route.	
Example	Add static routing to the switch. Switch(config)#ip route 192.168.2.8/24 null0	

7.3.Commands for ARP Configuration

Arp

Command	<pre>arp <ip_address> <mac_address> {interface [ethernet] <portName>} no arp <ip_address></pre>	
parameter	<i>ip_address</i>	is the IP address, at the same field with interface address
	<i>mac_address</i>	is the MAC address
	ethernet	stands for Ethernet port
	<i>portName</i>	for the name of layer2 port
default	No static ARP entry is set by default.	
Mode	VLAN Interface Mode	
Usage Guide	Static ARP entries can be configured in the switch.	
Example	Configuring static ARP for interface VLAN1. Switch(Config-if-Vlan1)#arp 1.1.1.1 00-03-0f-f0-12-34 interface eth 1/0/2	

clear arp-cache

Command	clear arp-cache
parameter	-
default	-
Mode	Admin Mode
Usage Guide	this command is used to clear the arp table.
Example	Clear the arp table.

	Switch#clear arp-cache
--	------------------------

clear arp traffic

Command	clear arp traffic
parameter	-
default	-
Mode	Admin Mode
Usage Guide	Clear the switch ARP message statistics. box switches, this command only clears the statistics of APP messages received and sent from the current card.
Example	Clear switch ARP message statistics. Switch#clear arp traffic

show arp

Command	show arp [<ipaddress>] [<vlan-id>] [<hw-addr>] [type {static dynamic}] [count] [vrf word]	
parameter	<i>ipaddress</i>	is a specified IP address
	<i>vlan-id</i>	Vlan id
	<i>hw-addr</i>	for entry of specified MAC address
	static	for static ARP entry
	dynamic	for dynamic ARP entry
	count	displays number of ARP entries
	vrf word	is the specified vrf name
default	-	
Mode	Admin Mode	
Usage Guide	Displays the content of current ARP table such as IP address, MAC address, hardware type, interface name, etc.	
Example	Displays the current ARP table content information.	
	Switch#show arp	
	ARP Unicast Items: 7, Valid: 7, Matched: 7, Verifying: 0, Incomplete: 0, Failed: 0, None: 0	
	Address	Hardware Addr Interface Port Flag
	50.1.1.6	00-0a-eb-51-51-38 Vlan50 Ethernet1/0/11 Dynamic
	50.1.1.9	00-00-00-00-00-09 Vlan50 Ethernet1/0/1 Static
150.1.1.2	00-00-58-fc-48-9f Vlan150 Ethernet1/0/4 Dynamic	
	Display content	describe
	Total arp items	Total number of ARP entries.
	Valid	ARP entry number matching the filter conditions and attributing the legality states.
	Matched	ARP entry number matching the filter conditions.
	Verifying	ARP entry number at verifying again validity for ARP

	InCompleted	ARP entry number have ARP request sent without ARP reply.
	Failed	ARP entry number at failed state.
	None	ARP entry number at begin-found state.
	Address	IP address of ARP entries.
	Hardware Address	MAC address of ARP entries.
	Interface	Layer 3 interface corresponding to the ARP entry.
	Port	Physical (Layer2) port corresponding to the ARP entry.
	Flag	Describes whether ARP entry is dynamic or static.

show arp traffic

Command	show arp traffic
parameter	-
default	-
Mode	Admin and Config Mode
Usage Guide	Display statistics information of received and sent APP messages.
Example	Displays current ARP statistics. Switch#show arp traffic ARP statistics: Rcvd: 0 request, 0 response Sent: 0 request, 0 response

7.4.Commands for ARP Scanning Prevention

anti-arpscan enable

Command	anti-arpscan enable no anti-arpscan enable
parameter	-
default	Disable ARP scanning prevention function.
Mode	Global configuration mode
Usage Guide	When remotely managing a switch with a method like telnet, users should set the uplink port as a Super Trust port before enabling anti-ARP-scan function, preventing the port from being shutdown because of receiving too many ARP messages. After the anti-ARP-scan function is disabled, this port will be reset to its default attribute, that is, Untrust port.
Example	Enable the ARP scanning prevention function of the switch. Switch(config)#anti-arpscan enable

anti-arpscan port-based threshold

Command	anti-arpscan port-based threshold <threshold-value>
---------	---

	no anti-arpscan port-based threshold	
parameter	<i>threshold-value</i>	rate threshold, ranging from 2 to 200.
default	10 packets /second.	
Mode	Global Configuration Mode	
Usage Guide	the threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.	
Example	Set the threshold of port-based ARP scanning prevention as 10 packets/second. Switch(config)#anti-arpscan port-based threshold 10	

anti-arpscan ip-based threshold

Command	anti-arpscan ip-based threshold < <i>threshold-value</i> > no anti-arpscan ip-based threshold	
parameter	<i>threshold-value</i>	rate threshold, ranging from 1 to 200.
default	3 packets/second.	
Mode	Global configuration mode	
Usage Guide	The threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.	
Example	Set the threshold of IP-based ARP scanning prevention as 6 packets/second. Switch(config)#anti-arpscan ip-based threshold 6	

anti-arpscan trust

Command	anti-arpscan trust [port supertrust-port] no anti-arpscan trust [port supertrust-port]	
parameter	-	
default	By default all the ports are non- trustful.	
Mode	Port configuration mode	
Usage Guide	If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed, but the non- trustful IP of this port will still be checked. If a port is set as a super trusted port, then neither the port nor the IP of the port will be dealt with. If the port is already closed by ARP scanning prevention, it will be opened right after being set as a trusted port.	
Example	Set port ethernet 4/5 of the switch as a trusted port. Switch(Config-If-Ethernet4/5)# anti-arpscan trust port	

anti-arpscan trust ip

Command	anti-arpscan trust ip < <i>ip-address</i> > [< <i>netmask</i> >] no anti-arpscan trust ip < <i>ip-address</i> > [< <i>netmask</i> >]	
---------	---	--

parameter	<i>ip-address</i>	Configure trusted IP address
	<i>netmask</i>	Net mask of the IP.
default	By default all the IP are non-trustful. Default mask is 255.255.255.255	
Mode	Global configuration mode	
Usage Guide	If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed. If the port is already closed by ARP scanning prevention, its traffic will be recovered right immediately.	
Example	Set 192.168.1.0/24 as trusted IP Switch(config)#anti-arpscan trust ip 192.168.1.0 255.255.255.0	

anti-arpscan recovery enable

Command	anti-arpscan recovery enable no anti-arpscan recovery enable	
parameter	-	
default	Enable the automatic recovery function	
Mode	Global configuration mode	
Usage Guide	If the users want the normal state to be recovered after a while the port is closed or the IP is disabled, they can configure this function.	
Example	Enable the automatic recovery function of the switch. Switch(config)#anti-arpscan recovery enable	

anti-arpscan recovery time

Command	anti-arpscan recovery time <seconds> no anti-arpscan recovery time	
parameter	<i>seconds</i>	Automatic recovery time, in second ranging from 5 to 86400.
default	300s	
Mode	Global configuration mode	
Usage Guide	this command is used to configure automatic recovery time, no command is used to restore default configuration.	
Example	Set the automatic recovery time as 3600 seconds. Switch(config)#anti-arpscan recovery time 3600	

anti-arpscan log enable

Command	anti-arpscan log enable no anti-arpscan log enable	
parameter	-	
default	Enable ARP scanning prevention log function.	
Mode	Global configuration mode	

Usage Guide	After enabling ARP scanning prevention log function, users can check the detailed information of ports being closed or automatically recovered by ARP scanning prevention or IP being disabled and recovered by ARP scanning prevention. The level of the log is "Warning".
Example	Enable ARP scanning prevention log function of the switch. Switch(config)#anti-arpscan log enable

anti-arpscan trap enable

Command	anti-arpscan trap enable no anti-arpscan trap enable
parameter	-
default	Disable ARP scanning prevention SNMP Trap function.
Mode	Global configuration mode
Usage Guide	After enabling ARP scanning prevention SNMP Trap function, users will receive Trap message whenever a port is closed or recovered by ARP scanning prevention, and whenever IP t is closed or recovered by ARP scanning prevention.
Example	Enable ARP scanning prevention SNMP Trap function of the switch. Switch(config)#anti-arpscan trap enable

show anti-arpscan

Command	show anti-arpscan [trust [ip port supertrust-port] prohibited [ip port]]																																												
parameter	-																																												
default	Display every port to tell whether it is a trusted port and whether it is closed. If the port is closed, then display how long it has been closed. Display all the trusted IP and disabled IP.																																												
Mode	Admin Mode																																												
Usage Guide	Use "show anti-arpscan trust port" if users only want to check trusted ports. The reset follow the same rule.																																												
Example	Check the operating state of ARP scanning prevention function after enabling it. Switch#show anti-arpscan Total port: 28 <table border="1"> <thead> <tr> <th>Name</th> <th>Port-property</th> <th>beShut</th> <th>shutTime(seconds)</th> </tr> </thead> <tbody> <tr><td>Ethernet1/0/1</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/2</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/3</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/4</td><td>trust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/5</td><td>trust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/6</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/7</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/8</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/9</td><td>untrust</td><td>N</td><td>0</td></tr> <tr><td>Ethernet1/0/10</td><td>untrust</td><td>N</td><td>0</td></tr> </tbody> </table>	Name	Port-property	beShut	shutTime(seconds)	Ethernet1/0/1	untrust	N	0	Ethernet1/0/2	untrust	N	0	Ethernet1/0/3	untrust	N	0	Ethernet1/0/4	trust	N	0	Ethernet1/0/5	trust	N	0	Ethernet1/0/6	untrust	N	0	Ethernet1/0/7	untrust	N	0	Ethernet1/0/8	untrust	N	0	Ethernet1/0/9	untrust	N	0	Ethernet1/0/10	untrust	N	0
Name	Port-property	beShut	shutTime(seconds)																																										
Ethernet1/0/1	untrust	N	0																																										
Ethernet1/0/2	untrust	N	0																																										
Ethernet1/0/3	untrust	N	0																																										
Ethernet1/0/4	trust	N	0																																										
Ethernet1/0/5	trust	N	0																																										
Ethernet1/0/6	untrust	N	0																																										
Ethernet1/0/7	untrust	N	0																																										
Ethernet1/0/8	untrust	N	0																																										
Ethernet1/0/9	untrust	N	0																																										
Ethernet1/0/10	untrust	N	0																																										

	Ethernet1/0/11	untrust	N	0
	Ethernet1/0/12	untrust	N	0
	Ethernet1/0/13	untrust	N	0
	Ethernet1/0/14	untrust	N	0
	Ethernet1/0/15	untrust	N	0
	Ethernet1/0/16	untrust	N	0
	Ethernet1/0/17	untrust	N	0
	Ethernet1/0/18	untrust	N	0
	Ethernet1/0/19	untrust	N	0
	Ethernet1/0/20	untrust	N	0
	Ethernet1/0/21	untrust	N	0
	Ethernet1/0/22	untrust	N	0
	Ethernet1/0/23	untrust	N	0
	Ethernet1/0/24	untrust	N	0
	Ethernet1/0/25	untrust	N	0
	Ethernet1/0/26	untrust	N	0
	Ethernet1/0/27	untrust	N	0
	Ethernet1/0/28	untrust	N	0
	No prohibited IP.			
	Trust IP:			
	192.168.1.0	255.255.255.0		

7.5.Commands for Preventing ARP Spoofing

ip arp-security updateprotect

Command	ip arp-security updateprotect no ip arp-security updateprotect
parameter	-
default	ARP table automatic update.
Mode	Global Mode/ Interface configuration.
Usage Guide	Forbid ARP table automatic update, the ARP packets conflicting with current ARP item (e.g. with same IP but different MAC or port) will be dropped, the others will be received to update aging timer or create a new item; so, the current ARP item keep unchanged and the new item can still be learned.
Example	Automatic update of ARP table is prohibited. Switch(Config-if-Vlan1)#ip arp-security updateprotect. Switch(config)#ip arp-security updateprotect

ip arp-security learnprotect

Command	ip arp-security learnprotect no ip arp-security learnprotect
parameter	-
default	ARP learning enabled.
Mode	Global Mode/ Interface Configuration

Usage Guide	This command is for preventing the automatic learning and updating of ARP. Unlike ip arp-security updateprotect, once this command implemented, there will still be timeout even if the switch keeps sending Request/Reply messages.
Example	Prohibit IPv4 version of the ARP learning function. Switch(config)# ip arp-security learnprotect

ip arp-security convert

Command	ip arp-security convert
parameter	-
default	-
Mode	Global Mode/ Interface configuration
Usage Guide	This command will convert the dynamic ARP entries to static ones, which, in combination with disabling automatic learning, can prevent ARP binding. Once implemented, this command will lose its effect.
Example	To change all dynamic ARP to static ARP. Switch(config)#ip arp -security convert

clear ip arp dynamic

Command	clear ip arp dynamic
parameter	-
default	-
Mode	Interface Configuration
Usage Guide	This command will clear dynamic entries before binding ARP. Once implemented, this command will lose its effect.
Example	Clear all dynamic ARP. on the interface. Switch(Config-if-Vlan1)#clear ip arp dynamic

clear ipv6 nd dynamic

Command	clear ipv6 nd dynamic
parameter	-
default	-
Mode	Vlan Interface Mode
Usage Guide	It used in dynamic table when use ND bind function to clear. After executeit, the command will be useless.
Example	Clear all dynamic ND. in ports. Switch(Config-if-Vlan1)#clear ipv6 nd dynamic

7.6.Command for ARP GUARD

arp-guard ip

Command	arp-guard ip <addr> no arp-guard ip <addr>	
parameter	Addr	is the protected IP address, in dotted decimal notation
default	There is no ARP GUARD address by default	
Mode	Port configuration mode	
Usage Guide	After configuring the ARP GUARD address, the ARP messages received from the ports configured ARP GUARD will be filtered. If the source IP addresses of the ARP message match the ARP GUARD address configured on this port, these messages will be judged as ARP cheating messages, which will be directly dropped instead of sending to the CPU of the switch or forwarding. 16 ARP GUARD addresses can be configured on each port.	
Example	Configure the ARP GUARD address on port ethernet1/0/1 as 100.1.1.1 switch(config)#interface ethernet1/0/1 switch(Config-If-Ethernet 1/0/1)#arp-guard ip 100.1.1.1	

7.7.Commands for Gratuitous ARP Configuration

ip gratuitous-arp

Command	ip gratuitous-arp [<interval-time>] no ip gratuitous-arp	
parameter	<i>interval-time</i>	is the update interval for gratuitous ARP with its value limited between 5 and 1200 seconds and with default value as 300 seconds.
default	Gratuitous ARP is disabled by default.	
Mode	Global configuration mode and vlan interface configuration mode	
Usage Guide	When configuring gratuitous ARP in global configuration mode, all the Layer 3 interfaces in the switch will be enabled to send gratuitous ARP request. If gratuitous ARP is configured in interface configuration mode, then only the specified interface is able to send gratuitous ARP requests. When configuring the gratuitous ARP, the update interval configuration from interface configuration mode has higher preference than that from the global configuration mode.	
Example	To enable gratuitous ARP in global configuration mode, and set the update interval to be 400 seconds. Switch#config Switch(config)#ip gratuitous-arp 400	

show ip gratuitous-arp

Command	show ip gratuitous-arp [interface vlan <vlan-id>]	
parameter	<i>vlan-id</i>	VLAN ID
default	-	
Mode	All the Configuration Modes.	
Usage Guide	Displays gratuitous ARP configuration information.	

Example	<p>Displays gratuitous ARP configuration information.</p> <pre>Switch#show ip gratuitous-arp Gratuitous ARP send is Global enabled, Interval-Time is 300(s) Gratuitous ARP send enabled interface vlan information: Name Interval-Time(seconds) Vlan1 400 Vlan10 350</pre>
---------	--

7.8.Commands for Dynamic ARP Inspection

ip arp inspection

Command	<pre>ip arp inspection vlan <vlan-id> no ip arp inspection vlan <vlan-id></pre>	
parameter	vlan-id	is the vlan which is enabled the dynamic ARP inspection function
default	Disable.	
Mode	Global Mode.	
Usage Guide	<p>After configured the dynamic ARP inspection function in global mode, the administrator can intercept, record and drop the ARP data packets which have the invalid MAC address/IP address.</p>	
Example	<p>Enable the dynamic ARP inspection function of vlan10.</p> <pre>Switch(config)# Switch(config)#ip arp inspection vlan 10 Switch(config)#exit</pre>	

ip arp inspection trust

Command	<pre>ip arp inspection trust no ip arp inspection trust</pre>	
parameter	-	
default	All the ports are the untrusted ports as default.	
Mode	Port Mode	
Usage Guide	<p>After configured this command under the port mode, the configured port will not inspect the received ARP packet and it will forward it directly. If the ARP data packet is received from the untrusted port, the switch will only forward the lawful data packet. For the illegal data, it will drop the data directly and record this action.</p>	
Example	<p>Configure the port 1/0/1 as the trusted port.</p> <pre>Switch(config)# Switch(config)#in e 1/0/1 Switch(config-if-ethernet1/0/1)#ip arp inspection trust</pre>	

ip arp inspection limit-rate

Command	ip arp inspection limit-rate <rate> no ip arp inspection limit-rate	
parameter	rate	is the configured limited rate of the ARP packet of the untrusted port, the unit is pps
default	Do not limit the rate for the ARP packets of the trusted or untrusted ports.	
Mode	Port Mode	
Usage Guide	This command can limit the ARP packet rate of the untrusted port. The rate of the lawful ARP data packets forwarding is in the limited range.	
Example	Configure the rate of the ARP packet of the untrusted port 1/0/1 as 100pps. Switch(config)# Switch(config)#in e 1/0/1 Switch(config-if-ethernet1/0/1)# ip arp inspection limit-rate 100 Switch(config-if-ethernet1/0/1)#exit	

8.1.DHCP

bootfile

Syntax	Bootfile <filename> no bootfile	
Parameter	<filename>	name of the file to be imported, up to 255 characters are allowed.
Default	None	
Mode	DHCP Address Pool Mode	
Usage	Specify the name of the file to be imported for the client. This is usually used for diskless workstations that need to download a configuration file from the server on boot up. This command is together with the “next sever”.	
Example	The path and filename for the file to be imported is “temp\nos.img” Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#bootfile \temp\nos.img	

clear ip dhcp binding

Syntax	clear ip dhcp binding (<A.B.C.D> all)	
Parameter	<A.B.C.D>	IP address that has a binding record in decimal format
	all	all IP addresses that have a binding record
Default	None	
Mode	Admin Mode	
Usage	“show ip dhcp binding” command can be used to view binding information for IP addresses and corresponding DHCP client hardware addresses. If the DHCP server is informed that a DHCP client is not using the assigned IP address for some reason before the lease period expires, the DHCP server would not remove the binding information automatically. The system administrator can use this command to delete that IP address-client hardware address binding manually, if “all” is specified, then all auto binding records will be deleted, thus all addresses in the DHCP address pool	

	will be reallocated.
Example	Removing all IP-hardware address binding records Switch#clear ip dhcp binding all

clear ip dhcp conflict

Syntax	clear ip dhcp binding (<A.B.C.D> all)	
Parameter	<A.B.C.D>	IP address that has a conflict record;
	all	All stands for all addresses that have conflict records.
Default	None	
Mode	Admin Mode	
Usage	show ip dhcp conflict” command can be used to check which IP addresses are conflicting for use. The “clear ip dhcp conflict” command can be used to delete the conflict record for an address. If "all" is specified, then all conflict records in the log will be removed. When records are removed from the log, the addresses are available for allocation by the DHCP server	
Example	The network administrator finds 10.1.128.160 that has a conflict record in the log and is no longer used by anyone, so he deletes the record from the address conflict log. Switch#clear ip dhcp conflict 10.1.128.160	

clear ip dhcp server statistics

Syntax	clear ip dhcp server statistics	
Parameter	None	
Default	None	
Mode	Admin Mode	
Usage	DHCP count statistics can be viewed with “show ip dhcp server statistics” command, all information is accumulated. You can use the “clear ip dhcp server statistics” command to clear the count for easier statistics checking	
Example	Clearing the count for DHCP server. Switch#clear ip dhcp server statistics	

client-identifier

Syntax	client-identifier <unique-identifier> no client-identifier	
Parameter	<unique-identifier>	user identifier, in dotted Hex format
Default	None	
Mode	DHCP Address Pool Mode	
Usage	This command is used with “host” when binding an address manually. If the requesting client identifier matches the specified identifier, DHCP server assigns the IP address defined in “host” command to the client.	
Example	Specifying the IP address 10.1.128.160 to be bound to user with the unique id of 00-10-5a-60-af-12 in manual address binding.	

	<pre>Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#client-identifier 00-10-5a-60-af-12 Switch(dhcp-1-config)#host 10.1.128.160 24</pre>
--	---

default-router

Syntax	<pre>default-router <A.B.C.D> [<A.B.C.D>[...<A.B.C.D>]] no default-router</pre>	
Parameter	<A.B.C.D>	IP addresses, in decimal format.
Default	No default gateway is configured for DHCP clients by default.	
Mode	DHCP Address Pool Mode	
Usage	The IP address of default gateway(s) should be in the same subnet as the DHCP client IP, the switch supports up to 8 gateway addresses. The gateway address assigned first has the highest priority, and therefore address1 has the highest priority, and address2 has the second, and so on.	
Example	<pre>Configuring the default gateway for DHCP clients to be 10.1.128.2 and 10.1.128.100. Switch#config Switch(config) # ip dhcp pool 1 Switch(dhcp-1-config)#default-router 10.1.128.2 10.1.128.100</pre>	

dns-server

Syntax	<pre>dns-server <A.B.C.D> [<A.B.C.D>[...<A.B.C.D>]] no dns-server</pre>	
Parameter	<A.B.C.D>	IP addresses, in decimal format.
Default	No DNS server is configured for DHCP clients by default.	
Mode	DHCP Address Pool Mode	
Usage	Up to 8 DNS server addresses can be configured. The DNS server address assigned first has the highest priority, therefore address 1 has the highest priority, and address 2 has the second, and so on.	
Example	<pre>Set 10.1.128.2 as the DNS server address for DHCP clients. Switch#config Switch(config) # ip dhcp pool 1 Switch(dhcp-1-config)#dns-server 10.1.128.2</pre>	

domain-name

Syntax	<pre>domain-name <domain> no domain-name</pre>	
Parameter	<domain>	domain name, up to 255 characters are allowed.
Default	None	
Mode	DHCP Address Pool Mode	

Usage	Specifies a domain name for the client.
Example	Specifying "switch.com.cn" as the DHCP clients' domain name. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#domain-name switch.com.cn

hardware-address

Syntax	hardware-address <hardware-address> [Ethernet IEEE802 <type-number>] no hardware-address	
Parameter	<hardware-address>	hardware address in Hex
	Ethernet IEEE802	Ethernet protocol type
	<type-number>	RFC number defined for protocol types, from 1 to 255, e.g., 0 for Ethernet and 6 for IEEE 802.
Default	The default protocol type is Ethernet	
Mode	DHCP Address Pool Mode	
Usage	This command is used with the "host" when binding address manually. If the requesting client hardware address matches the specified hardware address, the DHCP server assigns the IP address defined in "host" command to the client.	
Example	Specify IP address 10.1.128.160 to be bound to the user with hardware address 00-00-e2-3a-26-04 in manual address binding. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#hardware 00-00-e2-3a-26-04 Switch(dhcp-1-config)#host 10.1.128.160 24	

Host

Syntax	host <address> [<mask> <prefix-length>] no host	
Parameter	<address>	IP address in decimal format
	<mask>	subnet mask in decimal format
	<prefix-length>	mask is indicated by prefix. For example, mask 255.255.255.0 in prefix is "24", and mask 255.255.255.252 in prefix is "30".
Default	None	
Mode	DHCP Address Pool Mode	
Usage	If no mask or prefix is configured when configuring the IP address, and no information in the IP address pool indicates anything about the mask, the system will assign a mask automatically according to the IP address class. This command is used with "hardware address" command or "client identifier" command when binding addresses manually. If the identifier or hardware address of the requesting client matches the specified identifier or hardware address, the DHCP server assigns the IP address defined in "host" command to the client.	
Example	Specifying IP address 10.1.128.160 to be bound to user with hardware address	

	<p>00-10-5a-60-af-12 in manual address binding.</p> <pre>Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#hardware-address 00-10-5a-60-af-12 Switch(dhcp-1-config)#host 10.1.128.160 24</pre>
--	--

ip dhcp conflict logging

Syntax	<pre>ip dhcp conflict logging no ip dhcp conflict logging</pre>
Parameter	none
Default	Logging for address conflict is enabled by default.
Mode	Global Mode
Usage	When logging is enabled, once the address conflict is detected by the DHCP server, the conflicting address will be logged. Addresses present in the log for conflicts will not be assigned dynamically by the DHCP server until the conflicting records are deleted.
Example	<p>Disable logging for DHCP server.</p> <pre>Switch#config Switch(config)#no ip dhcp conflict logging</pre>

ip dhcp disable

Syntax	<pre>ip dhcp disable no ip dhcp disable</pre>
Parameter	none
Default	Enable
Mode	Port mode
Usage	After the port disables DHCP services, directly drop all DHCP packets sent by the port.
Example	<p>The port disables DHCP services.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#ip dhcp disable</pre>

ip dhcp excluded-address

Syntax	<pre>ip dhcp excluded-address <low-address> [<high-address>] no ip dhcp excluded-address <low-address> [<high-address>]</pre>	
Parameter	<low-address>	starting IP address
	<high-address>	ending IP address
Default	Only individual address is excluded by default	
Mode	Global Mode	
Usage	This command can be used to exclude one or several consecutive addresses in the pool from being assigned dynamically so that those addresses can be used by the administrator for other purposes.	

Example	Reserving addresses 1.1.1.1 from dynamic assignment. Switch#config Switch(config)#ip dhcp excluded-address 1.1.1.1
---------	--

ip dhcp pool

Syntax	ip dhcp pool <name> no ip dhcp pool <name>	
Parameter	<name>	address pool name, up to 32 characters are allowed
Default	None	
Mode	Global Mode	
Usage	This command is used to configure a DHCP address pool under Global	
Example	Defining an address pool named "1". Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#	

ip dhcp conflict ping-detection enable

Syntax	ip dhcp conflict ping-detection enable no ip dhcp conflict ping-detection enable	
Parameter	None	
Default	By default, Ping-detection of conflict is disabled.	
Mode	Global Mode	
Usage	To enable Ping-detection of conflict, one should enable the log of conflict addresses, when which is disabled, so will the ping-detection of conflict. When a client is unable to receive Ping request messages (when blocked by firewall, for example), this function will check local ARP according to allocated IP: if a designated IP has a corresponding ARP, then an address conflict exists; otherwise, allocate it to the client.	
Example	Enable Ping-detection of conflict. Switch#config Switch(config)#ip dhcp conflict ping-detection enable	

ip dhcp ping packets

Syntax	ip dhcp ping packets <request-num> no ip dhcp ping packets	
Parameter	<request num>	number of Ping request message to be sent in Ping-detection of conflict.
Default	No more than 2 Ping request messages will be sent by default.	

Mode	Global Mode
Usage	Set the max number of Ping request (Echo Request) message to be sent in Ping-detection of conflict on DHCP server, whose default value is 2; the no operation of this command will restore the default value.
Example	Set the max number of Ping request (Echo Request) message to be sent in Ping-detection of conflict on DHCP server as 3. Switch#config Switch(config)#ip dhcp ping packets 3

ip dhcp ping timeout

Syntax	ip dhcp ping timeout <timeout-value> no ip dhcp ping timeout	
Parameter	<timeout-value>	<timeout-value> is the timeout period of waiting for a reply message after each Ping request message in Ping-detection of conflict.
Default	The timeout period is 500ms by default.	
Mode	Global Mode	
Usage	Set the timeout period (in ms) of waiting for a reply message (Echo Request) after each Ping request message (Echo Request) in Ping-detection of conflict on DHCP server, whose default value is 500ms. The no operation of this command will restore the default value.	
Example	Set the timeout period (in ms) of waiting for each reply message (Echo Request) in Ping-detection of conflict on DHCP server as 600ms. Switch#config Switch(config)#ip dhcp ping timeout 600	

Lease

Syntax	lease (<days> [<hours>][<minutes>] infinite) no lease	
Parameter	<days>	number of days from 0 to 365;
	<hours>	number of hours from 0 to 23
	<minutes>	number of minutes from 0 to 59
	infinite	perpetual use
Default	The default lease duration is 1 day.	
Mode	DHCP Address Pool Mode	
Usage	DHCP is the protocol to assign network addresses dynamically instead of permanently, hence the introduction of lease duration. Lease settings should be decided based on network conditions: too long lease duration offsets the flexibility of DHCP, while too short duration results in increased network traffic and overhead. The default lease duration of switch is 1 day.	
Example	Setting the lease of DHCP pool "sd" to 3 days 12 hours and 30 minutes. Switch#config Switch(config)#ip dhcp pool sd	

	Switch(dhcp-sd-config)#lease 3 12 30
--	--------------------------------------

max-lease-time

Syntax	max-lease-time (<days> [<hours>][<minutes>] infinite) no max-lease-time	
Parameter	<days>	number of days from 0 to 365;
	<hours>	number of hours from 0 to 23
	<minutes>	number of minutes from 0 to 59
	infinite	perpetual use
Default	The default lease time is 1 day.	
Mode	DHCP Address Pool Mode	
Usage	This command is used to DHCP request packets with option51. If the lease time (user requests the address) exceeds the maximum lease time configured, the lease that DHCP server assigns the address is the maximum lease time configured. If the lease time requested by the user is less than the maximum lease time configured, the lease that DHCP server assigns the address is the lease time requested by the user. The maximum lease time is able to be set by the administrator according to the actual network condition, and the maximum lease time is 1 day by default.	
Example	Set the maximum lease time of DHCP address pool1 to 3 days 12 hours and 30 minutes. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#max-lease-time 3 12 30	

netbios-name-server

Syntax	netbios-name-server <address1> [address2[...<address8>]] no netbios-name-server	
Parameter	<address1>...<address8>	IP addresses, in decimal format.
Default	No WINS server is configured by default.	
Mode	DHCP Address Pool Mode	
Usage	This command is used to specify WINS server for the client, up to 8 WINS server addresses can be configured. The WINS server address assigned first has the highest priority. Therefore, address 1 has the highest priority, and address 2 the second, and so on.	
Example	Setting the server address of DHCP pool "1" to 192.168.1.1. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#netbios-name-server 192.168.1.1	

netbios-node-type

Syntax	netbios-node-type {b-node h-node m-node p-node <type-number>}
--------	---

	no netbios-node-type	
Parameter	b-node	broadcasting node
	h-node	hybrid node that broadcasts after point-to-point communication
	m-node	hybrid node to communicate in point-to-point after broadcast;
	p-node	point-to-point node
	<type-number>	node type in Hex from 0 to FF
Default	No client node type is specified by default.	
Mode	DHCP Address Pool Mode	
Usage	If client node type is to be specified, it is recommended to set the client node type to h-node that broadcasts after point-to-point communication.	
Example	Setting the node type for client of pool 1 to broadcasting node. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#netbios-node-type-node	

network-address

Syntax	network-address <network-number> [<mask> <prefix-length>] no network-address	
Parameter	<network-number>	network number;
	<mask>	subnet mask in the decimal format
	<prefix-length>	mask in prefix form. For example, mask 255.255.255.0 in prefix is "24", and mask 255.255.255.252 in prefix is "30". Note: When using DHCP server, the pool mask should be longer or equal to that of layer 3 interface IP address in the corresponding segment.
Default	If no mask is specified, default mask will be assigned according to the address class.	
Mode	DHCP Address Pool Mode	
Usage	This command sets the scope of addresses that can be used for dynamic assignment by the DHCP server; one address pool can only have one corresponding segment. This command is exclusive with the manual address binding command "hardware address" and "host".	
Example	Configuring the assignable address in pool 1 to be 10.1.128.0/24. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#network-address 10.1.128.0 24	

next-server

Syntax	next-server <address1>[<address2>[...<address8>]] no next-server	
Parameter	<address1>...<address8>	IP addresses, in the decimal format

Default	None
Mode	DHCP Address Pool Mode
Usage	This command configures the address for the server hosting client import file. This is usually used for diskless workstations that need to download configuration files from the server on boot up. This command is used together with "bootfile".
Example	Setting the hosting server address as 10.1.128.4. Switch#config Switch(config)#ip dhcp pool 1 Switch(dhcp-1-config)#next-server 10.1.128.4

Option

Syntax	option <code> {ascii <string> hex <hex> ipaddress <ipaddress>} no option <code>	
Parameter	<code>	code for network parameters
	<string>	ASCII string up to 255 characters
	<hex>	a value in Hex that is no greater than 510 and must be of even length
	<ipaddress>	IP address in decimal format, up to 63 IP addresses can be configured.
Default	none	
Mode	DHCP Address Pool Mode	
Usage	The switch provides common commands for network parameter configuration as well as various commands useful in network configuration to meet different user needs. The definition of option code is described in detail in RFC2123.	
Example	Setting the WWW server address as 10.1.128.240. Switch#config Switch(config)# ip dhcp pool 1 Switch(dhcp-1-config)#option 72 ip 10.1.128.240	

service dhcp

Syntax	service dhcp no service dhcp
Parameter	None
Default	DHCP service is disabled by default.
Mode	Global Mode
Usage	Both DHCP server and DHCP relay are included in the DHCP service. When DHCP services are enabled, both DHCP server and DHCP relay are enabled. Switch can only assign IP address for the DHCP clients and enable DHCP relay when DHCP server function is enabled.
Example	Enabling DHCP server. Switch#config Switch(config)#service dhcp

show ip dhcp binding

Syntax	show ip dhcp binding [[<ip-addr>] [type {all manual dynamic}] [count]]	
Parameter	<ip-addr>	a specified IP address in decimal format
	all	all binding types (manual binding and dynamic assignment)
	manual	manual binding
	dynamic	dynamic assignment
	count	displays statistics for DHCP address binding entries.
Default	None	
Mode	Admin and Configuration Mode	
Usage	Displays IP-MAC binding information.	
Example	Switch# show ip dhcp binding IP address Hardware address Lease expiration Type 10.1.1.233 00-00-E2-3A-26-04 Infinite Manual 10.1.1.254 00-00-E2-3A-5C-D3 60 Automatic	
	Displayed information	Explanation
	IP address	IP address IP address assigned to a DHCP client
	Hardware address	MAC address of a DHCP client
	Lease expiration	Valid time for the DHCP client to hold the IP address
	Type	Type of assignment: manual binding or dynamic assignment

show ip dhcp conflict

Syntax	show ip dhcp conflict	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	Displays log information for addresses that have a conflict record.	
Example	Switch# show ip dhcp conflict IP Address Detection method Detection Time 10.1.1.1 Ping FRI JAN 02 00:07:01 2002	
	Displayed information	Explanation
	IP Address	Conflicting IP address
	Detection method	Method in which the conflict is detected
	Detection Time	Time when the conflict is detected.

show ip dhcp relay information option

Syntax	show ip dhcp relay information option	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	Show the relative configuration for DHCP relay option82	

Example	Switch#show ip dhcp relay information option ip dhcp server relay information option(i.e. option 82) is enabled ip dhcp relay information option(i.e. option 82) is enabled
---------	---

show ip dhcp server statistics

Syntax	show ip dhcp server statistics															
Parameter	none															
Default	none															
Mode	Admin and Configuration Mode															
Usage	Displays statistics of all DHCP packets for a DHCP server															
Example	<pre>Switch# show ip dhcp server statistics Address pools 1 Database agents 0 Automatic bindings 0 Manual bindings 0 Conflict bindings 0 Expired bindings 0 Malformed message 0 Message Received BOOTREQUEST 0 DHCPDISCOVER 0 DHCPREQUEST 0 DHCPDECLINE 0 DHCPRELEASE 0 DHCPIFORM 0 Message Send BOOTREPLY 0 DHCPPOFFER 0 DHCPACK 0 DHCPNAK 0 DHCPRELAY 0 DHCPFORWARD 0 Switch#</pre> <table border="1"> <thead> <tr> <th>Displayed information</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>Address pools</td> <td>Number of DHCP address pools configured.</td> </tr> <tr> <td>Database agents</td> <td>Number of database agents.</td> </tr> <tr> <td>Automatic bindings</td> <td>Number of addresses assigned automatically</td> </tr> <tr> <td>Manual bindings</td> <td>Number of addresses bound manually</td> </tr> <tr> <td>Conflict bindings</td> <td>Number of conflicting addresses</td> </tr> <tr> <td>Expired bindings</td> <td>Number of addresses whose leases are expired</td> </tr> </tbody> </table>		Displayed information	Explanation	Address pools	Number of DHCP address pools configured.	Database agents	Number of database agents.	Automatic bindings	Number of addresses assigned automatically	Manual bindings	Number of addresses bound manually	Conflict bindings	Number of conflicting addresses	Expired bindings	Number of addresses whose leases are expired
Displayed information	Explanation															
Address pools	Number of DHCP address pools configured.															
Database agents	Number of database agents.															
Automatic bindings	Number of addresses assigned automatically															
Manual bindings	Number of addresses bound manually															
Conflict bindings	Number of conflicting addresses															
Expired bindings	Number of addresses whose leases are expired															

	Malformed message	Number of error messages.
	Message Received	Statistics for DHCP packets received
	BOOTREQUEST	Total packets received
	DHCPDISCOVER	Number of DHCPDISCOVER packets
	DHCPREQUEST	Number of DHCPREQUEST packets
	DHCPDECLINE	Number of DHCPDECLINE packets
	DHCPRELEASE	Number of DHCPRELEASE packets
	DHCPINFORM	Number of DHCPINFORM packets
	Message Send	Statistics for DHCP packets sent
	BOOTREPLY	Total packets sent
	DHCPOFFER	Number of DHCPOFFER packets
	DHCPACK	Number of DHCPACK packets
	DHCPNAK	Number of DHCPNAK packets
	DHCPRELAY	Number of DHCPRELAY packets
	DHCPFORWARD	Number of DHCPFORWARD packets

ip dhcp broadcast suppress

Syntax	ip dhcp broadcast suppress no ip dhcp broadcast suppress	
Parameter	none	
Default	Disable	
Mode	Global Mode	
Usage	Enable DHCP broadcast suppress function, the no command disables the function Suppress the forwarding about DHCP broadcast packets, namely, drop or copy DHCP broadcast packets to CPU.	
Example	Enable DHCP broadcast suppress function. Switch# config Switch(config)#ip dhcp broadcast suppress	

ip dhcp relay share-vlan <vlanid> sub-vlan <vlanlist>

Syntax	ip dhcp relay share-vlan <vlanid> sub-vlan <vlanlist> no ip dhcp relay share-vlan	
Parameter	<vlanid>	VLAN ID of share-vlan
	<vlanlist>	sub-vlan list
Default	None	
Mode	Global Mode	
Usage	Specify sub-vlan of a share-vlan, the no command cancels sub-vlan. share-vlan may include many sub-vlan, but a sub-vlan only corresponds to a share-vlan. When layer 2 device of DHCP Relay receive DHCP Request, firstly judge whether VLAN with layer 3 interface for receiving package. If there is layer 3 interface in package, use the interface to process DHCP Relay, or else use layer 3 interface of	

	share-vlan to process DHCP Relay when the vlan is sub-vlan of share-vlan.
Example	Switch#config Switch(config)#ip dhcp relay share-vlan 2 sub-vlan 2-4

ip forward-protocol udp bootps

Syntax	ip forward-protocol udp bootps no ip forward-protocol udp bootps
Parameter	none
Default	Not forward UPD broadcast packets by default.
Mode	Global Mode
Usage	Sets DHCP relay to forward UPD broadcast packets on the port; the “no ip forward-protocol udp bootps” command cancels the service. The forwarding destination address is set in the “ip helper-address” command and described later
Example	Setting DHCP packets to be forwarded to 192.168.1.5. Switch#config Switch(config)#ip forward-protocol udp bootps Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip helper-address 192.168.1.5

ip helper-address

Syntax	ip helper-address <ip-address> no ip helper-address <ip-address>
Parameter	ip-address IP addresses, in the decimal format
Default	none
Mode	Port mode
Usage	Specifies the destination address for the DHCP relay to forward UDP packets. The “no ip helper-address <ip-address>” command cancels the setting. The DHCP relay forwarding server address corresponds to the port forwarding UDP, i.e. DHCP relay forwards corresponding UDP packets only to the corresponding server instead of all UDP packets to all servers. When this command is run after “ip forward-protocol udp <port>” command, the forwarding address configured by this command receives the UDP packets from <port>. The combination of “ip forward-protocol udp <port>” command and this command should be used for configuration.
Example	Switch#config Switch(config)#ip forward-protocol udp bootps Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip helper-address 192.168.2.5

show ip forward-protocol

Syntax	show ip forward-protocol	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	Show the configured port ID of the protocol which support the forwarding of broadcast packets, it means the port ID for forwarding DHCP packets.	
Example	Switch#show ip forward-protocol Forward protocol(UDP port): 67(active)	

show ip helper-address

Syntax	show ip helper-address	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	Show the configuration relation for the port ID of the protocol (It can forward broadcast packets), the interface (It supports forwarding function) and the forwarded destination IP.	
Example	Switch#show ip helper-address Forward protocol Interface Forward server 67(active) Vlan1 192.168.2.5	

clear ipv6 dhcp binding

Syntax	clear ipv6 dhcp binding [<ipv6-address>] [pd <ipv6-prefix prefix-length>]	
Parameter	<ipv6-address>	specified IPv6 address with binding record
	<ipv6-prefix prefix-length>	specified IPv6 prefix with binding record; To clear all IPv6 address binding record if there is no specified record.
Default	none	
Mode	Admin Configuration Mode	
Usage	To clear one specified DHCPv6 assigned address binding record or all the IPv6 address binding records. DHCPv6 IPv6 address binding information can be displayed through the command show ipv6 dhcp binding. If DHCPv6 client does not use the DHCPv6 allocated IPv6 address but when the life time of the IPv6 address does not end, the DHCPv6 server will not remove its bind for this address. In this situation, the address binding information can be removed manually through this command; and if no parameter is appended, this command will remove all the address binding information, then all addresses and prefix will be assigned again in the DHCPv6 address pool.	
Example	To delete all binding record of IPv6 address and prefix Switch#clear ipv6 dhcp binding	

clear ipv6 dhcp conflict

Syntax	clear ipv6 dhcp conflict [address]	
Parameter	address	specified address with the conflict record, no specified address will clear all conflict records.
Default	none	
Mode	Admin Mode	
Usage	<p>Clear the address with the conflict record in address conflict log.</p> <p>With show ipv6 dhcp conflict command, the user can check the conflict in which IP addresses. With this command, the user can clear the conflict record of an address. If no specified address will clear the conflict record of all addresses in log. After the conflict records are cleared in log, these addresses can be used by DHCPv6 server again.</p>	
Example	<p>When administrator checks the conflict logs, administrator discovers that address 2001::1 with the conflict record is not used, so its record will be cleared from address conflict files.</p> <p>Switch#clear ipv6 dhcp conflict 2001::1</p>	

clear ipv6 dhcp statistics

Syntax	clear ipv6 dhcp statistics	
Parameter	none	
Default	none	
Mode	Admin Mode	
Usage	<p>Clear the statistic records of DHCPv6 packets, the statistic counter of DHCPv6 packets is cleared.</p> <p>With show ipv6 dhcp statistics command, the user can check the statistic information of the counter for DHCPv6 packets, all statistic information is an accumulative value. With this command will clear the counter to check the debugging conveniently.</p>	
Example	<p>Clear the counter of DHCPv6 packets.</p> <p>Switch#clear ipv6 dhcp statistics</p>	

dns-server

Syntax	dns-server <ipv6-address> no dns-server <ipv6-address>	
Parameter	<ipv6-address>	IPv6 address of DNS Server
Default	none	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	<p>To configure the IPv6 address of the DNS server for DHCPv6 client; the no form of this command will remove the DNS configuration.</p> <p>For each address pool, at most three DNS server can be configured, and the addresses of the DNS server must be valid IPv6 addresses.</p>	
Example	<p>To configure the DNS Server address of DHCPv6 client as 2001:da8::1.</p> <p>Switch(dhcp-1-config)#dns-server 2001:da8::1</p>	

domain-name

Syntax	domain-name <domain-name> no domain-name <domain-name>	
Parameter	<domain-name>	domain name, less than 32 characters
Default	The domain name parameter of address pool is not configured by default	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	To configure domain name of DHCPv6 client; the no form of this command will delete the domain name. At most 3 domain names can be configured for each address pool.	
Example	To set the domain name of DHCPv6 client as test.com.cn Switch(dhcp-1-config)#domain-name test.com.cn	

excluded-address

Syntax	excluded-address <ipv6-address> no excluded-address <ipv6-address>	
Parameter	<ipv6-address>	IPv6 address to be excluded from being allocated to hosts in the address pool
Default	Disabled	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	To configure the specified IPv6 address to be excluded from the address pool, the excluded address will not be allocated to any hosts; the no form of this command will remove the configuration. This command is used to preserve the specified address from DHCPv6 address allocation.	
Example	To configure to exclude 2001:da8:123::1 from DHCPv6 address allocation. Switch(config)#excluded-address 2001:da8:123::1	

ipv6 address

Syntax	ipv6 address <prefix-name> <ipv6-prefix/prefix-length> no ipv6 address <prefix-name> <ipv6-prefix/prefix-length>	
Parameter	<prefix-name>	a string with its length no more than 32, designating or manual configuring the name of the address prefix defined in the prefix pool
	<ipv6-prefix/prefix-length>	latter part of the IPv6 address excluding the address prefix, as well as its length.
Default	No global address is configured for interfaces by default.	
Mode	Port mode	
Usage	To configure the specified interface to use prefix delegation for address allocation. The no form of this command will disable the using of prefix delegation for address allocation.	

	The IPv6 address of an interface falls into two parts: <i><prefix-name></i> and <i><ipv6-prefix>/<prefix-length></i> . If routing advertisement has been enabled, the first 64 bits of the addresses will be advertised. The address generated by <i><prefix-name></i> and <i><ipv6-prefix/prefix-length></i> combination will be removed, and the advertising of the prefix will be disabled. Only one <i><ipv6-prefix/prefix-length></i> can be configured for one prefix name.
Example	If the prefix name my-prefix designates 2001:da8:221::/48, then the following command will add the address 2001:da8:221:2008::2008 to interface VLAN1. Switch(Config-if-Vlan1)# ipv6 address my-prefix 0:0:0:2008::2008/64

ipv6 dhcp client pd

Syntax	ipv6 dhcp client pd <prefix-name> [rapid-commit] no ipv6 dhcp client pd	
Parameter	<prefix-name>	<prefix-name> is the string with its length no more than 32, which designates the name of the address prefix.
	rapid-commit	If rapid-commit optional is specified and the prefix delegation server enables the rapid-commit function, then the prefix delegation server will reply the prefix delegation client with the REPLY message directly. And the prefix delegation request will be accomplished by exchanging messages once.
Default	DHCPv6 prefix delegation client is not enabled by default.	
Mode	Port mode	
Usage	<p>To configure DHCPv6 prefix delegation client for the specified interface. The no form of this command will disable the DHCPv6 prefix delegation client and remove the allocated address prefix.</p> <p>This command is used to configure the prefix delegation client on the specified interface, an interface with prefix delegation client enabled will send SOLICIT packets to try to get address prefix from the server. If the prefix is retrieved correctly, the address prefix in the global address pool can be used by the ipv6 address command to generate a valid IPv6 address. This command is exclusive with ipv6 dhcp server and ipv6 dhcp relay destination. If the prefix delegation client is disabled for an interface, then the address prefix which is get from this interface through prefix delegation client, will be removed from the global address pool. Also the interface address which is generated by the prefix delegation client will be removed, and routing advertisement with the prefix will be disabled. If any general prefix has been configured by the ipv6 general-prefix command, the same prefix learnt from prefix delegation will be disagreed.</p>	
Example	Switch(Config-if-Vlan1)#ipv6 dhcp client pd ClientA rapid-commit	

ipv6 dhcp client pd hint

Syntax	ipv6 dhcp client pd hint <prefix prefix-length> no ipv6 dhcp client pd hint <prefix prefix-length>
--------	---

Parameter	<prefix prefix-length>	prefix demanded by the client and its length.
Default	There is no such configuration in the system by default.	
Mode	Port mode	
Usage	Designate the prefix demanded by the client and its length. The no operation of this command will delete that prefix and its length from the specified interface. The system designates a prefix and its length on the interface for a client. If client prefix-proxy demanding function is enabled on the interface and hint function is enabled on the switch, the user will have prior claim to the prefix it demands and the prefix length when the server allocates them. Only one hint prefix is allowed in the system.	
Example	Switch(vlan-1-config)#ipv6 dhcp client pd hint 2001::/48	

ipv6 dhcp pool

Syntax	ipv6 dhcp pool <poolname> no ipv6 dhcp pool <poolname>	
Parameter	<poolname>	address pool name of DHCPv6 with its length no more than 32.
Default	Any DHCPv6 address pool are not configured by default.	
Mode	Global Mode	
Usage	To configure the address pool for DHCPv6, and enter the DHCPv6 address pool configuration mode. In this mode, information such as the address prefix to be allocated, the DNS server addresses, and domain names, can be configured for the DHCPv6 client. The no form of this command will remove the configuration of the address pool. This command should be launched in global configuration mode, and falls in DHCPv6 address pool configuration mode if launched successfully. To remove a configured address pool, interface bindings related to the address pool, as well as the related address bindings will be removed.	
Example	To define an address pool, named 1. Switch#config Switch(config)#ipv6 dhcp pool 1	

ipv6 dhcp relay destination

Syntax	ipv6 dhcp relay destination { [<ipv6-address>] [interface { <interface-name> vlan <1-4096> }] } no ipv6 dhcp relay destination { [<ipv6-address>] [interface { <interface-name> vlan <1-4096> }] }	
Parameter	<ipv6-address>	address of the destination to which the DHCPv6 relay forwards;
	<interface-name>	interface name which is used for forwarding of DHCPv6 requests
	<1-4096>	VLAN ID
	If <ipv6-address> is a global unicast address, the interface parameter should not be configured; If <ipv6-address> is an local address, the interface parameter is required be configured; The destination address for the DHCPv6 server will be the multicast	

	address of ALL_DHCP_Servers (FF05::1:3), if the interface parameter is configured only.
Default	By default, destination address for DHCPv6 relay is not configured.
Mode	Port mode
Usage	<p>To configure the destination to which the DHCPv6 relay forwards the DHCPv6 requests from the clients, the destination should be the address of an external DHCPv6 relay or the DHCPv6 server. The no form of this command will remove the configuration.</p> <p>This command is used to configure the DHCPv6 relay for the specified interface, the address should be the address of another DHCPv6 relay or the address DHCPv6 server. At most three relay addresses can be configured for an interface. To be mentioned, the DHCPv6 relay stops working only if all the relay destination address configurations have been removed. This command is mutually exclusive to “ipv6 dhcp server” and “ipv6 dhcp client pd” commands.</p>
Example	<pre>Switch#config Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ipv6 dhcp relay destination 2001:da8::1</pre>

ipv6 dhcp server

Syntax	<pre>ipv6 dhcp server <poolname> [preference <value>] [rapid-commit] [allow-hint] no ipv6 dhcp server <poolname></pre>	
Parameter	<poolname>	Name of the created DHCPv6 address pool
	<value>	The priority of the DHCPv6 server, the larger the value, the higher the priority, the range: 0-255, the default is 0.
	rapid-commit	The DHCPv6 server sends the REPLY packet to the client immediately after receiving the SOLICIT packet
	allow-hint	Append the client's expected parameter value to its request packet
Default	DHCPv6 address pool based on port is not configured by default.	
Mode	Port mode	
Usage	<p>This command configures the address pool which will be allocated by the DHCPv6 server through the specified interface. The no form of this command will remove the address pool configuration.</p> <p>This command configure the DHCPv6 address pool which is applied by the DHCPv6 server for the specified interface, as well as optional parameters. One VLAN can bind many DHCPv6 address pools and assign the address for DHCPv6 request packet from direct-link and relay delegation.</p>	
Example	<pre>Switch#config Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ipv6 dhcp server PoolA preference 80 rapid-commit allow-hint</pre>	

ipv6 general-prefix

Syntax	<pre>ipv6 general-prefix <prefix-name> <ipv6-prefix/prefix-length> no ipv6 general-prefix <prefix-name></pre>	
Parameter	<prefix-name>	<prefix-name> is a character string less than 32 characters, to use as IPv6 general prefix name.
	<ipv6-prefix/prefix-length>	<ipv6-prefix/prefix-length> is defined as IPv6 general prefix.
Default	IPv6 general prefix is not configured by default.	
Mode	Global Mode	
Usage	<p>To define an IPv6 general prefix. The no form of this command will delete the configuration.</p> <p>If IPv6 general prefix is configured, the interface will use the configured prefix for IPv6 address generating. Commonly, the general prefix is used for enterprise IPv6 prefix, and when entering an IPv6 address, users can simply add the address suffix of to the name of the general prefix. The configured address prefix will be reserved in the general address prefix pool. At most 8 general prefix can be configured at the same time. When trying to remove a configured general prefix name, the operation will fail if any interfaces used the configured prefix. Only one general prefix for a prefix name. The general prefix cannot use the same prefix definition with prefixes learnt from prefix delegation.</p>	
Example	<pre>To set the prefix of 2001:da8:221::/48 to general prefix my-prefix. Switch#config Switch(config)# ipv6 general-prefix my-prefix 2001:da8:221::/48</pre>	

ipv6 local pool

Syntax	<pre>ipv6 local pool <poolname> <prefix/prefix-length> <assigned-length> no ipv6 local pool <poolname></pre>	
Parameter	<poolname>	<poolname> is the name for the IPv6 address pool of the prefix delegation, the length name string should be less than 32.
	<prefix/prefix-length>	<prefix/prefix-length> is the address prefix and its length of the prefix delegation.
	<assigned-length>	<assigned-length> is the length of the prefix in the address pool which can be retrieved by the client, the assigned prefix length should be no less than the value of <prefix-length>
Default	No IPv6 prefix delegation address pool is configured by default.	
Mode	Global Mode	
Usage	<p>To configure the address pool for prefix delegation. The no form of this command will remove the IPv6 prefix delegation configuration.</p> <p>This command should be used with the “prefix delegation pool” command to allocate address prefixes to the clients. If IPv6 prefix delegation is removed, the associated “prefix delegation” command will be in-effective either.</p>	
Example	<pre>Switch#config Switch(config)#ipv6 local pool 1 1100::1/24 24</pre>	

Lifetime

Syntax	lifetime {<valid-time> infinity} {<preferred-time> infinity} no lifetime	
Parameter	<valid-time>	The valid lifetime of the IPv6 address allocated in the local address pool, 1-31536000 seconds, must be greater than <preferred-time>
	<preferred-time>	The preferred lifetime of the IPv6 address allocated in the local address pool, 1-31536000 seconds, must be less than <valid-time>
	infinity	Longest service life
Default	The default valid life time and preferred life time are 2592000 seconds (30 days) and 604800 seconds (7 days) respectively	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	To configure the life time for the addresses or the address prefixes allocated by DHCPv6. The no form of this command will restore the default setting.	
Example	To configure the valid life time as 1000 seconds, and the preferred life time as 600 seconds. Switch#config Switch(config)#lifetime 1000 600	

network-address

Syntax	network-address <ipv6-pool-start-address> <ipv6-pool-end-address> <prefix-length> [eui-64]) no network-address	
Parameter	<ipv6-pool-start-address>	start of the address pool;
	<ipv6-pool-end-address>	end of the address pool
	<prefix-length>	The length of the address prefix, ranging from 3 to 128, the default is 64
	eui-64	According to the eui-64 standard, IPv6 addresses are allocated, not designated as being allocated in order
Default	No address pool is configured by default.。	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	To configure the DHCPv6 address pool; the no form of this command will remove the address pool configuration. This command configures the address pool for the DHCPv6 server to allocate addresses, only one address range can be configured for each address pool. To be noticed, if the DHCPv6 server has been enabled, and the length of the IPv6 address prefix has been configured, the length of the prefix in the address pool should be no less than the length of the prefix of the IPv6 address of the respective layer three interfaces in the switch. If <ipv6-pool-end-address> is bigger than <ipv6-pool-start-address>, this command returns at once.	

Example	To configure the address range for address pool as 2001:da8:123::100-2001:da8:123::200. Switch#config Switch(config)#ipv6 dhcp pool 1 Switch(dhcp-1-config)#network-address 2001:da8:123::100 2001:da8:123::200
---------	---

prefix-delegation

Syntax	prefix-delegation <ipv6-prefix/prefix-length> <client-DUID> [iaid <iaid>] [lifetime <valid-time> <preferred-time>] no prefix-delegation <ipv6-prefix/prefix-length> <client-DUID> [iaid <iaid>]	
Parameter	<ipv6-prefix/prefix-length>	<ipv6-prefix/prefix-length> is the length of the prefix to be allocated to the client.
	<client-DUID>	<client-DUID> is the DUID of the client. DUID with the type of DUID-LLT and DUID-LL are supported, the DUID of DUID-LLT type should be of 14 characters.
	<iaid>	<iaid> is the value to be appended in the IA_PD field of the clients' requests.
	<valid-time>	The valid life cycle (in seconds) of the IPv6 address assigned to the client, the range is 1-31536000, the default is 2592000, and it must be greater than the preferred-time
	<preferred-time>	The preferred lifetime of the IPv6 address assigned to the client (in seconds), the range is 1-31536000, the default is 604800, and it must be less than valid-time
Default	Disabled	
Mode	Port mode	
Usage	To configure dedicated prefix delegation for the specified user. The no form of this command will remove the dedicated prefix delegation. This command configures the specified IPv6 address prefix to bind with the specified client. If no IAID is configured, any IA of any clients will be able get this address prefix. At most eight static binding address prefix can be configured for each address pool. For prefix delegation, static binding is of higher priority than the prefix address pool.	
Example	The following command will allocate 2001:da8::/48 to the client with DUID as 0001000600000005000BBFAA2408, and IAID as 12. Switch#config Switch(config)#ipv6 dhcp pool 1 Switch(dhcp-1-config)#prefix-delegation 2001:da8::/48 0001000600000005000BBFAA240812	

prefix-delegation pool

Syntax	prefix-delegation pool <poolname> [lifetime <valid-time> <preferred-time>] no prefix-delegation pool <poolname>	
Parameter	<poolname>	<poolname> is the name of the address prefix pool, the

		length name string should be less than 32.
	<valid-time>	The valid life cycle (in seconds) of the IPv6 address assigned to the client, the range is 1-31536000, the default is 2592000, and it must be greater than the preferred-time
	<preferred-time>	The preferred lifetime of the IPv6 address assigned to the client (in seconds), the range is 1-31536000, the default is 604800, and it must be less than valid-time
Default	The prefix delegation name used by DHCPv6 address pool is not configured.	
Mode	DHCPv6 Address Pool Configuration Mode.	
Usage	<p>To configure prefix delegation name used by DHCPv6 address pool. The no form of this command deletes the configuration.</p> <p>This command configures the name of the address prefix pool for address allocation. If configured, the addresses in the prefix address pool will be allocated to the clients. This command can be used in association with the ipv6 local pool command. For one address pool, only one prefix delegation pool can be bound. When trying to remove the prefix name configuration, the prefix delegation service of the server will be unavailable, if both the address pool is not associated with the prefix delegation pool and no static prefix delegation binding is enabled.</p>	
Example	<pre>Switch#show subnet-vlan Switch(config)#ipv6 dhcp pool 1 Switch(dhcp-1-config)#prefix-delegation pool abc</pre>	

service dhcpv6

Syntax	<pre>service dhcpv6 no service dhcpv6</pre>	
Parameter	none	
Default	Disabled	
Mode	Global Mode	
Usage	<p>To enable DHCPv6 server function; the no form of this command disables the configuration. The DHCPv6 services include DHCPv6 server function, DHCPv6 relay function, DHCPv6 prefix delegation function. All of the above services are configured on ports. Only when DHCPv6 server function is enabled, the IP address assignment of DHCPv6 client, DHCPv6 relay and DHCPv6 prefix delegation functions enabled can be configured on ports.</p>	
Example	<p>To enable DHCPv6 server.</p> <pre>Switch#config Switch(config)# service dhcpv6</pre>	

show ipv6 dhcp

Syntax	show ipv6 dhcp	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	

Usage	To show the enable switch and DUID of DHCPv6 service To show the enable switch and DUID of DHCPv6 service, server identifier options only use DUID of DUID-LLT type.
Example	Switch#show ipv6 dhcp DHCPv6 is enabled LLT DUID is <00:01:00:01:43:b7:1b:81:00:03:0f:01:5f:9d> LL DUID is <00:03:00:01:00:03:0f:01:5f:9d>

show ipv6 dhcp binding

Syntax	show ipv6 dhcp binding [<ipv6-address>] pd <ipv6-prefix prefix-length>[count]	
Parameter	ipv6-address	specified IPv6 address;
	count	show the number of DHCPv6 address bindings
Default	none	
Mode	Admin and Configuration Mode	
Usage	To show all the address and prefix binding information of DHCPv6, include type, DUID, IAID, prefix, valid time and so on.	
Example	Switch#show ipv6 dhcp binding Client: iatype IANA, iaid 0x0e001d92 DUID: 00:01:00:01:0f:55:82:4f:00:19:e0:3f:d1:83 IANA leased address: 2001:da8::10 Preferred lifetime 604800 seconds, valid lifetime 2592000 seconds Lease obtained at %Jan 01 01:34:44 1970 Lease expires at %Jan 31 01:34:44 1970 (2592000 seconds left) The number of DHCPv6 bindings is 1	

show ipv6 dhcp conflict

Syntax	show ipv6 dhcp conflict	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	Show the log for the address that have a conflict record.	
Example	Switch#show ipv6 dhcp DHCPv6 is enabled LLT DUID is <00:01:00:01:43:b7:1b:81:00:03:0f:01:5f:9d> LL DUID is <00:03:00:01:00:03:0f:01:5f:9d>	

show ipv6 dhcp interface

Syntax	show ipv6 dhcp interface [<interface-name>]	
Parameter	<interface-name>	<interface-name> is the name and number of interface, if the

		<interface-name> parameter is not provided, then all the DHCPv6 interface information will be shown.
Default	none	
Mode	Admin and Configuration Mode	
Usage	To show the information for DHCPv6 interface, include Port Mode (Prefix delegation client. DHCPv6 server. DHCPv6 relay) , and the relative conformation information under all kinds of mode.	
Example	Switch#show ipv6 dhcp interface vlan10 Vlan10 is in server mode Using pool: poolv6 Preference value: 20 Rapid-Commit is disabled	

show ipv6 dhcp pool

Syntax	show ipv6 dhcp pool [poolname]	
Parameter	[poolname]	<poolname> is the DHCPv6 address pool name which configured already, and the length less than 32 characters. If the <poolname> parameter is not provided, then all the DHCPv6 address pool information will be shown.
Default	none	
Mode	Admin and Configuration Mode	
Usage	To display the configuration and dynamic assignment information for DHCPv6 address pool, include the name of DHCPv6 address pool, the prefix of DHCPv6 address pool, excluded address, DNS server configuration, relative prefix information and so on. To display assigned address binding number of address pool that is used as address assignment server. To display assigned prefix number of address pool that is used as prefix delegation server	
Example	Switch#show ipv6 dhcp pool poolv6	

show ipv6 dhcp statistics

Syntax	show ipv6 dhcp statistics	
Parameter	none	
Default	none	
Mode	Admin and Configuration Mode	
Usage	To show the statistic of all kinds of DHCPv6 packets by DHCPv6 server.	
Example	Switch#show ipv6 dhcp statistics Address pools 1 Active bindings 0 Expiried bindings 0 Malformed message 0 Message Received Send	

DHCP6SOLICIT	0	0
DHCP6ADVERTISE	0	0
DHCP6REQUEST	0	0
DHCP6REPLY	0	0
DHCP6RENEW	0	0
DHCP6REBIND	0	0
DHCP6RELEASE	0	0
DHCP6DECLINE	0	0
DHCP6CONFIRM	0	0
DHCP6RECONFIGURE	0	0
DHCP6INFORMREQ	0	0
DHCP6RELAYFORW	0	0
DHCP6RELAYREPLY	0	0

Show information	Explanation
Address pools	To configure the number of DHCPv6 address pools;
Active bindings	The number of auto assign addresses;
Expired bindings	The number of expired bindings;
Malformed message	The number of malformed messages;
Message Recieved	The statistic of received DHCPv6 packets.
DHCP6SOLICIT	The number of DHCPv6 SOLICIT packets.
DHCP6ADVERTISE	The number of DHCPv6 ADVERTISE packets
DHCPv6REQUEST	The number of DHCPv6 REQUEST packets
DHCP6REPLY	The number of DHCPv6 REPLY packets
DHCP6RENEW	The number of DHCPv6 RENEW packets
DHCP6REBIND	The number of DHCPv6 REBIND packets
DHCP6RELEASE	The number of DHCPv6 RELEASE packets
DHCP6DECLINE	The number of DHCPv6 DECLINE packets
DHCP6CONFIRM	The number of DHCPv6 CONFIRM packets
DHCP6RECONFIGURE	The number of DHCPv6 RECONFIGURE packets
DHCP6INFORMREQ	The number of DHCPv6 INFORMREQ packets
DHCP6RELAYFORW	The number of DHCPv6 RELAYFORW packets
DHCP6RELAYREPLY	The number of DHCPv6 RELAYREPLY packets

show ipv6 general-prefix

Syntax	show ipv6 general-prefix
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	To show the IPv6 general prefix pool information, include the prefix number in general prefix pool, the name of every prefix, the interface of prefix obtained, and the prefix

	value.
Example	Switch#show ipv6 general-prefix IPv6 Prefix my, acquired via Manual configuration 2001:da8:221::/48

show ipv6 local pool

Syntax	show ipv6 local pool
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	To show the statistic information of DHCPv6 prefix pool, include the name of prefix pool, the prefix and prefix length as well as assigned prefix length, the number of assigned prefix and information in DHCPv6 address pool.
Example	Switch#show ipv6 local pool Pool Prefix Free In use a 2010::1/0/48 65536 0

ip dhcp relay information option

Syntax	ip dhcp relay information option no ip dhcp relay information option
Parameter	none
Default	The system disables the option82 function by default
Mode	Global Mode
Usage	Set this command to enable the option82 function of the switch Relay Agent. The “no ip dhcp relay information option” command is used to disable the option82 function of the switch Relay Agent. Only the DHCP Relay Agents configuring with this command can add option82 to the DHCP request message, and let the server to process it. Before enabling this function, users should make sure that the DHCP service is enabled and the Relay Agent will transmit the udp broadcast messages whose destination port is 67.
Example	Enable the option82 function of the Relay Agent. Switch#config Switch(config)#service dhcp Switch(config)# ip forward-protocol udp bootps Switch(config)# ip dhcp relay information option

ip dhcp relay information option delimiter

Syntax	ip dhcp relay information option delimiter [colon dot slash space] no ip dhcp relay information option delimiter
Parameter	none
Default	Slash("/")
Mode	Global Mode
Usage	Set the delimiter of each parameter for suboption of option82 in global mode, no

	command restores the delimiter as slash. Divide the parameters with the configured delimiters after users have defined them which are used to create suboption (remot-de, circuit-id) of option82 in global mode.
Example	Set the parameter delimiters as dot (".") for suboption of option82. Switch#config Switch(config)#ip dhcp relay information option delimiter dot

ip dhcp relay information option remote-id

Syntax	ip dhcp relay information option remote-id {standard <remote-id>} no ip dhcp relay information option remote-id	
Parameter	standard	standard means the default VLAN MAC format.
	<remote-id>	<remote-id> means the remote-id content of option 82 specified by users, its length cannot exceed 64 characters.
Default	Use standard format to set remote-id of option 82	
Mode	Global Mode	
Usage	Set the suboption2 (remote ID option) content of option 82 added by DHCP request packets (They are received by the interface). The no command sets the additive suboption2 (remote ID option) format of option 82 as standard. The additive option 82 information needs to associate with third-party DHCP server, it is used to specify the remote-id content by users when the standard remote-id format cannot satisfy server's request.	
Example	Set the suboption remote-id of DHCP option82 as street-1-1. Switch#config Switch(config)#ip dhcp relay information option remote-id street-1-1	

ip dhcp relay information option remote-id format

Syntax	ip dhcp relay information option remote-id format {default vs-hp}	
Parameter	default	default means that remote-id is the VLAN MAC address with hexadecimal format.
	vs-up	vs-hp means that remote-id is compatible with the remote-id format of HP manufacturer.
Default	default	
Mode	Global Mode	
Usage	Set remote-id format of Relay Agent option82. The default remote-id format defined as below: <div style="text-align: center;"> <p>Remote option</p> <p>type Length</p> </div>	

	<p>MAC means VLAN MAC address.</p> <p>The compatible remote-id format with HP manufacturer defined as below:</p> <p>Remote option</p> <p style="margin-left: 40px;">type Length</p> <div style="margin-left: 40px;"> </div> <p>IP means the primary IP address of layer 3 interface where DHCP packets from.</p>
Example	<p>Set remote-id of Relay Agent option82 as the compatible format with HP manufacturer.</p> <pre>Switch#config Switch(config)#ip dhcp relay information option remote-id format vs-hp</pre>

ip dhcp relay information option self-defined remote-id

Syntax	ip dhcp relay information option self-defined remote-id {hostname mac string WORD} no ip dhcp relay information option self-defined remote-id	
Parameter	WORD	WORD the defined character string of remote-id by themselves, the maximum length is 64.
Default	Using standard method.	
Mode	Global Mode	
Usage	Set creation method for option82, users can define the parameters of remote-id suboption by themselves. After configure this command, if users do not configure remote-id on interface, it will create remote-id suboption for option82 according to self-defined method. For mac, use the format such as 00-02-d1-2e-3a-0d if it is filled to packets with ascii format, but hex format occupies 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is ip dhcp relay information option delimiter configuration).	
Example	Set self-defined method and character string of remote-id suboption are hostname and abc respectively for option82. <pre>Switch#config Switch(config)# ip dhcp relay information option self-defined remote-id hostname string abc</pre>	

ip dhcp relay information option self-defined remote-id format

Syntax	ip dhcp relay information option self-defined remote-id format [ascii hex]	
Parameter	none	

Default	ascii
Mode	Global Mode
Usage	Set self-defined format of remote-id for relay option82. self-defined format use ip dhcp relay information option type self-defined remote-id to create remote-id format.
Example	Set self-defined method of remote-id as hex for relay option82. Switch#config Switch(config)# ip dhcp relay information option self-defined remote-id format hex

ip dhcp relay information option self-defined subscriber-id

Syntax	ip dhcp relay information option self-defined subscriber-id {vlan port id (switch-id (mac hostname) remote-mac) string WORD } no ip dhcp relay information option self-defined subscriber-id	
Parameter	WORD	WORD the defined character string of circuit-id by themselves, the maximum length is 64.
Default	Using standard method.	
Mode	Global Mode	
Usage	Set creation method for option82, users can define the parameters of circute-id suboption by themselves. After configure this command, if users do not configure circuit-id on interface, it will create circuit-id suboption for option82 according to self-defined method. Self-defined format of circuit-id: if self-defined format is ascii, the filled format of vlan such as "Vlan2", the format of port such as "Ethernet1/0/1", the format of mac and remote-mac such as "00-02-d1-2e-3a-0d". If self-defined format is hex, the filled format of vlan occupies 2 bytes, port occupies 4 bytes, a byte means slot (for chassis switch, it means slot ID, for box switch, it is 1), a byte means Module (the default is 0), two bytes means port ID beginning from 1, mac and remote-mac occupy 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is ip dhcp relay information option delimiter configuration).	
Example	Set self-defined method of circuit-id suboption as port, mac for option82. Switch#config Switch(config)#ip dhcp relay information option self-defined subscriber-id port id switch-id mac	

ip dhcp relay information option self-defined subscriber-id format

Syntax	ip dhcp relay information option self-defined subscriber-id format [ascii hex]	
Parameter	none	
Default	ascii	
Mode	Global Mode	
Usage	Set self-defined format of circuit-id for relay option82. self-defined format use ip dhcp relay information option type self-defined	

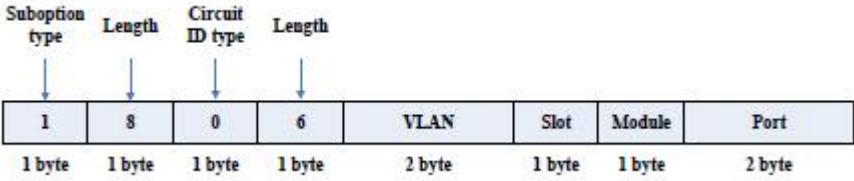
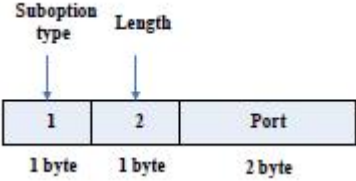
	subscriber-id to create circuit-id format.
Example	Set self-defined format of circuit-id as hex for relay option82. Switch#config Switch(config)#ip dhcp relay information option self-defined subscriber-id format hex

ip dhcp relay information option subscriber-id

Syntax	ip dhcp relay information option subscriber-id {standard <circuit-id>} no ip dhcp relay information option subscriber-id	
Parameter	<circuit-id>	<circuit-id> is the circuit-id contents of option82 specified by users, which is a string no longer than 64 characters.
	standard	standard means the standard vlan name and physical port name format
Default	The system uses the standard format to set the circuit-id of option 82 by default.	
Mode	Port mode	
Usage	Because the option 82 information added for the switch should cooperate with the third party DHCP server, if the standard circuit-id format of the switch cannot satisfy the server's request, this method will be provided for users to specify the contents of circuit-id according to the situation of the server.	
Example	Set the sub-option circuit-id of DHCP option82 as foobar. Switch#config Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip dhcp relay information option subscriber-id foobar	

ip dhcp relay information option subscriber-id format

Syntax	ip dhcp relay information option subscriber-id format {hex ascii vs-hp}	
Parameter	hex	hex means that subscriber-id is VLAN and port information with hexadecimal format
	ascii	ascii means that subscriber-id is VLAN and port information with ACSII format.
	vs-hp	vs-hp means that subscriber-id is compatible with the format of HP manufacturer.
Default	ascii	
Mode	Global Mode	
Usage	Set subscriber-id format of Relay Agent option82. VLAN and port information with ASCII format, such as "Vlan1+Ethernet1/0/11", VLAN and port information with hexadecimal format defined as below:	

	 <p>VLAN field fills in VLAN ID. For chassis switch, Slot means slot number, for box switch, Slot is 1; default Module is 0; Port means port number which begins from 1. The compatible subscriber-id format with HP manufacturer defined as below:</p>  <p>Port means port number which begins from 1.</p>
Example	Set subscriber-id format of Relay Agent option82 as hexadecimal format. Switch#config Switch(config)#ip dhcp relay information option subscriber-id format hex

ip dhcp relay information policy

Syntax	ip dhcp relay information policy {drop keep replace} no ip dhcp relay information policy	
Parameter	drop	drop mode means that if the message has option82, then the system will drop it without processing;
	keep	keep mode means that the system will keep the original option82 segment in the message, and forward it to the server to process
	replace	replace mode means that the system will replace the option 82 segment in the existing message with its own option 82, and forward the message to the server to process
Default	The system uses replace mode to replace the option 82 segment in the existing message with its own option 82.	
Mode	Port mode	
Usage	This command is used to set the retransmitting policy of the system for the received DHCP request message which contains option82. The “no ip dhcp relay information policy” will set the retransmitting policy of the option 82 DHCP message as “replace”.Since the DHCP client messages might go through several DHCP Relay Agents when passed to the DHCP server, the latter Relay Agents on the path should set policies to decide how to process the option82 added by Relay Agents before them. The selection of option 82 retransmitting policies should take the configuration policy of the DHCP server into account.	

Example	Set the retransmitting policy of DHCP messages option 82 as keep. Switch#config Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip dhcp relay information policy keep
---------	--

ip dhcp server relay information enable

Syntax	ip dhcp server relay information enable no ip dhcp server relay information enable
Parameter	none
Default	The system disable the option82 identifying function by default.
Mode	Global Mode
Usage	This command is used to enable the switch DHCP server to identify option82. The “no ip dhcp server relay information enable” command will make the server ignore the option 82. If the users want the switch DHCP server to identify option82 and return option 82 information in the reply message, this command needs to be set, or, the switch DHCP server will ignore the option82.
Example	Set the DHCP server to support option82 Switch#config Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip dhcp server relay information enable

show ip dhcp relay information option

Syntax	show ip dhcp relay information option
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	This command will display the state information of the DHCP option 82 in the system, including option82 enabling switch, the interface retransmitting policy, the circuit ID mode and the switch DHCP server option82 enabling switch. Use this command to check the state information of Relay Agent option82 during operation.
Example	Switch#show ip dhcp relay information option ip dhcp server relay information option(i.e. option 82) is disabled ip dhcp relay information option(i.e. option 82) is enabled Vlan2: ip dhcp relay information policy keep ip dhcp relay information option subscriber-id standard Vlan3: ip dhcp relay information policy replace ip dhcp relay information option subscriber-id foobar

option 43 ascii LINE

Syntax	option 43 ascii LINE no option 43	
Parameter	LINE	The configured option 43 character string with ascii format, its length range between 1 and 255.
Default	No option 43 character string is configured.	
Mode	DHCP Address Pool Mode	
Usage	Configure option 43 character string with ascii format in ip dhcp pool mode. The no command deletes the configured option 43.	
Example	Configure option 43 with ascii format to be "AP 1000". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 43 ascii AP 1000	

option 43 hex WORD

Syntax	option 43 hex WORD no option 43	
Parameter	WORD	The configured option 43 character string with hex format, such as a1241b.
Default	No option 43 is configured.	
Mode	DHCP Address Pool Mode	
Usage	Configure option 43 character string with hex format in ip dhcp pool mode. The no command deletes the configured option 43. When using hex method to configure option 43, the string needs to be written according to TLV (Type-Length-Value) format. For example, issue ip address of 10.1.1.1 through option 43, then the hex string here should be 01040A010101; Type=0x01, it means IP address; Length=0x04, it means the length of IP address is 4 Bytes; Value=0x0A010101, it means the hexadecimal format of 10.1.1.1.	
Example	Configure option 43 with hex format to be "01040a010101". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 43 hex 01040a010101	

option 43 ip A.B.C.D

Syntax	option 43 ip A.B.C.D no option 43	
Parameter	A.B.C.D	The configured option 43 with IP format, such as 192.168.1.1.
Default	No option 43 is configured.	
Mode	DHCP Address Pool Mode	
Usage	Configure option 43 character string with IP format in ip dhcp pool mode. The no command deletes the configured option 43. Using this command to configure option 43, such as "192.168.1.1", then option 43	

	filled in packets is "C0A80101".
Example	Configure option 43 with IP format to be "192.168.1.1". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 43 ip 192.168.1.1

option 60 ascii LINE

Syntax	option 60 ascii LINE no option 60	
Parameter	LINE	The configured option 60 character string with ascii format, its length range between 1 and 255.
Default	No option 60 character string is configured.	
Mode	DHCP Address Pool Mode	
Usage	Configure option 60 character string with ascii format in ip dhcp pool mode. The no command deletes the configured option 60.	
Example	Configure option 60 with ascii format to be "AP 1000". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 60 ascii AP 1000	

option 60 hex WORD

Syntax	option 60 hex WORD no option 60	
Parameter	WORD	The configured option 60 character string with hex format, such as a1241b
Default	No option 60 is configured.	
Mode	DHCP Address Pool Mode	
Usage	Configure option 60 character string with hex format in ip dhcp pool mode. The no command deletes the configured option 60.	
Example	Configure option 60 with hex format to be "01040a010101". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 60 hex 01040a010101	

option 60 ip A.B.C.D

Syntax	option 60 ip A.B.C.D no option 60	
Parameter	A.B.C.D	The configured option 60 with IP format, such as 192.168.1.1.
Default	No option 60 is configured.	
Mode	DHCP Address Pool Mode	

Usage	Configure option 60 character string with IP format in ip dhcp pool mode. The no command deletes the configured option 60. Using this command to configure option 60, such as "192.168.1.1", option 60 of packets matched with the configured option 60 is "C0A80101".
Example	Configure option 60 with IP format to be "192.168.1.1". Switch#config Switch(config)#ip dhcp pool a switch (dhcp-a-config)#option 60 ip 192.168.1.1

address range

Syntax	address range <start-ip> <end-ip> no address range <start-ip> <end-ip>	
Parameter	<start-ip>	defines the start address of the address pool
	<end-ip>	defines the end address of the address pool
Default	None	
Mode	DHCPv6 address pool class configuration mode	
Usage	This command is used to set address range for a DHCPv6 class in DHCPv6 address pool configuration mode, the no command is used to remove the address range. The prefix/plen form is not supported. It is necessary to check the address range assigned to class in order to make sure that it doesn't exceed the address range of relevant address pool. A class is assigned a single address range and the address range assigned to different class in the same address pool can overlap. If you do not use this command to assign address range for a DHCPv6 class, then the range for it will be the whole subnet of the address pool by default.	
Example	Associate a DHCPv6 class named CLASS1 to dhcpv6 pool 1 and assign the address range from 2001:da8:100:1::2 to 2001:da8:100:1::30 for CLASS1. Switch#config Switch(config)#ipv6 dhcp pool 1 Switch(dhcp-1-config)#class CLASS1 Switch(dhcp-1-class-CLASS1-config)#address range 2001:da8:100:1::2 2001:da8:100:1::30	

class

Syntax	class <class-name> no class <class-name>	
Parameter	<class-name>	name of DHCPv6 class.
Default	none	
Mode	DHCPv6 address pool class configuration mode	
Usage	This command associates class to address pool in DHCPv6 address pool configuration mode and enters class configuration mode in address pool. Use the no command to remove the link. It is recommended to define this class first using global	

	command of IPv6 DHCP class. No class will be created if you input a class name which doesn't exist.
Example	Associate the DHCPv6 class named CLASS1 to dhcpv6 pool 1. Switch(Config)#ipv6 dhcp pool 1 Switch(dhcp-1-config)#class CLASS1

ipv6 dhcp class

Syntax	ipv6 dhcp class <class-name> no ipv6 dhcp class <class-name>	
Parameter	<class-name>	the name of DHCPv6 class which is a string with a length of less than 32
Default	none	
Mode	Global Mode	
Usage	This command defines a DHCPv6 class and enters DHCPv6 class configuration mode, the no operation of this command removes this DHCPv6 class. Configure a group of option 37 or option 38, or configure option 37 and option 38 simultaneously in a DHCPv6 class. This command can be used when the server supports DHCPv6 class only.	
Example	Define a DHCPv6 class named CLASS1. Switch(config)#ipv6 dhcp class CLASS1	

ipv6 dhcp relay remote-id

Syntax	ipv6 dhcp relay remote-id <remote-id> no ipv6 dhcp relay remote-id	
Parameter	<remote-id>	user-defined content of option 37.
Default	Using vlan MAC address as remote-id content by default such as "00-01-ac-12-23" with '-' hyphen.	
Mode	Port mode	
Usage	This command is used to set the form of adding option 37 in received DHCPv6 request packets, of which <remote-id> is the remote-id in user-defined option 37 and it is a string with a length of less than 128. The no operation of this command restores remote-id in option 37 to enterprise-number together with vlan MAC address. Because the option 37 information added by switch may associate with third-party DHCPv6 servers, users can specify the remote-id content based on server condition when default remote-id of the switch cannot satisfy the demand of server. The enterprise-number together with vlan MAC address is used as the remote-id by default.	
Example	Enable abc as the remote-id of DHCPv6 option 37. Switch#config Switch(config)#interface vlan 1 Switch(config-if-vlan1)# ipv6 dhcp relay remote-id abc	

ipv6 dhcp relay remote-id option

Syntax	ipv6 dhcp relay remote-id option no ipv6 dhcp relay remote-id option	
Parameter	none	
Default	Disable the relay option 37.	
Mode	Global Mode	
Usage	<p>This command enables switch relay to support the option 37, the no form of this command disables it.</p> <p>Only after this command is configured, DHCPv6 relay agent can add option 37 in DHCPv6 request packets before sending it to server or next relay agent. Make sure that DHCPv6 service has been enabled before execute this command.</p>	
Example	<p>Enable the switch relay to support option 37.</p> <pre>Switch#config Switch(config)#service dhcpv6 Switch(config)#ipv6 dhcp relay remote-id option</pre>	

ipv6 dhcp relay subscriber-id

Syntax	ipv6 dhcp relay subscriber-id <subscriber-id> no ipv6 dhcp relay subscriber-id	
Parameter	<subscriber-id>	user-defined content of option 38
Default	Set subscriber-id in option 38 to vlan name together with port name.	
Mode	Port mode	
Usage	<p>This command is used to set the form of adding option 38 in received DHCPv6 request packets, of which <subscriber-id> is the subscriber-id in user-defined option 38 and it is a string with a length of less than 128.</p> <p>Because the option 38 information added by switch may associate with third-party DHCPv6 servers, users can specify the subscriber-id content based on server condition when standard subscriber-id of the switch cannot satisfy the demand of server. The vlan name together with physical port name is used as the subscriber-id in option 38 by default.</p>	
Example	<p>Enable abc as the subscriber-id of DHCPv6 option 38.</p> <pre>Switch#config Switch(config) # interface vlan 1 Switch(config-if-vlan1)# ipv6 dhcp relay subscriber-id abc</pre>	

ipv6 dhcp relay subscriber-id option

Syntax	ipv6 dhcp relay subscriber-id option no ipv6 dhcp relay subscriber-id option	
Parameter	none	
Default	Disable the relay option 38.	
Mode	Global Mode	
Usage	<p>Only after this command is configured, DHCPv6 relay agent can add option 38 in DHCPv6 request packets before sending it to server or next relay agent. Make sure</p>	

	that DHCPv6 service has been enabled before execute this command. The option 38 of switch relay is disabled by default.
Example	Enable the switch relay to support option 38. Switch#config Switch(config) # service dhcpv6 Switch(Config)#ipv6 dhcp relay subscriber-id option

ipv6 dhcp relay subscriber-id select delimiter

Syntax	ipv6 dhcp relay subscriber-id select (sp sv pv spv) delimiter WORD (delimiter WORD) no ipv6 dhcp relay subscriber-id select delimiter	
Parameter	(sp sv pv spv)	a selection in combinations of slot, port and vlan, among which sp represents slot and port, sv represents slot and vlan, pv represents port and vlan, and spv represents slot, port and vlan.
	WORD	the delimiter between slot, port and vlan which ranges among (# . . ; : / space). Note that there're two delimiter WORDs here, of which the former is the delimiter between slot and port and the latter is the one between port and vlan.
Default	Null	
Mode	Global Mode	
Usage	Configures user configuration options to generate subscriber-id. The no form of this command restores to its original default configuration, i.e. vlan name together with port name. The command has no effect on ports with self-defined subscriber-id. If user redefines the subscriber-id of the port after using the command, the user-defined one prevails. This configuration is null by default.	
Example	Switch#config Switch(config)#ipv6 dhcp relay subscriber-id select sp delimiter #	

ipv6 dhcp server remote-id option

Syntax	ipv6 dhcp server remote-id option no ipv6 dhcp server remote-id option
Parameter	None
Default	Do not support option 37.
Mode	Global Mode
Usage	This command enables DHCPv6 server to support the identification of option 37, the no form of this command disables it. Configure this command if option 37 options is expected to be identified and processed by DHCPv6 server, otherwise they will be ignored. Option 37 is not supported by default.
Example	Enable the DHCPv6 server to support option 37.

	Switch#config Switch(config)#ipv6 dhcp server remote-id option
--	---

ip dhcp server select relay-forw

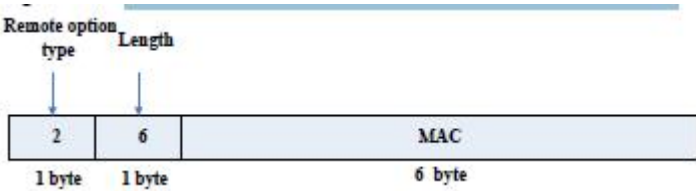
Syntax	ipv6 dhcp server select relay-forw no ipv6 dhcp server select relay-forw
Parameter	none
Default	Selecting option 37 and option 38 of the original packets.
Mode	Global Mode
Usage	This command enables the DHCPv6 server to support selections when multiple option 37 or option 38 options exist and the option 37 and option 38 of relay-forw in the innermost layer are selected. The no operation of it restores the default configuration, i.e. selecting option 37 and option 38 of the original packets. Make sure that the server has been enabled to support option 37 and option 38 before use this command. The system selects option 37 and option 38 of the original packets by default.
Example	Configure that the vlan1 interface of DHCPv6 server selects option 37 and option 38 of relay-forw in the innermost layer. Switch#config Switch(config)#interface vlan 1 Switch(config-if-vlan1)# ipv6 dhcp server select relay-forw

ipv6 dhcp server subscriber-id option

Syntax	ipv6 dhcp server subscriber-id option no ipv6 dhcp server subscriber-id option
Parameter	none
Default	Do not support option 38.
Mode	Global Mode
Usage	This command enables DHCPv6 server to support the identification of option 38, the no operation of this command disables it. Configure this command if option 38 is expected to be identified and processed by DHCPv6 server, otherwise they will be ignored. option 38 is not supported by default.
Example	Enable DHCPv6 server to support option 38. Switch#config Switch(config)#ipv6 dhcp server subscriber-id option

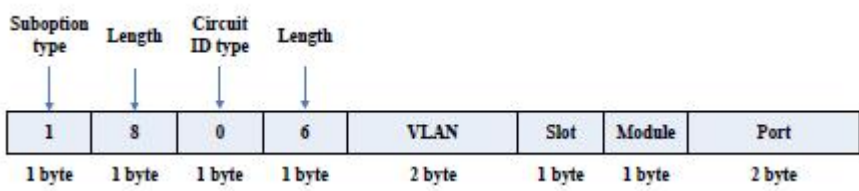
ipv6 dhcp snooping information option remote-id format

Syntax	ipv6 dhcp snooping information option remote-id format {hex ascii }	
Parameter	hex	Hex means that the remote-id is the VLAN MAC address of the hexadecimal switch.
	ascii	ascii means that the remote-id is the VLAN MAC address of

	the acsii format switch.
Default	ascii
Mode	Global Mode
Usage	<p>This command can configure the remote-id format of the switch relay agent's DHCPv6 option37.</p> <p>The hexadecimal remote-id format's definition is as below:</p>  <p>The MAC is the VLAN MAC address of the switch.</p>
Example	<p>Configure the default remote-id format of the switch relay agent's DHCPv6 option37.</p> <pre>Switch#config Switch(config)#ipv6 dhcp snooping information option remote-id format ascii</pre>

+

ipv6 dhcp snooping information option subscriber-id format

Syntax	ipv6 dhcp snooping information option subscriber-id format {hex ascii }	
Parameter	hex	hex means that the subscriber-id is the hexadecimal VLAN and port information
	ascii	ascii means that the subscriber-id is the ACSII VLAN and port information.
Default	ascii	
Mode	Global Mode	
Usage	<p>Configure the default subscribe-id format of the switch DHCPv6 snooping option38. The ACSII VLAN and port information is as Vlan1+Ethernet1/0/11. The hexadecimal VLAN and port information is defined as below:</p>  <p>The VLAN field is written with the switch VLAN ID. For the rackmount switch, Slot means the slot number; for the cassette switch, it is 1. The default module is 0. Port means the port number and starts from 1.</p>	
Example	<p>Configure the subscribe-id format of the switch DHCPv6 snooping option38 as the hexadecimal format.</p> <pre>Switch#config Switch(config)#ipv6 dhcp snooping information option subscriber-id format hex</pre>	

ipv6 dhcp snooping remote-id

Syntax	ipv6 dhcp snooping remote-id <remote-id> no ipv6 dhcp snooping remote-id	
Parameter	<remote-id>	user-defined content of option 37.
Default	Using vlan MAC address as remote-id content by default such as "00-01-ac-12-23" with '-' hyphen.	
Mode	Port mode	
Usage	<p>This command is used to set the form of adding option 37 in received DHCPv6 request packets, of which <remote-id> is the content of remote-id in user-defined option 37 and it is a string with a length of less than 128. The no form of this command restores remote-id in option 37 to enterprise-number together with vlan MAC address.</p> <p>Because option 37 information added by switch may associate with third-party DHCPv6 servers, users can specify remote-id content based on server condition when standard remote-id of the switch cannot satisfy the demand of server. The enterprise-number together with vlan MAC address is used as the remote-id by default.</p>	
Example	<p>Enable abc as remote-id of DHCPv6 option 37.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-Ethernet1/0/1)#ipv6 dhcp snooping remote-id abc</pre>	

ipv6 dhcp snooping remote-id option

Syntax	ipv6 dhcp snooping remote-id option no ipv6 dhcp snooping remote-id option	
Parameter	none	
Default	Disable.	
Mode	Global Mode	
Usage	<p>This command enables DHCPv6 SNOOPING to support option 37, the no form of this command disables it.</p> <p>Only after this command is configured, DHCPv6 SNOOPING can add option 37 in DHCPv6 packets before sending it to server or relay agent. Make sure that DHCPv6 SNOOPING has been enabled before execute this command. The system disables option 37 of DHCPv6 SNOOPING by default.</p>	
Example	<p>Enable option 37 in DHCPv6 SNOOPING.</p> <pre>Switch#config Switch(config)#ipv6 dhcp snooping enable Switch(config)#ipv6 dhcp snooping remote-id option</pre>	

ipv6 dhcp snooping remote-id policy

Syntax	ipv6 dhcp snooping remote-id policy {drop keep replace} no ipv6 dhcp snooping remote-id policy	
Parameter	drop	The system only discards it via option 37
	keep	The system keeps option 37 unchanged and forwards the packet
	replace	The system will replace the option 37 field in the existing message with its own option 37 before forwarding the message to the server.
Default	Using replace mode to replace option 37 of current packets with system's own.	
Mode	Global Mode	
Usage	Since DHCPv6 client packets may already include option 37 information, corresponding processing policy of DHCPv6 SNOOPING is required to develop. If the forwarding policy is set as replace, option 37 has to be enabled in advance. Use replace mode to replace option 37 of current packets with system's own by default.	
Example	Configure the reforward policy of DHCPv6 packets with option 37 as keep for DHCPv6 SNOOPING Switch#config Switch(config)#ipv6 dhcp snooping remote-id policy keep	

ipv6 dhcp snooping subscriber-id

Syntax	ipv6 dhcp snooping subscriber-id <subscriber-id> no ipv6 dhcp snooping subscriber-id	
Parameter	<subscriber-id>	user-defined content of option 38
Default	Set subscriber-id in option 38 to vlan name together with port name.	
Mode	Port mode	
Usage	This command is used to set the form of adding option 38 in received DHCPv6 request packets, of which <subscriber-id> is the content of subscriber-id in user-defined option 38 and it is a string with a length of less than 128. The no operation of this command restores subscriber-id in option 38 to vlan name together with port name such as "Vlan2+Ethernet1/0/2". Because option 38 information added by switch may associate with third-party DHCPv6 servers, users can specify subscriber-id content based on server condition when standard subscriber-id of the switch cannot satisfy the demand of server. The vlan name together with physical port name is used as subscriber-id in option 38 by default.	
Example	Enable abc as subscriber-id of DHCPv6 option 38. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#ipv6 dhcp snooping subscriber-id abc	

ipv6 dhcp snooping subscriber-id option

Syntax	ipv6 dhcp snooping subscriber-id option no ipv6 dhcp snooping subscriber-id option	
Parameter	none	
Default	Disable option 38 of DHCPv6 SNOOPING.	
Mode	DHCP Address Pool Mode	
Usage	<p>This command enables DHCPv6 SNOOPING to support option 38, the no form of this command disables it.</p> <p>Only after this command is configured, DHCPv6 SNOOPING can add option 38 in DHCPv6 packets before sending it to server or relay agent. Make sure that DHCPv6 SNOOPING has been enabled before executing this command. The system disables option 38 of DHCPv6 SNOOPING by default.</p>	
Example	<p>Enable option 38 in DHCPv6 SNOOPING.</p> <pre>Switch#config Switch(config)#ipv6 dhcp snooping enable Switch(config)#ipv6 dhcp snooping subscriber-id option</pre>	

ipv6 dhcp snooping subscriber-id policy

Syntax	ipv6 dhcp snooping subscriber-id policy {drop keep replace} no ipv6 dhcp snooping subscriber-id policy	
Parameter	drop	The system only discards it via option 38
	keep	The system keeps option 38 unchanged and forwards the packet
	replace	The system will replace the option 38 field in the existing message with its own option 38 before forwarding the message to the server.
Default	Using replace mode to replace option 38 of current packets with system's own.	
Mode	Global Mode	
Usage	<p>Since DHCPv6 client packets may already include option 38 information, corresponding processing policy of DHCPv6 SNOOPING is requested to develop. If the reforward policy is set as replace, option 38 has to be enabled in advance. The system disables option 38 of DHCPv6 SNOOPING by default.</p>	
Example	<p>Set the reforward policy of DHCPv6 packets with option 38 as keep for DHCPv6 SNOOPING.</p> <pre>Switch#config Switch(config)#ipv6 dhcp snooping subscriber-id policy keep</pre>	

ipv6 dhcp snooping subscriber-id select delimiter

Syntax	ipv6 dhcp snooping subscriber-id select (sp sv pv spv) delimiter WORD (delimiter WORD) no ipv6 dhcp snooping subscriber-id select delimiter	
Parameter	(sp sv pv spv)	a selection from combinations of slot, port and vlan, among which sp represents slot and port, sv represents slot and vlan, pv represents port and vlan, and spv represents slot,

		port and vlan.
	WORD	the delimiter between slot, port and vlan which ranges among (# .. ,; : / space). Note that there're two delimiter WORDs here, of which the former is the delimiter between slot and port while the latter is that between port and vlan.
Default	null	
Mode	Global Mode	
Usage	<p>Configure user configuration options to generate subscriber-id. The no form of this command restores to its original default configuration, i.e. vlan name together with port name.</p> <p>This command has no effect on ports with self-defined subscriber-id. If a user redefines subscriber-id of the port after configuring the command, the user-defined one prevails. This configuration is null by default.</p>	
Example	<pre>Switch#config Switch(config)#ipv6 dhcp snooping subscriber-id select sv delimiter #</pre>	

ipv6 dhcp use class

Syntax	<pre>ipv6 dhcp use class no ipv6 dhcp use class</pre>	
Parameter	none	
Default	DHCPv6 server supports DHCPv6 class during address assignment.	
Mode	Global Mode	
Usage	<p>This command enables DHCPv6 server to support DHCPv6 class during address assignment, the no operation of this command disables it without removing the relative DHCPv6 class information that has been configured.</p> <p>By default, DHCPv6 servers support DHCPv6 class during address assignment and the no form of this command doesn't remove DHCPv6 class information that has been configured. Make sure that DHCPv6 service has been enabled before using this command. DHCPv6 server supports DHCPv6 class during address assignment by default.</p>	
Example	<pre>Configure DHCPv6 server to support DHCPv6 class during address assignment. Switch#config Switch(config)# ipv6 dhcp use class</pre>	

remote-id subscriber-id

Syntax	<pre>{remote-id [*] <remote-id> [*] subscriber-id [*] <subscriber-id> [*]} no {remote-id [*] <remote-id> [*] subscriber-id [*] <subscriber-id> [*]}</pre>	
Parameter	<remote-id>	a string with a length ranging from 1 to 128 bytes is used to match remote-id in option 37.
	<subscriber-id>	a string with a length ranging from 1 to 128 bytes is used to match subscriber-id in option 38.
	[*]	match zero or more characters.

Default	None
Mode	IPv6 DHCP Class configuration mode
Usage	<p>This command configures option 37 and option 38 that match the class in IPv6 DHCP class configuration mode.</p> <p>This command configures a mode which matches with the already-defined DHCPv6 class, and a DHCPv6 class may configure multiple commands. If this command is ignored and no mode configured in IPv6 DHCP Class mode, any remote-id or subscriber-id is considered to match with the DHCPv6 class, however, remote-id or subscriber-id must exist in DHCPv6 packet.</p>
Example	<p>Configure some remote-id or subscriber-id belonging to DHCPv6 class named CLASS1.</p> <pre>Switch#config Switch(config)#ipv6 dhcp class CLASS1 Switch(dhcpv6-class-class1-config)#remote-id abc* subscriber-id bcd* Switch(dhcpv6-class-class1-config)#remote-id edf* Switch(dhcpv6-class-class1-config)#subscriber-id *mmn</pre>

show ipv6 dhcp relay option

Syntax	show ipv6 dhcp relay option
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	Use this command to check relay agents' configuration status for option 37 and option 38.
Example	<pre>Switch#show ipv6 dhcp relay option remote-id option enable subscriber-id option enable Interface Vlan 1: remote-id option configure "abc"</pre>

show ipv6 dhcp snooping option

Syntax	show ipv6 dhcp snooping option
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	Use this command to check snooping configuration status for option 37 and option 38.
Example	<pre>Switch#show ipv6 dhcp snooping option remote-id option enable subscriber-id option enable The slot port vlan select option is : port and vlan The delimiter is : #</pre>

enable trustview key

Syntax	enable trustview key {0 7} <password> no enable trustview key	
Parameter	<password>	<password> is character string length less than 16, which use as encrypted key.
	{0 7}	0 for un-encrypted text for the password, while 7 for encrypted.
Default	Disabled	
Mode	Global Mode	
Usage	To configure DES encrypted key for private packets, this command is also the switch for the private packets encrypt and hash function enabled or not. The switch communicates with the TrustView management system through private protocols. By default these packets are not encrypted. In order to prevent spoofing, it can be configured to encrypt these packets. And at the same time, the same password should be configured on TrustView server.	
Example	Enable encrypt or hash function of private message Switch#config Switch(config)# enable trustview key 0 switch	

ip dhcp snooping

Syntax	ip dhcp snooping enable no ip dhcp snooping enable	
Parameter	none	
Default	DHCP Snooping is disabled by default	
Mode	Global Mode	
Usage	Enable the DHCP Snooping function. When this function is enabled, it will monitor all the DHCP Server packets of non-trusted ports.	
Example	Enable the DHCP Snooping function. Switch#config Switch(config)#ip dhcp snooping enable	

ip dhcp snooping action

Syntax	ip dhcp snooping action {shutdown blackhole} [recovery <second>] no ip dhcp snooping action	
Parameter	shutdown	When the port detects a fake DHCP Server, it will be shutdown.
	blackhole	When the port detects a fake DHCP Server, the vid and source MAC of the fake packet will be used to block the traffic from this MAC.
	recovery	Users can set to recover after the automatic defense action being executed.(no shut ports or delete correponding blackhole) .
	<second>	Users can set how long after the execution of defense action to recover. The unit is second, and valid range is 10-3600.
Default	No default defense action.	
Mode	Port mode	

Usage	Set or delete the automatic defense action of a port. Only when DHCP Snooping is globally enabled, can this command be set. Trusted port will not detect fake DHCP Server, so, will never trigger the corresponding defense action. When a port turns into a trusted port from a non-trusted port, the original defense action of the port will be automatically deleted.
Example	Set the DHCP Snooping defense action of port ethernet1/0/1 as setting blackhole, and the recovery time is 30 seconds. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(Config-Ethernet1/0/1)#ip dhcp snooping action blackhole recovery 30

ip dhcp snooping action MaxNum

Syntax	ip dhcp snooping action {<maxNum> default}	
Parameter	<maxNum>	the number of defense action on each port, the range of which is 1-200, and the value of which is 10 by default.
	default	recover to the default value.
Default	The default value is 10.	
Mode	Global Mode	
Usage	Set the number of defense action that can be simultaneously took effect. Set the max number of defense actions to avoid the resource exhaustion of the switch caused by attacks. If the number of alarm information is larger than the set value, then the earliest defense action will be recovered forcibly in order to send new defense actions.	
Example	Set the number of port defense actions as 100. Switch#config Switch(config)#ip dhcp snooping action 100	

ip dhcp snooping binding

Syntax	ip dhcp snooping binding enable no ip dhcp snooping binding enable	
Parameter	none	
Default	DHCP Snooping binding is disabled by default.	
Mode	Global Mode	
Usage	Enable the DHCP Snooping binding function When the function is enabled, it will record the binding information allocated by DHCP Server of all trusted ports. Only after the DHCP SNOOPING function is enabled, the binding function can be enabled.	
Example	Enable the DHCP Snooping binding function. Switch#config Switch(config)#ip dhcp snooping binding enable	

ip dhcp snooping binding dot1x

Syntax	ip dhcp snooping binding dot1x no ip dhcp snooping binding dot1x	
Parameter	none	
Default	By default, the binding DOT1X function is disabled on all ports.	
Mode	Port mode	
Usage	When this function is enabled, DHCP SNOOPING will notify the DOT1X module about the captured binding information as a DOT1X controlled user. This command is mutually exclusive to "ip dhcp snooping binding user-control" command. Only after the DHCP SNOOPING binding function is enabled, the binding dot1x function can be set.	
Example	Enable the binding DOT1X function on port ethernet1/0/1. Switch#config Switch(config) #interface ethernet 1/0/1 switch(Config-Ethernet 1/0/1)# ip dhcp snooping binding dot1x	

ip dhcp snooping binding user

Syntax	ip dhcp snooping binding user <mac> address <ipaddress> vlan <vlan-id> interface [Ethernet] <ifname> no ip dhcp snooping binding user <mac> interface [Ethernet] <ifname>	
Parameter	<mac>	The MAC address of the static binding user, which is the only index of the binding user.
	<ipaddress>	The IP address of the static binding user
	<vlan-id>	The VLAN ID of static binding user
	<ifname>	The access interface of static binding user
Default	DHCP Snooping has no static binding list entry by default.	
Mode	Global Mode	
Usage	The static binding users is deal in the same way as the dynamic binding users captured by DHCP SNOOPING; the following actions are all allowed: notifying DOT1X to be a controlled user of DOT1X, adding a trusted user list entry directly, adding a binding ARP list entry. The static binding users will never be aged, and have a priority higher than dynamic binding users. Only after the DHCP SNOOPING binding function is enabled, the static binding users can be enabled.	
Example	Configure static binding users. Switch#config Switch(config)#ip dhcp snooping binding user 00-11-22-33-44-55 address 1.1.1.1 vlan 1 interface ethernet 1/0/14	

ip dhcp snooping binding user-control

Syntax	ip dhcp snooping binding user-control no ip dhcp snooping binding user-control	
Parameter	None	
Default	By default, the binding user function is disabled on all ports.	

Mode	Port mode
Usage	<p>When this function is enabled, DHCP SNOOPING will treat the captured binding information as trusted users allowed to access all resources. This command is mutually exclusive to “ip dhcp snooping binding dot1x” command.</p> <p>Only after DHCP SNOOPING binding function is enabled, the binding user function can be set. This command is not limited by “ip dhcp snooping” based on VLAN, but it is only limited by the global “ip dhcp snooping enable” command.</p>
Example	<p>Enable the binding USER function on port ethernet1/0/1.</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(Config-Ethernet 1/0/1)# ip dhcp snooping binding user-control</pre>

ip dhcp snooping binding user-control max-user

Syntax	<pre>ipv6 dhcp snooping binding user-control max-user <number> no ip dhcp snooping binding user-control max-user</pre>	
Parameter	<number>	<number> the max number of users allowed to access the port, from 0 to 1024.
Default	The max number of users allowed by each port to access is 1024.	
Mode	Port mode	
Usage	<p>Set the max number of users allowed to access the port when enabling DHCP Snooping binding user function; the no operation of this command will restore default value.</p> <p>This command defines the max number of trust users distributed according to binding information, with ip dhcp snooping binding user-control enabled on the port. By default, the number is 1024. Considering the limited hardware resources of the switch, the actual number of trust users distributed depends on the resource amount. If a bigger max number of users is set using this command, DHCP Snooping will distribute the binding information of untrust users to hardware to be trust users as long as there is enough available resources. Otherwise, DHCP Snooping will change the distributed binding information according to the new smaller max user number. When the number of distributed binding information entries reaches the max limit, no new DHCP will be able to become trust user or to access other network resources via the switch.</p>	
Example	<p>Enable DHCP Snooping binding user function on Port ethernet1/0/1, setting the max number of user allowed to access by Port Ethernet1/0/1 as 5. .</p> <pre>Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-ethernet 1/0/1)#ip dhcp snooping binding user-control max-user 5</pre>	

ip dhcp snooping information enable

Syntax	ip dhcp snooping information enable no ip dhcp snooping information enable	
Parameter	none	
Default	Option 82 function is disabled in DHCP Snooping by default.	
Mode	Global Mode	
Usage	<p>This command will enable option 82 function of DHCP Snooping on the switch, the no operation of this command will disable that function.</p> <p>Only by implementing this command, can DHCP Snooping add standard option 82 to DHCP request messages and forward the message. The format of option1 in option 82 (Circuit ID option) is standard vlan name plus physical port name, like vlan1+ethernet1/0/12. That of option2 in option 82 (remote ID option) is CPU MAC of the switch, like 00030f023301. If a DHCP request message with option 82 options is received, DHCP Snooping will replace those options in the message with its own. If a DHCP reply message with option 82 options is received, DHCP Snooping will dump those options in the message and forward it.</p>	
Example	<p>Enable option 82 function of DHCP Snooping on the switch.</p> <pre>Switch#config Switch(config)#ip dhcp snooping enable Switch(config)# ip dhcp snooping binding enable Switch(config)# ip dhcp snooping information enable</pre>	

ip dhcp snooping information option allow-untrusted (replace)

Syntax	ip dhcp snooping information option allow-untrusted (replace) no ip dhcp snooping information option allow-untrusted (replace)	
Parameter	(replace)	When the "replace" is setting, the potion82 option is allowed to replace.
Default	Drop DHCP packets with option82 option received by untrusted ports.	
Mode	Global Mode	
Usage	<p>This command is used to set that allow untrusted ports of DHCP snooping to receive DHCP packets with option82 option. When disabling this command, all untrusted ports will drop DHCP packets with option82 option.</p> <p>Usually the switch with DHCP snooping function connects the terminal user directly, so close allow-untrusted by default to avoid option82 option added by user privately. Please set uplink port as trust port when enabling the uplink of DHCP snooping function.</p>	
Example	<p>Enable the function that receives DHCP packets with option82</p> <pre>Switch#config Switch(config)#ip dhcp snooping information option allow-untrusted</pre>	

ip dhcp snooping information option delimiter

Syntax	ip dhcp snooping information option delimiter [colon dot slash space] no ip dhcp snooping information option delimiter	
Parameter	none	
Default	slash (“/”)	
Mode	Global Mode	
Usage	Set the delimiter of each parameter for suboption of option82 in global mode, no command restores the delimiter as slash. Divide parameters with the configured delimiters after users have defined them which are used to create suboption (remote-id, circuit-id) of option82 in global mode.	
Example	Set the parameter delimiters as dot (“.”) for suboption of option82. Switch#config Switch(config)#ip dhcp snooping information option delimiter dot	

ip dhcp snooping information option remote-id

Syntax	ip dhcp snooping information option remote-id {standard <remote-id>} no ip dhcp snooping information option remote-id	
Parameter	standard	standard means the default VLAN MAC format
	<remote-id>	<remote-id> means the remote-id content of option 82 specified by users, its length can not exceed 64 characters.
Default	Use standard format to set remote-id.	
Mode	Global Mode	
Usage	The additive option 82 needs to associate with third-party DHCP server, it is used to specify the remote-id content by users when the standard remote-id format can not satisfy server's request .	
Example	Set the suboption remote-id of DHCP option82 as street-1-1. Switch#config Switch(config)#ip dhcp snooping information option remote-id street-1-1	

ip dhcp snooping information option self-defined remote-id

Syntax	ip dhcp snooping information option self-defined remote-id {hostname mac string WORD} no ip dhcp snooping information option self-defined remote-id	
Parameter	WORD	WORD the defined character string of remote-id by themselves, the maximum length is 64.
Default	Using standard method.	
Mode	Global Mode	
Usage	Set creation method for option82, users can define the parameters of remote-id suboption by themselves. After configure this command, if users do not configure ip dhcp snooping information option remote-id globally, it will create remote-id suboption for option82 according to self-defined method. For mac, use the format such as 00-02-d1-2e-3a-0d if it is filled to packets with ascii format, but hex format occupies 6 bytes. Each option will be filled to	

	packets according to the configured order of the commands and divide them with delimiter (delimiter is ip dhcp snooping information option delimiter configuration).
Example	Set self-defined method and character string of remote-id suboption are mac and abc respectively for option82. Switch#config Switch(config)#ip dhcp snooping information option self-defined remote-id mac string abc

ip dhcp snooping information option self-defined remote-id format

Syntax	ip dhcp snooping information option self-defined remote-id format [ascii hex]	
Parameter	hex	hex means that the remote-id is the hexadecimal VLAN and port information
	ascii	ascii means that the remote-id is the ASCII VLAN and port information.
Default	ascii	
Mode	Global Mode	
Usage	Set self-defined format of remote-id for snooping option82. self-defined format use ip dhcp snooping information option type self-defined remote-id to create remote-id format.	
Example	Set self-defined format of remote-id as hex for snooping option82. Switch#config Switch(config)#ip dhcp snooping information option self-defined remote-id format hex	

ip dhcp snooping information option self-defined subscriber-id

Syntax	ip dhcp snooping information option self-defined subscriber-id {vlan port id (switch-id (mac hostname) remote-mac) string WORD} no ip dhcp snooping information option type self-defined subscriber-id	
Parameter	WORD	WORD the defined character string of circuit-id by themselves, the maximum length is 64.
Default	Using standard method.	
Mode	Global Mode	
Usage	Set creation method for option82, users can define the parameters of circuit-id suboption by themselves. After configure this command, if users do not configure circuit-id on port, it will create circuit-id suboption for option82 according to self-defined method. Self-defined format of circuit-id: if self-defined subscriber-id format is ascii, the filled format of vlan such as "Vlan2", the format of port such as "Ethernet1/0/1", the format of mac and remote-mac such as "00-02-d1-2e-3a-0d". If self-defined format is hex, the filled format of vlan occupies 2 bytes, port occupies 4 bytes, a byte means slot (for chassis switch, it means slot ID, for box switch, it is 1), a byte means Module (the default is 0), two bytes means port ID beginning from 1, mac and remote-mac occupy 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is ip dhcp snooping information option delimiter configuration).	

Example	Set self-defined method of circuit-id suboption as vlan, port, mac and remote-mac for option82. Switch#config Switch(config)#ip dhcp snooping information option self-defined subscriber-id vlan port id remote-mac
---------	---

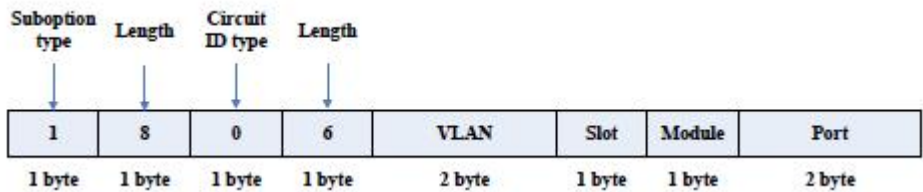
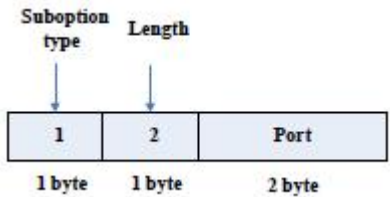
ip dhcp snooping information option self-defined subscriber-id format

Syntax	ip dhcp snooping information option self-defined subscriber-id format [ascii hex]	
Parameter	hex	hex means that the subscriber-id is the hexadecimal VLAN and port information
	ascii	ascii means that the subscriber-id is the ACSII VLAN and port information.
Default	ascii	
Mode	Global Mode	
Usage	Set self-defined format of circuit-id for snooping option82. self-defined format uses ip dhcp snooping information option type self-defined subscriber-id to create circuit-id format.	
Example	Set self-defined format of circuit-id as hex for snooping option82. Switch#config Switch(config)#ip dhcp snooping information option self-defined subscriber-id format hex	

ip dhcp snooping information option subscriber-id

Syntax	ip dhcp snooping information option subscriber-id {standard <circuit-id>} no ip dhcp snooping information option subscriber-id	
Parameter	standard	standard means the standard format of VLAN name and physical port name, such as Vlan2+Ethernet1/0/12.
	<circuit-id>	<circuit-id> means the circuit-id content of option 82 specified by users, its length can not exceed 64 characters.
Default	Use standard format to set circuit-id.	
Mode	Port mode	
Usage	Set the suboption1 (circuit ID option) content of option 82 added by DHCP request packets (they are received by the port). The no command sets the additive suboption1 (circuit ID option) format of option 82 as standard. The additive option 82 needs to associate with third-party DHCP server, it is used to specify the circuit-id content by user when the standard circuit-id format can not satisfy server's request.	
Example	Set the suboption circuit-id of DHCP option82 as P2. Switch#config Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#ip dhcp snooping information option subscriber-id P2	

ipv6 dhcp snooping information option subscriber-id format

Syntax	ip dhcp snooping information option subscriber-id format {hex ascii vs-hp}	
Parameter	hex	hex means that subscriber-id is VLAN and port information with hexadecimal format
	ascii	ascii means that subscriber-id is VLAN and port information with ASCII format.
	vs-hp	vs-hp means that subscriber-id is compatible with the format of HP manufacturer.
Default	ascii	
Mode	Global Mode	
Usage	<p>This command is used to set subscriber-id format of DHCP snooping option82. VLAN and port information with ASCII format, such as Vlan1+Ethernet1/0/11, VLAN and port information with hexadecimal format defined as below:</p> <div style="text-align: center;">  <p style="text-align: center;"> Suboption type Length Circuit ID type Length ↓ ↓ ↓ ↓ 1 8 0 6 VLAN Slot Module Port 1 byte 1 byte 1 byte 1 byte 2 byte 1 byte 1 byte 2 byte </p> </div> <p>VLAN field fill in VLAN ID. For chassis switch, Slot means slot number, for box switch, Slot is 1; default Module is 0; Port means port number which begins from 1. The compatible subscriber-id format with HP manufacturer defined as below:</p> <div style="text-align: center;">  <p style="text-align: center;"> Suboption type Length ↓ ↓ 1 2 Port 1 byte 1 byte 2 byte </p> </div> <p>Port means port number which begins from 1.</p>	
Example	Set subscriber-id format of DHCP snooping option82 as hexadecimal format. Switch#config Switch(config)#ip dhcp snooping information option subscriber-id format hex	

ip dhcp snooping limit-rate

Syntax	ip dhcp snooping limit-rate <pps> no ip dhcp snooping limit-rate	
Parameter	<pps>	The number of DHCP messages transmitted in every minute, ranging from 0 to 100. Its default value is 100. 0 means that no DHCP message will be transmitted.
Default	The default value is 100.	
Mode	Global Mode	
Usage	Set the DHCP message rate limit After enabling DHCP snooping, the switch will monitor all the DHCP messages and implement software transmission. The software performance of the switch is relative to the type of the switch, its current load and so on.	
Example	Set the message transmission rate as 50pps.	

	Switch#config Switch(config)# ip dhcp snooping limit-rate 50
--	---

ip dhcp snooping trust

Syntax	ip dhcp snooping trust no ip dhcp snooping trust	
Parameter	none	
Default	By default, all ports are non-trusted ports	
Mode	Port mode	
Usage	Set or delete the DHCP Snooping trust attributes of a port. Only when DHCP Snooping is globally enabled, can this command be set. When a port turns into a trusted port from a non-trusted port, the original defense action of the port will be automatically deleted; all the security history records will be cleared (except the information in system log)	
Example	Set port ethernet1/0/1 as a DHCP Snooping trusted port Switch#config Switch(config)#interface ethernet 1/0/1 switch(config- ethernet 1/0/1)#ip dhcp snooping trust	

ip dhcp snooping vlan

Syntax	ip dhcp snooping vlan (WORD) no ip dhcp snooping vlan (WORD)	
Parameter	WORD	VLAN ID
Default	Disable	
Mode	Global Mode	
Usage	Enable the dhcp snooping in vlan. no ip dhcp snooping vlan <vlan-id> means to disable the dhcp snooping function on the appointed vlan.	
Example	Enable DHCP snooping function. Switch#config Switch(config)#ip dhcp snooping vlan 10 Switch(config)#no ip dhcp snooping vlan 10	

ip user helper-address

Syntax	ip user helper-address <svr_addr> [port <udp_port>] source <src_addr> [secondary] no ip user helper-address [secondary]	
Parameter	<svr_addr>	The IP address of HELPER SERVER IP in dotted-decimal notation
	<udp_port>	The UDP port of HELPER SERVER, the range of which is 1—65535, and its default value is 9119.
	<src_addr>	The local management IP address of the switch, in dotted-decimal notation.

	[secondary]	Whether it is a secondary SERVER address.
Default	There is no HELPER SERVER address by default.	
Mode	Global Mode	
Usage	<p>Set the address and port of HELPER SERVER.</p> <p>DHCP SNOOPING will send the monitored binding information to HELPER SERVER to save it. If the switch starts abnormally, it can recover the binding data from HELPER SERVER. The HELPER SERVER function usually is integrated into DCBI packet. The DHCP SNOOPING and HELPER SERVER use the UDP protocol to communicate, and guarantee the arrival of retransmitted data. HELPER SERVER configuration can also be used to sent DOT1X user data from the server, the detail of usage is described in the chapter of dot1x configuration.</p> <p>Two HELPER SERVER addresses are allowed, DHCP SNOOPING will try to connect to PRIMARY SERVER in the first place. Only when the PRIMARY SERVER is unreachable, will the switch c HELPER SERVER connects to SECONDARY SERVER.</p> <p>Please pay attention: source address is the effective management IP address of the switch, if the management IP address of the switch changes, this configuration should be updated in time.</p>	
Example	<p>Set the local management IP address as 100.1.1.1, primary HELPER SERVER address as 100.1.1.100 and the port as default value.</p> <pre>Switch#config switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip address 100.1.1.1 255.255.255.0 switch(config-if-vlan1)exit switch(config)#ip user helper-address 100.1.1.100 source 100.1.1.1</pre>	

ip user private packet version two

Syntax	ip user private packet version two no ip user private packet version two	
Parameter	none	
Default	The switch choose private packet version one to communicate with DCBI.	
Mode	Global Mode	
Usage	<p>The switch choose private packet version two to communicate with trustview.</p> <p>If the DCBI access control system is applied, the switch should be configured to use private protocol of version one to communicate with the DCBI server. However, if TrustView is applied, version two should be applied.</p>	
Example	<p>To configure the switch choose private packet version two to communicate with inter security management background system.</p> <pre>Switch#config Switch(config)#ip user private packet version two</pre>	

show ip dhcp snooping

Syntax	show ip dhcp snooping [interface [ethernet] <interfaceName>]				
Parameter	<interfaceName>	The name of the specific port.			
Default	none				
Mode	Admin and Configuration Mode				
Usage	If there is no specific port, then display the current configuration information of dhcp snooping, otherwise, display the records of defense actions of the specific port				
Example	<pre>Switch#show ip dhcp snooping User primary helper server 1.1.1.1:9119, source 100.1.1.1, socket 0 seq no 0, connection 0, retry 0, renew 0, binding count 0 00:00:00 retry, 01:16:57 keep alive, 00:00:00 dead Get PrivateDESMD5 Ack 0, Get FreeResource Ack 0, Get HttpRedirPage Ack 0, Get Binding Ack 0 DHCP Snooping is enabled DHCP Snooping maxnum of action info:100 DHCP Snooping limit rate is 100 pps, switch ID 10-f0-13-f1-72-3a DHCP Snooping dropped packets 0, discarded packets 0 DHCP Snooping alarm count 0, binding count 1, static binding count 1, from shell 1, from server 0 expired binding 0, request binding 0 interface trust action recovery alarm num bind num ----- Ethernet1/0/1 trust none 0 0 0 Ethernet1/0/2 untrust none 0 0 0 Ethernet1/0/3 untrust none 0 0 0 Ethernet1/0/4 untrust none 0 0 0 Ethernet1/0/5 untrust none 0 0 0 Ethernet1/0/6 untrust none 0 0 0 Ethernet1/0/7 untrust none 0 0 0 Ethernet1/0/8 untrust none 0 0 0 Ethernet1/0/9 untrust none 0 0 0 Ethernet1/0/10 untrust none 0 0 0 Ethernet1/0/11 untrust none 0 0 0 Ethernet1/0/12 untrust none 0 0 0 Ethernet1/0/13 untrust none 0 0 0 Ethernet1/0/14 untrust none 0 0 1 Ethernet1/0/15 untrust none 0 0 0 Ethernet1/0/16 untrust none 0 0 0 Ethernet1/0/17 untrust none 0 0 0 Ethernet1/0/18 untrust none 0 0 0 Ethernet1/0/19 untrust none 0 0 0 Ethernet1/0/20 untrust none 0 0 0 Ethernet1/0/21 untrust none 0 0 0</pre>				

Ethernet1/0/22	untrust	none	0	0	0
Ethernet1/0/23	untrust	blackhole	30	0	0
Ethernet1/0/24	untrust	none	0	0	0
Ethernet1/0/25	untrust	none	0	0	0
Ethernet1/0/26	untrust	none	0	0	0
Ethernet1/0/27	untrust	none	0	0	0
Ethernet1/0/28	untrust	none	0	0	0
Displayed Information	Explanation				
DHCP Snooping is enable	Whether the DHCP Snooping is globally enabled or disabled.				
DHCP Snooping binding arp	Whether the ARP binding function is enabled.				
DHCP Snooping maxnum of action info	The number limitation of port defense actions				
DHCP Snooping limit rate	The rate limitation of receiving packets				
switch ID	The switch ID is used to identify the switch, usually using the CPU MAC address				
DHCP Snooping dropped packets	The number of dropped messages when the received DHCP messages exceeds the rate limit.				
discarded packets	The number of discarded packets caused by the communication failure within the system. If the CPU of the switch is too busy to schedule the DHCP SNOOPING task and thus can not handle the received DHCP messages, such situation might happen.				
DHCP Snooping alarm count:	The number of alarm information.				
binding count	The number of binding information.				
expired binding	The number of binding information which is already expired but has not been deleted. The reason why the expired information is not deleted immediately might be that the switch needs to notify the helper server about the information, but the helper server has not acknowledged it.				
request binding	The number of REQUEST information				
interface	The name of port				
trust	The truest attributes of the port				
action	The automatic defense action of the port				
recovery	The automatic recovery time of the port				
alarm num	The number of history records of the port automatic defense actions				
bind num	The number of port-relative binding information.				

show ip dhcp snooping binding all

Syntax	show ip dhcp snooping binding all
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	This command can check the global binding information of DHCP snooping, each table entry includes the corresponding MAC address, IP address, port name, VLAN ID and the flag of the binding state. Besides, DHCP Snooping must be enabled globally, this command can be configured.
Example	<pre>Switch#show ip dhcp snooping binding all ip dhcp snooping static binding count:1, dynamic binding count:0 MAC IP address Interface Vlan ID Flag ----- 00-11-22-33-44-55 1.1.1.1 Ethernet1/0/14 1 SE -----</pre>

show trustview status

Syntax	show trust status
Parameter	none
Default	none
Mode	Admin and Configuration Mode
Usage	This command can be used for debugging the communication messages between the switch and the TrustView server, messages such as protocol version notification, encryption negotiation, free resource and web URL redirection, and the number of forced log-off messages, as well as the number of forced accounting update messages, can be displayed.
Example	<pre>Switch#show trustview status Primary trustview Server 1.1.1.1:9119 trustview version2 message inform failed trustview inform free resource failed trustview inform web redirect address failed trustview inform user binding data failed trustview version 2 message encrypt/digest not enabled Rcvd 0 force log-off packets Rcvd 0 force accounting update packets using version two private packet</pre>

ip dhcp snooping information enable

Syntax	ip dhcp snooping information enable no ip dhcp snooping information enable
Parameter	none
Default	Option 82 function is disabled in DHCP Snooping by default.
Mode	Global Mode

Usage	Only by implementing this command, can DHCP Snooping add standard option 82 to DHCP request messages and forward the message. The format of option1 in option 82 (Circuit ID option) is standard vlan name plus physical port name, like "vlan1+ethernet1/0/12". That of option2 in option 82 (remote ID option) is CPU MAC of the switch, like "00030f023301". If a DHCP request message with option 82 options is received, DHCP Snooping will replace those options in the message with its own. If a DHCP reply message with option 82 options is received, DHCP Snooping will dump those options in the message and forward it.
Example	Enable option 82 function of DHCP Snooping on the switch. Switch#config Switch(config)#ip dhcp snooping enable Switch(config)#ip dhcp snooping binding enable Switch(config)#ip dhcp snooping information enable

9.1 IPv4 Multicast

access-list (Multicast Destination Control)

Syntax	access-list <6000-7999> (((add delete) profile-id WORD) ((deny permit) ip ((<source> <wildcard-bit>) (host-source <source-host-ip> [range <2-65535>]) any-source) ((<destination> <wildcard-bit>) (host-destination <destination-host-ip> [range <2-255>]) any-destination))) no access-list <6000-7999> {deny permit} ip ((<source> <source-wildcard>) (host-source <source-host-ip> [range <2-65535>]) any-source) ((<destination> <destination-wildcard>) (host-destination <destination-host-ip> [range <2-255>]) any-destination)	
Parameter	<6000-7999>	destination control access-list number.
	add delete	add or delete the profile
	WORD	File id
	deny permit	deny or permit
	<source>	multicast source address
	<wildcard-bit>	Address wildcard
	<source-host-ip>	multicast source host address.
	<2-65535>	the range of multicast source host.
	<destination>	multicast destination address
	<destination-host-ip>	multicast destination host address
<2-255>	the range of multicast destination host.	
Default	none	
Mode	Global Mode	
Usage	ACL of Multicast destination control list item is controlled by specifical ACL number from 6000 to 7999, the command applies to configure this ACL. ACL of ip Multicast destination control only needs to configure source IP address and destination IP address controlled (group IP address), the configuration mode is basically the same to other ACLs, and use mask length to configure address range, and also specify a	

	host address or all address. Remarkable, “all address” is 224.0.0.0/4 according to group IP address, not 0.0.0.0/0 in other access-list. And adding or deleting the profile-id can be used to change the multicast destination control ACL.
Example	Switch#config Switch(config)#access-list 6000 permit ip 10.1.1.1 0.0.0.255 232.0.0.0 0.0.0.255 Switch(config)#access-list 6000 add profile-id 1 profile id 1 is not exist % Operation failed Switch(config)#

access-list (Multicast Source Control)

Syntax	access-list <5000-5099> (deny permit) ip ((<source> <wildcard-bit>) (host <source-host-ip>) any-source) ((<destination> <wildcard-bit>) (host-destination <destination-host-ip>) any-destination} no access-list <5000-5099> (deny permit) ip ((<source> <wildcard-bit>) (host <source-host-ip>) any-source) ((<destination> <wildcard-bit>) (host-destination <destination-host-ip>) any-destination)	
Parameter	<5000-5099>	source control access-list number
	deny permit	deny or permit.
	<source>	multicast source address..
	<wildcard-bit>	address wildcard character.
	<source-host-ip>	multicast source host address.
	<destination>	multicast destination address.
	<destination-host-ip> >	multicast destination host address.
Default	None	
Mode	Global Mode	
Usage	ACL of Multicast source control list item is controlled by specific ACL number from 5000 to 5099, the command applies to configure this ACL. ACL of Multicast source control only needs to configure source IP address and destination IP address controlled (group IP address), the configuration mode is basically the same to other ACLs, and use wildcard character to configure address range, and also specify a host address or all address. Remarkable, “all address” is 224.0.0.0/4 according to group IP address, not 0.0.0.0/0 in other access-list.	
Example	Switch(config)#access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255	

ip multicast destination-control access-group

Syntax	ip multicast destination-control access-group <6000-7999> no ip multicast destination-control access-group <6000-7999>	
Parameter	<6000-7999>	destination-control access-list number.
Default	None	
Mode	Interface Configuration Mode	

Usage	The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING is enabled, for adding the interface to multicast group, and match configured access-list, such as matching: permit, the interface can be added, otherwise do not be added.
Example	Switch#config Switch(config)#interface ethernet 1/0/4 Switch(config-if-ethernet1/0/4)#ip multicast destination-control access-group 6000 Switch(config-if-ethernet1/0/4)#

ip multicast destination-control access-group (sip)

Syntax	ip multicast destination-control <IPADDRESS/M> access-group <6000-7999> no ip multicast destination-control <IPADDRESS/M> access-group <6000-7999>	
Parameter	<IPADDRESS/M>	IP address and mask length
	<6000-7999>	Destination control access-list number
Default	None	
Mode	Global Mode	
Usage	The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING or IGMP is enabled, for adding the members to multicast group. If configuring multicast destination-control on specified net segment of transmitted igmp-report, and match configured access-list, such as matching permit, the interface can be added, otherwise do not be added. If relevant group or source in show ip igmp groups detail has been established before executing the command, it needs to execute clear ip igmp groups command to clear relevant groups in Admin mode.	
Example	Switch#config Switch(config)#ip multicast destination-control 10.1.1.0/24 access-group 6000	

ip multicast destination-control access-group (vmac)

Syntax	ip multicast destination-control <1-4094> <macaddr > access-group <6000-7999> no ip multicast destination-control <1-4094> <macaddr > access-group <6000-7999>	
Parameter	<1-4094>	VLAN ID
	<macaddr >	Transmitting source MAC address of IGMP-REPORT, the format is "xx-xx-xx-xx-xx-xx";
	<6000-7999>	Destination-control access-list number.
Default	None	
Mode	Global Mode	
Usage	The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING is enabled, for adding the members to multicast group. If configuring multicast destination-control to source MAC address of transmitted igmp-report, and match configured access-list, such as matching: permit, the interface can be added, otherwise do not be added.	
Example	Switch#config	

	Switch(config)#ip multicast destination-control 1 00-01-03-05-07-09 access-group 6000
--	---

ip multicast policy

Syntax	ip multicast policy <IPADDRESS/M> <IPADDRESS/M> cos <priority> no ip multicast policy <IPADDRESS/M> <IPADDRESS/M> cos	
Parameter	<IPADDRESS/M>	are multicast source address, mask length, destination address, and mask length separately.
	<priority>	specified priority, range from 0 to 7
Default	None	
Mode	Global Mode	
Usage	The command configuration modifies to a specified value through the switch matching priority of specified range multicast data packet, and the TOS is specified to the same value simultaneously. Carefully, the packet transmitted in UNTAG mode does not modify its priority.	
Example	Switch(config)#ip multicast policy 10.1.1.0/24 225.1.1.0/24 cos 7	

ip multicast source-control

Syntax	ip multicast source-control no ip multicast source-control	
Parameter	None	
Default	Disabled	
Mode	Global Mode	
Usage	The source control access-list applies to interface with only enabling global multicast source control, and configure to disabled global multicast source control without configuring source control access-list on every interface. After configuring the command, multicast data received from every interface does not have matching multicast source control list item, and then they will be thrown away by switches, namely only multicast data matching to PERMIT can be received and forwarded. 。	
Example	Switch(config)#ip multicast source-control	

ip multicast source-control access-group

Syntax	ip multicast source-control access-group <5000-5099> no ip multicast source-control access-group <5000-5099>	
Parameter	<5000-5099>	Source control access-list number.
Default	None	
Mode	Interface Configuration Mode	
Usage	The command configures with only enabling global multicast source control. After that, it will match multicast data message imported from the interface according to configured access-list, such as matching: permit, the message will be received and forwarded; otherwise the message will be thrown away.	

Example	Switch (config)#interface ethernet1/0/4 Switch (config-if-ethernet1/0/4)#ip multicast source-control access-group 5000 Switch (config-if-ethernet1/0/4)#
---------	--

ip multicast destination-control

Syntax	ip multicast destination-control	
Parameter	None	
Default	Disabled	
Mode	Global Mode	
Usage	Only after globally enabling the multicast destination control, the other destination control configuration can take effect; the destination access list can be applied to ports, VLAN-MAC and SIP. After configuring this command, IGMP-SNOOPING and IGMP will match according to the rules mentioned above when they try to add ports after receiving IGMP-REPORT.	
Example	Switch(config)#ip multicast destination-control	

profile-id (Multicast Destination Control Rule List)

Syntax	profile-id <1-50> (deny permit) ip ((<source> <wildcard-bit>) (host-source <source-host-ip> [range <2-65535>]) any-source) ((<destination> <wildcard-bit>) (host-destination <destination-host-ip> [range <2-255>]) any-destination) no profile-id <1-50>	
Parameter	<1-50>	profile-id
	deny permit	deny or permit.
	<source>	multicast source address
	<wildcard-bit>	address wildcard character.
	<source-host-ip>	multicast source host address.
	<2-65535>	range of multicast source host
	<destination>	multicast destination address
	<2-255>	range of multicast destination host.
Default	none	
Mode	Global Mode	
Usage	Profile-list of Multicast destination control list item is controlled by specific profile-id number from 1 to 50, the command applies to configure this profile to add it into the ACL for using. Multicast destination control only needs to configure source IP address and destination IP address controlled (group IP address), the configuration mode is basically the same to ACLs, and use mask length to configure address range, and also specify a host address or all address. Remarkable, "all address" is 224.0.0.0/4 according to group IP address, not 0.0.0.0/0 in other access-list.	
Example	switch(config)# profile-id 1 deny ip any-source host-destination 224.1.1.2	

show ip multicast destination-control

Syntax	show ip multicast policy	
Parameter	None	
Default	None	
Mode	Admin Mode and Global Mode	
Usage	The command displays multicast policy of configuration	
Example	Switch#show ip multicast policy ip multicast-policy 10.1.1.0/24 225.0.0.0/8 cos 5	

show ip multicast source-control

Syntax	show ip multicast source-control [detail] show ip multicast source-control interface <Interfacename> [detail]	
Parameter	detail	expresses if it displays information in detail.
	<Interfacename>	interface name, such as ethernet 1/0/1 or ethernet1/0/1.
Default	None	
Mode	Admin Mode and Global Mode	
Usage	The command displays multicast source control rules of configuration, including detail option, and access-list information applied in detail.	
Example	Switch#show ip multicast source-control detail ip multicast source-control is enabled Interface Ethernet1/0/13 use multicast source control access-list 5000 access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255 access-list 5000 deny ip 10.1.1.0 0.0.0.255 233.0.0.0 0.255.255.255	

show ip multicast source-control access-list

Syntax	show ip multicast source-control access-list show ip multicast source-control access-list <5000-5099>	
Parameter	<5000-5099>	access-list number
Default	None	
Mode	Admin Mode and Global Mode	
Usage	The command displays source control multicast access-list of configuration	
Example	Switch#show ip multicast source-control access-list access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255 access-list 5000 deny ip 10.1.1.0 0.0.0.255 233.0.0.0 0.255.255.255	

clear ip igmp snooping vlan

Syntax	clear ip igmp snooping vlan <1-4094> groups [A.B.C.D]	
Parameter	<1-4094>	VLAN ID
	[A.B.C.D]	group address.
Default	None	
Mode	Admin Configuration Mode	

Usage	Use show command to check the deleted group record.
Example	Switch#clear ip igmp snooping vlan 1 groups

clear ip igmp snooping vlan <1-4094> mrouter-port

Syntax	clear ip igmp snooping vlan <1-4094> mrouter-port [ethernet] IFNAME	
Parameter	<1-4094>	VLAN ID
	IFNAME	port name
Default	None	
Mode	Admin Configuration Mode	
Usage	use show command to check the deleted mrouter port of the specific VLAN. 。	
Example	Delete mrouter port in vlan 1. Switch#clear ip igmp snooping vlan 1 mrouter-port	

ip igmp snooping

Syntax	ip igmp snooping no ip igmp snooping	
Parameter	none	
Default	IGMP Snooping is disabled by default.	
Mode	Global Mode	
Usage	Use this command to enable IGMP Snooping, that is permission every VLAN config the function of IGMP snooping. The “no ip igmp snooping” command disables this function.	
Example	Enable IGMP Snooping Switch#config Switch(config)#ip igmp snooping Switch(config)#	

ip igmp snooping proxy

Syntax	ip igmp snooping proxy no ip igmp snooping proxy	
Parameter	none	
Default	Enable	
Mode	Global Mode	
Usage	Enable IGMP Snooping proxy function, the no command disables the function.	
Example	Switch#config Switch(config)#no ip igmp snooping proxy Switch(config)#	

ip igmp snooping vlan

Syntax	ip igmp snooping vlan <vlan-id> no ip igmp snooping vlan <vlan-id>	
Parameter	<vlan-id>	VLAN ID
Default	IGMP Snooping is disabled by default.	
Mode	Global Mode	
Usage	To configure IGMP Snooping on specified VLAN, the global IGMP Snooping should be first enabled. Disable IGMP Snooping on specified VLAN with the “no ip igmp snooping vlan <vlan-id>” command.	
Example	Enable IGMP Snooping for VLAN 100 in Global Mode. Switch#config Switch(config)#ip igmp snooping vlan 100	

ip igmp snooping vlan immediate-leave

Syntax	ip igmp snooping vlan <vlan-id> immediate-leave no ip igmp snooping vlan <vlan-id> immediate-leave	
Parameter	<vlan-id>	VLAN ID
Default	This function is disabled by default.	
Mode	Global Mode	
Usage	Enable immediate-leave function of the IGMP Snooping in specified VLAN; the “no” form of this command disables the immediate-leave function of the IGMP Snooping	
Example	Enable the IGMP Snooping fast leave function for VLAN 100. Switch#config Switch(config)#ip igmp snooping vlan 100 immediate-leave	

ip igmp snooping vlan <id> immediately-leave mac-based

Syntax	ip igmp snooping vlan <vlan-id> immediately-leave mac-based no ip igmp snooping vlan <vlan-id> immediately-leave mac-based	
Parameter	<vlan-id>	VLAN ID
Default	This function is disabled by default.	
Mode	Global Mode	
Usage	Configure this command to delete the existed igmp snooping table entries according to the source mac in leave packet when the switch which is enabled the igmp snooping function receives the leave packet. Only when the received the port, source mac and multicast group of the leave packet are the same as the port, host mac and multicast group of the existed igmp snooping table entry, the snooping table entry can be deleted. If this command is not configured, delete the existed igmp snooping table entry according to the port and multicast group of the leave packet. Configure the immediately-leave under the same vlan at the same time to make this command effective. In this time, deal with it according to the host mac of the port.	
Example	Use the following configuration when delete the table entry according to the host mac of the port. Switch#config	

	Switch(config)#ip igmp snooping vlan 12 immediately-leave Switch(config)#ip igmp snooping vlan 12 immediately-leave mac-based
--	--

ip igmp snooping vlan l2-general-querier

Syntax	ip igmp snooping vlan < vlan-id > l2-general-querier no ip igmp snooping vlan < vlan-id > l2-general-querier	
Parameter	<vlan-id>	is ID number of the VLAN, ranging is <1-4094>
Default	VLAN is not as the IGMP Snooping layer 2 general querier.	
Mode	Global Mode	
Usage	It is recommended to configure a layer 2 general querier on a segment. IGMP Snooping function will be enabled by this command if not enabled on this VLAN before configuring this command, IGMP Snooping function will not be disabled when disabling the layer 2 general querier function. This command is mainly for sending general queries regularly to help switches within this segment learn mrouter ports. Comment: There are three paths IGMP snooping learn mrouter 1 Port receives the IGMP query messages 2 Port receives multicast protocol packets, and supports DVMRP, PIM 3 Static configured port	
Example	Switch(config)#ip igmp snooping vlan 1 l2-general-querier	

ip igmp snooping vlan l2-general-querier-source

Syntax	ip igmp snooping vlan < vlan-id > l2-general-querier-source <A.B.C.D> no ip igmp snooping vlan <vlanid> l2-general-querier-source	
Parameter	<vlan-id>	VLAN ID
	<A.B.C.D>	<A.B.C.D> is the source address of the query operation
Default	0.0.0.0	
Mode	Global Mode	
Usage	It is not supported on Windows 2000/XP to query with the source address as 0.0.0.0. So the layer 2 query source address configuration does not function. The client will stop sending requesting datagrams after one is sent. And after a while, it can not receive multicast datagrams.	
Example	Switch(config)#ip igmp snooping vlan 2 l2-general-querier-source 192.168.1.2	

ip igmp snooping vlan l2-general-querier-version

Syntax	ip igmp snooping vlan <vlanid> l2-general-querier-version <version>	
Parameter	<vlan-id>	VLAN ID
	<version>	version number, limited to <1-3>.
Default	version 3	
Mode	Global Mode	
Usage	When the switch is connected to V1 and V2 capable environment, and for VLAN	

	which has source of layer 2 query configuration, the VLAN can be queried only if the version number has been specified. This command is used to query the layer 2 version number.
Example	Switch(config)#ip igmp snooping vlan 2 l2-general-querier-version 2

ip igmp snooping vlan limit

Syntax	ip igmp snooping vlan <vlanid> limit {group <g_limit> source <s_limit>} no ip igmp snooping vlan <vlan-id> limit	
Parameter	<vlan-id>	VLAN ID
	<g_limit>	<1-65535>, max number of groups joined
	<s_limit>	<1-65535>, max number of source entries in each group, consisting of include source and exclude source.
Default	Maximum 50 groups by default, with each group capable with 40 source entries.	
Mode	Global Mode	
Usage	When number of joined group reaches the limit, new group requesting for joining in will be rejected for preventing hostile attacks. To use this command, IGMP snooping must be enabled on VLAN. The “no” form of this command restores the default other than set to “no limit”. For the safety considerations, this command will not be configured to “no limit”. It is recommended to use default value and if layer 3 IGMP is in operation, please make this configuration in accordance with the IGMP configuration as possible.	
Example	Switch(config)#ip igmp snooping vlan 2 limit group 300	

ip igmp snooping vlan interface (ethernet | port-channel) IFNAME

Syntax	ip igmp snooping vlan <vlanid> interface (ethernet port-channel) IFNAME limit {group <g_limit> source <s_limit>} strategy (replace drop) no ip igmp snooping vlan <1-4094> interface (ethernet port-channel) IFNAME limit group source strategy	
Parameter	<vlan-id>	VLAN ID
	IFNAME	Interface name
	<g_limit>	<1-65535>, The maximum number of groups allowed joining
	<s_limit>	<1-65535>, The maximum number of source table entries in each group, including include source and exclude source.
	replace	Replace the group and source information
	drop	Drop the new group and source information
Default	There is no limitation as default.	
Mode	Global Mode	
Usage	When the number of the groups joined under the port or the number of sources in this group exceeds the limit, it will be dealt according to the configured strategy. If it is drop, drop the new group and source information; if it is replace, find a dynamic group and source from the port to conduct deleting and replacing, and then add the new group and source information. The premise of using this command is that this	

	VLAN is enabled IGMP Snooping function. No command configures as “no limitation”.
Example	Switch(config)#ip igmp snooping vlan 2 interface ethernet 1/0/11 limit group 300 source 200 strategy replace

ip igmp snooping vlan mrouter-port interface

Syntax	ip igmp snooping vlan <vlanid> mrouter-port interface [ehternet port-channel] <ifname> no ip igmp snooping vlan <vlan-id> mrouter-port interface[<ehternet> <port-channel>] <ifname>	
Parameter	<vlan-id>	VLAN ID
	IFNAME	Name of interface
Default	No static mrouter port on VLAN by default.	
Mode	Global Mode	
Usage	When a port is a static mrouter port while also a dynamic mrouter port, it should be taken as a static mrouter port. Deleting static mrouter port can only be realized by the no command.	
Example	Switch(config)#ip igmp snooping vlan 2 mrouter-port interface ethernet1/0/13	

ip igmp snooping vlan mrouter-port learnpim

Syntax	ip igmp snooping vlan <vlanid> mrouter-port learnpim no ip igmp snooping vlan <vlan-id> mrouter-port learnpim	
Parameter	<vlan-id>	VLAN ID
Default	Enable	
Mode	Global Mode	
Usage	Enable the function that the specified VLAN learns mrouter-port (according to pim packets). After a port received pim packets, it will be set to mrouter port for implementing the automatic learning.	
Example	Disable the function that vlan 100 learns mrouter-port (according to pim packets). Switch(config)#no ip igmp snooping vlan 100 mrouter-port learnpim	

ip igmp snooping vlan mrpt

Syntax	ip igmp snooping vlan <vlanid> mrpt <value> no ip igmp snooping vlan <vlan-id> mrpt	
Parameter	<vlan-id>	VLAN ID, ranging between <1-4094>
	<value>	mrouter port survive period, ranging between <1-65535>seconds
Default	255s	
Mode	Global Mode	
Usage	This command validates on dynamic mrouter ports but not on mrouter port. To use this command, IGMP Snooping of this VLAN should be enabled previously.	
Example	Switch(config)#ip igmp snooping vlan 2 mrpt 100	

ip igmp snooping vlan query-interval

Syntax	ip igmp snooping vlan <vlanid> query-interval <value> no ip igmp snooping vlan <vlan-id> query-interval	
Parameter	<vlan-id>	VLAN ID, ranging between <1-4094>
	<value>	query interval, ranging between <1-65535>seconds
Default	125s	
Mode	Global Mode	
Usage	It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.	
Example	Switch(config)#ip igmp snooping vlan 2 query-interval 130	

ip igmp snooping vlan query-mrsp

Syntax	ip igmp snooping vlan <vlanid> query-mrsp <value> no ip igmp snooping vlan <vlan-id> query-mrspt	
Parameter	<vlan-id>	VLAN ID, ranging between <1-4094>
	<value>	ranging between <1-25> seconds
Default	10s	
Mode	Global Mode	
Usage	It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.	
Example	Switch(config)#ip igmp snooping vlan 2 query-mrsp 18	

ip igmp snooping vlan query-robustness

Syntax	ip igmp snooping vlan <vlanid> query-robustness <value> no ip igmp snooping vlan <vlan-id> query-robustness	
Parameter	<vlan-id>	VLAN ID
	<value>	ranging between <2-10>
Default	2s	
Mode	Global Mode	
Usage	It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.	
Example	Switch(config)#ip igmp snooping vlan 2 query-robustness 3	

ip igmp snooping vlan report source-address

Syntax	ip igmp snooping vlan <vlanid> report source-address <A.B.C.D> no ip igmp snooping vlan <vlan-id> report source-address	
Parameter	<vlan-id>	VLAN ID
	<A.B.C.D>	IP address, can be 0.0.0.0
Default	Disabled	
Mode	Global Mode	

Usage	Default configuration is recommended here. If IGMP snooping needs to be configured, the source address for forwarded IGMP messages can be 0.0.0.0. If it is required by the upstream that IGMP messages should use the same network address, the source address of IGMP messages should be configured to be the same with upstream.
Example	Switch(config)#ip igmp snooping vlan 2 report source-address 10.1.1.1

ip igmp snooping vlan specific-query-mrsp

Syntax	ip igmp snooping vlan <vlanid> specific-query-mrsp <value> no ip igmp snooping vlan <vlan-id> specific-query-mrspt	
Parameter	<vlan-id>	specific VLAN ID, the range from 1 to 4094
	<value>	the maximum query response time, unit is second, the range from 1 to 25, default value is 1
Default	Enable	
Mode	Global Mode	
Usage	After enable vlan snooping in global mode, input this command to configure the maximum query response time of the specific group.	
Example	Configure/cancel the specific-query-mrsp of vlan3 as 2s. Switch(config)#ip igmp snooping vlan 3 specific-query-mrsp 2 Switch(config)#no ip igmp snooping vlan 3 specific-query-mrspt	

ip igmp snooping vlan static-group

Syntax	ip igmp snooping vlan <vlanid> static-group <A.B.C.D> [source <A.B.C.D>] interface [ethernet port-channel] <IFNAME> no ip igmp snooping vlan <vlan-id> static-group <A.B.C.D> [source <A.B.C.D>] interface [ethernet port-channel] <IFNAME>	
Parameter	<vlan-id>	VLAN ID, ranging between <1-4094>
	<A.B.C.D>	address of group or source
	<IFNAME>	Name of interface
Default	None	
Mode	Global Mode	
Usage	Configure static-group on specified port of the VLAN. The no form of the command cancels this configuration. When a group is a static while also a dynamic group, it should be taken as a static group. Deleting static group can only be realized by the no form of the command.	
Example	Switch(config)#ip igmp snooping vlan 1 static-group 224.1.1.1 source 192.168.1.1 interface ethernet 1/0/1	

ip igmp snooping vlan suppression-query-time

Syntax	ip igmp snooping vlan <vlanid> suppression-query-time <value>
--------	---

	no ip igmp snooping vlan <vlan-id> suppression-query-time	
Parameter	<vlan-id>	VLAN ID, ranging between <1-4094>
	<value>	ranging between<1-65535> seconds
Default	255s	
Mode	Global Mode	
Usage	Configure the suppression query time. The “no ip igmp snooping vlan <vlan-id> suppression-query-time” command restores to the default value. This command can only be configured on L2 general querier. The Suppression-query-time refers to the period of suppression state in which the querier enters when receives query from the layer 3 IGMP in the segments.	
Example	Switch(config)#ip igmp snooping vlan 2 suppression-query-time 270	

show ip igmp snooping

Syntax	show ip igmp snooping [vlan <vlan-id>]									
Parameter	<vlan-id>	VLAN ID								
Default	none									
Mode	Admin Configuration Mode									
Usage	If no VLAN number is specified, it will show whether global IGMP Snooping switch is on, which VLAN is configured with I2-general-querier function, and if a VLAN number is specified, detailed IGMP messages for this VLAN will be shown.									
Example	<p>1. Show IGMP Snooping summary messages of the switch</p> <pre>Switch(config)#show ip igmp snooping Global igmp snooping status: Enabled L3 multicasting: running Igm p snooping is turned on for vlan 1(querier) Igm p snooping is turned on for vlan 2</pre> <table border="1"> <thead> <tr> <th>Displayed Information</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>Global igmp snooping status</td> <td>Whether the global igmp snooping switch on the switch is on</td> </tr> <tr> <td>L3 multicasting</td> <td>whether the layer 3 multicast protocol of the switch is running</td> </tr> <tr> <td>Igm p snooping is turned on for vlan 1(querier)</td> <td>which VLANs on the switch is enabled with igmp snooping function, whether they are I2-general-querier</td> </tr> </tbody> </table>		Displayed Information	Explanation	Global igmp snooping status	Whether the global igmp snooping switch on the switch is on	L3 multicasting	whether the layer 3 multicast protocol of the switch is running	Igm p snooping is turned on for vlan 1(querier)	which VLANs on the switch is enabled with igmp snooping function, whether they are I2-general-querier
	Displayed Information	Explanation								
Global igmp snooping status	Whether the global igmp snooping switch on the switch is on									
L3 multicasting	whether the layer 3 multicast protocol of the switch is running									
Igm p snooping is turned on for vlan 1(querier)	which VLANs on the switch is enabled with igmp snooping function, whether they are I2-general-querier									
	<p>2.Display the IGMP Snooping summary messages of vlan1.</p> <pre>Switch#show ip igmp snooping vlan 1 Igm p snooping information for vlan 1 Igm p snooping L2 general querier :Yes(COULD_QUERY) Igm p snooping query-interval :125(s) Igm p snooping max reponse time :10(s) Igm p snooping robustness :2</pre>									

<p>Igmp snooping mrouter port keep-alive time :255(s) Igmp snooping query-suppression time :255(s) IGMP Snooping Connect Group Membership Note: *-All Source, (S)- Include Source, [S]-Exclude Source Groups Sources Ports Exptime System Level 238.1.1.1 (192.168.0.1) Ethernet1/0/8 00:04:14 V2 (192.168.0.2) Ethernet1/0/8 00:04:14 V2 Igmp snooping vlan 1 mrouter port Note: "!"-static mrouter port !Ethernet1/0/2</p>	
Displayed Information	Explanation
Igmp snooping L2 general querier	Whether the VLAN enables I2-general-querier function and show whether the querier state is could-query or suppressed
Igmp snooping query-interval	Query interval of the VLAN
Igmp snooping max reponse time	Max response time of the VLAN
Igmp snooping robustness	IGMP Snooping robustness configured on the VLAN
Igmp snooping mrouter port keep-alive time	keep-alive time of dynamic mrouter of the VLAN
Igmp snooping query-suppression time	Suppression timeout of VLAN when as I2-general-querier
IGMP Snooping Connect Group Membership	Group membership of this VLAN, namely the correspondence between ports and (S,G)
Igmp snooping vlan 1 mrouter port	mrouter port of the VLAN, including both static and dynamic

clear ipv6 mld snooping vlan

Syntax	clear ipv6 mld snooping vlan <1-4094> groups [X:X::X:X]	
Parameter	<1-4094>	VLAN ID
	[X:X::X:X]	specific group address
Default	None	
Mode	Admin Configuration Mode	
Usage	Delete the group record of the specific VLAN. Use show command to check the deleted group record	
Example	Delete all groups. Switch#clear ipv6 mld snooping vlan 1 groups	

clear ipv6 mld snooping vlan <1-4094> mrouter-port

Syntax	clear ipv6 mld snooping vlan <1-4094> mrouter-port [ethernet] IFNAME
--------	--

Parameter	<1-4094>	VLAN ID
	IFNAME	port name
Default	None	
Mode	Admin Configuration Mode	
Usage	Delete the mrouter port of the specific VLAN. Use show command to check the deleted group record.	
Example	Delete the mrouter port in vlan 1. Switch#clear ipv6 mld snooping vlan 1 mrouter-port	

ipv6 mld snooping

Syntax	ipv6 mld snooping no ipv6 mld snooping	
Parameter	None	
Default	MLD Snooping disabled on the switch by default	
Mode	Global Mode	
Usage	Enable global MLD Snooping on the switch, namely allow every VLAN to be configured with MLD Snooping; the “no” form of this command will disable MLD Snooping on all the VLANs as well as the global MLD snooping	
Example	Enable MLD Snooping under global mode. Switch(config)#ipv6 mld snooping	

ipv6 mld snooping vlan

Syntax	ipv6 mld snooping vlan <vlan-id> no ipv6 mld snooping vlan <vlan-id>	
Parameter	<vlan-id>	VLAN ID, with a valid range of <1-4094>.
Default	MLD Snooping disabled on VLAN by default	
Mode	Global Mode	
Usage	Enable MLD Snooping on specified VLAN; the “no” form of this command disables MLD Snooping on specified VLAN. To configure MLD snooping on certain VLAN, the global MLD snooping should be first enabled. Disable MLD snooping on specified VLAN with the no ipv6 mld snooping vlan vid command	
Example	Enable MLD snooping on VLAN 100 under global mode. Switch(config)#ipv6 mld snooping vlan 100	

ipv6 mld snooping vlan immediate-leave

Syntax	ipv6 mld snooping vlan <vlan-id> immediate-leave no ipv6 mld snooping vlan <vlan-id> immediate-leave	
Parameter	<vlan-id>	VLAN ID, with valid range of <1-4094>.
Default	Disabled by default	

Mode	Global Mode
Usage	Enable immediate-leave function of the MLD protocol in specified VLAN; the “no” form of this command disables the immediate-leave function of the MLD protocol Enabling the immediate-leave function of the MLD protocol will hasten the process the port leaves one multicast group, in which the specified group query of the group will not be sent and the port will be directly deleted.
Example	Enable the MLD immediate-leave function on VLAN 100. Switch(config)#ipv6 mld snooping vlan 100 immediate-leave

ipv6 mld snooping vlan l2-general-querier

Syntax	ipv6 mld snooping vlan <vlan-id> l2-general-querier no ipv6 mld snooping vlan <vlan-id> l2-general-querier	
Parameter	<vlan-id>	VLAN ID, with a valid range of <1-4094>
Default	VLAN is not a MLD Snooping L2 general querier by default.	
Mode	Global Mode	
Usage	It is recommended to configure an L2 general querier on a segment. If before configure with this command, MLD snooping is not enabled on this VLAN, this command will no be executed. When disabling the L2 general querier function, MLD snooping will not be disabled along with it. Main function of this command is sending general queries periodically to help the switches within this segment learn mrouter port. Comment: There are three ways to learn mrouter port in MLD Snooping: 1. The port which receives MLD query messages 2. The port which receives multicast protocol packets and support PIM 3. The port statically configured.	
Example	Set VLAN 100 to L2 general querier. Switch(config)#ipv6 mld snooping vlan 100 l2-general-querier	

ipv6 mld snooping vlan limit

Syntax	ipv6 mld snooping vlan <vlan-id> limit {group <g_limit> source <s_limit>} no ipv6 mld snooping vlan <vlan-id> limit	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<g_limit>	max number of groups joined, range: 1-65535
	<s_limit>	max number of source entries in each group, consisting of include source and exclude source, range: 1-65535
Default	Maximum 50 groups by default, with each group capable with 40 source entries.	
Mode	Global Mode	
Usage	When number of joined group reaches the limit, new group requesting for joining in will be rejected for preventing hostile attacks. To use this command, MLD snooping must be enabled on VLAN. The “no” form of this command restores the default other than set to “no limit”. For the safety considerations, this command will not be configured to “no limit”. It is recommended to use default value and if layer 3 MLD is	

	in operation, please make this configuration in accordance with the MLD configuration as possible.
Example	Switch(config)#ipv6 mld snooping vlan 2 limit group 300

ipv6 mld snooping vlan mrouter-port interface

Syntax	ipv6 mld snooping vlan <vlan-id> mrouter-port interface [ethernet port-channel] <ifname> no ipv6 mld snooping vlan <vlan-id> mrouter-port interface [ethernet port-channel] <ifname>	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<ifname>	Name of interface
Default	When a port is made static and dynamic mrouter port at the same time, it's the static mrouter properties is preferred. Deleting the static mrouter port can only be done with the "no" form of this command	
Mode	Global Mode	
Usage	Set the static mrouter port of the VLAN; the "no" form of this command cancels the configuration.	
Example	Switch(config)#ipv6 mld snooping vlan 2 mrouter-port interface ethernet1/0/13	

ipv6 mld snooping vlan mrouter-port learnpim6

Syntax	ipv6 mld snooping vlan <vlan-id> mrouter-port learnpim6 no ipv6 mld snooping vlan <vlan-id> mrouter-port learnpim6	
Parameter	<vlan-id>	VLAN ID, ranging from 1 to 4094.
Default	Enable	
Mode	Global Mode	
Usage	Enable the function that the specified VLAN learns mrouter-port (according to pimv6 packets). After a port received pimv6 packets, it will be set to mrouter port for implementing the automatic learning.	
Example	Disable the function that vlan 100 learns mrouter-port (according to pimv6 packets). Switch(config)#ipv6 mld snooping vlan 2 mrouter-port learnpim6	

ipv6 mld snooping vlan mrpt

Syntax	ipv6 mld snooping vlan <vlan-id> mrpt <value> no ipv6 mld snooping vlan <vlan-id> mrpt	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<value>	mrouter port keep-alive time with a valid range of <1-65535> secs.
Default	255s	
Mode	Global Mode	
Usage	Configure the keep-alive time of the mrouter port. This configuration is applicable on dynamic mrouter port, but not on static mrouter	

	port. To use this command, MLD snooping must be enabled on the VLAN.
Example	Switch(config)#ipv6 mld snooping vlan 2 mrpt 100

ipv6 mld snooping vlan query-interval

Syntax	ipv6 mld snooping vlan <vlan-id> query-interval <value> no ipv6 mld snooping vlan <vlan-id> query-interval	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<value>	query interval, valid range: <1-65535>secs.
Default	125s	
Mode	Global Mode	
Usage	Configure the query interval. It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.	
Example	Switch(config)#ipv6 mld snooping vlan 2 query-interval 130	

ipv6 mld snooping vlan query-mrsp

Syntax	ipv6 mld snooping vlan <vlan-id> query-mrsp <value> no ipv6 mld snooping vlan <vlan-id> query-mrspt	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<value>	the valid range is <1-25> secs .
Default	10s	
Mode	Global Mode	
Usage	Configure the maximum query response period. The “no” form of this command restores the default value. It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.	
Example	Switch(config)#ipv6 mld snooping vlan 2 query-mrsp 18	

ipv6 mld snooping vlan query-robustness

Syntax	ipv6 mld snooping vlan <vlan-id> query-robustness <value> no ipv6 mld snooping vlan <vlan-id> query-robustness	
Parameter	<vlan-id>	VLAN ID, the valid range is <1-4094>
	<value>	the valid range is <2-10>.
Default	2s	
Mode	Global Mode	
Usage	Configure the query robustness; the “no” form of this command restores to the default value. It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.	
Example	Switch(config)#ipv6 mld snooping vlan 2 query- robustness 3	

ipv6 mld snooping vlan static-group

Syntax	<pre>ipv6 mld snooping vlan <vlan-id> static-group <X:X::X:X> [source< X:X::X:X>] interface [ethernet port-channel] <IFNAME> no ipv6 mld snooping vlan <vlan-id> static-group <X:X::X:X> [source< X:X::X:X>] interface [ethernet port-channel] <IFNAME></pre>	
Parameter	<vlan-id>	VLAN ID, range: 1-4094
	<X:X::X:X>	The address of group or source.
	<IFNAME>	Name of interface
Default	None	
Mode	Global Mode	
Usage	<p>Configure static-group on specified port of the VLAN. The no form of the command cancels this configuration.</p> <p>When a group is a static while also a dynamic group, it should be taken as a static group. Deleting static group can only be realized by the no form of the command.</p>	
Example	<pre>Switch(config)#ipv6 mld snooping vlan 2 static-group ff1e::15 source 2000::1 interface ethernet 1/0/1</pre>	

ipv6 mld snooping vlan suppression-query-time

Syntax	<pre>ipv6 mld snooping vlan <vlan-id> suppression-query-time <value> no ipv6 mld snooping vlan <vlan-id> suppression-query-time</pre>	
Parameter	<vlan-id>	VLAN ID, valid range: <1-4094>
	<value>	valid range: <1-65535>secs.
Default	255s	
Mode	Global Mode	
Usage	<p>Configure the suppression query time; the “no” form of this command restores the default value.</p> <p>This command can only be configured on L2 general querier. The Suppression-query-time represents the period the suppression state maintains when general querier receives queries from layer 3 MLD within the segment. To use this command, the query-intervals in different switches within the same segment must be in accordance. It is recommended to use the default value.</p>	
Example	<pre>Switch(config)#ipv6 mld snooping vlan 2 suppression-query-time 270</pre>	

show ipv6 mld snooping

Syntax	<pre>show ipv6 mld snooping [vlan <vlan-id>]</pre>	
Parameter	<vlan-id>	VLAN ID
Default	none	
Mode	Admin Configuration Mode	
Usage	<p>If no VLAN number is specified, it will show whether the global MLD snooping is enabled and layer 3 multicast protocol is running, as well as on which VLAN the MLD</p>	

Snooping is enabled and configured I2-general-querier. If a VLAN number is specified, the detailed MLD Snooping messages of this VLAN will be displayed.

Example

1.Summary of the switch MLD snooping
 Switch(config)#show ipv6 mld snooping
 Global mld snooping status: Enabled
 L3 multicasting: running
 Mld snooping is turned on for vlan 1(querier)
 Mld snooping is turned on for vlan 2

Displayed Information	Explanation
Global mld snooping status	Whether or not the global MLD Snooping is enabled on the switch
L3 multicasting	Whether or not the layer 3 multicast protocol is running on the switch.
Mld snooping is turned on for vlan 1(querier)	On which VLAN of the switch is enabled MLD Snooping, if the VLAN are I2-general-querier.

2.Display the detailed MLD Snooping information of vlan1
 Switch#show ipv6 mld snooping vlan 1
 Mld snooping information for vlan 1

Mld snooping L2 general querier :Yes(COULD_QUERY)
 Mld snooping query-interval :125(s)
 Mld snooping max reponse time :10(s)
 Mld snooping robustness :2
 Mld snooping mrouter port keep-alive time :255(s)
 Mld snooping query-suppression time :255(s)

MLD Snooping Connect Group Membership
 Note:*-All Source, (S)- Include Source, [S]-Exclude Source
 Groups Sources Ports Exptime System Level
 Ff1e::15 (2000::1) Ethernet1/0/8 00:04:14 V2
 (2000::2) Ethernet1/0/8 00:04:14 V2

Mld snooping vlan 1 mrouter port
 Note:"!"-static mrouter port
 !Ethernet1/0/2

Displayed Information	Explanation
Mld snooping L2 general querier	whether or not I2-general-querier is enabled on VLAN, the querier display status is set to could-query or suppressed
Mld snooping query-interval	Query interval time of the VLAN
Mld snooping max	Max response time of this VLAN

	reponse time	
	Mld snooping robustness	Robustness configured on the VLAN
	Mld snooping mrouter port keep-alive time	Keep-alive time of the dynamic mrouter on this VLAN
	Mld snooping query-suppression time	timeout of the VLAN as I2-general-querier at suppressed status.
	MLD Snooping Connect Group Membership	Group membership of the VLAN, namely the correspondence between the port and (S,G)
	Mld snooping vlan 1 mrouter port	Mrouter port of the VLAN, including both static and dynamic.

multicast-vlan

Syntax	multicast-vlan no multicast-vlan	
Parameter	none	
Default	Multicast VLAN function not enabled by default.	
Mode	VLAN Configuration Mode	
Usage	<p>Enable multicast VLAN function on a VLAN; the “no” form of this command disables the multicast VLAN function.</p> <p>The multicast VLAN function can not be enabled on Private VLAN. To disabling the multicast VLAN function of the VLAN, configuration of VLANs associated with the multicast VLAN should be deleted. Note that the default VLAN can not be configured with this command and only one multicast VLAN is allowed on a switch.</p>	
Example	<pre>Switch(config)#vlan 2 Switch(config-vlan2)# multicast-vlan</pre>	

multicast-vlan association

Syntax	multicast-vlan association <vlan-list> no multicast-vlan association <vlan-list>	
Parameter	<vlan-list>	<vlan-list> the VLAN ID list associated with multicast VLAN. Each VLAN can only be associated with one multicast VLAN and the association will only succeed when every VLAN listed in the VLAN ID table exists.
Default	The multicast VLAN is not associated with any VLAN by default.	
Mode	VLAN Configuration Mode	
Usage	<p>Associate several VLANs with a multicast VLAN; the “no” form of this command cancels the association relations.</p> <p>After a VLAN is associated with the multicast VLAN, when there comes the multicast order in the port of this VLAN, then the multicast data will be sent from the multicast VLAN to this port, so to reduce the data traffic. The VLAN associated with the multicast VLAN should not be a Private VLAN. A VLAN can only be associated with another VLAN after the multicast VLAN is enabled. Only one multicast VLAN can be</p>	

	enabled on a switch.
Example	Switch(config)#vlan 2 Switch(config-vlan2)# multicast-vlan association 3, 4

multicast-vlan association interface

Syntax	multicast-vlan association interface (ethernet port-channel) IFNAME out-tag <tag-id> no multicast-vlan association interface (ethernet port-channel) IFNAME	
Parameter	IFNAME	The name of the ethernet port or port-channel port
	<tag-id>	Specify vlan tag of the multicast data forwarded by the associated port, only the tag of the associated port allows the multicast VLAN, the tag-id takes effect. Its range from 1 to 4094.
Default	None	
Mode	VLAN Configuration Mode	
Usage	<p>Associate the specified port with the multicast VLAN, so the associated ports are able to receive the multicast flow. The no command cancels the association between the ports and the multicast VLAN.</p> <ol style="list-style-type: none"> 1. 'associated VLAN' and 'associated port' of the multicast VLAN are absolute, they do not affect each other when happening the cross. 2. The port of the aggregation member cannot be associated, but the associated port is able to be added to port-group and cancelling the association. 3. The configured port type includes port-channel port or ethernet port and the port is only configured as ACCESS mode. 4. The port (it will be associated) cannot belong to the multicast VLAN, in the same way, the associated port cannot be divided in multicast VLAN. 5. When the associated port mode is set as non ACCESS mode, the mode cannot be changed. 	
Example	Switch(config)#vlan 2 Switch(config-vlan2)# multicast-vlan association interface ethernet 1/2 Switch(config-vlan2)#multicast-vlan association interface port-channel 2 Switch(config-vlan2)#no multicast-vlan association interface ethernet 1/2 Switch(config-vlan2)#no multicast-vlan association interface port-channel 2	

multicast-vlan mode

Syntax	multicast-vlan mode {dynamic compatible} no multicast-vlan mode {dynamic compatible}	
Parameter	dynamic	dynamic mode
	compatible	compatible mode
Default	Neither of the two modes	
Mode	VLAN Configuration Mode	
Usage	This command is used to configure the two modes of the multicast vlan; the no command cancels this configuration.	

	When configured as dynamic mode, the mrouter port will not be added automatically any more when issuing the multicast entries; when configured as compatible mode, the report packet will be not transmitted to the mrouter port any more. When it is not configured as default, the mrouter port will be added when issuing the multicast entries and the report packet will be transmitted to the mrouter port when it is received.
Example	Switch(config)#vlan 2 Switch(config-vlan2)# multicast vlan mode dynamic

switchport association multicast-vlan

Syntax	switchport association multicast-vlan <vlan-id> out-tag <tag-id> no switchport association multicast-vlan <vlan-id>	
Parameter	<vlan-id>	The multicast VLAN associates with the port. Each port can only be associated with one multicast VLAN, and the association will be successful only when the multicast VLAN is existent.
	<tag-id>	Specify vlan tag of the multicast data forwarded by the associated port, only the tag of the associated port allows the multicast VLAN, the tag-id takes effect. Its range from 1 to 4094.
Default	The port is not associated with any multicast VLAN by default.	
Mode	Interface Configuration Mode	
Usage	Associate a port with the specified multicast VLAN; the no command cancels the association. After a port is associated with the multicast VLAN, when there comes the multicast order in the port, then the multicast data will be sent from the multicast VLAN to this port, so to reduce the data traffic. If the associated port is set as trunk port and allows the multicast VLAN, the multicast traffic with the specified vlan tag will be forwarded. The port can only be associated with the multicast VLAN after the multicast VLAN is enabled.	
Example	Switch(config)#vlan 2 Switch(config-vlan2)# multicast-vlan Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#switchport mode trunk Switch(config-if-ethernet1/0/1)#switchport association multicast-vlan 2 out-tag 5	

10.1 Commands for ACL

absolute-periodic/periodic

Command	[no] absolute-periodic {Monday Tuesday Wednesday Thursday Friday Saturday Sunday}<start_time>to{Monday Tuesday Wednesday Thursday Friday Saturday Sunday}<end_time>[no]periodic{{Monday+Tuesday+Wednesday+Thursday+Friday+Saturday+Sunday} daily weekdays weekend}<start_time> to <end_time>	
Parameter	Monday	Monday
	Tuesday	Tuesday
	Wednesday	Wednesday
	Thursday	Thursday
	Friday	Friday
	Saturday	Saturday
	Sunday	Sunday
	daily	Every day of the week
	weekdays	Monday thru Friday
	weekend	Saturday thru Sunday
	<start_time>	start time ,HH:MM:SS (hour: minute: second)
	<end_time>	end time,HH:MM:SS (hour: minute: second)
Default	No time-range configuration.	
Mode	time-range mode	
Usage Guide	<p>This command is used for the switch configuration command effective time-range. By creating a time period and referencing it in a command, the user can make the command take effect within the time range defined that time period.</p> <p>When, for example, a ACL rule only needs to take effect within a specific time range, it can be configured first and then referenced when configuring the ACL rule, so that the ACL rule can only take effect within the time range defined for that time period.</p> <p>In a time period, the time range can be defined in two ways:</p> <p>Absolute cycle time a period of time that takes effect within a specified time range, such as Tuesday 8:00 to Saturday 8:00.</p> <p>Periodic period: a period of time in which a cycle (such as 14 to 16:00 a week) takes effect. The no command to delete the configured time-range.</p>	
Example	<p>Make configurations effective within the period from 9:15:30 to 12:30:00 during Tuesday to Saturday.</p> <pre>Switch(config)#time-range admin_timer Switch(config-time-range-admin_timer)#absolute-periodic Tuesday 9:15:30 to Saturday 12:30:00</pre> <p>Make configurations effective within the period from 14:30:00 to 16:45:00 on Monday, Wednesday, Friday and Sunday.</p> <pre>Switch(config-time-range-admin_timer)#periodic Monday Wednesday Friday Sunday 14:30:00 to 16:45:00</pre>	

absolute start

Command	[no] absolute start <start_time> <start_data> [end <end_time> <end_data>]	
Parameter	<start_time>	start time ,HH:MM:SS (hour: minute: second)
	<start_data>	start data ,YYYY.MM.DD (year.month.day)
	<end_time>	end time ,HH:MM:SS (hour: minute: second)
	<end_data>	end data ,YYYY.MM.DD (year.month.day)
Default	No time-range configuration by default.	
Mode	Time-range mode	
Usage Guide	Define an absolute time-range, this time-range operates subject to the clock of this equipment. Absolute time and date, assign specific year, month, day, hour, minute of the start, shall not configure multiple absolute time and date, when in repeated configuration, the latter configuration covers the absolute time and date of the former configuration. The no command delete configuration.	
Example	Make configurations effective from 6:00:00 to 13:30:00 from Oct. 1, 2004 to Jan. 26, 2005. Switch(config)#time-range admin_timer Switch(config-time-range-admin_timer)#absolute start 6:00:00 2004.10.1 end 13:30:00 2005.1.26	

access-list (ip extended)

Command	<p>access-list <num> {deny permit} icmp {{<slpAddr> <sMask>} any-source {host-source <slpAddr>}} {{<dIpAddr> <dMask>} any-destination {host-destination <dIpAddr>}} [<i><icmp-type></i> [<i><icmp-code></i>]] [precedence <prec>] [tos <tos>] [time-range<time-range-name>]</p> <p>access-list <num> {deny permit} igmp {{<slpAddr> <sMask>} any-source {host-source <slpAddr>}} {{<dIpAddr> <dMask>} any-destination {host-destination <dIpAddr>}} [<i><igmp-type></i>] [precedence <prec>] [tos <tos>][time-range <time-range-name>]</p> <p>access-list <num> {deny permit} tcp {{ <slpAddr> <sMask> } any-source {host-source <slpAddr> } } [s-port { <sPort> range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } any-destination {host-destination <dIpAddr> } } [d-port { <dPort> range <dPortMin> <dPortMax> }] [ack+ fin+ psh+ rst+ urg+ syn] [precedence <prec>] [tos <tos>][time-range <time-range-name>]</p> <p>access-list <num> {deny permit} udp {{ <slpAddr> <sMask> } any-source {host-source <slpAddr> } } [s-port { <sPort> range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } any-destination {host-destination <dIpAddr> } } [d-port { <dPort> range <dPortMin> <dPortMax> }] [precedence <prec>] [tos <tos>] [time-range<time-range-name>]</p> <p>access-list <num> {deny permit} {eigrp gre igmp ipinip ip ospf <protocol-num> } {{ <slpAddr> <sMask> } any-source {host-source <slpAddr> } } {{ <dIpAddr> <dMask> } any-destination {host-destination <dIpAddr> } } [precedence <prec>] [tos <tos>][time-range <time-range-name>]</p> <p>no access-list <num></p>	
Parameter	<num>	the No. of access-list, 100-299
	deny	deny packets

	permit	permit packets
	<sIpAddr>	the source IP address, the format is dotted decimal notation
	<sMask>	the reverse mask of source IP, the format is dotted decimal notation
	<sPort>	source port No., 0-65535
	<sPortMin>	the down boundary of source port
	<sPortMax>	the up boundary of source port
	<protocol>	the No. of upper-layer protocol of ip, 0-255
	<dIpAddr>	the destination IP address, the format is dotted decimal notation
	<dMask>	the reverse mask of destination IP, the format is dotted decimal notation
	<dPort>	destination port No. 0-65535
	<dPortMin>	the down boundary of destination port
	<dPortMax>	the up boundary of destination port
	<igmp-type>	the type of igmp, 0-15
	<icmp-type>	the type of icmp, 0-255
	<icmp-code>	protocol No. of icmp, 0-255
	<prec>	IP priority, 0-7
	<tos>	to value, 0-15
	<time-range-name>	the name of time-range
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	<p>Create a numeric extended IP access rule to match specific IP protocol or all IP protocol;if access-list of this coded numeric extended does not exist,thus to create such a access-list. When the user assign specific <num> for the first time,ACL of the serial number is created,then the lists are added into this ACL;the access list which marked 200-299 can configure not continual reverse mask of IP address.</p> <p><igmp-type>represent the type of IGMP packet, and usual values please refer to the following description:</p> <p>17(0x11): IGMP QUERY packet 18(0x12): IGMP V1 REPORT packet 22(0x16): IGMP V2 REPORT packet 23(0x17): IGMP V2 LEAVE packet 34(0x22): IGMP V3 REPORT packet 19(0x13): DVMR packet 20(0x14): PIM V1 packet</p> <p>Particular notice:The packet types included here are not the types excluding IP OPTION. Normally, IGMP packet contains OPTION fields, and such configuration is of no use for this type of packet. If you want to configure the packets containing OPTION, please directly use the manner where OFFSET is configured.</p> <p>The no command delete configuration.</p>	
Example	Create the numeric extended access-list whose serial No. is 110. deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass.	

Switch(config)#access-list 110 deny icmp any any-destination
Switch(config)#access-list 110 permit udp any host-destination 192.168.0.1 d-port 32

access-list (ip standard)

Command	access-list <num> {deny permit} {{<slpAddr> <sMask >} any-source {host-source <slpAddr>}}	
	no access-list <num>	
Parameter	<num>	the No. of access-list, 100-199
	deny	deny packets
	permit	permit packets
	<slpAddr>	the source IP address, the format is dotted decimal notation
	<sMask>	the reverse mask of source IP, the format is dotted decimal notation
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Create a numeric standard IP access-list. If this access-list exists, then add a rule list;When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL. The “no access-list <num>” operation of this command is to delete a numeric standard IP access-list.	
Example	Create a numeric standard IP access-list whose serial No. is 20, and permit date packets with source address of 10.1.1.0/24 to pass, and deny other packets with source address of 10.1.1.0/16. Switch(config)#access-list 20 permit 10.1.1.0 0.0.0.255 Switch(config)#access-list 20 deny 10.1.1.0 0.0.255.255	

access-list(mac extended)

Command	access-list <num> {deny permit} {any-source-mac {host-source-mac <slpAddr>}} <host_smac> {<smac> <smac-mask>}} {any-destination-mac {host-destination-mac <host_dmac>} {<dmac> <dmac-mask>}} [untagged-eth2 tagged-eth2 untagged-802-3 tagged-802-3]	
	no access-list <num>	
Parameter	<num>	the access-list No. which is a decimal's No. from 1100-1199
	deny	deny packets
	permit	permit packets
	any-source-mac	any source address
	host-source-mac	source mac address
	<slpAddr>	the source IP address, the format is dotted decimal notation
	<host_smac>	source mac address
	<smac>	source mac address

	<smac-mask>	mask (reverse mask) of source MAC address
	any-destination-mac	any destination address
	host-destination-mac	destination MAC address
	<host_dmac>	destination MAC address
	<dmac>	destination MAC address
	<dmac-mask>	mask (reverse mask) of destination MAC address
	untagged-eth2	format of untagged ethernet II packet
	tagged-eth2	format of tagged ethernet II packet;
	untagged-802-3	format of untagged ethernet 802.3 packet
	tagged-802-3	format of tagged ethernet 802.3 packet
Default	By default, no access-lists configured.	
Mode	Global mode	
Usage Guide	<p>Define an extended numeric MAC ACL rule.</p> <p>When the user assigns specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL.</p> <p>“no access-list <num>” command deletes an extended numeric MAC access-list rule.</p>	
Example	<p>Permit tagged-eth2 with any source MAC addresses and any destination MAC addresses and the packets pass.</p> <pre>Switch(config)#access-list 1100 permit any-source-mac any-destination-mac tagged-eth2</pre>	

access-list(mac-ip extended)

Command	<pre>access-list<num>{deny permit}{any-source-mac {host-source-mac<host_smac>} {<smac><smac-mask>}} {any-destination-mac {host-destination-mac <host_dmac>} {<dmac><dmac-mask>}}icmp {{<source><source-wildcard>} any-source {host-source<source-host-ip>}} {{<destination><destination-wildcard>}} any-destination {host-destination<destination-host-ip>}} [<icmp-type> [<icmp-code>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]</pre> <pre>access-list<num>{deny permit}{any-source-mac {host-source-mac<host_smac>} {<smac><smac-mask>}} {any-destination-mac {host-destination-mac <host_dmac>} {<dmac><dmac-mask>}}igmp {{<source><source-wildcard>} any-source {host-source<source-host-ip>}} {{<destination><destination-wildcard>}} any-destination {host-destination<destination-host-ip>}} [<igmp-type>] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]</pre> <pre>access-list <num> {deny permit}{any-source-mac {host-source-mac<host_smac> } {<smac> <smac-mask> }}{any-destination-mac {host-destination-mac <host_dmac> } {<dmac> <dmac-mask> }}tcp {{ <source> <source-wildcard> } any-source {host-source <source-host-ip> }}[s-port{ <port1> range <sPortMin> <sPortMax> }] {{ <destination> <destination-wildcard> } any-destination {host-destination <destination-host-ip> }} [d-port { <port3> range <dPortMin> <dPortMax> }] [ack+fin+psh+rst+urg+syn] [precedence<precedence>] [tos <tos>] [time-range</pre>
---------	--

	<p><time-range-name>]</p> <p>access-list <num> {deny permit}{any-source-mac {host-source-mac<host_smac> } {<smac> <smac-mask> }}{any-destination-mac {host-destination-mac <host_dmac> } {<dmac> <dmac-mask> }}udp {{ <source> <source-wildcard> }} any-source {host-source <source-host-ip> }}[s-port{ <port1> range <sPortMin> <sPortMax> }} {{ <destination> <destination-wildcard> }} any-destination {host-destination <destination-host-ip> }}[d-port{ <port3> range <dPortMin> <dPortMax> }} [precedence <precedence>] [tos <tos>][time-range <time-range-name>]</p> <p>access-list <num> {deny permit}{any-source-mac {host-source-mac <host_smac> } {<smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> } {<dmac> <dmac-mask> }} {eigrp gre igrp ip ipinip ospf { <protocol-num> }} {{ <source><source-wildcard> }} any-source {host-source <source-host-ip> }} {{ <destination><destination-wildcard> }} any-destination {host-destination <destination-host-ip> }}[precedence <precedence>] [tos <tos>][time-range <time-range-name>]</p> <p>no access-list <num></p>	
Parameter	<num>	access-list serial No. this is a decimal's No. from 3100-3299
	deny	deny packets
	permit	permit packets
	any-source-mac	any source mac address
	any-destination-mac	any destination mac address
	host_smac , smac	source mac address
	smac-mask	(reverse mask) of source MAC address
	host_dmac , dmas	destination mac address
	dmac-mask	(reverse mask) of destination MAC address
	protocol	No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list
	source-host-ip	No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression
	source-wildcard	reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask
	destination-host-ip	No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression
	destination-wildcard	mask of destination. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask
	s-port	means the need to match TCP/UDP source port

	port1	value of TCP/UDP source interface No.,Interface No. is an integer from 0-65535
	d-port	means need to match TCP/UDP destination interface
	sPortMin	the down boundary of source port
	sPortMax	the up boundary of source port
	port3	value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535
	dPortMin	the down boundary of destination port
	dPortMax	the up boundary of destination port
	[ack] [fin] [psh] [rst] [urg] [syn]	only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection
	precedence	packets can be filtered by priority which is a number from 0-7
	tos	packets can be filtered by service type which ia number from 0-15
	icmp-type	ICMP packets can be filtered by packet type which is a number from 0-255
	icmp-code	ICMP packets can be filtered by packet code which is a number from 0-255
	igmp-type	ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255
	time-range-name	name of time range
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Define an extended numeric MAC-IP ACL rule. When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL; the access list which marked 3200-3299 can configure not continual reverse mask of IP address. The no command deletes a extended numeric MAC-IP ACL access-list rule.	
Example	Permit the passage of TCP packet with source MAC 00-12-34-45-XX-XX, any destination MAC address, source IP address 100.1.1.0 0.255.255.255, and source port 100. Switch(config)#access-list 3199 permit 00-12-34-45-67-00 00-00-00-00-FF-FF any-destination-mac tcp 100.1.1.0 0.255.255.255 s-port 100 any-destination	

access-list (mac standard)

Command	access-list <num> {deny permit} {any-source-mac {host-source-mac <host_smac> } {<smac> <smac-mask> } } no access-list <num>	
Parameter	<num>	the access-list No. which is a decimal's No. from 700-799
	deny	deny packets
	permit	permit packets
	host_smac, smac	source mac address

	smac-mask	(reverse mask) of source MAC address
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	<p>Define a standard numeric MAC ACL rule.</p> <p>When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL.</p> <p>The no command deletes a standard numeric MAC ACL access-list rule.</p>	
Example	<p>Permit the passage of packets with source MAC address 00-00-XX-XX-00-01, and deny passage of packets with source MAC address 00-00-00-XX-00-ab.</p> <p>Switch(config)# access-list 700 permit 00-00-00-00-00-01 00-00-FF-FF-00-00</p> <p>Switch(config)# access-list 700 deny 00-00-00-00-00-ab 00-00-00-FF-00-00</p>	

clear access-group statistic

Command	clear access-group statistic [ethernet <interface-name>]	
Parameter	interface-name	interface-name
Default	None.	
Mode	Admin Mode	
Usage Guide	Empty packet statistics information of the specified interface.	
Example	<p>Empty packet statistics information of interface.</p> <p>Switch#clear access-group statistic</p>	

firewall

Command	firewall {enable disable}	
Parameter	{enable disable}	enable or disable
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Enable or disable firewall.</p> <p>Whether enabling or disabling firewall, access rules can be configured. But only when the firewall is enabled, the rules can be used in specific orientations of specific ports. When disabling the firewall, all ACL tied to ports will be deleted.</p>	
Example	<p>Enable firewall.</p> <p>Switch(config)#firewall enable</p>	

ip access extended

Command	[no] ip access extended <name>	
Parameter	name	the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32.
Default	By default,no access-lists configured.	

Mode	Global mode
Usage Guide	Create a named extended IP access list. When this command is issued for the first time, an empty access list will be created. The no prefix will remove the named extended IP access list including all the rules.
Example	To create a extended IP access list name tcpFlow. Switch(config)#ip access-list extended tcpFlow

ip access standard

Command	[no] ip access standard<name>	
Parameter	name	the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Create a named standard access list. When this command is issued for the first time, an empty access list will be created. The no prefix will remove the named standard access list including all the rules in the list.	
Example	To create a standard IP access list name ipFlow. Switch(config)#ip access-list standard ipFlow	

ipv6 access-list

Command	ipv6 access-list <num-std> {deny permit} {<sIPv6Prefix/sPrefixlen> any-source {host-source <sIPv6Addr>}}	
	no ipv6 access-list <num-std>	
Parameter	num-std	the list number, list range is between 500 ~ 599
	deny	deny packets
	permit	permit packets
	sIPv6Prefix	the prefix of the ipv6 source address
	sPrefixlen	the length of prefix of the ipv6 source address, range is between 1~128
	sIPv6Addr	the ipv6 source address
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Creates a numbered standard IP access-list, if the access-list already exists, then a rule will add to the current access-list. The no command deletes a numbered standard IP access-list.	
Example	Creates a numbered 520 standard IP access-list, allow the source packet from 2003:1:2:3::1/64 pass through the net, and deny all the other packet from the source address 2003:1:2::1/48 pass through. Switch (config)#ipv6 access-list 520 permit 2003:1:2:3::1/64 Switch (config)#ipv6 access-list 520 deny 2003:1:2::1/48	

ipv6 access standard

Command	ipv6 access-list standard <name> no ipv6 access-list standard <name>	
Parameter	name	the name for access list, the character string length is from 1 to 32
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Create a name-based standard IPv6 access list. When this command is run for the first time, only an empty access list with no entry will be created.The no command deletes the name-based standard IPv6 access list (including all entries).	
Example	Create a standard IPv6 access list named ip6Flow. Switch(config)#ipv6 access-list standard ip6Flow	

ipv6 access extended

Command	ipv6 access-list extended <name> no ipv6 access-list extended <name>	
Parameter	name	the name for access list, the character string length is from 1 to 32
Default	By default,no access-lists configured.	
Mode	Global mode	
Usage Guide	Create a name-based extended IPv6 access list. When this command is run for the first time, only an empty access list with no entry will be created. The no command delete the name-based extended IPv6 access list.	
Example	Create an extensive IPv6 access list named tcpFlow. Switch(config)#ipv6 access-list extended tcpFlow	

{ip|ipv6|mac|mac-ip} access-group

Command	{ip ipv6 mac mac-ip} access-group <name> {in} [traffic-statistic] no {ip ipv6 mac mac-ip} access-group <name> {in}	
Parameter	name	the name for access list, the character string length is from 1 to 32
	traffic-statistic	flow statistics
Default	By default,the entry of port is not bound ACL.	
Mode	Port Mode	
Usage Guide	Apply an access-list on some direction of port, and determine if ACL rule is added statistic counter or not by options. Note:when a ACL has multiple rules, traffic-statistic can't configure. There are four kinds of packet head field based on concerned:MAC ACL,IP ACL,MAC-IP ACL and IPv6 ACL; to some extent,ACL filter behavior (permit,deny) has a conflict when a data packet matches multi types of four ACLs.The strict priorities are specified for each ACL based on outcome veracity.It can determine final behavior of packet filter through priority when the filter behavior has a conflict. When binding ACL to port, there are some limits as below:	

	<p>1. Each port can bind a MAC-IP ACL, a IP ACL, a MAC ACL and a IPv6 ACL.</p> <p>2. When binding four ACLs and data packet matching the multi ACLs simultaneity, the priority from high to low are shown as below,</p> <p>Ingress IPv6 ACL</p> <p>Ingress MAC-IP ACL</p> <p>Ingress MAC ACL</p> <p>Ingress IP ACL</p> <p>The no command deletes access-list binding on the port.</p>
Example	<p>Binding AAA access-list to entry direction of port.</p> <pre>Switch(config)#interface ethernet 1/0/5 Switch(config-If-Ethernet1/0/5)#ip access-group aaa in</pre>

mac access extended

Command	<pre>mac-access-list extended <name> no mac-access-list extended <name></pre>	
Parameter	name	name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32. (remark: sensitivity on capital or small letter.)
Default	By default, no access-lists configured.	
Mode	Global mode	
Usage Guide	<p>Define a name-manner MAC ACL or enter access-list configuration mode.</p> <p>After assigning this command for the first time, only an empty name access-list is created and no list item included.</p> <p>The no command deletes this ACL.</p>	
Example	<p>Create an MAC ACL named mac_acl.</p> <pre>Switch(config)# mac-access-list extended mac_acl Switch(config-mac-ext-nacl-mac_acl)#</pre>	

mac-ip access extended

Command	<pre>mac-ip-access-list extended <name> no mac-ip-access-list extended <name></pre>	
Parameter	name	name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32 (remark: sensitivity on capital or small letter).
Default	By default, no named MAC-IP access-list.	
Mode	Global mode	
Usage Guide	<p>Define a name-manner MAC-IP ACL or enter access-list configuration mode.</p> <p>After assigning this command for the first time, only an empty name access-list is created and no list item included.</p> <p>The no command deletes this ACL.</p>	
Example	<p>Create an MAC-IP ACL named macip_acl.</p> <pre>Switch(config)# mac-ip-access-list extended macip_acl</pre>	

Switch(config-maclp-ext-nacl-macip_acl)#

permit | deny (ip extended)

Command	<p>[no] {deny permit} icmp {{<slpAddr> <sMask>} any-source {host-source <slpAddr>}} {{<dIpAddr> <dMask>} any-destination {host-destination <dIpAddr>}} [<icmp-type> [<icmp-code>]] [precedence <prec>][tos <tos>] [time-range<time-range-name>]</p> <p>[no] {deny permit} igmp {{<slpAddr> <sMask>} any-source {host-source <slpAddr>}} {{<dIpAddr> <dMask>} any-destination {host-destination <dIpAddr>}} [<igmp-type>] [precedence <prec>] [tos <tos>] [time-range<time-range-name>]</p> <p>[no] {deny permit} tcp {{ <slpAddr> <sMask> } any-source {host-source <slpAddr> } } [s-port { <sPort> range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } any-destination {host-destination <dIpAddr> } } [d-port { <dPort> range <dPortMin> <dPortMax> }] [ack+fin+psh+rst+urg+syn] [precedence <prec>] [tos <tos>] [time-range <time-range-name>]</p> <p>[no] {deny permit} udp {{ <slpAddr> <sMask> } any-source {host-source <slpAddr> } } [s-port { <sPort> range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } any-destination {host-destination <dIpAddr> } } [d-port { <dPort> range <dPortMin> <dPortMax> }] [precedence <prec>] [tos <tos>] [time-range<time-range-name>]</p> <p>[no] {deny permit} {eigrp gre igrp ipinip ip ospf <protocol-num>} {{<slpAddr> <sMask>} any-source {host-source <slpAddr>}} {{<dIpAddr> <dMask>} any-destination {host-destination <dIpAddr>}} [precedence <prec>] [tos <tos>][time-range<time-range-name>]</p>	
Parameter	deny	deny packets
	permit	permit packets
	<slpAddr>	the source IP address, the format is dotted decimal notation
	<sMask>	the reverse mask of source IP, the format is dotted decimal notation
	<sPort>	source port No., 0-65535
	<sPortMin>	the down boundary of source port
	<sPortMax>	the up boundary of source port
	<dIpAddr>	the destination IP address, the format is dotted decimal notation
	<dMask>	the reverse mask of destination IP, the format is dotted decimal notation, attentive position 0, ignored position 1
	<dPort>	destination port No. 0-65535
	<dPortMin>	the down boundary of destination port

	<dPortMax>	the up boundary of destination port
	<igmp-type>	the type of igmp, 0-15
	<icmp-type>	the type of icmp, 0-255
	<icmp-code>	protocol No. of icmp, 0-255
	<prec>	IP priority, 0-7
	<tos>	to value, 0-15
	<time-range-name>	time range name
Default	By default, no access-list configured.	
Mode	Name extended IP access-list configuration mode	
Usage Guide	Create a name extended IP access rule to match specific IP protocol or all IP protocol. The no command will delete this access list.	
Example	Create the extended access-list, deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass. Switch(config)# access-list ip extended udpFlow Switch(config-ip-ext-nacl-udpFlow)#deny igmp any any-destination Switch(config-ip-ext-nacl-udpFlow)#permit udp any host-destination 192.168.0.1 d-port 32	

permit | deny (ip standard)

Command	{deny permit} {{<sIpAddr> <sMask>} any-source {host-source <sIpAddr>}}	
	no {deny permit} {{<sIpAddr> <sMask>} any-source {host-source <sIpAddr>}}	
Parameter	deny	deny packets
	permit	permit packets
	<sIpAddr>	the source IP address, the format is dotted decimal notation
	<sMask>	the reverse mask of source IP, the format is dotted decimal notation
Default	By default, no access-list configured.	
Mode	Name standard IP access-list configuration mode	
Usage Guide	Create a name standard IP access rule The no command deletes this name standard IP access rule.	
Example	Permit packets with source address 10.1.1.0/24 to pass, and deny other packets with source address 10.1.1.0/16. Switch(config)# access-list ip standard ipFlow Switch(config-std-nacl-ipFlow)# permit 10.1.1.0 0.0.0.255 Switch(config-std-nacl-ipFlow)# deny 10.1.1.0 0.0.255.255	

permit | deny (ipv6 extended)

Command	[no] {deny permit} icmp {{<sIPv6Prefix/sPrefixlen>} any-source {host-source <sIPv6Addr>}} {<dIPv6Prefix/dPrefixlen> any-destination {host-destination <dIPv6Addr>}} [<icmp-type> [<icmp-code>]] [dscp <dscp>] [flow-label <fl>]
---------	---

	<pre>[time-range <time-range-name>] [no] {deny permit} tcp { <sIPv6Prefix/sPrefixlen> any-source {host-source <sIPv6Addr> }} [s-port { <sPort> range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> any-destination {host-destination <dIPv6Addr> }} [d-port { <dPort> range <dPortMin> <dPortMax> }] [syn ack urg rst fin psh] [dscp <dscp>] [flow-label <fl>] [time-range <time-range-name>] [no] {deny permit} udp { <sIPv6Prefix/sPrefixlen> any-source {host-source <sIPv6Addr> }} [s-port { <sPort> range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> any-destination {host-destination <dIPv6Addr> }} [d-port { <dPort> range <dPortMin> <dPortMax> }] [dscp <dscp>] [flow-label <fl>] [time-range <time-range-name>] [no] {deny permit} <next-header> {<sIPv6Prefix/sPrefixlen> any-source {host-source <sIPv6Addr>}} {<dIPv6Prefix/dPrefixlen> any-destination {host-destination <dIPv6Addr>}} [dscp <dscp>] [flow-label <fl>] [time-range <time-range-name>] [no] {deny permit} {<sIPv6Prefix/sPrefixlen> any-source {host-source <sIPv6Addr>}} {<dIPv6Prefix/dPrefixlen> any-destination {host-destination <dIPv6Addr>}} [dscp <dscp>] [flow-label <fl>] [time-range<time-range-name>]</pre>	
Parameter	deny	deny packets
	permit	permit packets
	<sIPv6Addr>	the source IPv6 address
	<sPrefixlen>	the length of the IPv6 address prefix, the range is 1~128
	<sPort>	source port number, the range is 0~65535
	<sPortMin>	the down boundary of source port
	<sPortMax>	the up boundary of source port
	<dIPv6Addr>	the destination IPv6 address
	<dPrefixlen>	the length of the IPv6 address prefix, the range is 1~128
	<dPort>	destination port number, the range is 0~65535
	<dPortMin>	the down boundary of destination port
	<dPortMax>	the up boundary of destination port
	<igmp-type>	type of the IGMP
	<icmp-type>	icmp type
	<icmp-code>	icmp protocol number
	<dscp>	IPv6 priority ,the range is 0~63
	<flowlabel>	value of the flow label, the range is 0~1048575
	syn,ack,urg,rst,fin, psh,tcp	label position
	<next-header>	the IPv6 next-header
	<time-range-name>	time range name
Default	By default, No access control list configured.	
Mode	IPv6 nomenclature extended access control list mode	

Usage Guide	Create an extended nomenclature IPv6 access control rule for specific IPv6 protocol. The no command will delete this access list.
Example	Create an extended access control list named udpFlow, denying the igmp packets while allowing udp packets with destination address 2001:1:2:3::1 and destination port 32. Switch(config)#ipv6 access-list extended udpFlow Switch(config-ipv6-ext-nacl-udpFlow)#deny igmp any any-destination Switch(config-ipv6-ext-nacl-udpFlow)#permit udp any-source host-destination 2001:1:2:3::1 dPort 32

permit | deny (ipv6 standard)

Command	[no] {deny permit} {{<sIPv6Prefix/sPrefixlen>} any-source {host-source <sIPv6Addr>}}	
Parameter	deny	deny packets
	permit	permit packets
	<sPrefixlen>	the length of the IPv6 address prefix, the valid range is 1~128
	<sIPv6Addr>	the source IPv6 address
Default	No access list configured by default.	
Mode	Standard IPv6 nomenclature access list mode	
Usage Guide	Create a standard nomenclature IPv6 access control rule. The no form of this command deletes the nomenclature standard IPv6 access control rule.	
Example	Permit packets with source address of 2001:1:2:3::1/64 while denying those with source address of 2001:1:2:3::1/48. Switch(config)#ipv6 access-list standard ipv6Flow Switch(config-ipv6-std-nacl-ipv6Flow)# permit 2001:1:2:3::1/64 Switch(config-ipv6-std-nacl-ipv6Flow)# deny 2001:1:2:3::1/48	

permit | deny (mac extended)

Command	<p>[no]{deny permit} {any-source-mac {host-source-mac <host_smac> }} { <smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> }} { <dmac> <dmac-mask> }} [cos <cos-val> [<cos-bitmask>]] [vlanId <vid-value> [<vid-mask>]]</p> <p>[ethertype <protocol> [<protocol-mask>]]</p> <p>[no]{deny permit} {any-source-mac {host-source-mac <host_smac> }} { <smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> }} { <dmac> <dmac-mask> }} [untagged-eth2 [ethertype <protocol>[protocol-mask]]]</p> <p>[no]{deny permit}{any-source-mac {host-source-mac <host_smac> }} { <smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> }} { <dmac> <dmac-mask> }} [untagged-802-3]</p> <p>[no]{deny permit} {any-source-mac {host-source-mac <host_smac> }} { <smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> }} { <dmac></p>
---------	--

	<pre><dmac-mask> }} [tagged-eth2 [cos <cos-val>[<cos-bitmask>]] [vlanId <vid-value> [<vid-mask>]] [ethertype <protocol>[<protocol-mask>]]] [no]{deny permit}{any-source-mac {host-source-mac <host_smac> }}{ <smac> <smac-mask> }} {any-destination-mac {host-destination-mac <host_dmac> }}{ <dmac> <dmac-mask> }} [tagged-802-3 [cos <cos-val>[<cos-bitmask>]] [vlanId <vid-value> [<vid-mask>]]]</pre>	
Parameter	deny	deny packets
	permit	permit packets
	any-source-mac	any source of MAC address
	any-destination-mac	any destination of MAC address
	host_smac, smac	source MAC address
	smac-mask	mask (reverse mask) of source MAC address
	host_dmac, dmas	destination MAC address
	dmac-mask	(reverse mask) of destination MAC address
	untagged-eth2	format of untagged ethernet II packet
	tagged-eth2	format of tagged ethernet II packet
	untagged-802-3	format of untagged ethernet 802.3 packet
	tagged-802-3	format of tagged ethernet 802.3 packet
	cos-val	cos value, 0-7
	cos-bitmask	cos mask, 0-7reverse mask and mask bit is consecutive
	vid-value	VLAN No, 1-4094
	vid-bitmask	VLAN mask, 0-4095, reverse mask and mask bit is consecutive
	protocol	specific Ethernet protocol No., 1536-65535
	protocol-bitmask	protocol mask, 0-65535, reverse mask and mask bit is consecutive
Default	By default, no access-list configured.	
Mode	Name extended MAC access-list configuration mode	
Usage Guide	<p>Define an extended name MAC ACL rule.</p> <p>Notice: mask bit is consecutive means the effective bit must be consecutively effective from the first bit on the left, no ineffective bit can be added through. For example: the reverse mask format of one byte is: 00001111b; mask format is 11110000; and this is not permitted: 00010011.</p> <p>The no command deletes this extended name IP access rule.</p>	
Example	<p>The forward source MAC address is not permitted as 00-12-11-23-XX-XX of 802.3 data packet.</p> <pre>Switch(config)# mac-access-list extended macExt Switch(config-mac-ext-nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any-destination-mac untagged-802-3 Switch(config-mac-ext-nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any tagged-802</pre>	

permit | deny (mac-ip extended)

Command	<pre>[no]{deny permit} {any-source-mac {host-source-mac<host_smac>} {<smac><smac-mask>}} {any-destination-mac {host-destination-mac<host_dmac>} {<dmac><dmac-mask>}} icmp{{<source><source-wildcard>} any-source {host-source<source-host-ip>}} {{<destination><destination-wildcard>} any-destination {host-destination <destination-host-ip>}} [<icmp-type> [<icmp-code>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>] [no]{deny permit} {any-source-mac {host-source-mac<host_smac>} {<smac><smac-mask>}} {any-destination-mac {host-destination-mac<host_dmac>} {<dmac><dmac-mask>}} igmp{{<source><source-wildcard>} any-source {host-source<source-host-ip>}} {{<destination><destination-wildcard>} any-destination {host-destination <destination-host-ip>}} [<igmp-type>] [precedence <precedence>] [tos <tos>][time-range<time-range-name>] [no]{deny permit}{any-source-mac {host-source-mac <host_smac> } {<smac> <smac-mask> }}{any-destination-mac {host-destination-mac<host_dmac> } {<dmac> <dmac-mask> }}tcp{{ <source><source-wildcard> } any-source {host-source <source-host-ip> }}[s-port { <port1> range <sPortMin> <sPortMax> }] {{ <destination> <destination-wildcard> } any-destination {host-destination <destination-host-ip> }} [d-port { <port3> range<dPortMin> <dPortMax> }] [ack + fin + psh + rst + urg + syn] [precedence <precedence>] [tos <tos>] [time-range <time-range-name>] [no]{deny permit}{any-source-mac {host-source-mac <host_smac> } {<smac> <smac-mask> }}{any-destination-mac {host-destination-mac <host_dmac> } {<dmac> <dmac-mask> }}udp{{ <source> <source-wildcard> } any-source {host-source <source-host-ip> }}[s-port{ <port1> range <sPortMin> <sPortMax> }] {{ <destination> <destination-wildcard> } any-destination {host-destination <destination-host-ip> }} [d-port { <port3> range <dPortMin> <dPortMax> }] [precedence <precedence>] [tos <tos>][time-range <time-range-name>] [no]{deny permit}{any-source-mac {host-source-mac<host_smac>} {<smac> <smac-mask>}}{any-destination-mac {host-destination-mac<host_dmac>} {<dmac><dmac-mask>}}{eigrp gre igrp ip ipinip ospf {<protocol-num>}} {{<source><source-wildcard>} any-source {host-source<source-host-ip>}} {{<destination><destination-wildcard>} any-destination {host-destination <destination-host-ip>}} [precedence <precedence>] [tos <tos>] [time-range<time-range-name>]</pre>	
Parameter	num	access-list serial No. this is a decimal's No. from 3100-3199
	deny	deny packets
	permit	permit packets
	any-source-mac	any source MAC address
	any-destination-mac	any destination MAC address
	host_smac, smac	source MAC address

smac-mask	(reverse mask) of source MAC address
host_dmac, dmas	destination MAC address
dmac-mask	(reverse mask) of destination MAC address
protocol	No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list
source-host-ip, source	No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression
source-wildcard	reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask
destination-host-ip, destination	destination No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression
destination-wildcard	mask of destination. I Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask
s-port	means the need to match TCP/UDP source port
port1	value of TCP/UDP source interface No., Interface No. is an integer from 0-65535
<sPortMin>	the down boundary of source port
<sPortMax>	the up boundary of source port
d-port	means need to match TCP/UDP destination interface
port3	value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535
<dPortMin>	the down boundary of destination port
<dPortMax>	the up boundary of destination port
[ack] [fin] [psh] [rst] [urg] [syn]	(optional) only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection
precedence	packets can be filtered by priority which is a number from 0-7
tos	packets can be filtered by service type which ia number from 0-15
icmp-type	ICMP packets can be filtered by packet type which is a number from 0-255
icmp-code	ICMP packets can be filtered by packet code which is a number from 0-255
igmp-type	ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255
time-range-name	name of time range

Default	By default, no access-list configured.
Mode	Name extended MAC-IP access-list configuration mode
Usage Guide	Define an extended name MAC-IP ACL rule. No form deletes one extended numeric MAC-IP ACL access-list rule.
Example	Deny the passage of UDP packets with any source MAC address and destination MAC address, any source IP address and destination IP address, and source port 100. Switch(config)# mac-ip-access-list extended maclpExt Switch(config-macip-ext-nacl-maclpExt)# deny any-source-mac any-destination-mac udp any-source s-port 100 any-destination

show access-lists

Command	show access-lists [<num> <acl-name>]	
Parameter	<num> <acl-name>	specific ACL No specific ACL name character string
Default	None	
Mode	Admin Mode	
Usage Guide	Reveal ACL of configuration. When not assigning names of ACL, all ACL will be revealed, used x time (s) indicates the times of ACL to be used.	
Example	Reveal ACL of configuration. Switch#show access-lists access-list 10(used 0 time(s)) access-list 10 deny any-source access-list 100(used 1 time(s)) access-list 100 deny ip any any-destination access-list 100 deny tcp any any-destination access-list 1100(used 0 time(s)) access-list 1100 permit any-source-mac any-destination-mac tagged-eth2 14 2 0800	

show access-group

Command	show access-group in (interface {Ethernet Ethernet IFNAME})	
Parameter	IFNAME	Port name
Default	None.	
Mode	admin/ Global Mode	
Usage Guide	Display the ACL binding status on the port. When not assigning interface names, all ACL tied to port will be revealed.	
Example	Displays all ACL bound to the port. Switch#show access-group interface name: Ethernet 1/0/1 IP Ingress access-list used is 100, traffic-statistics Disable.	

	interface name: Ethernet1/0/2 IP Ingress access-list used is 1, packet(s) number is 11110.
--	---

show firewall

Command	show firewall	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Reveal configuration information of packet filtering functions.	
Example	Display firewall status. Switch#show firewall Firewall status: Enable.	

show ipv6 access-lists

Command	show ipv6 access-lists [<num> <acl-name>]	
Parameter	<num>	the number of specific access control list, the valid range is 500~699, amongst 500~599 is digit standard IPv6 ACL number, 600~699 is the digit extended IPv6 ACL number
	<acl-name>	the nomenclature character string of a specific access control list, lengthening within 1~32
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Show the configured IPv6 access control list. When no access control list is specified, all the access control lists will be displayed; in used x time (s) is shown the times the ACL had been quoted.	
Example	Show the configured IPv6 access control list. Switch#show ipv6 access-lists ipv6 access-list 500(used 1 time(s)) ipv6 access-list 500 deny any-source ipv6 access-list 510(used 1 time(s)) ipv6 access-list 510 deny ip any-source any-destination ipv6 access-list 510 deny tcp any-source any-destination ipv6 access-list 520(used 1 time(s)) ipv6 access-list 520 permit ip any-source any-destination	

show time-range

Command	show time-range <word>	
Parameter	<word>	assign name of time-range needed to be revealed

Default	None.
Mode	Admin/Global Mode
Usage Guide	Reveal configuration information of time range functions. When not assigning time-range names, all time-range will be revealed. in used x time (s) is shown the times the ACL had been quoted.
Example	Reveal configuration information of time range functions. Switch#show time-range time-range timer1 (inactive, used 0 times) absolute-periodic Saturday 0:0:0 to Sunday 23:59:59 time-range timer2 (inactive, used 0 times) absolute-periodic Monday 0:0:0 to Friday

time-range

Command	[no] time-range <time_range_name>	
Parameter	<time_range_name>	time range name must start with letter or number, and the length cannot exceed 32 characters long
Default	By default, no time-range configuration.	
Mode	Global Mode	
Usage Guide	Create the name of time-range as time range name, enter the time-range mode at the same time. The no command to delete this time range.	
Example	Create a time-range named admin_timer. Switch(config)#Time-range admin_timer	

10.2 Commands for Self-defined ACL

userdefined-access-list standard offset

Command	<pre> userdefined-access-list standard offset [window1 { l3start l4start } <offset>] [window2 { l3start l4start } <offset>] [window3 { l3start l4start } <offset>] [window4 { l3start l4start } <offset>] [window5 { l3start l4start } <offset>] [window6 { l3start l4start } <offset>] [window7 { l3start l4start } <offset>] [window8 { l3start l4start } <offset>] [window9 { l3start l4start } <offset>] [window10 { l3start l4start } <offset>] [window11 { l3start l4start } <offset>] </pre>
---------	---

	<pre>[window12 { l3start l4start } <offset>] no userdefined-access-list standard offset [window1] [window2] [window3] [window4] [window5] [window6] [window7] [window8] [window9] [window10] [window11] [window12]</pre>	
Parameter	window1-window12	self-defined window 1 to 12
	l3start	The start offset position is start of layer3 (It can be effective only when the start of layer3 exists)
	l4start	The start offset position is start of layer4 (It can be effective only when the start of layer4 exists)
	offset	The configured offset is from 0 to 178 (unit is 2Bytes)
Default	No Configuration Template.	
Mode	Global Mode	
Usage Guide	<p>Create a standard self-defined ACL template. If the template exists, the corresponding window of the template can be modified.</p> <p>{l2endoftag l3start l4start}: used to configure the start offset position of a window, <offset>: used to the offset of a window, the range is <0-178>, unit is 2Bytes,namely, 0 means 0Bytes offset and 1 means 2Bytes offset. Standard self-defined ACL template can configure the start offset position and offset for 12 window at most. One standard self-defined ACL template can be shared in global mode. The window cannot be modified if the standard self-defined ACL rule is configured with this window. But if the standard self-defined ACL rule is not configured, the window configuration can be modified with this command.</p> <p>The no command can delete one or more offset configuration of the window in the template or delete the whole template. The window in the template can be deleted successfully when it is not used by the self-defined ACL rule.</p> <p>Ipv6 only supports window1-6, the biggest offset of l3start includes the head of L2, the biggest offset of l4start includes the head of L2 and L3.</p> <p>The no command deletes the window of the standard self-defined ACL template. If the window is not specified, the standard self-defined ACL template will be deleted.</p>	
Example	<p>Create a global template with 7 windows (3-9) to configure the start offset position and the offset:</p> <pre>Switch(config)#userdefined-access-list standard offset window3 l2 0 window4 l2 2 window5 l3 0 window6 l3 1 window7 l3 2 window8 l4 1 window9 l4 2</pre>	

userdefined-access-list standard

Command	<pre> userdefined-access-list standard <1200-1299> {permit deny} {window1 window2 window3 window4 window5 window6 window7 window8 window9 wind ow10 window11 window12} No userdefined-access-list standard <1200-1299> {permit deny} {window1 window2 window3 window4 window5 window6 window7 window8 window9 wind ow10 window11 window12} </pre>	
Parameter	<1200-1299>	the access-list No. from 1200 to 1299 in decimal notation
	permit	permit access
	deny	deny access
	window1-window12	custom windows 1 to 12
Default	By default, no any access-list configured.	
Mode	Global Mode	
Usage Guide	<p>Create a numbered standard self-defined ACL. If the standard self-defined ACL exists, then a rule will be added to the ACL.</p> <p>When users specify the specified <num> for the first time, create the ACL with this serial number, then add the entry into this ACL.</p> <p>The no command deletes a numbered standard self-defined ACL.</p>	
Example	<p>Permit the second bytes of the start of I3 is 0x4501. Permit the packets that the forth byte of the start of I4 is 0xFF.</p> <p>Configure a rule in the same list to deny the packets that the fifth and the sixth bytes of the start of I3 is 0xFFAA.</p> <pre> Switch(config)#userdefined-access-list standard offset window1 I3 0 window2 I4 1 Switch(config)#userdefined-access-list standard 1200 permit window1 4501 FFFF window2 00FF 00FF Switch(config)#userdefined-access-list standard offset window3 I3 2 Switch(config)#userdefined-access-list standard 1200 deny any-source-mac any-destination-mac untagged-eth2 window3 FFAA FFFF </pre>	

userdefined access-group

Command	<pre> userdefined access-group <name> {in} [traffic-statistic] no userdefined access-group <name> {in} </pre>	
Parameter	<name>	the access-list name from 1200-1399 in decimal notation

Default	By default, userdefined-access-list is not bound to the port.
Mode	Physical Port Configuration Mode
Usage Guide	<p>Apply userdefined-access-list to one direction of the port. Decide whether the statistical counter should be added to the ACL according to the options.</p> <p>A self-defined access-list can be bound to the ingress of a port and can be configured at the ingress of the same port with other access-lists at the same time. The deny rule is precedent when different access-lists are matching, that means if there is a access-lists match the deny rule, the deny rule must be executed, the permit rule will be executed oppositely.</p> <p>The no command deletes the configuration bound to the port.</p>
Example	<p>The configured self-defined access-list is shown in the following:</p> <pre>Switch(config)#userdefined-access-list standard offset window1 l3 0 window2 l4 1 window3 l3 1 Switch(config)#userdefined-access-list standard 1300 permit window1 4501 FFFF window2 00FF 00FF Switch(config)#userdefined-access-list standard 1300 deny window1 FFAA0000 FFFF0000 Bind the self-defined access-list to Ethernet1/1: Switch(config)#interface ethernet1/1 Switch(config-if-ethernet1/1)#userdefined access-group 1300 in</pre>

vacl userdefined access-group

Command	<pre>vacl userdefined access-group <name> {in} vlan <vlanId> [traffic-statistic] no vacl userdefined access-group <name> {in} vlan <vlanId></pre>	
Parameter	<name>	the access-list name from 1200 to 1399 in decimal notation
	vlanId	the bound VLAN, the range is 1-4094
Default	By default, userdefined-access-list is not bound to any VLAN.	
Mode	Global Mode	
Usage Guide	<p>Apply userdefined-access-list to one direction of the specified VLAN, decide whether the statistical counter should be added to the ACL according to the options or.</p> <p>A self-defined access-list can be bound to the ingress of a VLAN and can be configured at the ingress of the same VLAN with other access-lists at the same time. The deny rule is precedent when different access-lists are matching, that means if there is a access-lists match the deny rule, the deny rule must be executed, the permit rule will be</p>	

	<p>executed oppositely.</p> <p>The no command deletes the configuration bound to the specified VLAN.</p>
Example	<p>The configured self-defined access-list is shown in the following:</p> <pre>Switch(config)#userdefined-access-list standard offset window1 I3 0 window2 I4 1 window3 I3 1 Switch(config)#userdefined-access-list standard 1300 permit window1 4501 FFFF window2 00FF 00FF Switch(config)#userdefined-access-list standard 1300 deny window1 FFAA0000 FFFF0000</pre> <p>Bind the self-defined access-list to VLAN1:</p> <pre>Switch(config)#vacl userdefined access-group 1300 in vlan 1</pre>

10.3 Commands for 802.1x

dot1x accept-mac

Command	[no] dot1x accept-mac <mac-address> [interface <interface-name>]	
Parameter	mac-address	stands for MAC address
	interface-name	for interface name and port number
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Add a MAC address entry to the dot1x address filter table. If a port is specified, the entry added applies to the specified port only. If no port is specified, the entry added applies to all the ports.</p> <p>The dot1x address filter function is implemented according to the MAC address filter table, dot1x address filter table is manually added or deleted by the user.</p> <p>When a port is specified in adding a dot1x address filter table entry, that entry applies to the port only; when no port is specified, the entry applies to all ports in the switch. When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initialed by the users in the dot1x address filter table will be accepted, the rest will be rejected.</p> <p>The no command deletes the entry from dot1x address filter table.</p>	
Example	<p>Adding MAC address 00-01-34-34-2e-0a to the filter table of Ethernet 1/0/5.</p> <pre>Switch(config)#dot1x accept-mac 00-01-34-34-2e-0a interface ethernet 1/0/5</pre>	

dot1x eapor enable

Command	[no] dot1x eapor enable	
Parameter	none	none
Default	EAP relay authentication is used by default.	
Mode	Global Mode	
Usage Guide	<p>Enables the EAP relay authentication function in the switch.</p> <p>The switch and RADIUS may be connected via Ethernet or PPP. If an Ethernet connection exists between the switch and RADIUS server, the switch needs to authenticate the user by EAP relay (EAPoR authentication); if the switch connects to the RADIUS server by PPP, the switch will use EAP local end authentication (CHAP authentication). The switch should use different authentication methods according to the connection between the switch and the authentication server.</p> <p>The no command sets EAP local end authentication.</p>	
Example	Setting EAP local end authentication for the switch. Switch(config)#no dot1x eapor enable	

dot1x enable

Command	[no] dot1x enable	
Parameter	none	none
Default	802.1x function is not enabled in global mode by default; if 802.1x is enabled under Global Mode, 802.1x will not be enabled for the ports by default.	
Mode	Global Mode and Port Mode	
Usage Guide	<p>Enables the 802.1x function in the switch and ports.</p> <p>The 802.1x authentication for the switch must be enabled first to enable 802.1x authentication for the respective ports. If Spanning Tree or MAC binding is enabled on the port, or the port is a Trunk port or member of port aggregation group, 802.1x function cannot be enabled for that port unless such conditions are removed.</p> <p>The no command disables the 802.1x function.</p>	
Example	Enabling the 802.1x function of the switch and enable 802.1x for port1/0/12. Switch(config)#dot1x enable	

	Switch(config)#interface ethernet 1/0/12 Switch(config-if-ethernet1/0/12)#dot1x enable
--	---

dot1x ipv6 passthrough

Command	[no] dot1x ipv6 passthrough
Parameter	none none
Default	IPv6 passthrough function is disabled on the switch by default.
Mode	Port Mode
Usage Guide	Enable IPv6 passthrough function on a switch port, only applicable when access control mode is userbased. The function can only be enabled when 802.1x function is enabled both globally and on the port,with userbased being the control access mode. After it is enabled,users can send IPv6 messages without authentication. The no operation of this command will disable the function.
Example	Enable IPv6 passthrough function on port Ethernet1/0/12. Switch(config)#dot1x enable Switch(config)#interface ethernet 1/0/12 Switch(config-if-ethernet1/0/12)#dot1x enable Switch(config-if-ethernet1/0/12)#dot1x ipv6 passthrough

dot1x guest-vlan

Command	dot1x guest-vlan <vlanid> no dot1x guest-vlan
Parameter	vlanid the specified VLAN id, ranging from 1 to 4094
Default	By default, there is no 802.1x guest-vlan function on the port.
Mode	Port Mode
Usage Guide	Set the guest-vlan of the specified port. The access device will add the port into Guest VLAN if there is no supplicant getting authenticated successfully in a certain stretch of time because of lacking exclusive authentication supplicant system or the version of the supplicant system being too low.In Guest VLAN, users can get 802.1x supplicant system software, update supplicant system or update some other applications (such as anti-virus software, the patches of operating system). When a user of a port within Guest VLAN starts an authentication, the port will remain in Guest VLAN in the case of a failed authentication. If the authentication finishes successfully, there are two possible results: The authentication server assigns an Auto VLAN, causing the port to leave Guest VLAN to join the assigned Auto VLAN. After the user gets

	<p>offline, the port will be allocated back into the specified Guest VLAN. The authentication server assigns an Auto VLAN, then the port leaves Guest VLAN and joins the specified VLAN. When the user becomes offline, the port will be allocated to the specified Guest VLAN again.</p> <p>Attention:</p> <p>There can be different Guest VLAN set on different ports, while only one Guest VLAN is allowed on one port.</p> <p>Only when the access control mode is portbased, the Guest VLAN can take effect. If the access control mode of the port is macbased or userbased, the Guest VLAN can be successfully set without taking effect.</p> <p>The no command is used to delete the guest-vlan.</p>
Example	<p>Set Guest-VLAN of port Ethernet1/0/3 as VLAN 10.</p> <pre>Switch(config)#dot1x enable Switch(config)#interface ethernet 1/0/3 Switch(config-if-ethernet1/0/3)#dot1x guest-vlan 10</pre>

dot1x macfilter enable

Command	[no] dot1x macfilter enable	
Parameter	none	none
Default	dot1x address filter is disabled by default.	
Mode	Global Mode	
Usage Guide	<p>Enables the dot1x address filter function in the switch.</p> <p>When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initiated by the users in the dot1x address filter table will be accepted.</p> <p>The no command disables the dot1x address filter function.</p>	
Example	<p>Enabling dot1x address filter function for the switch.</p> <pre>Switch(config)#dot1x macfilter enable</pre>	

dot1x macbased guest-vlan

Command	dot1x macbased guest-vlan <vlanid> no dot1x macbased guest-vlan	
Parameter	vlanid	the configured vlan id, the range is from 1 to 4094
Default	Do not configure 802.1x macbased guest-vlan by default.	
Mode	Port Mode	
Usage Guide	<p>Configure to appoint the port's guest-vlan based on the mac authentication.</p> <p>If there is no dedicated authentication client or the client version was</p>	

	<p>too low, and it makes no clients authenticate successfully on the port in some time, then the access device will make this user join to the guest VLAN. User can get the 802.1x client software in guest VLAN, update the client or do other updating things (such as anti-virus software, system patches and etc.) When the user under the port in Guest VLAN issues the authentication, this port will be stay in guest VLAN if the authentication failed;</p> <p>if it was successful, there are two situations as below:</p> <p>The authentication server issues an auto VLAN, in this time, the user left the guest VLAN and joined to the auto VLAN. After the user was downline, this user will be assigned to the configured guest VLAN again.</p> <p>The authentication server did not issue the VLAN, in this time, the user left the guest VLAN and joined to the configured native VLAN. After the user was downline, this user will be assigned to the configured guest VLAN again.</p> <p>Notice:</p> <p>dot1x macbased guest-vlan can be configured only on the port based on mac authentication and in HYBRID mode.</p> <p>Different macbased guestVLAN can be configured on different ports, but only one macbased guestVLAN can be configured on one port.</p> <p>The no command deletes this guest-vlan.</p>
Example	<p>Configure the guest-vlan of Ethernet1/0/3 as Vlan 10.</p> <pre>Switch(config-if-ethernet1/0/3)#dot1x macbased guest-vlan 10</pre>

dot1x macbased port-down-flush

Command	[no] dot1x macbased port-down-flush
Parameter	none none
Default	The command is not enabled by default.
Mode	Global Mode
Usage Guide	<p>Enables this command, when the dot1x certification according to mac is down, delete the user who passed the certification of the port</p> <p>When users who passed the certification according to mac changed among different ports, delete the user for the new certification. The command should be enable to delete the user.</p> <p>The no command does not make the down operation.</p>
Example	<p>When the dot1x certification according to mac is down, delete the user who passed the certification of the port.</p> <pre>Switch(config)#dot1x macbased port-down-flush</pre>

dot1x max-req

Command	dot1x max-req <count> no dot1x max-req	
Parameter	count	the times to re-transfer EAP request/ MD5 frames, the valid range is 1 to 10
Default	The default maximum for retransmission is 2.	
Mode	Global Mode	
Usage Guide	Sets the number of EAP request/MD5 frame to be sent before the switch re-initials authentication on no supplicant response. The default value is recommended in setting the EAP request/ MD5 retransmission times. The no command restores the default setting.	
Example	Changing the maximum retransmission times for EAP request/ MD5 frames to 5 times. Switch(config)#dot1x max-req 5	

dot1x user allow-movement

Command	[no] dot1x user allow-movement	
Parameter	none	none
Default	Disable the authentication function after the user moves the port.	
Mode	Global Mode	
Usage Guide	Enable the authentication function after the user moves the port, so the switch allows user to process this authentication. In the condition that the switch connects with hub, when the user will be moved to other port, dot1x user allow-movement command should be enabled. The no command disables the function.	
Example	Enable the authentication function after the user moves the port. Switch(config)#dot1x user allow-movement	

dot1x user free-resource

Command	dot1x user free-resource <prefix> <mask> no dot1x user free-resource	
Parameter	prefix	the segment for limited resource, in dotted decimal format
	mask	the mask for limited resource, in dotted decimal format
Default	There is no free resource by default.	
Mode	Global Mode	
Usage Guide	To configure 802.1x free resource. This command is available only if user based access control is applied. If user based access control has been applied, this command configures the limited resources which can be accessed by the	

	<p>un-authenticated users. For port based and MAC based access control, users could access no network resources before authentication.</p> <p>If TrustView management system is available, the free resource can be configured in TrustView server, and the TrustView server will distribute the configuration to the switches.</p> <p>To be noticed, only one free resource can be configured for the overall network.</p> <p>The no form command closes this function.</p>
Example	<p>To configure the free resource segment as 1.1.1.0, the mask is 255.255.255.0.</p> <pre>Switch(config)#dot1x user free-resource 1.1.1.0 255.255.255.0</pre>

dot1x max-user macbased

Command	dot1x max-user macbased <number> no dot1x max-user macbased	
Parameter	number	the maximum users allowed, the valid range is 1 to 256
Default	The default maximum user allowed is 1.	
Mode	Port Mode	
Usage Guide	Sets the maximum users allowed connect to the port. This command is available for ports using MAC-based access management, if MAC address authenticated exceeds the number of allowed user, additional users will not be able to access the network. The no command restores the default setting.	
Example	Setting port 1/0/3 to allow 5 users. Switch(config-if-ethernet1/0/3)#dot1x max-user macbased 5	

dot1x max-user userbased

Command	dot1x max-user userbased <number> no dot1x max-user userbased	
Parameter	number	the maximum number of users allowed to access the network, ranging from 1 to 1~256
Default	The maximum number of users allowed to access each port is 10 by default.	
Mode	Port Mode	
Usage Guide	Set the upper limit of the number of users allowed access the specified port when using user-based access control mode. This command can only take effect when the port adopts user-based access control mode. If the number of authenticated users exceeds the upper limit of the number	

	of users allowed access the network, those extra users can not access the network. the no command is used to reset the default value.
Example	Setting port 1/0/3 to allow 5 users. Switch(config-if-ethernet1/0/3)#dot1x max-user userbased 5

dot1x portbased mode single-mode

Command	[no] dot1x portbased mode single-mode	
Parameter	none	none
Default	Disable the single-mode by default.	
Mode	Port Mode	
Usage Guide	Set the single-mode based on portbase authentication mode. This command takes effect when the access mode of the port is set as portbase only. Before configuring the single-mode, if the port has enabled dot1x port-method portbased command and exist online users, the switch will enforce all users of this port are offline. After that, this port only allows a user to pass the authentication, the user can access the specified network resource, but other authentication users of this port will be denied and can not access the network. After disabling the single-mode, the switch also enforce the authenticated user is offline. The no command disables this function.	
Example	Set port 1/0/1 based on port authentication mode to single mode. Switch(config-if-ethernet1/0/1)#dot1x portbased mode single-mode	

dot1x port-control

Command	dot1x port-control {auto force-authorized force-unauthorized} no dot1x port-control	
Parameter	auto	enable 802.1x authentication, the port authorization status is determined by the authentication information between the switch and the supplicant
	force-authorized	sets port to authorized status, unauthenticated data is allowed to pass through the port
	force-unauthorized	will set the port to non-authorized mode, the switch will not provide authentication for the supplicant and prohibit data from passing through the port
Default	When 802.1x is enabled for the port, auto is set by default.	
Mode	Port Mode	
Usage Guide	Sets the 802.1x authentication status. If the port needs to provide 802.1x authentication for the user, the port authentication mode should be set to auto.	

	The no command restores the default setting.
Example	Setting port1/0/1 to require 802.1x authentication mode. Switch(config-if-ethernet1/0/1)#dot1x port-control auto

dot1x port-method

Command	dot1x port-method {macbased portbased userbased {standard advanced}}	
	no dot1x port-method	
Parameter	macbased	means the access control method based on MAC address
	portbased	means the access control method based on port
	userbased	means the access control method based on user, it can be divided into two types, one is standard access control method, and the other is advanced access control method
	standard	Standard Access Control Method Based on User
	advanced	Advanced User-Based Access Control
Default	Advanced access control method based on user is used by default.	
Mode	Port Mode	
Usage Guide	<p>This command is used to configure the dot1x authentication method for the specified port. When port based authentication is applied, only one host can authenticate itself through one port. And after authentication, the host will be able to access all the resources. When MAC based authentication is applied, multiple host which are connected to one port can access all the network resources after authentication. When either of the above two kinds of access control is applied, un-authenticated host cannot access any resources in the network.</p> <p>When user based access control is applied, un-authenticated users can only access limited resources of the network. The user based access control falls into two kinds – the standard access control and the advanced access control. The standard user based access control does not limit the access to the limited resources when the host is not authenticated yet. While the user based advanced access control can control the access to the limited resources before authentication is done.</p> <p>Notes:</p> <p>For standard control method based on user, the 802.1x free resource must be configured first, and it needs to be used with dot1x privateclient enable.</p> <p>The no form command restores the default access control method.</p>	
Example	To configure the access control method based on port for Ethernet1/0/4.	

	Switch(config-if-ethernet1/0/4)#dot1x port-method portbased
--	---

dot1x privateclient enable

Command	[no] dot1x privateclient enable	
Parameter	none	none
Default	Private 802.1x authentication packet format is disabled by default.	
Mode	Global Mode	
Usage Guide	<p>To configure the switch to force the authentication client to use private 802.1x authentication protocol.</p> <p>To implement integrated solution, the switch must be enabled to use private 802.1x protocol, or many applications will not be able to function. For detailed information, please refer to DCBI integrated solution. If the switch forces the authentication client to use private 802.1x protocol, the standard client will not be able to work.</p> <p>The no prefix will disable the command and allow the authentication client to use the standard 802.1x authentication protocol.</p>	
Example	<p>To force the authentication client to use private 802.1x authentication protocol.</p> <p>Switch(config)#dot1x privateclient enable</p>	

dot1x privateclient protect enable

Command	[no] dot1x privateclient protect enable	
Parameter	none	none
Default	Disable the privateclient protect function by default.	
Mode	Global Mode	
Usage Guide	<p>Enable the privateclient protect function of the switch.</p> <p>Support the partial encryption of the privateclient protocol to advance the security of the privateclient.</p> <p>The no command disables the protect function.</p>	
Example	<p>Enable the privateclient protect function of the switch.</p> <p>Switch(config)#dot1x privateclient protect enable</p>	

dot1x re-authenticate

Command	dot1x re-authenticate [interface <interface-name>]	
Parameter	interface-name	stands for port number, omitting the parameter for all ports
Default	None	
Mode	Global Mode	
Usage Guide	Enables real-time 802.1x re-authentication (no wait timeout requires) for all ports or a specified port.	

	It makes the switch to re-authenticate the client at once without waiting for re-authentication timer timeout. This command is no longer valid after authentication.
Example	Enabling real-time re-authentication on port1/0/8. Switch(config)#dot1x re-authenticate interface ethernet 1/0/8

dot1x re-authentication

Command	[no] dot1x re-authentication
Parameter	none none
Default	Periodical re-authentication is disabled by default.
Mode	Global Mode
Usage Guide	Enables periodical supplicant authentication. When periodical re-authentication for supplicant is enabled, the switch will re-authenticate the supplicant at regular interval. This function is not recommended for common use. The no command disables this function.
Example	Enabling the periodical re-authentication for authenticated users. Switch(config)#dot1x re-authentication

dot1x timeout quiet-period

Command	dot1x timeout quiet-period <seconds> no dot1x timeout quiet-period
Parameter	seconds the silent time for the port in seconds, the valid range is 1 to 65535
Default	The default value is 10 seconds.
Mode	Global Mode
Usage Guide	Sets time to keep silent on supplicant authentication failure. Default value is recommended. The no command restores the default value.
Example	Setting the silent time to 120 seconds. Switch(config)#dot1x timeout quiet-period 120

dot1x timeout re-authperiod

Command	dot1x timeout re-authperiod <seconds> no dot1x timeout re-authperiod
Parameter	seconds the interval for re-authentication, in seconds, the valid range is 1 to 65535
Default	The default value is 3600 seconds.
Mode	Global Mode
Usage Guide	Sets the supplicant re-authentication interval. dot1x re-authentication must be enabled first before supplicant

	re-authentication interval can be modified. If authentication is not enabled for the switch, the supplicant re-authentication interval set will not take effect. The no command restores the default setting.
Example	Setting the re-authentication time to 1200 seconds. Switch(config)#dot1x timeout re-authperiod 1200

dot1x timeout tx-period

Command	dot1x timeout tx-period <seconds> no dot1x timeout tx-period	
Parameter	seconds	the interval for re-transmission of EAP request frames, in seconds; the valid range is 1 to 65535
Default	The default value is 30 seconds.	
Mode	Global Mode	
Usage Guide	Sets the interval for the supplicant to re-transmit EAP request/identity frame. Default value is recommended. The no command restores the default setting.	
Example	Setting the EAP request frame re-transmission interval to 1200 seconds. Switch(config)#dot1x timeout tx-period 1200	

dot1x unicast enable

Command	[no] dot1x unicast enable	
Parameter	none	none
Default	The 802.1x unicast passthrough function is not enabled in global mode.	
Mode	Global Mode	
Usage Guide	Enable the 802.1x unicast passthrough function of switch. The 802.1x unicast passthrough authentication for the switch must be enabled first to enable the 802.1x unicast passthrough function, then the 802.1x function is configured. The no operation of this command will disable this function.	
Example	Enabling the 802.1x unicast passthrough function of the switch and enable the 802.1x for port 1/0/1. Switch(config)#dot1x enable Switch(config)# dot1x unicast enable Switch(config)#interface ethernet1/0/1 Switch(Config-If-Ethernet1/0/1)#dot1x enable	

show dot1x

Command	show dot1x [interface <interface-list>]	
Parameter	interface-list	the port list,If no parameter is specified, information for all ports is displayed.
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Displays dot1x parameter related information, if parameter information is added, corresponding dot1x status for corresponding port is displayed.	
Example	<p>Display information about dot1x global parameter for the switch.</p> <pre>Switch#show dot1x Global 802.1x Parameters reauth-enabled no reauth-period 3600 quiet-period 10 tx-period 30 max-req 2 authenticator mode passive Mac Filter Disable MacAccessList : dot1x-EAPoR Enable dot1x-privateclient Disable dot1x-unicast Disable 802.1x is enabled on ethernet Ethernet1/0/1 Authentication Method:Port based Max User Number:1 Status Authorized Port-control Auto Supplicant 00-03-0F-FE-2E-D3 Authenticator State Machine State Authenticated Backend State Machine State Idle Reauthentication State Machine State Stop</pre>	

10.4 Commands for the Number Limitation Function of MAC and IP in Port, VLAN

ip arp dynamic maximum

Command	ip arp dynamic maximum <value> no ip arp dynamic maximum	
Parameter	value	upper limit of the number of dynamic ARP in the VLAN, ranging from 1 to 4096
Default	The number limitation function of dynamic ARP in the VLAN is disabled.	
Mode	VLAN Configuration Mode	
Usage Guide	<p>Set the max number of dynamic ARP allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic ARP in the VLAN.</p> <p>When configuring the max number of dynamic ARP allowed in the VLAN, if the number of dynamically learnt ARP in the VLAN is already larger than the max number to be set, the extra dynamic ARP will be deleted.</p> <p>The no command is used to disable the number limitation function of dynamic ARP in the VLAN.</p>	
Example	<p>Enable the number limitation function of dynamic ARP in VLAN 1, the max number to be set is 50.</p> <pre>Switch(config)#interface vlan1 Switch(config-if-vlan1)# ip arp dynamic maximum 50</pre>	

ipv6 nd dynamic maximum

Command	ipv6 nd dynamic maximum <value> no ipv6 nd dynamic maximum	
Parameter	value	upper limit of the number of dynamic NEIGHBOR in the VLAN, ranging from 1 to 4096
Default	The number limitation function of dynamic NEIGHBOR in the VLAN is disabled.	
Mode	VLAN Configuration Mode	
Usage Guide	<p>Set the max number of dynamic NEIGHBOR allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic NEIGHBOR in the VLAN.</p> <p>When configuring the max number of dynamic NEIGHBOR allowed in the VLAN, if the number of dynamically learnt NEIGHBOR in the VLAN is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted.</p> <p>The no command is used to disable the number limitation function of dynamic NEIGHBOR in the VLAN.</p>	
Example	<p>Enable the number limitation function of dynamic NEIGHBOR in VLAN 1, the max number to be set is 50.</p> <pre>Switch(config)#interface vlan1</pre>	

	Switch(config-if-vlan1)# ipv6 nd dynamic maximum 50
--	---

show arp-dynamic count

Command	show arp-dynamic count {vlan interface ethernet <portName>}		
Parameter	vlan	the specified vlan ID	
	portName	the name of layer-2 port	
Default	None.		
Mode	Admin/Global Mode		
Usage Guide	Display the number of dynamic ARP of corresponding port and VLAN.		
Example	Display the number of dynamic ARP of the port and VLAN which are configured with number limitation function of ARP.		
	Switch(config)# show arp-dynamic count interface ethernet 1/0/3		
	Port	MaxCount	CurrentCount

	Ethernet1/0/3	5	1

	Switch(config)# show arp-dynamic count vlan 1		
	Vlan	MaxCount	CurrentCount

	1	55	15

show mac-address dynamic count

Command	show mac-address dynamic count { vlan interface ethernet <portName>}		
Parameter	vlan	display the specified VLAN ID	
	portName	the name of layer-2 port	
Default	None.		
Mode	Admin/Global Mode		
Usage Guide	Display the number of dynamic MAC of corresponding port and VLAN.		
Example	Display the number of dynamic MAC of the port and VLAN which are configured with number limitation function of MAC.		
	Switch(config)# show mac-address dynamic count interface ethernet 1/0/3		
	Port	MaxCount	CurrentCount

	Ethernet1/0/3	5	1

	Switch(config)# show mac-address dynamic count vlan 1		
	Vlan	MaxCount	CurrentCount

	1	55	15

show nd-dynamic count

Command	show nd-dynamic count { vlan interface ethernet <portName>}												
Parameter	vlan	display the specified VLAN ID											
	portName	the name of layer-2 port											
Default	None.												
Mode	Admin/Global Mode												
Usage Guide	Display the number of dynamic ND of corresponding port and VLAN.												
Example	Display the number of dynamic ND of the port and VLAN which are configured with number limitation function of ND.												
	<pre>Switch(config)# show nd-dynamic dynamic count interface ethernet 1/0/3</pre> <table border="1"> <thead> <tr> <th>Port</th> <th>MaxCount</th> <th>CurrentCount</th> </tr> </thead> <tbody> <tr> <td>Ethernet1/0/3</td> <td>5</td> <td>1</td> </tr> </tbody> </table> <pre>Switch(config)# show nd-dynamic dynamic count vlan 1</pre> <table border="1"> <thead> <tr> <th>Vlan</th> <th>MaxCount</th> <th>CurrentCount</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>55</td> <td>15</td> </tr> </tbody> </table>		Port	MaxCount	CurrentCount	Ethernet1/0/3	5	1	Vlan	MaxCount	CurrentCount	1	55
Port	MaxCount	CurrentCount											
Ethernet1/0/3	5	1											
Vlan	MaxCount	CurrentCount											
1	55	15											

switchport arp dynamic maximum

Command	switchport arp dynamic maximum <value> no switchport arp dynamic maximum	
Parameter	value	upper limit of the number of dynamic ARP of the port, ranging from 1 to 4096
Default	The number limitation function of dynamic ARP on the port is disabled.	
Mode	Port Mode	
Usage Guide	<p>Set the max number of dynamic ARP allowed by the port, and, at the same time, enable the number limitation function of dynamic ARP on the port.</p> <p>When configuring the max number of dynamic ARP allowed by the port, if the number of dynamically learnt ARP on the port is already larger than the max number to be set, the extra dynamic ARP will be deleted. TRUNK ports do not supports this function.</p> <p>The no command is used to disable the number limitation function of dynamic ARP on the port.</p>	
Example	<p>Enable the number limitation function of dynamic ARP in port 1/0/2 mode, the max number to be set is 20.</p> <pre>Switch(config)#interface ethernet 1/0/2</pre>	

	Switch(config-if-ethernet1/0/2)# switchport arp dynamic maximum 20
--	--

switchport mac-address dynamic maximum

Command	switchport mac-address dynamic maximum <value> no switchport mac-address dynamic maximum	
Parameter	value	upper limit of the number of dynamic MAC address of the port, ranging from 1 to 4096
Default	The number limitation function of dynamic MAC address on the port is disabled.	
Mode	Port Mode	
Usage Guide	<p>Set the max number of dynamic MAC address allowed by the port, and at the same time, enable the number limitation function of dynamic MAC address on the port.</p> <p>When configuring the max number of dynamic MAC address allowed by the port, if the number of dynamically learnt MAC address on the port is already larger than the max number of dynamic MAC address to be set, the extra dynamic MAC addresses will be deleted. This function is mutually exclusive to functions such as dot1x, MAC binding, if the functions of dot1x, MAC binding or TRUNK are enabled on the port, this function will not be allowed.</p> <p>The no command is used to disable the number limitation function of dynamic MAC address on the port.</p>	
Example	<p>Enable the number limitation function of dynamic MAC address in port 1/0/2 mode, the max number to be set is 20.</p> <pre>Switch(config)#interface ethernet 1/0/2 Switch(config-if-ethernet1/0/2)# switchport mac-address dynamic maximum 20</pre>	

switchport mac-address violation

Command	switchport mac-address violation {protect shutdown} [recovery <5-3600>] no switchport mac-address violation	
Parameter	protect	protect mode
	shutdown	shutdown mode
	recovery	Configure the border port to automatically restore after execute shutdown violation mode
	<5-3600>	Recovery time, do not restore by default
Default	By default, the port is protected mode.	
Mode	Port Mode	
Usage Guide	Set the violation mode of the port.	

	<p>The port sets the violation mode after enable the number limit function of MAC only. If the violation mode is protect, the port only disable the dynamic MAC address learning function when the MAC address number of the port exceeds the upper limit of secure MAC. If the violation mode is shutdown, the port will be disabled when the MAC address number exceeds the upper limit of secure MAC, and the user can enable the port by configuring no shutdown command manually or the automatic recovery timeout. The no command restores the violation mode to protect.</p>
Example	<p>Set the violation mode as shutdown, the recovery time as 60s for port1.</p> <pre>Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)# switchport mac-address violation shutdown recovery 60</pre>

switchport nd dynamic maximum

Command	<pre>switchport nd dynamic maximum <value> no switchport nd dynamic maximum</pre>	
Parameter	value	upper limit of the number of dynamic NEIGHBOR of the port, ranging from 1 to 4096
Default	The number limitation function of dynamic ARP on the port is disabled.	
Mode	Port Mode	
Usage Guide	<p>Set the max number of dynamic NEIGHBOR allowed by the port, and, at the same time, enable the number limitation function of dynamic NEIGHBOR on the port.</p> <p>When configuring the max number of dynamic NEIGHBOR allowed by the port, if the number of dynamically learnt NEIGHBOR on the port is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted. TRUNK ports do not supports this function.</p> <p>The no command is used to disable the number limitation function of dynamic NEIGHBOR on the port.</p>	
Example	<p>Enable the number limitation function of dynamic NEIGHBOR in port 1/0/2 mode, the max number to be 20.</p> <pre>Switch(config)#interface ethernet 1/0/2 Switch(config-if-ethernet1/0/2)# switchport nd dynamic maximum 20</pre>	

vlan mac-address dynamic maximum

Command	<pre>vlan mac-address dynamic maximum <value> no vlan mac-address dynamic maximum</pre>	
Parameter	value	upper limit of the number of MAC address in the VLAN, ranging from 1 to 4096

Default	The number limitation function of dynamic MAC address in the VLAN is disabled.
Mode	VLAN Configuration Mode
Usage Guide	<p>Set the max number of dynamic MAC address allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic MAC address in the VLAN.</p> <p>When configuring the max number of dynamic MAC allowed in the VLAN, if the number of dynamically learnt MAC address in the VLAN is already larger than the max number to be set, the extra dynamic MAC addresses will be deleted. After enabling number limitation function of dynamic MAC in the VLAN, the number limitation of MAC is only applied to general access port, the number of MAC on TURNK ports and special ports which has enabled dot1x, MAC binding function will not be limited or counted.</p> <p>The no command is used to disable the number limitation function of dynamic MAC address in the VLAN.</p>
Example	<p>Enable the number limitation function of dynamic MAC address in VLAN 1, the max number to be set is 50.</p> <pre>Switch(config)#vlan1 Switch(config-if-vlan1)#vlan mac-address dynamic maximum 50</pre>

10.5 Commands for AM Configuration

am enable

Command	[no] am enable	
Parameter	none	none
Default	AM function is disabled by default.	
Mode	Global Mode	
Usage Guide	<p>Globally enable/disable AM function.</p> <p>The no command disables AM function.</p>	
Example	<p>Enable AM function on the switch.</p> <pre>Switch(config)#am enable</pre>	

am port

Command	[no] am port	
Parameter	none	none
Default	AM function is disabled on all port.	
Mode	Port Mode	
Usage Guide	<p>Enable/disable AM function on port.</p> <p>The no command disables AM function on the port.</p>	
Example	<p>Enable AM function on interface 1/0/3 of the switch.</p> <pre>Switch(config-if-ethernet 1/0/3)#am port</pre>	

am ip-pool

Command	[no] am ip-pool <ip-address> <num>	
Parameter	ip-address	the starting address of an address segment in the IP address pool
	num	the number of consecutive addresses following ip-address, less than or equal with 32
Default	By default, IP address pool is empty.	
Mode	Port Mode	
Usage Guide	Set the AM IP segment of the interface, allow/deny the IP messages or APRmessages from a source IP within that segment to be forwarded via the interface. The no command delete configuration.	
Example	Configure that interface 1/0/3 of the switch will forward data packets from an IP address which is one of 10 consecutive IP addresses starting from 10.10.10.1. Switch(config-if-ethernet 1/0/3)#am ip-pool 10.10.10.1 10	

am mac-ip-pool

Command	[no] am mac-ip-pool <mac-address> <ip-address>	
Parameter	mac-address	the source MAC address
	ip-address	the source IP address of the packets, which is a 32 bit binary number represented in four decimal numbers
Default	By default, MAC-IP address pool is empty.	
Mode	Port Mode	
Usage Guide	Set the AM MAC-IP address of the interface, allow/deny the IP messages or APR messages from a source IP within that segment to be forwarded via the interface. The no command delete configuration.	
Example	Configure that the interface 1/0/3 of the switch will allow data packets with a source MAC address of 11-22-22-11-11-11 and a source IP address of 10.10.10.1 to be forwarded. Switch(config-if-ethernet 1/0/3)#am mac-ip-pool 11-22-22-11-11-11 10.10.10.1	

no am all

Command	no am all [ip-pool mac-ip-pool]	
Parameter	ip-pool	the IP address pool

	mac-ip-pool	the MAC-IP address pool
Default	By default, both address pools are empty at the beginning.	
Mode	Global Mode	
Usage Guide	Delete MAC-IP address pool or IP address pool or both pools configured by all users.	
Example	Delete all configured IP address pools. Switch(config)#no am all ip-pool	

show am

Command	show am [interface <interface-name>]	
Parameter	interface-name	the name of the interface of which the configuration information will be displayed
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Display the configured AM entries. No parameter means to display the AM configuration information of all interfaces.	
Example	Display all configured AM entries. Switch#show am interface ethernet 1/0/5 AM is enabled Interface Etherne1/0/5 am interface am ip-pool 50.10.10.1 30 am mac-ip-pool 00-02-04-06-08-09 20.10.10.5 am ip-pool 50.20.10.1 20	

10.6 Commands for Security Feature

dosattack-check srcip-equal-dstip enable

Command	[no] dosattack-check srcip-equal-dstip enable	
Parameter	none	none
Default	Disable the function by which the switch checks if the source IP address is equal to the destination IP address.	
Mode	Global Mode	
Usage Guide	Enable the function by which the switch checks if the source IP address is equal to the destination IP address. By enabling this function, data packet whose source IP address is equal to its destination address will be dropped. The “no” form of this command disables this function.	

Example	Drop the data packet whose source IP address is equal to its destination address. Switch(config)# dosattack-check srcip-equal-dstip enable
---------	---

dosattack-check tcp-flags enable

Command	[no] dosattack-check srcip-equal-dstip enable	
Parameter	none	none
Default	This function disable on the switch by default.	
Mode	Global Mode	
Usage Guide	<p>Enable the function by which the switch will check the unauthorized TCP label function.</p> <p>With this function enabled, the switch will be able to drop follow four data packets containing unauthorized TCP label: SYN=1 while source port is smaller than 1024;TCP label positions are all 0 while its serial No.=0;FIN=1,URG=1,PSH=1 and the TCP serial No.=0;SYN=1 and FIN=1. This function can be used associating the “dosattack-check ipv4-first-fragment enable” command.</p> <p>The “no” form of this command will disable this function.</p>	
Example	Drop one or more types of above four packet types. Switch(config)# dosattack-check tcp-flags enable	

dosattack-check srcport-equal-dstport enable

Command	[no] dosattack-check srcport-equal-dstport enable	
Parameter	none	none
Default	Disable the function by which the switch will check if the source port is equal to the destination port.	
Mode	Global Mode	
Usage Guide	<p>Enable the function by which the switch will check if the source port is equal to the destination port.</p> <p>With this function enabled, the switch will be able to drop TCP and UDP data packet whose destination port is equal to the source port. This function can be used associating the “dosattack-check ipv4-first-fragment enable” function so to block the IPv4 fragment TCP and UDP data packet whose destination port is equal to the source port.</p> <p>The no command disables this function.</p>	
Example	Drop the non-fragment TCP and UDP data packet whose destination port is equal to the source port. Switch(config)#dosattack-check srcport-equal-dstport enable	

dosattack-check icmp-attacking enable

Command	[no] dosattack-check icmp-attacking enable	
Parameter	none	none
Default	By default, disable the ICMP fragment attack checking function on the switch.	
Mode	Global Mode	
Usage Guide	Enable the ICMP fragment attack checking function on the switch. With this function enabled the switch will be protected from the ICMP fragment attacks, dropping the fragment ICMPv4/v6 data packets whose net length is smaller than the specified value. The “no” form of this command disables this function.	
Example	Enable the ICMP fragment attack checking function. Switch(config)#dosattack-check icmp-attacking enable	

dosattack-check icmpV4-size

Command	dosattack-check icmpV4-size <64-1023>	
Parameter	<64-1023>	the max net length of the ICMPv4 data packet permitted by the switch
Default	The value is 0x200 by default.	
Mode	Global Mode	
Usage Guide	Configure the max net length of the ICMPv4 data packet permitted by the switch. To use this function you have to enable “dosattack-check icmp-attacking enable” first.	
Example	Set the max net length of the ICMPv4 data packet permitted by the switch to 100. Switch(config)#dosattack-check icmp-attacking enable Switch(config)#dosattack-check icmpV4-size 100	

10.7 Commands for TACACS+

tacacs-server authentication host

Command	tacacs-server authentication host <ip-address> [port <port-number>][timeout <seconds>] [key {0 7} <string>] [primary] no tacacs-server authentication host <ip-address>	
Parameter	ip-address	the IP address of the server
	port-number	the listening port number of the server, the valid range is 0~65535, amongst 0 indicates it will not be an authentication server
	seconds	the value of TACACS+ authentication timeout timer,

		shown in seconds and the valid range is 1~60
	string	the key string, If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters
	primary	indicates it's a primary server
Default	No TACACS+ authentication configured on the system by default.	
Mode	Global Mode	
Usage Guide	<p>This command is for specifying the IP address, port number, timeout timer value and the key string of the TACACS+ server used on authenticating with the switch.</p> <p>The parameter port is for define an authentication port number which must be in accordance with the authentication port number of specified TACACS+ server which is 49 by default. The parameters key and timeout is used to configure the self-key and self-timeout, if the switch is not configure the timeout<seconds> and key<string>, it will use the global value and key by command tacacs-server timeout<seconds> and tacacs-server key <string>. This command can configure several TACACS+ servers communicate with the switch. The configuration sequence will be used as authentication server sequence. And in case primary is configured on one TACACS+ server, the server will be the primary server.</p> <p>The no form of this command deletes TACACS+ authentication server.</p>	
Example	<p>Configure the TACACS+ authentication server address to 192.168.1.2, and use the global configured key.</p> <pre>Switch(config)#tacacs-server authentication host 192.168.1.2</pre>	

tacacs-server key

Command	tacacs-server key {0 7} <string> no tacacs-server key	
Parameter	string	the key string of the TACACS+ server. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters.
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Configure the key of TACACS+ authentication server.</p> <p>The key is used on encrypted packet communication between the switch and the TACACS+ server. The configured key must be in accordance with the one on the TACACS+ server or else no correct TACACS+ authentication will be performed. It is recommended to</p>	

	configure the authentication server key to ensure the data security. The no command deletes the TACACS+ server key.
Example	Configure test as the TACACS+ server authentication key. Switch(config)#tacacs-server key 0 test

tacacs-server nas-ipv4

Command	tacacs-server nas-ipv4 <ip-address> no tacacs-server nas-ipv4	
Parameter	ip-address	the source IP address of TACACS+ packet, in dotted decimal notation, it must be a valid unicast IP address
Default	By default, no specific source IP address for TACACS+ packet is configured, the IP address of the interface from which the TACACS+ packets are sent is used as source IP address of TACACS+ packet.	
Mode	Global Mode	
Usage Guide	Configure the source IP address of TACACS+ packet sent by the switch. The source IP address must belongs to one of the IP interface of the switch, otherwise an failure message of binding IP address will be returned when the switch send TACACS+ packet. We suggest using the IP address of loopback interface as source IP address, it avoids that the packets from TACACS+ server are dropped when the interface link-down. The no command deletes the configuration.	
Example	Configure the source ip address of TACACS+ packet as 192.168.2.254. Switch(config)#tacacs-server nas-ipv4 192.168.2.254	

tacacs-server timeout

Command	tacacs-server timeout <seconds> no tacacs-server timeout	
Parameter	seconds	the value of TACACS+ authentication timeout timer, shown in seconds and the valid range is 1~60
Default	3 seconds by default.	
Mode	Global Mode	
Usage Guide	Configure a TACACS+ server authentication timeout timer. The command specifies the period the switch wait for the authentication through TACACS+ server. When connected to the TACACS+, and after sent the authentication query data packet to the TACACS+ server, the switch waits for the response. If no replay is received during specified period, the authentication is considered failed.	

	The no command restores the default configuration.
Example	Configure the timeout timer of the tacacs+ server to 30 seconds. Switch(config)#tacacs-server timeout 30

10.8 Commands for RADIUS

aaa enable

Command	[no] aaa enable	
Parameter	none	none
Default	AAA authentication is not enabled by default.	
Mode	Global Mode	
Usage Guide	Enables the AAA authentication function in the switch. The AAA authentication for the switch must be enabled first to enable IEEE 802.1x authentication for the switch. The no command disables the AAA authentication function.	
Example	Enabling AAA function for the switch. Switch(config)#aaa enable	

aaa-accounting enable

Command	[no] aaa-accounting enable	
Parameter	none	none
Default	AAA accounting is not enabled by default.	
Mode	Global Mode	
Usage Guide	Enables the AAA accounting function in the switch. When accounting is enabled in the switch, accounting will be performed according to the traffic or online time for port the authenticated user is using. The switch will send an “accounting started” message to the RADIUS accounting server on starting the accounting, and an accounting packet for the online user to the RADIUS accounting server every five seconds, and an “accounting stopped” message is sent to the RADIUS accounting server on accounting end. Note: The switch send the “user offline” message to the RADIUS accounting server only when accounting is enabled, the “user offline” message will not be sent to the RADIUS authentication server. The no command disables the AAA accounting function.	
Example	Enabling AAA accounting for the switch. Switch(config)#aaa-accounting enable	

aaa-accounting update

Command	aaa-accounting update {enable disable}	
Parameter	none	none
Default	By default, Enable the AAA update accounting function.	
Mode	Global Mode	
Usage Guide	Enable or disable the AAA update accounting function. After the update accounting function is enabled, the switch will sending accounting message to each online user on time.	
Example	Disable the AAA update accounting function for switch. Switch(config)#aaa-accounting update disable	

radius nas-ipv4

Command	radius nas-ipv4 <ip-address> no radius nas-ipv4	
Parameter	ip-address	the source IP address of the RADIUS packet, in dotted decimal notation, it must be a valid unicast IP address
Default	By default, No specific source IP address for RADIUS packet is configured, the IP address of the interface from which the RADIUS packets are sent is used as source IP address of RADIUS packet.	
Mode	Global Mode	
Usage Guide	Configure the source IP address for RADIUS packet sent by the switch. The source IP address must belongs to one of the IP interface of the switch, otherwise an failure message of binding IP address will be returned when the switch send RADIUS packet. We suggest using the IP address of loopback interface as source IP address, it avoids that the packets from RADIUS server are dropped when the interface link-down. The no command deletes the configuration.	
Example	Configure the source ip address of RADIUS packet as 192.168.2.254. Switch(config)#radius nas-ipv4 192.168.2.254	

radius nas-ipv6

Command	radius nas-ipv6 <ipv6-address> no radius nas-ipv6	
Parameter	ipv6-address	the source IPv6 address of the RADIUS packet, it must be a valid unicast IPv6 address
Default	By default, No specific source IPv6 address for RADIUS packet is configured, the IPv6 address of the interface from which the RADIUS packets are sent is used as source IPv6 address of RADIUS packet.	
Mode	Global Mode	
Usage Guide	Configure the source IPv6 address for RADIUS packet sent by the	

	<p>switch.</p> <p>The source IPv6 address must belongs to one of the IPv6 interface of the switch, otherwise a failure message of binding IPv6 address will be returned when the switch send RADIUS packet. We suggest using the IPv6 address of loopback interface as source IPv6 address, it avoids that the packets from RADIUS server are dropped when the interface link-down.</p> <p>The no command deletes the configuration.</p>
Example	<p>Configure the source ipv6 address of RADIUS packet as 2001:da8:456::1.</p> <pre>Switch(config)#radius nas-ipv6 2001:da8:456::1</pre>

radius-server accounting host

Command	<pre>radius-server accounting host {<ipv4-address> <ipv6-address>} [port <port-number>] [key {0 7}<string>} [primary] no radius-server accounting host {<ipv4-address> <ipv6-address>}</pre>	
Parameter	ipv4-address	stands for the server IPv4 address
	ipv6-address	stands for the server IPv6 address
	port-number	server listening port number from 0 to 65535
	string	the key string. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters
	primary	for primary server. Multiple RADIUS sever can be configured and would be available. RADIUS server will be searched by the configured order if primary is not configured, otherwise, the specified RADIUS server will be used first
Default	No RADIUS accounting server is configured by default.	
Mode	Global Mode	
Usage Guide	<p>Specifies the IPv4/IPv6 address and the port number, whether be primary server for RADIUS accounting server.</p> <p>This command is used to specify the IPv4/IPv6 address and port number of the specified RADIUS server for switch accounting, multiple command instances can be configured. The <port-number> parameter is used to specify accounting port number, which must be the same as the specified accounting port in the RADIUS server; the default port number is 1813. If this port number is set to 0, accounting port number will be generated at random and can result in invalid configuration. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch,</p>	

	the switch will send accounting packets to all the configured accounting servers, and all the accounting servers can be backup servers for each other. If primary is specified, then the specified RADIUS server will be the primary server. It only configures a RADIUS primary server whether the server use IPv4 address or IPv6 address. The no command deletes the RADIUS accounting server.
Example	Sets the RADIUS accounting server of IPv6 address to 2004:1:2:3::2, as the primary server, with the accounting port number as 3000. Switch(config)#radius-server accounting host 2004:1:2:3::2 port 3000 primary

radius-server authentication host

Command	radius-server authentication host {<ipv4-address> <ipv6-address>}[port <port-number>] [key {0 7} <string>] [primary] [access-mode {dot1x telnet}] no radius-server authentication host {<ipv4-address> <ipv6-address>}	
Parameter	ipv4-address	stands for the server IPv4 address
	ipv6-address	stands for the server IPv6 address
	port-number	server listening port number from 0 to 65535
	string	the key string. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters
	primary	for primary server. Multiple RADIUS sever can be configured and would be available. RADIUS server will be searched by the configured order if primary is not configured, otherwise, the specified RADIUS server will be used first
	dot1x telnet	designates the current RADIUS server only use 802.1x authentication or telnet authentication, all services can use current RADIUS server by default
Default	No RADIUS authentication server is configured by default.	
Mode	Global Mode	
Usage Guide	Specifies the IPv4 address or IPv6 address and listening port number, cipher key, whether be primary server or not and access mode for the RADIUS server. This command is used to specify the IPv4 address or IPv6 address and port number, cipher key string and access mode of the specified RADIUS server for switch authentication, multiple command instances	

	<p>can be configured. The port parameter is used to specify authentication port number, which must be the same as the specified authentication port in the RADIUS server, the default port number is 1812. If this port number is set to 0, the specified server is regard as non-authenticating. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch, the configured order is used as the priority for the switch authentication server. When the first server has responded (whether the authentication is succeeded or failed), switch does not send the authentication request to the next. If primary is specified, then the specified RADIUS server will be the primary server. It will use the cipher key which be configured by radius-server key <string> global command if the current RADIUS server not configure key<string>. Besides, it can designate the current RADIUS server only use 802.1x authentication or telnet authentication via access-mode option. It is not configure access-mode option and all services can use current RADIUS server by default. The no command deletes the RADIUS authentication server.</p>
Example	<p>Setting the RADIUS authentication server address as 2004:1:2:3::2. Switch(config)#radius-server authentication host 2004:1:2:3::2</p>

radius-server dead-time

Command	radius-server dead-time <minutes> no radius-server dead-time	
Parameter	minutes	the down -restore time for RADIUS server in minutes, the valid range is 1 to 255
Default	The default value is 5 minutes.	
Mode	Global Mode	
Usage Guide	<p>This command specifies the time to wait for the RADIUS server to recover from inaccessible to accessible. When the switch acknowledges a server to be inaccessible, it marks that server as having invalid status, after the interval specified by this command; the system resets the status for that server to valid.</p> <p>The no command restores the default setting.</p>	
Example	<p>Setting the down-restore time for RADIUS server to 3 minutes. Switch(config)#radius-server dead-time 3</p>	

radius-server key

Command	radius-server key {0 7} <string> no radius-server key	
Parameter	string	a key string for RADIUS server, If key option is set

		as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Specifies the key for the RADIUS server (authentication and accounting).</p> <p>The key is used in the encrypted communication between the switch and the specified RADIUS server. The key set must be the same as the RADIUS server set, otherwise, proper RADIUS authentication and accounting will not perform properly.</p> <p>The no command deletes the key for RADIUS server.</p>	
Example	<p>Setting the RADIUS authentication key to be "test".</p> <p>Switch(config)#radius-server key 0 test</p>	

radius-server retransmit

Command	radius-server retransmit <retries> no radius-server retransmit	
Parameter	retries	a retransmission times for RADIUS server, the valid range is 0 to 100
Default	The default value is 3 times.	
Mode	Global Mode	
Usage Guide	<p>This command specifies the retransmission time for a packet without a RADIUS server response after the switch sends the packet to the RADIUS server. If authentication information is missing from the authentication server, AAA authentication request will need to be re-transmitted to the authentication server. If AAA request retransmission count reaches the retransmission time threshold without the server responding, the server will be considered to as not work, the switch sets the server as invalid.</p> <p>The no command restores the default setting.</p>	
Example	<p>Setting the RADIUS authentication packet retransmission time to five times.</p> <p>Switch(config)#radius-server retransmit 5</p>	

radius-server timeout

Command	radius-server timeout <seconds> no radius-server timeout	
Parameter	seconds	the timer value (second) for RADIUS server timeout, the valid

	range is 1 to 1000
Default	The default value is 3 seconds.
Mode	Global Mode
Usage Guide	This command specifies the interval for the switch to wait RADIUS server response. The switch waits for corresponding response packets after sending RADIUS Server request packets. If RADIUS server response is not received in the specified waiting time, the switch resends the request packet or sets the server as invalid according to the current conditions. The no command restores the default setting.
Example	Setting the RADIUS authentication timeout timer value to 30 seconds. Switch(config)#radius-server timeout 30

radius-server accounting-interim-update timeout

Command	radius-server accounting-interim-update timeout <seconds> no radius-server accounting-interim-update timeout													
Parameter	seconds	the interval of sending fee-counting update messages, in seconds, ranging from 60 to 3600												
Default	The default interval of sending fee-counting update messages is 300 seconds.													
Mode	Global Mode													
Usage Guide	<p>This command set the interval at which NAS sends fee-counting update messages. In order to realize the real time fee-counting of users, from the moment the user becomes online, NAS will send a fee-counting update message of this user to the RADIUS server at the configured interval.</p> <p>The interval of sending fee-counting update messages is relative to the maximum number of users supported by NAS. The smaller the interval, the less the maximum number of the users supported by NAS; the bigger the interval, the more the maximum number of the users supported by NAS. The following is the recommended ratio of interval of sending fee-counting update messages to the maximum number of the users supported by NAS:</p> <table border="0"> <tr> <td>The maximum number of users</td> <td>The interval of sending fee-counting update messages(in seconds)</td> </tr> <tr> <td>1-299</td> <td>300 (default)</td> </tr> <tr> <td>300-599</td> <td>600</td> </tr> <tr> <td>600-1199</td> <td>1200</td> </tr> <tr> <td>1200-1799</td> <td>1800</td> </tr> <tr> <td>≥1800</td> <td>3600</td> </tr> </table>		The maximum number of users	The interval of sending fee-counting update messages(in seconds)	1-299	300 (default)	300-599	600	600-1199	1200	1200-1799	1800	≥1800	3600
The maximum number of users	The interval of sending fee-counting update messages(in seconds)													
1-299	300 (default)													
300-599	600													
600-1199	1200													
1200-1799	1800													
≥1800	3600													

	The no operation of this command will reset to the default configuration.
Example	The maximum number of users supported by NAS is 700, the interval of sending fee-counting update messages 1200 seconds. Switch(config)#radius-server accounting-interim-update timeout 1200

show aaa authenticated-user

Command	show aaa authenticated-user	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Displays the authenticated users online. Usually the administrator concerns only information about the online user, the other information displayed is used for troubleshooting by technical support.	
Example	<p>Displays the authenticated users online.</p> <pre>Switch(config)#show aaa authenticated-user ----- authenticated users ----- UserName Retry RadID Port EapID ChapID OnTime UserIP MAC ----- --- ----- total: 0 -----</pre>	

show aaa authenticating-user

Command	show aaa authenticating-user	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Display the authenticating users. Usually the administrator concerns only information about the authenticating user, the other information displays is used for troubleshooting by the technical support.	
Example	<p>Display the authenticating users.</p> <pre>Switch(config)#show aaa authenticating-user ----- authenticating users ----- User-name Retry-time Radius-ID Port Eap-ID Chap-ID Mem-Addr State ----- ---</pre>	

	----- total: 0 -----
--	----------------------

show aaa config

Command	show aaa config	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Displays whether aaa authentication, accounting are enabled and information for key, authentication and accounting server specified.	
Example	<p>Display aaa configuration information.</p> <pre>Switch(config)#show aaa config ----- AAA config data ----- Is Aaa Enabled = 1 :1 means AAA authentication is enabled, 0 means is not enabled Is Account Enabled= 1 :1 means AAA account is enabled, 0 means is not enabled MD5 Server Key = yangshifeng : Authentication key authentication server sum = 2 :Configure the number of authentication server</pre>	

show radius authenticated-user count

Command	show radius authenticated-user count	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Show the number of on-line users who have already passed the authentication.	
Example	<p>Show the number of on-line users who have already passed the authentication.</p> <pre>Switch(config)#show radius authenticated-user count The authenticated online user num is: 105</pre>	

show radius authenticating-user count

Command	show radius authenticating-user count	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Show the number of the authenticating-user.	
Example	<p>Show the number of the authenticating-user.</p> <pre>Switch(config)#show radius authenticating-user count The authenticating user num is: 10</pre>	

show radius count

Command	show radius count {authenticated-user authenticating-user} count	
Parameter	authenticated-user	displays the authenticated users online
	authenticating-user	displays the authenticating users
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Displays the statistics for users of RADIUS authentication.	
Example	Displays the statistics for users of RADIUS authentication. Switch#show radius authenticated-user count The authenticated online user num is: 0	

10.9 Commands for SSL Configuration

ip http secure-server

Command	[no] ip http secure-server	
Parameter	none	none
Default	By default, this function is disabled.	
Mode	Global Mode	
Usage Guide	This command is used for enable and disable SSL function. After enable SSL function, the users visit the switch through https client, switch and client use SSL connect, can form safety SSL connect channel. After that, all the data which transmit of the application layer will be encrypted, then ensure the privacy of the communication. The no command disables SSL function.	
Example	Enable SSL function. Switch(config)#ip http secure-server	

ip http secure-port

Command	ip http secure-port <port-number> no ip http secure-port	
Parameter	port-number	means configured port number, range between 1025 and 65535. 443 is for default
Default	By default, SSL port number is not configured.	
Mode	Global Mode	
Usage Guide	Configure/delete port number by SSL used. If this command is used to configure the port number, then the configured port number is used to monitor. If the port number for https is changed, when users try to use https to connect, must use the changed one. For example:https://device:port_number.	

	SSL function must reboot after every change. The no command removes the configured port number.
Example	Configure the port number is 1028. Switch(config)#ip http secure-port 1028

ip http secure- ciphersuite

Command	ip http secure-ciphersuite {des-cbc3-sha rc4-128-sha des-cbc-sha} no ip http secure-ciphersuite	
Parameter	des-cbc3-sha	encrypted algorithm DES_CBC3, summary algorithm SHA
	rc4-128-sha	encrypted algorithm RC4_128, summary algorithm SHA
	des-cbc-sha	encrypted algorithm DES_CBC, summary algorithm SHA
Default	By default, SSL secure password suite is not configured.	
Mode	Global Mode	
Usage Guide	Configure/delete secure cipher suite by SSL used. If this command is used to configure the secure cipher suite, specified encryption method will be used. The SSL should be restarted to take effect after changes on configuration. When des-cbc-sha is configured, IE 7.0 or above is required. No command removes the configured secure password suite.	
Example	Configure the secure cipher suite is rc4-128-sha. Switch(config)#ip http secure- ciphersuite rc4-128-sha	

show ip http secure-server status

Command	show ip http secure-server status	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Show the status for the configured SSL.	
Example	Show the status for the configured SSL. Switch(config)#show ip http secure-server status HTTP secure server status: Enabled HTTP secure server port: 1028 HTTP secure server ciphersuite: rc4-128-sha	

10.10 Commands for IPv6 Security RA

ipv6 security-ra enable

Command	[no] ipv6 security-ra enable
---------	------------------------------

Parameter	none	none
Default	The IPv6 security RA function is disabled by default	
Mode	Global Mode	
Usage Guide	<p>Globally enable IPv6 security RA function, all the RA advertisement messages will not be forwarded through hardware, but only sent to CPU to handle.</p> <p>Only after enabling the global security RA function, the security RA on a port can be enabled. Globally disabling security RA will clear all the configured security RA ports. The global security RA function and the global IPv6 SAVI function are mutually exclusive, so they can not be enabled at the same time. The no operation of this command will globally disable IPv6 security RA function.</p>	
Example	<p>Globally enable IPv6 security RA.</p> <p>Switch(config)#ipv6 security-ra enable</p>	

ipv6 security-ra enable

Command	[no] ipv6 security-ra enable	
Parameter	none	none
Default	The IPv6 security RA function is disabled by default.	
Mode	Port Configuration Mode	
Usage Guide	<p>Enable IPv6 security RA on a port, causing this port not to forward the received RA message.</p> <p>Only after globally enabling the security RA function, can the security RA on a port be enabled. Globally disabling security RA will clear all the configured security RA ports.</p> <p>The no ipv6 security-ra enable will disable the IPv6 security RA on a port.</p>	
Example	<p>Enable IPv6 security RA on a port.</p> <p>Switch(config-if-ethernet1/0/2)#ipv6 security-ra enable</p>	

show ipv6 security-ra

Command	show ipv6 security-ra [interface <interface-list>]	
Parameter	interface-list	Specifies the port number. No parameter will display all distrust ports, entering a parameter will display the corresponding distrust port.
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	Display all the interfaces with IPv6 RA function enabled.	
Example	<p>Display all the interfaces with IPv6 RA function enabled.</p> <p>Switch# show ipv6 security-ra</p> <p>IPv6 security ra config and state information in the switch</p>	

	Global IPv6 Security RA State: Enable Ethernet1/0/1 IPv6 Security RA State: Yes Ethernet1/0/3 IPv6 Security RA State: Yes
--	---

10.11 Commands for MAB

authentication mab

Command	authentication mab {radius local} (none) no authentication mab	
Parameter	radius	means RADIUS authentication mode
	local	means the local authentication
	none	means the authentication is needless
Default	By default, using RADIUS authentication mode.	
Mode	Global Mode	
Usage Guide	<p>Configure the authentication mode and priority of MAC address authentication.</p> <p>none option is used to the fleeing function of MAC address authentication.</p> <p>If all configured RADIUS servers don't respond, switch will adopt none authentication mode to allow that MAC address authentication users access the network directly. The option of local is used for the local authentication of MAC address, it authenticates through the local user name and password. If configured as the method of authentication mab radius local none, judge if configured the user name and password used in mab authentication in local when the radius server has no response. If it has been configured, use the local authentication, if not, use the backup none authentication.</p> <p>The no command restores the default authentication mode.</p>	
Example	<p>Configure the local authentication and the fleeing function of MAC address authentication.</p> <p>Switch(config)#authentication mab radius local none</p>	

clear mac-authentication-bypass binding

Command	clear mac-authentication-bypass binding {mac WORD interface (ethernet IFNAME IFNAME) all}	
Parameter	mac	Delete MAB binding of the specified MAC address
	IFNAME	Delete MAB binding of the specified port
	all	Delete all MAB binding

Default	None.
Mode	Admin Mode
Usage Guide	Clear MAB binding information.
Example	Delete all MAB binding. Switch#clear mac-authentication-bypass binding all

mac-authentication-bypass binding-limit

Command	mac-authentication-bypass binding-limit <1-100> no mac-authentication-bypass binding-limit	
Parameter	1-100	the max binding number of MAB, ranging from 1 to 100
Default	By default, the max binding number of MAB is 3.	
Mode	Port Configuration Mode	
Usage Guide	Set the max binding number of MAB. Set the max binding number of MAB. When the binding number reaches to the max value, the port will stop binding, if the max binding number is less than the current binding number of the port, the setting will be unsuccessful. The no command will restore the default binding number as 3.	
Example	Configure the max binding number as 10. Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#mac-authentication-bypass binding-limit 10	

mac-authentication-bypass enable

Command	[no] mac-authentication-bypass enable	
Parameter	none	none
Default	By default, disable the global and port MAB function.	
Mode	Port Configuration Mode	
Usage Guide	Enable the global and port MAB function. To process MAB authentication of a port, enable the global MAB function first, and then, enable the MAB function of the corresponding port. The no command disables MAB function.	
Example	Enable the global and port Eth1/0/1 MAB function. Switch(config)#mac-authentication-bypass enable Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#mac-authentication-bypass enable	

mac-authentication-bypass guest-vlan

Command	mac-authentication-bypass guest-vlan <1-4094>
---------	---

	no mac-authentication-bypass guest-vlan	
Parameter	1-4094	guest vlan ID, ranging from 1 to 4094
Default	None.	
Mode	Port Configuration Mode	
Usage Guide	<p>Set guest vlan of MAB authentication.</p> <p>Set guest vlan of MAB authentication, only Hybrid port use this command, it is not take effect on access port. After MAB authentication is failing, if the existent guest vlan is configured by the port connecting to the MAB user, the MAB user can join and access guest vlan.</p> <p>The no command deletes guest vlan.</p>	
Example	<p>Configure guest vlan of MAB authentication for port 1/0/1.</p> <pre>Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#mac-authentication-bypass guest-vlan 10</pre>	

mac-authentication-bypass spoofing-garp-check

Command	[no] mac-authentication-bypass spoofing-garp-check	
Parameter	none	none
Default	By default, disable spoofing-garp-check function.	
Mode	Global Mode	
Usage Guide	<p>Enable the spoofing-garp-check function, MAB function will not deal with spoofing-garp any more</p> <p>When the terminal of Windows operating system detects the address conflict, it will sends a gratuitous ARP to correct the error ARP entries generated by gratuitous ARP of the conflict detection. This command is used to detect the spoofing-garp when occurring the address conflict, MAB function is not deal with the packet any more.</p> <p>Notice: when enabling the check function, all ARP will be processed the software check, it will add switch's load.</p> <p>The no command disables the function.</p>	
Example	<p>Enable spoofing-garp-check function.</p> <pre>Switch(config)#mac-authentication-bypass spoofing-garp-check enable</pre>	

mac-authentication-bypass timeout linkup-period

Command	mac-authentication-bypass timeout linkup-period <0-30> no mac-authentication-bypass timeout linkup-period	
Parameter	0-30	After the port is shutdown automatically, the interval before it up again, the unit is second, 0 means there is no down/up operation

Default	By default, the interval is 0.
Mode	Global Mode
Usage Guide	<p>Set the interval between down and up when VLAN binding in a port is changing to assure the user can obtain IP again.</p> <p>When MAB authentication is successful, belong to vlan according to auto-vlan setting, when MAB authentication is failing, belong to vlan according to guest-vlan setting. After linkup-period is set, when VLAN binding of a port is changing, the port will be shutdown automatically, and will be up again after linkup-period to assure the client obtain IP.</p> <p>The no command to restore default values.</p>
Example	<p>Configure down/up time as 12s.</p> <p>Switch(config)#mac-authentication-bypass timeout linkup-period 12</p>

mac-authentication-bypass timeout offline-detect

Command	mac-authentication-bypass timeout offline-detect (0 <60-7200>)	
	no mac-authentication-bypass timeout offline-detect	
Parameter	0 <60-7200>	offline-detect time, the range is 0 or 60 to 7200s
Default	By default, offline-detect time is 180s.	
Mode	Global Mode	
Usage Guide	<p>Configure offline-detect time.</p> <p>When offline-detect time is 0, the switch does not detect MAB binding, when offline-detect time is 60s to 7200s, the switch timely detects the flow corresponding to the MAB binding. If there is no flow in the period of offline-detect time, it will delete this binding and forbid the flow to pass.</p> <p>The no command restores the default value.</p>	
Example	<p>Configure offline-detect time as 200s.</p> <p>Switch(config)#mac-authentication-bypass timeout offline-detect 200</p>	

mac-authentication-bypass timeout quiet-period

Command	mac-authentication-bypass timeout quiet-period <1-60>	
	no mac-authentication-bypass timeout quiet-period	
Parameter	1-60	quiet-period, ranging from 1 to 60s
Default	By default, quiet-period is 30s.	
Mode	Global Mode	
Usage Guide	<p>Set quiet-period of MAB authentication.</p> <p>If MAB authentication is failing, within the quiet-period the switch will not respond the authentication request of this MAC, after quiet-period, it will respond the request again.</p> <p>The no command restores quiet-period as the default value.</p>	
Example	<p>Configure quiet-period of MAB authentication as 60s.</p> <p>Switch(config)#mac-authentication-bypass timeout quiet-period 60</p>	

mac-authentication-bypass timeout reauth-period

Command	mac-authentication-bypass timeout reauth-period <1-3600> no mac-authentication-bypass timeout reauth-period	
Parameter	1-3600	reauthentication interval, ranging from 1 to 3600s
Default	By default, reauthentication interval is 30s.	
Mode	Global Mode	
Usage Guide	Set the reauthentication interval at failing authentication state. At failing authentication state, the user processes the reauthentication timely until the authentication is successful; at the successful state, the user can access the network resources. The no command restores the default value.	
Example	Configure reauthentication time as 20s. Switch(config)#mac-authentication-bypass timeout reauth-period 20	

mac-authentication-bypass timeout stale-period

Command	mac-authentication-bypass timeout stale-period <0-60> no mac-authentication-bypass timeout stale-period	
Parameter	0-60	The time that delete the binding, ranging from 0 to 60s
Default	By default, it takes 30 s. to delete the binding.	
Mode	Global Mode	
Usage Guide	Set the time that delete the binding user after MAB port is down. If the time that delete the binding as 0, delete all user binding of this port as soon as the MAB port is down, if the time is bigger than 0, delete the user binding with a delay after the MAB port is down. The no command restores the default value.	
Example	Configure the deletion time as 40s. Switch(config)#mac-authentication-bypass timeout stale-period 40	

mac-authentication-bypass username-format

Command	[no] mac-authentication-bypass username-format {mac-address {fixed username WORD password WORD}}	
Parameter	mac-address	Use MAC address of MAB user as username and password to authenticate
	fixed username WORD password WORD	Use the specified username and password to authenticate, the length of username and password ranges between 1 and 32

		characters
Default	By default, use MAC address of MAB user as username and password to authenticate.	
Mode	Global Mode	
Usage Guide	<p>Set the authenticate method of MAB authentication.</p> <p>There are two methods for MAB authentication: use MAC address of MAB user as username and password to authenticate or use the specified username and password to authenticate. If there is no specified username and password, the device uses the first method to authenticate by default.</p> <p>The no command to restore default values.</p>	
Example	<p>All MAB users use the same username and password to authenticate, the username is mab-user, the password is mab-pwd.</p> <p>Switch(config)#mac-authentication-bypass username-format fixed username mab-user password mab-pwd</p>	

show mac-authentication-bypass

Command	show mac-authentication-bypass {interface {ethernet IFNAME IFNAME}}																														
Parameter	IFNAME	Port name																													
Default	None.																														
Mode	Admin/Global Mode																														
Usage Guide	Show the binding information of MAB authentication.																														
Example	<p>Show the binding information of MAB authentication.</p> <p>Switch#show mac-authentication-bypass</p> <p>The Number of all binding is 5</p> <table border="1"> <thead> <tr> <th>MAC</th> <th>Interface</th> <th>Vlan ID</th> <th>State</th> </tr> </thead> <tbody> <tr> <td>04-0a-eb-6a-7f-88</td> <td>Ethernet1/0/1</td> <td>1</td> <td>MAB_QUIET</td> </tr> <tr> <td>03-0a-eb-6a-7f-88</td> <td>Ethernet1/0/1</td> <td>1</td> <td>MAB_QUIET</td> </tr> <tr> <td>02-0a-eb-6a-7f-88</td> <td></td> <td>Ethernet1/0/1</td> <td>1</td> </tr> <tr> <td colspan="4">MAB_AUTHENTICATED</td> </tr> <tr> <td>00-0a-eb-6a-7f-8e</td> <td></td> <td>Ethernet1/0/1</td> <td>1</td> </tr> <tr> <td colspan="4">MAB_AUTHENTICATED</td> </tr> </tbody> </table> <p>Switch(config)#show mac-authentication-bypass int e1/0/1</p> <p>Interface Ethernet1/0/1 user config:</p> <p>MAB enable: Enable</p> <p>Binding info: 1</p> <p>-----</p> <p>MAB Binding built at SUN JAN 01 01:14:48 2006</p>			MAC	Interface	Vlan ID	State	04-0a-eb-6a-7f-88	Ethernet1/0/1	1	MAB_QUIET	03-0a-eb-6a-7f-88	Ethernet1/0/1	1	MAB_QUIET	02-0a-eb-6a-7f-88		Ethernet1/0/1	1	MAB_AUTHENTICATED				00-0a-eb-6a-7f-8e		Ethernet1/0/1	1	MAB_AUTHENTICATED			
MAC	Interface	Vlan ID	State																												
04-0a-eb-6a-7f-88	Ethernet1/0/1	1	MAB_QUIET																												
03-0a-eb-6a-7f-88	Ethernet1/0/1	1	MAB_QUIET																												
02-0a-eb-6a-7f-88		Ethernet1/0/1	1																												
MAB_AUTHENTICATED																															
00-0a-eb-6a-7f-8e		Ethernet1/0/1	1																												
MAB_AUTHENTICATED																															

	VID 1, Port: Ethernet1/1 Client MAC: 00-0a-eb-6a-7f-8e Binding State: MAB_AUTHENTICATED Binding State Lease: 164 seconds left
--	--

10.12 Commands for MAB PPPoE Intermediate Agent

pppoe intermediate-agent

Command	[no] pppoe intermediate-agent	
Parameter	none	none
Default	By default, disable global PPPoE intermediate agent function.	
Mode	Global Mode	
Usage Guide	Enable global PPPoE intermediate agent function. After enable global PPPoE IA function, process the packet of PPPoE discovery stage according to the related configuration. The no command disables global PPPoE intermediate agent function.	
Example	Enable global PPPoE intermediate agent function. Switch(config)#pppoe intermediate agent	

pppoe intermediate-agent (Port)

Command	[no] pppoe intermediate-agent	
Parameter	none	none
Default	By default, disable PPPoE intermediate agent function of the port.	
Mode	Port Configuration Mode	
Usage Guide	Enable PPPoE intermediate agent function of the port. After enable PPPoE IA function of the port, add vendor tag for PPPoE packet of the port. <i>Note:</i> 1. It must enable global pppoe intermediate-agent function. 2. At least one port is connected to PPPoE server, and the port mode is trust. The no command disables PPPoE intermediate agent function of the port.	
Example	Enable PPPoE intermediate agent function of the port ethernet 1/0/2. Switch(config-if-ethernet1/0/2)#pppoe intermediate agent	

pppoe intermediate-agent circuit-id

Command	[no] pppoe intermediate-agent circuit-id <string>	
Parameter	string	circuit-id, the max character number is 63 bytes
Default	This function is not configured by default.	
Mode	Port Configuration Mode	

Usage Guide	Configure circuit ID of the port. This command configures circuit-id alone for each port, the priority is higher than pppoe intermediate-agent identifier-string command. The no command cancels this configuration.
Example	Configure circuit-id as abcd/efgh on port ethernet1/0/3 of vlan3. Switch(config-if-ethernet1/0/3)#pppoe intermediate-agent circuit-id abcd/efgh

pppoe intermediate-agent delimiter

Command	pppoe intermediate-agent delimiter <WORD> no pppoe intermediate-agent delimiter	
Parameter	WORD	the delimiter, its range is (# . , ; : / space)
Default	By default, the fields is comparted with '\0'.	
Mode	Global Mode	
Usage Guide	Configure the delimiter among the fields in circuit-id and remote-id. After configuring the delimiter, the added fields of circuit-id and remote-id use the configured delimiter to compart. Notice: The global pppoe intermediate-agent function must be enabled. The no command cancels the configuration.	
Example	Configuration delimiter is space. Switch(config)#pppoe intermediate-agent delimiter space	

pppoe intermediate-agent format

Command	pppoe intermediate-agent format (circuit-id remote-id) (hex ascii) no pppoe intermediate-agent format (circuit-id remote-id)	
Parameter	hex	hexadecimal
	ascii	ASCII code
Default	This function is not configured by default.	
Mode	Global Mode	
Usage Guide	Configure the format with hex or ASCII for circuit-id and remote-id. Encapsulation circuit-id and remote-id with hex ASCII format to vendor tag. Notice: The global pppoe intermediate-agent function must be enabled. The no command cancels the configuration.	
Example	Configure the trust port 1/0/1 to enable vendor-tag strip function. Switch(config)#pppoe intermediate-agent format remote-id ascii	

pppoe intermediate-agent remote-id

Command	[no] pppoe intermediate-agent remote-id <string>
---------	--

Parameter	string	remote-id, the max character number is 63 bytes
Default	This function is not configured by default.	
Mode	Port Configuration Mode	
Usage Guide	<p>Configure remote-id of the port.</p> <p>Configure remote-id for each port, if there is no configuration, use switch's MAC as remote-id value.</p> <p>The no command cancels this configuration.</p>	
Example	<p>Configure remote-id as abcd on port ethernet1/0/2.</p> <pre>Switch(config-if-ethernet1/0/2)# pppoe intermediate-agent remote-id abcd</pre>	

pppoe intermediate-agent trust

Command	[no] pppoe intermediate-agent trust	
Parameter	none	none
Default	By default, the port is a untrust port.	
Mode	Port Configuration Mode	
Usage Guide	<p>Configure the port as trust port.</p> <p>The port which connect to server must be configured as trust port.</p> <p><i>Note:</i> At least one trust port is connected to PPPoE server.</p> <p>The no command configures the port as untrust port.</p>	
Example	<p>Configure port ethernet1/0/1 as trust port.</p> <pre>Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent trust</pre>	

pppoe intermediate-agent type self-defined circuit-id

Command	pppoe intermediate-agent type self-defined circuit-id {vlan port id (switch-id (mac hostname) remote-mac) string WORD} no pppoe intermediate-agent type self-defined circuit-id	
Parameter	vlan	VLAN ID
	port	port number
	id switch-id mac	the local MAC address
	id switch-id hostname	the local host name
	remote-mac	the remote MAC address
	string WORD	the specified keyword
Default	By default, this configuration is null.	
Mode	Global Mode	
Usage Guide	<p>Configure the self-defined circuit-id. This configuration and type tr-101 circuit-id are mutually exclusive, it will clear the corresponding configuration of type tr-101 circuit-id. The no command cancels the configuration.</p>	
Example	Configure the self-defined circuit-id as vlan port id switch-id	

	hostname. Switch(config)#pppoe intermediate-agent type self-defined circuit-id vlan port id switch-id hostname
--	--

pppoe intermediate-agent type self-defined remoteid

Command	pppoe intermediate-agent type self-defined remoteid {mac vlan-mac hostname string WORD} no pppoe intermediate-agent type self-defined remote-id	
Parameter	mac	Ethernet port MAC address
	vlan-mac	IP interface MAC address
	hostname	the local host name
	string WORD	the specified keyword
Default	By default, this configuration is empty.	
Mode	Global Mode	
Usage Guide	Configure the self-defined remote-id. Configuration order of this command according to the fields order in remote-id.The no command cancels the configuration.	
Example	Configure the self-defined remote-id as string abcd mac hostname. Switch(config)#pppoe intermediate-agent type self-defined remoteid string abcd mac hostname	

pppoe intermediate-agent type tr-101 circuit-id access-node-id

Command	pppoe intermediate-agent type tr-101 circuit-id access-node-id <string> no pppoe intermediate-agent type tr-101 circuit-id access-node-id	
Parameter	string	access-node-id, the max character number is 47 bytes.
Default	By default, MAC address of the switch.	
Mode	Global Mode	
Usage Guide	Configure access-node-id field value of circuit ID in the added vendor tag with tr-101 standard. Use this configuration to create access-node-id of circuit ID in vendor tag.circuit-id value is access-node-id + " eth "+ Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte. In default state, access-node-id value of circuit-id is switch's MAC, it occupies 6 bytes. For example: MAC address is "0a0b0c0d0e0f", Slot ID is 12, Port Index is 34, Vlan ID is 567, the default circuit-id value is "0a0b0c0d0e0f eth 12/034:0567". The no command unconfigured.	

Example	Configure access-node-id value of circuit ID as abcd in vendor tag. Switch(config)#pppoe intermediate-agent access-node-id abcd After port ethernet1/0/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "abcd eth 01/003:0003".
---------	---

pppoe intermediate-agent type tr-101 circuit-id identifier-string option delimiter

Command	pppoe intermediate-agent type tr-101 circuit-id identifier-string <string> option {sp sv pv spv} delimiter <WORD> [delimiter <WORD>] no pppoe intermediate-agent type tr-101 circuit-id identifier-string option delimiter	
Parameter	string	identifier-string, the max character number is 47 bytes
	{sp sv pv spv}	This option can select the combination format for slot, port, vlan, sp means slot and port, sv means slot and vlan, pv means port and vlan, spv means slot, port and vlan
	WORD	The delimiter between slot, port and vlan, the range is (# . , ; : / space). Note: There are two delimiter WORDs in spv combo mode, the first between slot and port, the second between port and vlan
Default	By default, this configuration is empty.	
Mode	Global Mode	
Usage Guide	Configure circuit-id of the added vendor tag with tr-101 standard. This command is used to configure global circuit id, the priority is higher than pppoe intermediate-agent access-node-id command. circuit-id value is access-node-id + " eth " + Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte. The no command deletes this configuration.	
Example	Configure access-node-id as xyz, use spv combination mode, delimiter with "#" between Slot ID and Port ID, delimiter with "/" between Port ID and Vlan ID. Switch(config)#pppoe intermediate-agent identifier-string xyz option spv delimiter # delimiter / Switch# show pppoe intermediate-agent identifier-string option delimiter config identifier string is : xyz	

	<p>config option is : slot , port and vlan the first delimiter is : "# " the second delimiter is : "/" " After port ethernet1/0/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "xyz eth 01#003/0003".</p>
--	--

pppoe intermediate-agent vendor-tag strip

Command	[no] pppoe intermediate-agent vendor-tag strip	
Parameter	none	none
Default	By default, disable vendor-tag strip function of the port.	
Mode	Port Configuration Mode	
Usage Guide	<p>Enable vendor-tag strip function of the port. If the received packet includes vendor tag from server to client, strip this vendor tag. Note: 1. Must enable global pppoe intermediate-agent function. 2. It must be configured on trust port. The no command cancels this function.</p>	
Example	<p>Trust port ethernet1/0/1 enables vendor tag strip function. Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent trust Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent vendor-tag strip</p>	

show pppoe intermediate-agent access-node-id

Command	show pppoe intermediate-agent access-node-id	
Parameter	none	none
Default	By default,the configuration information is null.	
Mode	Admin mode	
Usage Guide	This command is used to show access-node-id configured by user.	
Example	<p>Show access-node-id configuration information. Switch#pppoe intermediate-agent access-node-id abcd Switch#show pppoe intermediate-agent access-node-id pppoe intermediate-agent access-node-id is : abcd</p>	

show pppoe intermediate-agent identifier-string option delimiter

Command	show pppoe intermediate-agent identifier-string option delimiter	
Parameter	none	none
Default	By default,the configuration information is null.	
Mode	Admin mode	
Usage Guide	Show the configured identifier-string, the combo format and delimiter of slot, port and vlan.	
Example	Show the configuration information for pppoe intermediate-agent	

	<p>identifier-string.</p> <p>Switch#pppoe intermediate-agent identifier-string abcd option spv delimiter # delimiter /</p> <p>Switch# show pppoe intermediate-agent identifier-string option delimiter config identifier string is : abcd config option is : slot , port and vlan the first delimiter is : "# " the second delimiter is : "/" "</p>
--	---

show pppoe intermediate-agent info

Command	show pppoe intermediate-agent info [interface ethernet <interface-name>]	
Parameter	interface-name	port name
Default	By default,the configuration information is null.	
Mode	Admin mode	
Usage Guide	<p>Show the related PPPoE IA configuration information of all ports or the specified port.</p> <p>Check the configuration information of the corresponding port, show whether the port is trust port, strip function is enabled, rate limit is enabled, show the configured circuit ID and remote ID.</p>	
Example	<p>Show pppoe intermediate-agent configuration information of port ethernet1/0/2.</p> <pre>Switch# show pppoe intermediate-agent info interface ethernet 1/0/2 Interface IA Trusted vendor Strip Rate limit circuit id remote id ----- - Ethernet1/0/2 yes no no no no test1/port1 host1</pre>	

10.13 Commands for VLAN-ACL

clear vacl statistic vlan

Command	clear vacl [in out] statistic vlan [<1-4094>]	
Parameter	in out	Clear the traffic statistic of the ingress/egress
	1-4094	The VLAN which needs to clear the VACL statistic information. If do not input VLAN ID, then clear all VLAN statistic information
Default	None.	
Mode	Admin mode	
Usage Guide	This command can clear the statistic information of VACL.	

Example	Clear VACL statistic information of Vlan1. Switch#clear vACL statistic vlan 1
---------	--

show vACL vlan

Command	show vACL [in out] vlan [<1-4094>] [begin include exclude <regular-expression>]	
Parameter	in out	Show ingress/egress configuration and statistic
	1-4094	The VLAN which needs to show the configuration and the statistic information of VACL. If do not input VLAN ID, then show VACL configuration and statistic information of all VLANs.
	begin include exclude <regular-expression>	<p>the regular expression</p> <p>. match any characters except the line feed character</p> <p>^ match the beginning of the row</p> <p>\$ match the end of the row</p> <p> match the character string at the left or right of upright line</p> <p>[0-9] match the number 0 to the number 9</p> <p>z] match the lowercase a to z</p> <p>[aeiou] match any letter in "aeiou"</p> <p>\ Escape Character is used to match the intervocalic character, for example, \\$ will match the \$ character, but it is not match the end of the character string</p> <p>\w match the letter, the number or the underline</p> <p>\b match the beginning or the end of the words</p> <p>\W match any characters which are not alphabet letter, number and underline</p> <p>\B match the locations which are not the begin or end of the word</p> <p>[^x] match any characters except x</p> <p>[^aeiou] match any characters except including aeiou letters</p> <p>* repeat zero time or many times</p> <p>+ repeat one time or many times</p> <p>(n) repeat n times</p> <p>(n,) repeat n or more times</p> <p>(n, m) repeat n to m times</p>

		At present, the regular expression used does not support the following syntaxes: \s match the blank character \d match the number \S match any characters except blank character \D match non-number character ? repeat zero time or one time
Default	None.	
Mode	Admin Mode	
Usage Guide	This command shows the configuration and the statistic information of VACL.	
Example	Show vlan2 VACL statistics. Switch (config)#show vacl vlan 2 Vlan 2: IP Ingress access-list used is 100, traffic-statistics Disable.	

vacl ip access-group

Command	vacl ip access-group {<1-299> WORD} {in out} [traffic-statistic] vlan WORD no vacl ip access-group {<1-299> WORD} {in out} vlan WORD	
Parameter	<1-299> WORD	Configure the numeric IP ACL (include: standard ACL rule <1-99>, extended ACL rule <100-299>) or the named ACL.
	in out	Filter the ingress/egress traffic
	traffic-statistic	Enable the statistic of matched packets number
	vlan WORD	The VLAN will be bound to VACL
Default	None	
Mode	Global Mode	
Usage Guide	This command configure VACL of IP type on the specific VLAN. Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering is not supported by switch. The no command unconfigured.	
Example	Configure the numeric IP ACL and enable the statistic function for Vlan 1-5,6,7-9. Switch(config)#vacl ip access-group 1 in traffic-statistic vlan 1-5; 6; 7-9	

vacl ipv6 access-group

Command	vacl ipv6 access-group (<500-699> WORD) {in } (traffic-statistic) vlan WORD
---------	--

	no ipv6 access-group {<500-699> WORD} {in } vlan WORD	
Parameter	<500-699> WORD	Configure the IPv6 numeric standard ACL or IPV6 standard ACL rule.
	in out	Filter inlet/ outlet flow
	traffic-statistic	Enable the statistic of matched packets number
	vlan WORD	The VLAN will be bound to VACL.
Default	None.	
Mode	Global Mode	
Usage Guide	<p>This command configure VACL of IPv6 on the specific VLAN. Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering and extended IPv6 is not supported by switch. The no command unconfigured.</p>	
Example	<p>Configure the numeric IPv6 ACL for Vlan 5. Switch(config)#vacl ipv6 access-group 600 in traffic-statistic vlan 5</p>	

vacl mac access-group

Command	vacl mac access-group {<700-1199> WORD} {in } [traffic-statistic] vlan WORD no vacl mac access-group {<700-1199> WORD} {in } vlan WORD	
Parameter	<700-1199> WORD	Configure the numeric IP ACL (include: <700-799> MAC standard access list, <1100-1199> MAC extended access list) or the named ACL
	in	Filter the ingress traffic
	traffic-statistic	Enable the statistic of matched packets number
	vlan WORD	The VLAN will be bound to VACL
Default	None.	
Mode	Global Mode	
Usage Guide	<p>This command configure VACL of MAC type on the specific VLAN. Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering is not supported by switch. The no command unconfigured.</p>	
Example	<p>Configure the numeric MAC ACL for Vlan 1-5 Switch(config)#vacl mac access-group 700 in traffic-statistic vlan 1-5</p>	

vacl mac-ip access-group

Command	vacl mac-ip access-group {<3100-3299> WORD} {in } [traffic-statistic] vlan WORD no vacl mac-ip access-group {<3100-3299> WORD} {in } vlan WORD	
---------	---	--

Parameter	<3100-3299> WORD	Configure the numeric MAC-IP ACL or the named ACL
	in	Filter the ingress traffic
	traffic-statistic	Enable the statistic of matched packets number
	vlan WORD	The VLAN will be bound to VACL.
Default	None.	
Mode	Global mode	
Usage Guide	<p>This command configure VACL of MAC-IP type on the specific VLAN. Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering is not supported by switch.</p> <p>The no command unconfigured.</p>	
Example	<p>Configure the numeric MAC-IP ACL for Vlan 1, 2, 5.</p> <pre>Switch(config)#vacl mac-ip access-group 3100 in traffic-statistic vlan 1;2;5</pre>	

10.14 Commands for SAVI

ipv6 cps prefix

Command	<pre>ipv6 cps prefix <ipv6-address> vlan <vid></pre> <pre>no ipv6 cps prefix<ipv6-address></pre>	
Parameter	ipv6-address	the address prefix of link, like 2001::/64
	vid	vlan ID of the current link
Default	None.	
Mode	Global Mode	
Usage Guide	<p>Configure IPv6 address prefix of the link manually.</p> <p>Users should configure local address prefix: fe80::/64 of the link before enable the function of matching address prefix of the link, it accepts the packets of which source addresses are the local addresses of the link.</p> <p>The no command deletes IPv6 address prefix.</p>	
Example	<p>Configure IPv6 address prefix of the link manually is 2001::/64.</p> <pre>Switch(config)#ipv6 cps prefix 2001::/64</pre>	

ipv6 cps prefix check enable

Command	[no] ipv6 cps prefix check enable	
Parameter	none	none
Default	By default,disable SAVI address prefix check function.	

Mode	Global Mode
Usage Guide	<p>Enable SAVI address prefix check function.</p> <p>After enable the prefix check function, if the IPv6 address prefix of the packets does not accord with the link prefix, then do not establish the corresponding IPv6 address binding. If users enable the matched address prefix of the link, configure the local address prefix of fe80::/64 first to accept the packets with the source address as local link address. Disable address prefix check function by default.</p> <p>The no command will disable this function.</p>
Example	<p>Enable SAVI address prefix check function.</p> <p>Switch(config)#ipv6 cps prefix check enable</p>

ipv6 dhcp snooping trust

Command	[no] ipv6 dhcp snooping trust	
Parameter	none	none
Default	By default, this function is disabled.	
Mode	Port Mode	
Usage Guide	<p>Configure the port as dhcpv6 trust port, it does not establish dynamic DHCPv6 binding again and allows all DHCPv6 protocol packets to pass.</p> <p>Set the port as dhcpv6 trust attribute, enable uplink port of the switch with SAVI function for connecting dhcpv6 server or dhcpv6 relay generally.</p> <p>no command deletes the port trust function.</p>	
Example	<p>Set ethernet1/0/1 to be DHCP trust port.</p> <p>Switch(config)#interface ethernet1/0/1</p> <p>Switch(config-if-ethernet1/0/1)#ipv6 dhcp snooping trust</p>	

ipv6 nd snooping trust

Command	[no] ipv6 nd snooping trust	
Parameter	none	none
Default	By default, this function is disabled.	
Mode	Port Mode	
Usage Guide	<p>Configure the port as slaac trust and RA trust port, this port will not establish dynamic slaac binding anymore and forwards RA packets.</p> <p>If the port disables ipv6 nd snooping trust function, it is considered to untrust RA packets port and discards all RA packets. Setting the port as trust attribute, enable the uplink port of the switch with SAVI or the conjoint port between switches with SAVI generally.</p> <p>The no command deletes the port trust function.</p>	
Example	<p>Set the port ethernet1/0/1 to be nd trust port.</p>	

	Switch(config)#interface ethernet1/0/1 Switch(config-if-ethernet1/0/1)#ipv6 nd snooping trust
--	--

savi check binding

Command	savi check binding <simple probe> mode no savi check binding mode	
Parameter	simple	only check the port state for conflict binding, if the state is up,keep the conflict binding and do not set new binding. If the state is down, delete the conflict binding to set a new one
	probe	besides checking the port state for conflict binding, it will send NS packets to probe the usability of the corresponding user when the port state is up. If receiving the responded NA packets from users, it will keep the current conflict binding and does not set new binding, otherwise delete the conflict binding to set new one
Default	Disable the conflict binding check mode by default. It will adopt the mode that delete the conflict binding directly to set new one.	
Mode	Global Mode	
Usage Guide	Configure the check mode for conflict binding. It is recommended to configure probe mode to prevent the attack that the spurious address conflict binding deletes the legal user binding. The no command deletes the check mode.	
Example	Configure the conflict binding check mode to probe mode. Switch(config)#savi check binding probe mode	

savi enable

Command	[no] savi enable	
Parameter	none	none
Default	By default,disable the global SAVI function.	
Mode	Global Mode	
Usage Guide	Enable the global SAVI function. Command configuration can be processed for SAVI function after enabling the global SAVI function. Because SAVI function has already contained security RA function, global SAVI function and security RA function are mutually exclusive in the global mode. The no command disables this global function.	
Example	Enable SAVI function. Switch(config)#savi enable	

savi ipv6 binding num

Command	savi ipv6 binding num <limit-num> no savi ipv6 binding num	
Parameter	limit-num	set the range from 0 to 65535
Default	The default value of the port binding number is 65535.	
Mode	Port Mode	
Usage Guide	Configure the number of the corresponding binding with the port. The configured binding number only include the dynamic binding type of slaac, dhcp. If the binding sum exceeds the configured number, this port does not create new dynamic binding any more, if the configured number is 0, this port does not create any dynamic binding. The no command restores the default value.	
Example	Configure the binding number to be 100 for port ethernet1/0/1. Switch(config)#interface ethernet1/0/1 Switch(config-if-ethernet1/0/1)# savi ipv6 binding num 100	

savi ipv6 check source binding

Command	savi ipv6 check source binding ip <ip-address> mac <mac-address> interface <if-name> {type [slaac dhcp] lifetime <lifetime> type static} no savi ipv6 check source binding ip <ip-address> interface <if-name>	
Parameter	ip-address	the unicast IPv6 address, including local link and global unicast address
	mac-address	the mac address of Ethernet
	if-name	the port name, like interface ethernet 1/0/1
	slaac dhcp	slaac means create the dynamic binding for slaac type, dhcp means create the dynamic binding for dhcp type
	lifetime	configure the lifetime period for the dynamic binding, the unit is second
	static	create the binding of the static type
Default	None.	
Mode	Global Mode	
Usage Guide	Configure the static or dynamic binding function manually。 After the dynamic binding configured by handwork is overtime, the corresponding binding will be deleted but the configuration is still be kept, so the binding still be shown. If the binding needs to take effect	

	<p>again, it should delete it first and configure a new binding again.</p> <p>When the binding type is static type, do not configure lifetime period, the lifetime period is infinite.</p> <p>The no command deletes the configured binding.</p>
Example	<p>Configure the dynamic binding of slaac type for SAVI manually.</p> <pre>Switch(config)#savi ipv6 check source binding ip 2001::10 mac 00-25-64-BB-8F-04</pre> <p>Interface ethernet1/0/1 type slaac lifetime 2010</p> <p>Configure the static binding for SAVI manually.</p> <pre>Switch(config)#savi ipv6 check source binding ip 2001::20 mac 00-25-64-BB-8F-04</pre> <p>Interface ethernet1/0/1 type static</p>

savi ipv6 check source ip-address mac-address

Command	savi ipv6 check source [ip-address mac-address ip-address mac-address] no savi ipv6 check source	
Parameter	none	none
Default	By default,disable the control filtering function of the port.	
Mode	Port Mode	
Usage Guide	Enable the control authentication function for the packets of the port. The global SAVI function must be enabled before configuring this command. The no command disables this function.	
Example	Enable the control filtering function of the packets on port ethernet1/0/1. <pre>Switch(config)#interface ethernet1/0/1</pre> <pre>Switch(config-if-ethernet1/0/1)# savi ipv6 check source ip-address mac-address</pre>	

savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable

Command	[no] savi ipv6 {dhcp-only slaac-only dhcp-slaac} enable	
Parameter	dhcp-only	dhcp-only application scene
	slaac-only	slaac-only application scene
	dhcp-slaac	combination application scene of dhcp-only and slaac-only
Default	By default,disable SAVI application scene.	
Mode	Global Mode	
Usage Guide	Enable SAVI application scene function. dhcp-only application scene only detects DHCPv6 packets and DAD NS	

	<p>packets of link-local ipv6 address to be IPv6 address with target field, it does not detect</p> <p>DAD NS packets of non-link-local address. slaac-only application scene detects DAD NS packets of all types. dhcp-slaac combination application scene detects all DHCPv6 and DAD NS packets. Disable all kinds of application scene detection function for SAVI by default.</p> <p>The no command disables the function.</p>
Example	<p>Enable the specified dhcp-only application scene for SAVI.</p> <p>Switch(config)#savi ipv6 dhcp-only enable</p>

savi ipv6 mac-binding-limit

Command	<p>savi ipv6 mac-binding-limit <limit-num></p> <p>no savi ipv6 mac-binding-limit</p>	
Parameter	limit-num	set the ranging from 1 to 10, the default dynamic binding number is 32 for the same MAC address
Default	The default dynamic binding number is 32 for the same MAC address.	
Mode	Global Mode	
Usage Guide	<p>Configure the dynamic binding number of the same MAC address.</p> <p>This command is used to prevent the exhaust attack of the dynamic binding entry for SAVI.</p> <p>The no command restores the default value.</p>	
Example	<p>Set the dynamic binding number to be 5 for the same MAC address.</p> <p>Switch(config)#isavi ipv6 mac-binding-limit 5</p>	

savi max-dad-dalay

Command	<p>savi max-dad-delay <max-dad-delay></p> <p>no savi max-dad-delay</p>	
Parameter	max-dad-delay	set the ranging between 1 and 65535 seconds, its default value is 1 second
Default	Its default value is 1 second.	
Mode	Global Mode	
Usage Guide	<p>Configure the dynamic binding at DETECTION state and send lifetime period of DAD NS packet detection.</p> <p>It is recommended to use the default value.</p> <p>The no command restores the default value.</p>	
Example	<p>Set the detection lifetime as 2 seconds.</p> <p>Switch(config)#savi max-dad-delay 2</p>	

savi max-dad-prepare-delay

Command	savi max-dad-prepare-delay <max-dad-prepare-delay>
---------	--

	no savi max-dad-prepare-delay	
Parameter	max-dad-prepare-delay	set the ranging between 1 and 65535 seconds, its default value is 1 second
Default	Its default value is 1 second.	
Mode	Global Mode	
Usage Guide	Configure lifetime period of redetection for the dynamic binding. It is recommended to user the default value. The no command restores the default value.	
Example	Set the redetection lifetime as 2 seconds. Switch(config)#savi max-dad-prepare-delay 2	

savi max-slaac-life

Command	savi max-slaac-life <max-slaac-life> no savi max-slaac-life	
Parameter	max-slaac-life	set the ranging between 1 and 31536000 seconds, its default value is 4 hours
Default	Its default value is 4 hours.	
Mode	Global Mode	
Usage Guide	Configure lifetime period of slaac dynamic binding at BOUND state. The no command restores the default value.	
Example	Configure lifetime period of slaac binding type as 2010 seconds at BOUND state. Switch(config)#savi max-slaac-life 2000	

savi timeout bind-protect

Command	savi timeout bind-protect <protect-time> no savi timeout bind-protect	
Parameter	protect-time	set the ranging between 1 and 300 seconds, its default value is 30 seconds
Default	Its default value is 30 seconds.	
Mode	Global Mode	
Usage Guide	Configure the bind-protect lifetime period for a port after its state from up to down. After the configured lifetime period is overtime, the port is still at down state, the binding of this port will be deleted. If the port state is changed from down to up state during the configured lifetime period, the binding of the port will reset it as lifetime period of BOUND state. If the configured parameter is 0 second, all binding of the port will be deleted immediately.	

	The no command restores the default value.
Example	Set bind-protect lifetime period to be 20 seconds. Switch(config)#savi timeout bind-protect 20

show savi ipv6 check source binding

Command	show savi ipv6 check source binding [interface<if-name>]																																																					
Parameter	if-name	port name such as interface ethernet 1/0/1																																																				
Default	None.																																																					
Mode	Admin Mode																																																					
Usage Guide	Show the global SAVI binding entry list.																																																					
Example	<p>Show the global binding state of SAVI. Switch(config)#show savi ipv6 check source binding Static binding count: 0 Dynamic binding count: 3 Binding count: 3</p> <table border="1"> <thead> <tr> <th>MAC</th> <th>IP</th> <th>VLAN</th> <th>Port</th> <th>Type</th> <th>State</th> </tr> </thead> <tbody> <tr> <td colspan="6">Expires</td> </tr> <tr> <td colspan="6">-----</td> </tr> <tr> <td>00-25-64-bb-8f-04 14370</td> <td>fe80::225:64ff:febb:8f04</td> <td>1</td> <td>Ethernet1/0/5</td> <td>slaac</td> <td>BOUND</td> </tr> <tr> <td>00-25-64-bb-8f-04 14370</td> <td>2001::13:1</td> <td>1</td> <td>Ethernet1/0/5</td> <td>slaac</td> <td>BOUND</td> </tr> <tr> <td>00-25-64-bb-8f-04 14370</td> <td>2001::10:1</td> <td>1</td> <td>Ethernet1/0/5</td> <td>slaac</td> <td>BOUND</td> </tr> <tr> <td colspan="6">-----</td> </tr> <tr> <td colspan="6">-----</td> </tr> </tbody> </table>						MAC	IP	VLAN	Port	Type	State	Expires						-----						00-25-64-bb-8f-04 14370	fe80::225:64ff:febb:8f04	1	Ethernet1/0/5	slaac	BOUND	00-25-64-bb-8f-04 14370	2001::13:1	1	Ethernet1/0/5	slaac	BOUND	00-25-64-bb-8f-04 14370	2001::10:1	1	Ethernet1/0/5	slaac	BOUND	-----						-----					
MAC	IP	VLAN	Port	Type	State																																																	
Expires																																																						

00-25-64-bb-8f-04 14370	fe80::225:64ff:febb:8f04	1	Ethernet1/0/5	slaac	BOUND																																																	
00-25-64-bb-8f-04 14370	2001::13:1	1	Ethernet1/0/5	slaac	BOUND																																																	
00-25-64-bb-8f-04 14370	2001::10:1	1	Ethernet1/0/5	slaac	BOUND																																																	

11.1.Commands for MRPP

control-vlan

Command	control-vlan <vid> no control-vlan	
parameter	vid	expresses control VLAN ID, the valid range is from 1 to 4094
default	-	
Mode	MRPP ring mode	
Usage Guide	The command specifies Virtual VLAN ID of MRPP ring, currently it can be any value in	

	<p>1-4094. To avoid confusion, it is recommended that the ID is non-configured VLAN ID, and the same to MRPP ring ID. In configuration of MRPP ring of the same MRPP loop switches, the control VLAN ID must be the same, otherwise the whole MRPP loop may not be able to work normally or form broadcast.</p> <p>The mrpp enable command must be start before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, the mrpp-ring function is enabled.</p>
Example	<p>Configure control VLAN of mrpp ring 4000 is 4000.</p> <pre>Switch(config)#mrpp ring 4000 Switch(mrpp-ring-4000)#control-vlan 4000</pre>

clear mrpp statistics

Command	clear mrpp statistics [<i><ring-id></i>]	
parameter	<i>ring-id</i>	is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it clears all of MRPP ring statistic information.
default	-	
Mode	Admin Mode.	
Usage Guide	Clears statistics for MRPP packets received and transmitted by the MRPP loop.	
Example	<p>Clear switch MRP P ring 4000 statistics.</p> <pre>Switch#clear mrpp statistics 4000</pre>	

Enable

Command	enable no enable
parameter	-
default	Default disable MRPP ring
Mode	MRPP ring mode
Usage Guide	This command is used to enable the configured MRPP ring , " no enable" command disables this enabled MRPP ring.
Example	<p>Configure MRPP ring 4000 of switch to primary node, and enable the MRPP ring.</p> <pre>Switch(config)#mrpp enable Switch(config)#mrpp ring 4000 Switch(mrpp-ring-4000)#control-vlan 4000 Switch(mrpp-ring-4000)# node-mode master Switch(mrpp-ring-4000)#fail-timer 18 Switch(mrpp-ring-4000)#hello-timer 6 Switch(mrpp-ring-4000)#enable Switch(mrpp-ring-4000)#exit Switch(config)#in ethernet1/0/1 Switch(config-If-Ethernet1/0/1)#mrpp ring 4000 primary-port Switch(config)#in ethernet 1/0/3 Switch(config-If-Ethernet1/0/3)#mrpp ring 4000 secondary-port</pre>

errp domain

Command	errp domain <domain-id> no errp domain <domain-id>	
parameter	domain-id	domain ID of ERRP, the range between 1 and 15.
default	Default Unconfigured ID	
Mode	Global mode	
Usage Guide	If domain ID of ERRP needs to be configured, the compatible mode of ERRP should be enabled firstly. When executing this command, it should create a new ERRP domain if there is no ERRP domain. However, the no command is used to delete the corresponding domain ID of ERRP.	
Example	Configure domain ID for ERRP globally. Switch(Config)#errp domain 1	

fail-timer

Command	fail-timer <timer> no fail-timer	
parameter	timer	valid range is from 1 to 300s.
default	Default configure timer interval 3s	
Mode	MRPP ring mode	
Usage Guide	If primary node of MRPP ring doesn't receives Hello packet from primary port of primary node on configured fail timer, the whole loop is fail. Transfer node of MRPP doesn't need this timer and configure. To avoid time delay by transfer node forwards Hello packet, the value of fail timer must be more than or equal to 3 times of Hello timer. On time delay loop, it needs to modify the default and increase the value to avoid primary node doesn't receive Hello packet on fail timer due to time delay.	
Example	Configure fail timer of MRPP ring 4000 to 10s. Switch(config)# mrpp ring 4000 Switch(mrpp-ring-4000)#fail-timer 10	

hello-timer

Command	hello-timer <timer> no hello-timer	
parameter	timer	valid range is from 1 to 100s.
default	Default configuration timer interval is 1s.	
Mode	MRPP ring mode	
Usage Guide	The primary node of MRPP ring continuously sends Hello packet on configured Hello timer interval, if secondary port of primary node can receive this packet in configured period; the whole loop is normal, otherwise fail. Transfer node of MRPP ring doesn't need this timer and configure.	
Example	Configure hello-timer of MRPP ring 4000 to 3 seconds. Switch(config)# mrpp ring 4000	

	Switch(mrpp-ring-4000)#hello-timer 3
--	--------------------------------------

mrpp eaps compatible

Command	mrpp eaps compatible no mrpp eaps compatible
parameter	-
default	Disable the compatible function of EAPS
Mode	Global mode
Usage Guide	If the compatible function of EAPS needs to be configured, MRPP protocol should be enabled firstly. When executing no mrpp eaps compatible command, it should ensure that the switch has enabled MRPP protocol.
Example	Enable the compatible function of EAPS globally Switch(Config)#mrpp enable Switch(Config)#mrpp eaps compatible

mrpp enable

Command	mrpp enable no mrpp enable
parameter	-
default	The system doesn't enable MRPP protocol module
Mode	Global Mode
Usage Guide	If it needs to configure MRPP ring, it enables MRPP protocol. Executing "no mrpp enable" command, it ensures to disable the switch enabled MRPP ring.
Example	Globally enable MRPP. Switch(config)#mrpp enable

mrpp errp compatible

Command	mrpp errp compatible no mrpp errp compatible
parameter	-
default	Disable the compatible function of ERRP.
Mode	Global mode
Usage Guide	If the compatible function of ERRP needs to be configured, MRPP protocol should be enabled firstly. Furthermore, the port with ERRP compatible mode should be configured as hybrid or trunk mode and allow the packets with Control Vlan information.
Example	Enable the compatible function of ERRP globally. Switch(Config)#mrpp enable Switch(Config)#mrpp errp compatible

	<pre>Switch(Config)#mrpp ring 2 Switch(mrpp-ring-2)#control-vlan 4000 Switch(config-if-ethernet1/51)#switchport mode hybrid Switch(config-if-ethernet1/51)#switchport hybrid allowed vlan 4000 tag Switch(config-if-ethernet1/52)#switchport mode hybrid Switch(config-if-ethernet1/52)#switchport hybrid allowed vlan 4000 tag</pre>
--	---

mrpp poll-time

Command	mrpp poll-time <20-2000>	
parameter	<20-2000>	Enquiry Time, Unit: ms
default	Default configuration ms 100	
Mode	Global mode.	
Usage Guide	Configure the query time to adjust the query interval of MRPP, the default interval is 100ms.	
Example	Set the query time as 200ms. Switch(Config)# mrpp poll-time 200	

mrpp ring

Command	mrpp ring <ring-id> no mrpp ring <ring-id>	
parameter	ring-id	is MRPP ring ID, the valid range is from 1 to 4096
default	Default does not configure ring id	
Mode	Global mode	
Usage Guide	If this MRPP ring doesn't exist it create new MRPP ring when executing the command, and then it enter MRPP ring mode. It needs to ensure disable this MRPP ring when executing the "no mrpp ring" command.	
Example	Create a mrpp ring 100. Switch(config)#mrpp ring 100	

mrpp ring primary-port

Command	mrpp ring <ring-id> primary-port {cos <cos> } no mrpp ring <ring-id> primary-port	
parameter	ring-id	is the ID of MRPP ring; range is <1-4096>.
	cos <cos>	is the cos value in the packet head; range is <0-7>
default	There is no configuration and the cos value is 0 as default.	
Mode	Port mode	
Usage Guide	The command specifies MRPP ring primary port. Primary node uses primary port to	

	send Hello packet, secondary port is used to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node.
Example	Configure the primary of MRPP ring 4000 to Ethernet 1/0/1 Switch(Config)#interface ethernet 1/0/1 Switch(config-If-Ethernet1/0/1)#mrpp ring 4000 primary-port

mrpp ring secondary-port

Command	mrpp ring < ring-id > secondary-port {cos <cos>} no mrpp ring < ring-id > secondary-port	
parameter	ring-id	is the ID of MRPP ring; range is <1-4096>.
	cos <cos>	is the cos value in the packet head; range is <0-7>.
default	There is no configuration and the cos value is 0 as default	
Mode	Port mode	
Usage Guide	The command specifies secondary port of MRPP ring. The primary node uses secondary port to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node. The mrpp enable command must be enabled before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, then the mrpp-ring function is enabled.	
Example	Configure secondary port of MRPP ring to 1/0/3. Switch(config)#interface ethernet1/0/3 Switch(Config-If-Ethernet1/0/3)#mrpp ring 4000 secondary-port	

node-mode

Command	node-mode {maser transit}	
parameter	-	
default	Default the node mode is secondary node.	
Mode	MRPP ring mode	
Usage Guide	This command configures the node type as the primary or secondary node.	
Example	Configure the switch to primary node. MRPP ring 4000. Switch(config)# mrpp ring 4000 Switch(mrpp-ring-4000)#node-mode master	

show mrpp

Command	show mrpp [<ring-id>]	
parameter	ring-id	is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it display all of MRPP ring configuration.
	default	-
Mode	Admin and Configuration Mode	

Usage Guide	This command is used to view the MRPP ring configuration.
Example	Display configuration of MRPP ring 4000 of switch Switch# show mrpp 4000

show mrpp statistics

Command	show mrpp statistics [<ring-id>]	
parameter	ring-id	is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it displays all of MRPP ring statistic information.
default	-	
Mode	Admin and Configuration Mode.	
Usage Guide	This command is used to display the statistics of the MRPP loop receiving and transmitting packets.	
Example	Display statistic information of MRPP ring 4000 of switch. Switch# show mrpp statistic 4000	

11.2.Commands for ULPP

clear ulpp flush counter interface

Command	clear ulpp flush counter interface <name>	
parameter	name	is the name of the port
default	-	
Mode	Admin mode	
Usage Guide	Clear the statistics of the packets.	
Example	Clear the statistic information of the flush packets for the port1/0/1 Switch#clear ulpp flush counter interface e1/0/1	

control vlan

Command	control vlan <integer> no control vlan	
parameter	integer	is the control VLAN ID that sends the flush packets, range from 1 to 4094.
default	The default is VLAN 1	
Mode	ULPP group configuration mode.	
Usage Guide	Configure the control VLAN of ULPP group. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted. It must belong to the VLAN	

	protected by ULPP group to avoid flush packets loopback.
Example	Configure the sending control VLAN of ULPP group as 10. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# control vlan 10

Description

Command	description <string> no description
parameter	string is the name of ULPP group, the max number of the characters is 128.
default	Do not configure ULPP name by default.
Mode	ULPP group configuration mode.
Usage Guide	Configure the description string for the ULPP group. Delete description no command.
Example	Configure the description of ULPP group as switch. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# description switch

flush {enable |disable} arp

Command	flush {enable disable} arp
parameter	-
default	By default, enable the sending function of the flush packets which are deleted by ARP.
Mode	ULPP group configuration mode.
Usage Guide	If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the entries of ARP.
Example	Disable sending the flush packets of deleting ARP. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# flush disable arp

flush {enable |disable} mac

Command	flush {enable disable}mac
parameter	-
default	By default, enable sending the flush packets of updating MAC address.
Mode	ULPP group configuration mode.
Usage Guide	If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to update the MAC address table.
Example	Disable sending the flush packets of updating MAC address. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# flush disable mac

flush {enable |disable} mac-vlan

Command	flush {enable disable}mac-vlan
parameter	-
default	Disable.
Mode	ULPP group configuration mode
Usage Guide	If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the dynamic unicast mac according to vlan.
Example	Disable sending the flush packets deleted by mac-vlan. Switch(config)#ulpp group 1 Switch(ulpp-group-1)#flush disable mac-vlan

preemption delay

Command	preemption delay <integer> no preemption delay
parameter	<i>integer</i> the preemption delay, range from 1 to 600, in second.
default	The default preemption delay is 30.
Mode	ULPP group configuration mode.
Usage Guide	The preemption delay is the delay time before the master port is preempted as the forwarding state, for avoiding the link oscillation in a short time. After the preemption mode is enabled, the preemption delay takes effect.
Example	Configure the preemption delay as 50s for ULPP group. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# preemption delay 50

preemption mode

Command	preemption mode no preemption mode
parameter	-
default	Do not preempt.
Mode	ULPP group configuration mode.
Usage Guide	If the preemption mode configured by ULPP group, and the slave port is in forwarding state, and the master port is in the standby state, the master port will turn into the forwarding state and the slave port turn into the standby state after the preemption delay.
Example	Configure the preemption mode of ULPP group. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# preemption mode

protect vlan-reference-instance

Command	protect vlan-reference-instance <instance-list>
---------	---

	no protect vlan-reference-instance <instance-list>	
parameter	instance-list	is MSTP instance list, such as: i; j-k. The number of the instances is not limited in the list.
default	Do not protect any VLANs by default that means any instances are not quoted.	
Mode	ULPP group configuration mode.	
Usage Guide	Quote the instances of MSTP to protect the VLANs. The VLAN corresponds to this instance is at the forwarding state on one port of this group, and at the blocked state on another port of this group. Each ULPP group can quotes all instances of MSTP. And it can quotes the inexistent MSTP instances that means any VLANs are not protected, the different ULPP groups can't quote the same instance.	
Example	Configure the protective VLAN quoted from instance 1 for ULPP group. Switch(config)# ulpp group 20 Switch(ulpp-group-20)# protect vlan-reference-instance 1	

show ulpp flush counter interface

Command	show ulpp flush counter interface {ethernet <IFNAME> <IFNAME>}	
parameter	IFNAME	is the name of the ports.
default	-	
Mode	Admin mode.	
Usage Guide	Show the statistic information of the flush packets, such as: the information of the flush packets number which has been received, the time information that receive the flush packets finally.	
Example	Show the statistic information of the flush packets for ULPP group1. Switch# show ulpp flush counter interface e1/0/1 Received flush packets: 10	

show ulpp flush-receive-port

Command	show ulpp flush-receive-port	
parameter	-	
default	-	
Mode	Admin mode.	
Usage Guide	displays the port that receives the flush packet, flush type, and control VLAN.	
Example	Show the information that the port receives flush packets. Switch# show ulpp flush-receive-port ULPP flush-receive portlist: Portname Type Control Vlan ----- Ethernet1/0/1 ARP 1 Ethernet1/0/3 MAC 1;3;5-10	

show ulpp group

Command	show ulpp group [group-id]	
parameter	group-id	Show the information of the specific ULPP group
default	By default, show the information of all ULPP groups which have been configured	
Mode	Admin mode.	
Usage Guide	Show the configuration information of ULPP groups which have been configured, such as: the state of the master port and the slave port, the preemption mode, the preemption delay, etc.	
Example	<p>Show the configuration information of ULPP group1.</p> <pre>Switch# show ulpp group 1 ULPP flush-receive portlist: Portname Type Control Vlan ----- ----- Switch#show ulpp group 20 ULPP group 20 information: Description: switch Preemption mode: ON Preemption delay: 50s Control VLAN: 10 Flush packet: NONE Protected VLAN: Reference Instance 1 Member Role State Track-cfm-level -----</pre>	

ulpp control vlan

Command	ulpp control vlan <vlan-list> no ulpp control vlan <vlan-list>	
parameter	vlan-list	specify the control VLAN list that receives the flush packets, such as: i; j-k. The number of VLANs in Each character string cannot exceed 100. The receiving control VLAN of the port can be added.
default	The default is VLAN 1.	
Mode	Port mode	
Usage Guide	Configure the receiving control VLAN for the port. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted.	
Example	<p>Configure the receiving control VLAN as 10</p> <pre>Switch(config)# interface ethernet 1/0/1 Switch(config-If-Ethernet1/0/1)# ulpp control vlan 10</pre>	

ulpp flush {enable|disable} arp

Command	ulpp flush {enable disable} arp
---------	---------------------------------

parameter	-
default	By default, disable receiving the flush packets of deleting ARP
Mode	Port mode.
Usage Guide	If this command is configured, then it will not receive the flush packets of deleting ARP.
Example	Disable receiving the flush packets of deleting ARP. Switch(config)# interface ethernet 1/0/1 Switch(config-If-Ethernet1/0/1)# ulpp flush disable arp

ulpp flush {enable|disable} mac

Command	ulpp flush {enable disable} mac
parameter	-
default	By default, disable receiving the flush packets of updating MAC address.
Mode	Port mode.
Usage Guide	If this command is configured, then it will not receive the flush packets of updating MAC address.
Example	Disable receiving the flush packets of updating MAC address. Switch(config)# interface ethernet 1/0/1 Switch(config-If-Ethernet1/0/1)# ulpp flush disable mac

ulpp flush {enable|disable} mac-vlan

Command	ulpp flush {enable disable} mac-vlan
parameter	-
default	Disable
Mode	Port mode.
Usage Guide	If enabling this function, forward the hardware of the flush packets with mac-vlan type received in port. It will not be analyzed.
Example	Disable receiving the flush packets deleted by mac-vlan of port. Switch(config)#interface e1/0/2 Switch(config-if-ethernet1/0/2)#ulpp flush disable mac-vlan

ulpp group

Command	ulpp group <integer> no ulpp group <integer>
parameter	<i>integer</i> is the ID of ULPP group, range from 1 to 48.
default	Any ULPP groups are not configured.
Mode	Global Mode.
Usage Guide	Create a ULPP group. If the group exists, enter the configuration mode of the ULPP group. no command delete ULPP group.
Example	Configure ulpp group 20 or enter the mode of ulpp group 20. Switch(config)# ulpp group 20

	Switch(ulpp-group-20)#
--	------------------------

ulpp group {master|slave}

Command	ulpp group <integer> {master slave} no ulpp group <integer> {master slave}	
parameter	integer	is the ID of ULPP group, range from 1 to 48.
default	There is no master port configured by default.	
Mode	Port mode	
Usage Guide	There is no sequence requirement for the master and slave port configuration in a group, but the protective VLANs must be configured before the member ports. Each group has only one master port, if the master port exists, then the configuration fail.	
Example	Configure the master port of ULPP group. Switch(config)# interface ethernet 1/0/2 Switch(config-If-Ethernet1/0/2)# ulpp group 20 slave	

11.3.Commands for ULSM

show ulsm group

Command	show ulsm group [group-id]	
parameter	group-id	the ID of ULSM group.
default	By default, show the information of all ULSM groups which have been configured	
Mode	Admin Mode	
Usage Guide	This command is used to display configuration information for ULSM groups.	
Example	Show the configuration information of ULSM group1. Switch# show ulsm group 1	

ulsm group

Command	ulsm group <group-id> no ulsm group <group-id>	
parameter	group-id	is the ID of ULSM group, range from 1 to 32.
default	There is no ULSM group configured by default.	
Mode	Global Mode.	
Usage Guide	This command is used to create a ULSM group. no command delete ULSM group.	
Example	Create ULSM group 10. Switch(config)# ulsm group 10	

ulsm group {uplink | downlink}

Command	ulsm group <group-id> {uplink downlink} no ulsm group <group-id>	
parameter	group-id	The ID of ULSM group, the range from 1 to 32.
	uplink	Configure the port as the uplink port
	downlink	Configure the port as the downlink port.
default	The port does not belong to any ULSM group	
Mode	Port Mode	
Usage Guide	Configure the uplink/downlink ports of ULSM group. Each ULSM group can configure 8 uplink ports and 16 downlink ports at most.	
Example	Configure port1/0/3 as the uplink port of ULSM group10. Switch(config)# interface ethernet 1/0/3 Switch(config-If-Ethernet1/0/3)# ulsm group 10 uplink	

12.1.Commands for Mirroring Configuration

monitor session source interface

Command	monitor session <session> source {interface <interface-list> cpu} {rx tx both} no monitor session <session> source {interface <interface-list> cpu}	
parameter	session	is the session number for the mirror. Currently only 1 is supported
	interface-list	is the list of source interfaces of the mirror which can be separated by "-" and ",".
	cpu	means the CPU on the board to be the source of the mirror for debugging. Datagram received by or sent by the CPU
	rx	means to filter the datagram received by the interface
	tx	for the datagram sent out
	both	means both of income and outcome datagram
default	Default does not match any mirror source port	
Mode	Global mode	
Usage Guide	This command is used to configure the source interfaces for the mirror. It is not restricted the source interface of the mirror on the switch. The source can be one interface, or can be multiple interfaces. Both of the income and outcome datagram can be mirrored, or they can be mirrored selectively. If no [rx tx both] is specified, both are made to be the default. When multiple interfaces are mirrored, the direction	

	of the mirror can be different, but they should be configured separately.
Example	Configure to mirror the datagram sent out by interface 1/0/1-4 and to mirror the datagram received by interface 1/0/5. Switch(config)#monitor session 1 source interface ethernet 1/0/1-4 tx Switch(config)#monitor session 1 source interface ethernet 1/0/5 rx

monitor session source interface access-list

Command	monitor session <session> source {interface <interface-list>} access-list <num> {rx tx both} no monitor session <session> source {interface <interface-list>} access-list <num>	
parameter	session	is the session number for the mirror. Currently only 1 is supported
	interface-list	is the list of source interfaces of the mirror which can be separated by '-' and ','
	num	is the number of the access list
	rx	means to filter the datagram received by the interface
	tx	for the datagram sent out
	both	means both of income and outcome datagram
default	Default not configure	
Mode	Global Mode	
Usage Guide	This command is used to configure the source interfaces for the mirror. It is not restricted the source interface of the mirror on the switch. The source can be one interface, or can be multiple interfaces. For flow mirror, only datagram received can be mirrored. The parameters can be rx, tx, both. The related access list should be prepared before this command is issued. For how to configure the access list, please refer to ACL configuration. The mirror can only be created after the destination interface of the corresponding session has been configured. In the moment, the command only IP ACL and MAC ACL	
Example	Configure the mirror interface 1/0/6 to filter with access list 120 in session 1. Switch(config)#monitor session 1 source interface 1/0/6 access-list 120 rx	

monitor session destination interface

Command	monitor session <session> destination interface <interface-number> no monitor session <session> destination interface <interface-number>	
parameter	session	is the session number of the mirror, which is currently limited to 1-4
	interface-number	is the destination interface of the mirror.
default	Default does not match mirror destination port	
Mode	Global mode	
Usage Guide	Only four destination mirror interface is supported on the switch. To be mentioned. The interface which is configured as the destination of the mirror should not be configured as the member of the interface trunk. And the maximum throughput of the interface is	

	recommended to be larger than the total throughput of the interfaces to be mirrored. If the destination is removed, the mirror path configured will be removed at the same time. And if the destination interface is reconfigured, the interface, CPU mirror path will be recovered. To be mentioned, the flow mirror can only be recovered after the destination of the interface is re-configured.
Example	Configure interface 1/0/7 as the destination of the mirror. Switch(config)#monitor session 1 destination interface ethernet 1/0/7

show monitor

Command	show monitor
parameter	-
default	-
Mode	Admin Mode
Usage Guide	This command is used to display the source and destination ports for the configured mirror sessions. For port mirroring, CPU mirroring, and flow mirroring, the mirror mode of the source can be displayed.
Example	View configuration information for the current image. Switch#show monitor

mirror sample rate

Command	monitor session <session> sample rate <num> no monitor session <session> sample rate	
parameter	session	is mirror session value, and it supports 1 to 4 at moment
	num	is sampled value, and ranges from 0 to 65535
default	Default Unconfigured Sampling Rate	
Mode	Global Mode	
Usage Guide	It represents how many packets mirror to destination port and it ranges from 0 to 65535, such as, when rate value equals 100, the first, 101, 201 packets can mirror destination port, when rate value equal 0, it does not configure sampling rate, the default is notconfigured sampling rate.	
Example	The sampling rate for configuring mirror session 1 is 100. switch(config)#monitor session 1 sample rate 100	

12.2.Commands for sFlow

sflow agent-address

Command	sflow agent-address <agent-address> no sflow agent-address	
parameter	agent-address	is the sample proxy IP address which is shown in dotted decimal notation
default	None default value	

Mode	Global Mode
Usage Guide	For configuring sflow proxy address,The proxy address is used to mark the sample proxy which is similar to OSPF or the Router ID in the BGP. However it is not necessary to make the sFlow sample proxy work properly.
Example	Sample the proxy address at global mode. switch (config)#sflow agent-address 192.168.1.200

sflow analyzer

Command	sflow analyzer sflowtrend no sflow analyzer sflowtrend
parameter	-
default	Do not configure
Mode	Global Mode
Usage Guide	This command is used to configure sFlow analyzer, no the command disables the analyzer,Configure this command when using sFlowTrend.
Example	Enable sFlow analyzer. Switch(config)#sflow analyzer sflowtrend

sflow counter-interval

Command	sflow counter-interval <interval-value> no sflow counter-interval
parameter	interval-value is the value of the interval with a valid range of 20~120 and shown in second.
default	No default value
Mode	Port Mode
Usage Guide	If no statistic sampling interval is configured, there will not be any statistic sampling on the interface.
Example	Set the statistic sampling interval on the interface e1/0/1 to 20 seconds. Switch(Config-If-Ethernet1/0/1)#sflow counter-interval 20

sflow data-len

Command	sflow data-len <length-value> no sflow data-len
parameter	length-value is the value of the length with a value range of 500-1470
default	The value is 1400 by default.
Mode	Port Mode
Usage Guide	For configuring sflow packet length.When combining several samples to a sFlow group to be sent, the length of the group excluding the MAC head and IP head parts should not exceed the configured value.
Example	Configure the max length of the sFlow packet data to 1000.

	switch (Config-If-Ethernet1/0/2)#sflow data-len 1000
--	--

sflow destination

Command	sflow destination <collector-address> [<collector-port>] no sflow destination	
parameter	collector-address	is the IP address of the analyzer, shown in dotted decimal notation
	collector-port	is the destination port of the sent sFlow packets.
default	The destination port of the sFlow packet is defaulted at 6343, and the analyzer has no default address.	
Mode	Global Mode and Port Mode.	
Usage Guide	If the analyzer address is configured at Port Mode, this IP address and port configured at Port Mode will be applied when sending the sample packet. Or else the address and port configured at global mode will be applied. The analyzer address should be configured to let the sFlow sample proxy work properly.	
Example	Configure the analyzer address and port at global mode. switch (config)#sflow destination 192.168.1.200 1025	

sflow header-len

Command	sflow header-len <length-value> no sflow header-len	
parameter	length-value	is the value of the length with a valid range of 32-256.
default	128 by default.	
Mode	Port Mode.	
Usage Guide	Configure the length of header packets copied in sFlow data sampling. no" form reduction default value for this command. If the packet sample can not be identified whether it is IPv4 or IPv6 when sent to the CPU, certain length of the head of the group has to be copied to the sFlow packet and sent out. The length of the copied content is configured by this command.	
Example	Configure the length of the packet data head copied in the sFlow data sampling to 50. Switch(Config-If-Ethernet1/0/2)#sflow header-len 50	

sflow priority

Command	sflow priority <priority-value> no sflow priority	
parameter	priority-value	is the priority value with a valid range of 0-3.
default	The default value is 0.	
Mode	Global Mode.	
Usage Guide	This command is used to set the priority of the sample message. When sample packet is	

	sent to the CPU, it is recommended not to assign high priority for the packet so that regular receiving and sending of other protocol packet will not be interfered. The higher the priority value is set, the higher its priority will be.
Example	Configure the priority when sFlow receives packet from the hardware at global mode. switch (config)#sflow priority 1

sflow rate

Command	sflow rate { input <input-rate> output <output-rate >} no sflow rate [input output]	
parameter	input-rate	is the rate of ingress group sampling, the valid range is 1000~16383500.
	output-rate	is the rate of egress group sampling, the valid range is 1000~16383500
default	No default value.	
Mode	Port Mode.	
Usage Guide	The traffic sampling will not be performed if the sampling rate is not configured on the port. And if the ingress group sampling rate is set to 10000, this indicates there will be one group be sampled every 10000 ingress groups.	
Example	Configure the ingress sample rate on port e1/0/1 to 10000 and the egress sample rate to 20000. Switch(Config-If-Ethernet1/0/1)#sflow rate input 10000 Switch(Config-If-Ethernet1/0/1)#sflow rate output 20000	

show sflow

Command	show sflow
parameter	-
default	-
Mode	All Modes.
Usage Guide	This command is used to acknowledge the operation state of sFlow.
Example	View sFlow configuration information. Switch#show sflow Sflow version 1.2 Agent address is 172.16.1.100 Collector address have not configured Collector port is 6343 Sampler priority is 2 Sflow DataSource: type 2, index 194(Ethernet1/0/2) Collector address is 192.168.1.200 Collector port is 6343 Counter interval is 0 Sample rate is input 0, output 0 Sample packet max len is 1400 Sample header max len is 50 Sample version is 4

	Display information	describe
	Sflow version 1.2	Indicates sFlow version 1.2
	Agent address is 172.16.1.100	sFlow agent address :172.16.1.1100
	Collector address have not configured	the sFlow global analyzer address is not configured
	Collector port is 6343	the sFlow global destination port is the defaulted 6343
	Sampler priority is 2	The priority of sFlow when receiving packets from the hardware is 2.
	Sflow DataSource: type 2, index 194(Ethernet1/0/1)	One sample proxy data source of the sFlow is the interface e1/0/1 and its type is 2 (Ethernet), the interface index is 194.
	Collector address is 192.168.1.200	The analyzer address of the sampling address of the E1/0/1 interface is 192.168.1.200
	Collector port is 6343	Default value of the port on E1/0/1 interface sampling proxy is 6343.
	Counter interval is 20	The statistic sampling interval on e1/0/1 interface is 20 seconds
	Sample rate is input 10000, output 0	The ingress traffic rate of e1/0/1 interface sampling proxy is 10000 and no egress traffic sampling will be erformed
	Sample packet max len is 1400	The length of the sFlow group data sent by the e1/0/1 interface should not exceed 1400 bytes.
	Sample header max len is 50	The length of the packet data head copied in the data sampling of the e1/0/1 interface sampling proxy is 50
	Sample version is 4	The datagram version of the sFlow group sent by the E1/0/1 interface sampling proxy is 4.

12.3.Commands for RSPAN Configuration

remote-span

Command	remote-span no remote-span
parameter	-
default	Not configured
Mode	VLAN Configuration Mode
Usage Guide	This command is used to configure the existing VLAN as RSPAN VLAN. Dedicated RSPAN VLAN should be configured before RSPAN can function. When configuring RSPAN VLAN, it should be made sure that specialized VLAN, such as the default VLAN, dynamic VLAN, private VLAN, multicast VLAN, and layer 3 interface enabled VLAN, should not be

	configured as RSPAN VLAN. If any existing sessions are still working when RSPAN is disabled, these sessions will be still working regardless the configuration change. However, if any layer 3 interface is configure in the VLAN after RSPAN is disable, the existing RSPAN session will be stopped.
Example	RSPAN VLAN. VLAN 5 configured. Switch(Config-Vlan5)#remote-span

monitor session remote vlan

Command	monitor session <session> remote vlan <vid> no monitor session <session> remote vlan	
parameter	session	session ID, range between 1~4
	vid	The id of RSPAN VLAN
default	Not configured	
Mode	Global Mode	
Usage Guide	To configure local mirror session to RSPAN. The VLAN id is the RSPAN VLAN. The mirrored data grams will be attached with RSPAN tags.	
Example	Configure the remote vlan of mirror session 1 to 5. Switch(config)#monitor session 1 remote vlan 5	

monitor session reflector-port

Command	monitor session <session> reflector-port <interface-number> no monitor session <session> reflector-port <interface-number>	
parameter	session	Session ID, range between 1~4
	interface-number	Interface number
default	Not configured	
Mode	Global Mode.	
Usage Guide	This command configures the reflector port for the destination of mirror data grams, and disables the MAC learning function of the specified port. The configuration of reflector port is to change the mode of the local port from the destination port mode to be the reflector mode. Hence, the configuration of reflector port and the destination port are exclusive. The no command is used to restore the reflector port to normal port. The source port, in access or trunk mode, should not be added to RSPAN VLAN. When the reflector port is configured as springboard of CPU TX direction mirroring, it must be configured as TRUNK port and allows the RSPAN VLAN data passing, the Native VLAN should not be configured as RSPAN VLAN. After configured RSPAN, the vlan tag will be added on the packet of the egress mirror. It will cause the abort error frame on the reflection port, so the default MTU value of the switch should be modified.	
Example	Configure port 1/0/5 as a reflection port. Switch(config)#monitor session 1 reflector-port ethernet1/0/5	

13.1 Commands for SNTP

clock timezone

Command	clock timezone WORD {add subtract} <0-23> [<0-59>] no clock timezone WORD	
Parameter	WORD	timezone name, the length should not exceed 16
	add subtract	the action of timezone
	<0-23>	the hour value
	<0-59>	the minute value
Default	None.	
Mode	Global Mode	
Usage Guide	This command configures timezone in global mode. The timezone name is invalid with the blank, the hour and minute value must be in the specific range. The no command deletes the configured timezone.	
Example	Configure the action as add for the eighth timezone globally. Switch(config)#clock timezone aaa add 8	

sntp polltime

Command	sntp polltime <interval> no sntp polltime	
Parameter	<interval>	is the interval value from 16 to 16284
Default	The default polltime is 64 seconds.	
Mode	Global Mode	
Usage Guide	Sets the interval for SNTP clients to send requests to NTP/SNTP. The no command cancels the polltime sets and restores the default setting.	
Example	Setting the client to send request to the server every 128 seconds. Switch(config)#sntp polltime128	

sntp server

Command	sntp server {<ip-address> <ipv6-address>} [source {vlan <vlan no> loopback <loopback no>}] [version <version_no>] no sntp server {<ip-address> <ipv6-address>} [source {vlan <vlan no> loopback <loopback no>}] [version <version_no>]	
Parameter	<ip-address>	IPv4 address of time server
	<ipv6-address>	IPv6 address of time server
	<vlan no>	Virtual LAN number, ranging from 1 to 4094
	<loopback no>	Loopback identifier, ranging from 1 to 1024

	<version_no>	Version number, ranging from 1 to 4, the default is 4
Default	By default,do not configure the time server.	
Mode	Global Mode	
Usage Guide	Enable the specified time server as clock source The no command deletes the specified time server.	
Example	Configure the time server address as 1.1.1.1, specify the interface of the source address as vlan1: Switch(config)#ntp server 1.1.1.1 source vlan 1	

show sntp

Command	show sntp	
Parameter	none	none
Default	None.	
Mode	Admin/Global mode	
Usage Guide	Displays current SNTP client configuration and server status.	
Example	Displaying current SNTP configuration. Switch(config)#show sntp	

13.2 Commands for NTP

ntp access-group

Command	ntp access-group server <acl> no ntp access-group server <acl>	
Parameter	<acl>	ACL number, range is from 1 to 99
Default	Not configure the access control of NTP Server by default.	
Mode	Global Mode	
Usage Guide	To configure/cancel the access control list of NTP Server. The no command delete configuration.	
Example	To configure access control list 2 on the switch. Switch(config)#ntp access-group server 2	

ntp authenticate

Command	ntp authenticate no ntp authenticate	
Parameter	none	none
Default	By default, NTP authentication is cancelled.	
Mode	Global Mode	

Usage Guide	To enable/cancel NTP authentication function. The no command cancel NTP authentication function.
Example	To enable NTP authentication function. Switch(config)#ntp authenticate

ntp authentication-key

Command	ntp authentication-key <key-id> md5 <value> no ntp authentication-key <key-id>	
Parameter	<key-id>	The id of key, range is from 1 to 4294967295
	<value>	The value of key, range between 1 to 16 of ascii code
Default	The authentication key of NTP authentication is not configured by default.	
Mode	Global Mode	
Usage Guide	To enable/cancel NTP authentication function, and defined NTP authentication key. The no command cancel NTP authentication function	
Example	To define the authentication key of NTP authentication, the key-id is 20, the md5 is abc. Switch(config)#ntp authentication-key 20 md5 abc	

ntp broadcast server count

Command	ntp broadcast server count <number> no ntp broadcast server count	
Parameter	<number>	the max number of broadcast servers, 1-100
Default	The default max number of broadcast servers is 50.	
Mode	Global Mode	
Usage Guide	Set the max number of broadcast or multicast servers supported by the NTP client. The no operation will cancel the configuration and restore the default value.	
Example	Configure the max number of broadcast servers is 70 on the switch. Switch(config)#ntp broadcast server count 70	

ntp disable

Command	ntp disable no ntp disable	
Parameter	none	none
Default	By default, NTP function are enabled on all ports.	
Mode	VLAN Configuration Mode	

Usage Guide	To disable/enable the NTP function on port. The no command disables the NTP function on the port.
Example	To disable the NTP function on vlan1 interface. Switch(config)# interface vlan 1 Switch(config-if-Vlan1)#ntp disable

ntp enable

Command	ntp enable ntp disable	
Parameter	none	none
Default	By default, global disable NTP function.	
Mode	Global Mode	
Usage Guide	To enable/disable NTP function globally. Disable command global disable NTP function.	
Example	Configure switch global enable NTP function. Switch(config)# ntp enable	

ntp ipv6 multicast client

Command	ntp ipv6 multicast client no ntp ipv6 multicast client	
Parameter	none	none
Default	By default,Interface does not receive IPv6 NTP multicast packets.	
Mode	VLAN Configuration mode	
Usage Guide	Configure the specified interface to receive IPv6 NTP multicast packets The no command will cancels the specified interface to receive IPv6 NTP multicast packets.	
Example	Enable the function for receiving IPv6 NTP multicast packets on vlan1 interface. Switch(config)# interface vlan 1 Switch(config-if-Vlan1)#ntp ipv6 multicast client	

ntp multicast client

Command	ntp multicast client no ntp multicast client	
Parameter	none	none
Default	By default,Interface does not receive NTP multicast packets.	
Mode	VLAN Configuration mode	
Usage Guide	Configure the specified interface to receive NTP multicast packets. The no command will cancels the specified interface to receive NTP multicast packets.	

Example	<p>Enable the function for receiving NTP multicast packets on vlan1 interface.</p> <pre>Switch(config)# interface vlan 1 Switch(config-if-Vlan1)#ntp multicast client</pre>
---------	---

ntp server

Command	<pre>ntp server {<ip-address> <ipv6-address>} [version <version_no>] [key <key-id>] no ntp server {<ip-address> <ipv6-address>}</pre>	
Parameter	<ip-address>	IPv4 address of time server
	<ipv6-address>	IPv6 address of time server
	<version_no>	The version number of server, range is from 1 to 4, default is 4
	<key-id>	The key id
Default	By default,disable。	
Mode	Global Mode	
Usage Guide	<p>To enable specified time server of time source.</p> <p>The no form of this command cancels the specified time server of time source.</p>	
Example	<p>To configure time server address as 1.1.1.1 on switch.</p> <pre>Switch(config)# ntp server 1.1.1.1</pre>	

ntp syn-interval

Command	<pre>ntp syn-interval <1-3600> no ntp syn-interval</pre>	
Parameter	<1-3600>	the request packet sending interval of ntp client as 1s-3600s
Default	By default,64s interval.	
Mode	Global Mode	
Usage Guide	<p>Configure the request packet sending interval of ntp client as 1s-3600s.</p> <p>For responding the risk of ntp adjusting the system time under the high latency network, ntp client will select the time information with the smallest latency for the system time synchronization after sent 8 ntp time requisitions. So at the default configuration, ntp client sends the requisition packet once every 64s, after 8 times, it will adjust the time. It means to adjust the system time every 8 minutes. If user wants to configure the interval, such as one hour, user should adjust the packet sending interval as 450(3600/8) s.</p> <p>The no command recovers to be the default value of 64s.</p>	
Example	<p>Configure to adjust the system time once an hour, and the packet sending time is 450s.</p>	

	Switch(config)# ntp syn-interval 450
--	--------------------------------------

ntp trusted-key

Command	ntp trusted-key <key-id> no ntp trusted-key <key-id>	
Parameter	<key-id>	The id of key, range is from 1 to 4294967295
Default	Trusted key is not configured by default.	
Mode	Global Mode	
Usage Guide	To configure the trusted key. The no command cancels the trusted key.	
Example	To configure the specified key 20 to trusted key. Switch(config)# ntp trusted-key 20	

show ntp status

Command	show ntp status	
Parameter	none	none
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	To display time synchronization status, include synchronized or not, layers, address of time source and so on.	
Example	Display time synchronization status. Switch(config)# show ntp status Clock status: synchronized Clock stratum: 3 Reference clock server: 1.1.1.2 Clock offset: 0.010 s Root delay: 0.012 ms Root dispersion: 0.000 ms Reference time: TUE JAN 03 01:27:24 2006	

show ntp session

Command	show ntp session [<ip-address> <ipv6-address>]	
Parameter	<ip-address>	The IPv4 address of some specifics configured time server
	<ipv6-address>	The IPv6 address of some specifics configured time server
Default	None.	
Mode	Admin/Global Mode	
Usage Guide	To display the information of all NTP session or one specific session, include server ID, server layer, and the local offset according to server. (The	

	symbol * means this server is the selected local time source)
Example	<p>To display the information of all NTP session.</p> <pre>Switch(config)# show ntp session server stream type rootdelay rootdispersion trustlevel * 1.1.1.2 2 unicast 0.010s 0.002s 10 2.2.2.2 3 unicast 0.005s 0.000s 10</pre>

13.3 Commands for Summer Time

clock summer-time absolute

Command	clock summer-time <word> absolute <HH:MM> <YYYY.MM.DD> <HH:MM> <YYYY.MM.DD> [<offset>] no clock summer-time	
Parameter	<word>	the time zone name of summer time
	<HH:MM>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)
	<YYYY.MM.DD>	the start date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)
	<HH:MM>	the end time, the format is hour (from 0 to 23):minute (from 0 to 59)
	<YYYY.MM.DD>	the end date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31)
	<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes
Default	By default,there is no summer time range.	
Mode	Global Mode	
Usage Guide	Configure summer time range, the time in this range is summer time. This command sets the absolute start and end time for summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time. Note: the end time should be bigger than the start time for configuring summer time. The no command deletes the configuration.	
Example	Configure the time range of summer time at 12:10 from april 6th to august 6th in 2010, offset value as 70 minutes, summer time is named as aaa.	

	Switch(config)#clock summer-time aaa absolute 12:10 2010.4.6 12:10 2010.8.6 70
--	--

clock summer-time recurring

Command	clock summer-time <word> recurring <HH:MM> <MM.DD> <HH:MM> <MM.DD> [<offset>] no clock summer-time	
Parameter	<word>	the time zone name of summer time
	<HH:MM>	the start time, the format is hour (from 0 to 23):minute (from 0 to 59)
	<MM.DD>	the start date, the format is month(from 1 to 12).date(from 1 to 31)
	<HH:MM>	the end time, the format is hour(from 0 to 23):minute(from 0 to 59)
	<MM.DD>	the end date, the format is month(from 1 to 12).date(from 1 to 31)
	<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.
Default	By default,there is no summer time range.	
Mode	Global Mode	
Usage Guide	<p>Configure the recurrent summer time range, the time in this range is summer time.</p> <p>This command sets the start and the end time for the recurrent summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time.</p> <p>There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports the summer time of southern hemisphere.</p> <p>The no command delete summer time configuration.</p>	
Example	<p>Configure the time range of summer time at 12:10 from april 6th to august 6th year after year, offset value as 70 minutes, summer time is named as aaa.</p> <pre>Switch(config)#clock summer-time aaa recurring 12:10 4.6 12:10 8.6 70</pre>	

clock summer-time recurring

Command	clock summer-time <word> recurring<HH:MM> <week> <day> <month>< HH:MM > <week> <day> <month> [<offset>] no clock summer-time	
Parameter	<word>	the time zone name of summer time
	<HH:MM>	the start time, the format is hour(from 0 to 23):minute(from 0 to 59)
	<week>	the week from 1 to 4, first or last
	<day>	the week value, the value as "Sun", "Mon", "Tue", "Wed", "Thu", "Fri", "Sat"
	<month>	the month, the value as "Jan", "Feb", "Mar", "Apr", "May", "Jun", "Jul", "Aug", "Sep", "Oct", "Nov", "Dec"
	<HH:MM>	the end time, the format is hour(from 0 to 23):minute(from 0 to 59)
	<week>	the week from 1 to 4, first or last
	<day>	the week value, the value as "Sun", "Mon", "Tue", "Wed", "Thu", "Fri", "Sat"
	<month>	the month, the value as "Jan", "Feb", "Mar", "Apr", "May", "Jun", "Jul", "Aug", "Sep", "Oct", "Nov", "Dec"
	<offset>	the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes
Default	By default,there is no summer time range.	
Mode	Global Mode	
Usage Guide	<p>Configure the recurrent summer time range, the time in this range is summer time.</p> <p>This command sets the start and end time for the recurrent summer time flexibly. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time.</p> <p>There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports summer time of southern hemisphere.</p> <p>The no command delete summer time configuration.</p>	
Example	<p>Configure summer time at 12:10 from the first Monday of april to the last Saturday of august year after year, offset value as 70 minutes, summer time is named as aaa.</p> <pre>Switch(config)#clock summer-time aaa recurring 12:10 1 mon apr 12:10 last sat aug 70</pre>	

14.1 SHOW

clear history all-users

Syntax	clear history all-users	
Parameter	none	
Default	none	
Mode	Admin mode	
Usage	Using this command can clear the command history of all users.	
Example	Switch#clear history all-users	

clear logging

Syntax	clear logging sdram	
Parameter	none	
Default	none	
Mode	Admin mode	
Usage	When the old information in the log buffer zone is no longer concerned, we can use this command to clear all the information.	
Example	Clear all information in the log buffer zone sdram. Switch#clear logging sdram	

history all-users max-length

Syntax	history all-users max-length <count>	
Parameter	<count>	the command history number can be saved, ranging from 100 to 1000
Default	The system can save 100 recent command history of all users at best by default	
Mode	Global mode	
Usage	using this command can set the max command history number	
Example	Switch#config Switch(config)#history all-users max-length 500	

logging

Syntax	logging { <ipv4-addr> <ipv6-addr> } [facility <local-number>] [level <severity>] no logging { <ipv4-addr> <ipv6-addr> } [facility <local-number>]	
Parameter	<ipv4-addr>	IPv4 address of the host
	<ipv6-addr>	IPv6 address of the host

	<local-number>	recording equipment of the host with a valid range of local0~local7, which is in accordance with the facility defined in the RFC3164
	<severity>	severity threshold of the log information severity level. The rule of the log information output is explained as follows: only those with a level equal to or higher than the threshold will be outputted. For detailed description on the severity please refer to the operation manual.
Default	No log information output to the log host by default. The default recorder of the log host is the local0; the default severity level is warnings.	
Mode	Global mode	
Usage	The command is used to configure the output channel of the log host. The “no” form of this command will disable the output at the log host output channel. Only when the log host is configured by the logging command, this command will be available. We can configure many IPv4 and IPv6 log hosts.	
Example	Send the log information with a severity level equal to or higher than warning to the log server with an IPv4 address of 100.100.100.5, and save to the log recording equipment local1. Switch#config Switch(config)#logging 100.100.100.5 facility local1 level warnings	

logging executed-commands

Syntax	logging executed-commands {enable disable}	
Parameter	none	
Default	Disable state.	
Mode	Global mode	
Usage	After enable this command, the commands executed by user at the console, telnet or ssh terminal will record the log, so it should be used with the logging LOGHOST command.	
Example	Enable the command and send the commands executed by user into log host (10.1.1.1) Switch#config Switch(config)#logging 10.1.1.1 Switch(config)#logging executed-commands enable	

logging loghost sequence-number

Syntax	logging loghost sequence-number no logging loghost sequence-number	
Parameter	none	
Default	Do not include the sequence-number.	
Mode	Global mode	
Usage	Add the loghost sequence-number for the log; the no command does not include the	

	loghost sequence-number. Use logging command to configure the loghost before this command is set.
Example	Open the loghost sequence-number Switch#config Switch(config) #logging loghost sequence-number

logging source-ip

Syntax	logging source-ip { <A.B.C.D> <X:X::X:X> }	
Parameter	<ipv4-addr>	IPv4 address of the host
	<ipv6-addr>	IPv6 address of the host
Default	None0000	
Mode	Global mode	
Usage	Appoint the source IP address of the log packet which is sent to the log server, the ipv4 or ipv6 addresses can be configured. After configured this command, the log information sent to the server has the IP address; if this command is not configured, the log information does not have the IP address.	
Example	Configure the source IP address of the log packet which is sent to the log server. Switch#config Switch(config)#logging source-ip 2010::10	

Ping

Syntax	ping [[src <source-address>] { <destination-address> host <hostname> }]	
Parameter	<source-address>	<source-address> is the source IP address where the ping command is issued, with IP address in dotted decimal format.
	<destination-address>	<destination-address> is the target IP address of the ping command, with IP address in dotted decimal format
	<hostname>	<hostname> is the target host name of the ping command, which should not exceed 64 characters.
Default	5 ICMP echo requests will be sent. The default packet size and time out is 56 bytes and 2 seconds.	
Mode	Admin mode	
Usage	Issue ICMP request to remote devices, check whether the remote device can be reached by the switch. When the ping command is entered without any parameters, interactive configuration mode will be invoked. And ping parameters can be entered interactively.	
Example	Example 1: To ping with default parameters. Switch#ping 10.1.128.160 Type ^c to abort. Sending 5 56-byte ICMP Echos to 10.1.128.160, timeout is 2 seconds. Success rate is 40 percent (2/5), round-trip min/avg/max = 0/0/0 ms In the example above, the switch is made to ping the device at 10.1.128.160. The command did not receive ICMP reply packets for the first three ICMP echo requests	

within default 2 seconds timeout. The ping failed for the first three tries. However, the last two ping succeeded. So the success rate is 40%. It is denoted on the switch "." for ping failure which means unreachable link, while "!" for ping success, which means reachable link.

Example 2: Ping with parameters entered interactively.

Switch#ping

VRF name:

Use IP Address[y]: y

Target IP address: 10.1.128.160

Use source address option[n]: y

Source IP address: 10.1.128.161

Repeat count [5]: 100

Datagram size in byte [56]: 1000

Timeout in milli-seconds [2000]: 500

Extended commands [n]: n

Display Information	Explanation
VRF name	VRF name. If MPLS is not enabled, this field will be left empty.
Target IP address:	The IP address of the target device.
Use source address option[n]	Whether or not to use ping with source address.
Source IP address	To specify the source IP address for ping.
Repeat count [5]	Number of ping requests to be sent. The default value is 5.
Datagram size in byte [56]	The size of the ICMP echo requests, with default as 56 bytes.
Timeout in milli-seconds [2000]:	Timeout in milli-seconds, with default as 2 seconds.
Extended commands [n]:	Whether or to use other extended options.

ping6

Syntax	ping6 [<dst-ipv6-address> host <hostname> src <src-ipv6-address> {<dst-ipv6-address> host <hostname>}]	
Parameter	<dst-ipv6-address>	target IPv6 address of the ping command
	<src-ipv6-address>	source IPv6 address where the ping command is issued
	<hostname>	target host name of the ping command, which should not exceed 64 characters.
Default	Five ICMP6 echo request will be sent by default, with default size as 56 bytes, and default timeout to be 2 seconds.	
Mode	Admin mode	
Usage	To check whether the destination network can be reached. When the ping6 command is issued with only one IPv6 address, other parameters will be default. And when the ipv6 address is a local data link address, the name of VLAN	

interface should be specified. When the source IPv6 address is specified, the command will fill the icmp6 echo requests with the specified source address for ping.

Example

Example 1: To issue ping6 command with default parameters.
 Switch#ping6 2001:1:2::4
 Type ^c to abort.
 Sending 5 56-byte ICMP Echos to 2001:1:2::4, timeout is 2 seconds.
 Success rate is 100 percent (5/5), round-trip min/avg/max = 1/320/1600 ms

Example 2: To issue the ping6 command with parameters input interactively.
 Switch#ping6
 Target IPv6 address:fe80::2d0:59ff:feb8:3b27
 Output Interface: vlan1
 Use source address option[n]:y
 Source IPv6 address: fe80::203:fff:fe0b:16e3
 Repeat count [5]:
 Datagram size in byte [56]:
 Timeout in milli-seconds [2000]:
 Extended commands [n]:
 Type ^c to abort.
 Sending 5 56-byte ICMP Echos to fe80::2d0:59ff:feb8:3b27, using src address fe80::203:fff:fe0b:16e3, timeout is 2 seconds.
 Success rate is 100 percent (5/5), round-trip min/avg/max = 1/4/16 ms

Display Information	Explanation
ping6	The ping6 command
Target IPv6 address	The target IPv6 address of the command
Output Interface	The name of the VLAN interface, which should be specified when the target address is a local data link address.
Use source IPv6 address [n]:	Whether or not use source IPv6 address. Disabled by default.
Source IPv6 address	Source IPv6 address.
Repeat count[5]	Number of the ping packets.
Datagram size in byte[56]	Packet size of the ping command. 56 byte by default.
Timeout in milli-seconds[2000]	Timeout for ping command. 2 seconds by default.
Extended commands[n]	Extended configuration. Disabled by default.
!	The network is reachable.
.	The network is unreachable.
Success rate is 100 percent(8/8), round-trip min/avg/max = 1/1/1ms	Statistic information, success rate is 100 percent of ping packet.

show boot-files

Syntax	show boot-files
Parameter	none
Default	none
Mode	Admin and Configuration Mode.
Usage	Display the first and second IMG files and the CFG file enabled by switch. After implementing this command, the booting sequence of IMG files in the corresponding storage device, which IMG file is currently used in booting, the configuration information of the CFG file in the storage device and the CFG file currently booted.
Example	Display the first and second IMG files and the CFG file enabled by switch. Switch#show boot-files Booted files on switch The primary img file at the next boot time: flash:/nos.img The backup img file at the next boot time: flash:/nos.img Current booted img file: flash:/nos.img The startup-config file at the next boot time: flash:/startup.cfg Current booted startup-config file: flash:/startup.cfg If the CFG file of the next booting is set as NULL, the CFG part mentioned above will be displayed as follows: The startup-config file at the next boot time: NULL Current booted startup-config file: flash:/startup.cfg

show flash

Syntax	Show flash
Parameter	none
Default	none
Mode	Admin and Configuration Mode.
Usage	Show the size of the files which are reserved in the system flash memory.
Example	To list the files and their size in the flash. Switch#show flash total 12227K -rw- 12516553 nos.img -rw- 3224 startup.cfg Drive : flash: Size:30.0M Used:13.0M Available:17.0M Use:43%

show history

Syntax	show history
Parameter	none

Default	none
Mode	Admin Mode
Usage	Display the recent user command history. The system holds up to 20 commands the user entered, the user can use the UP/DOWN key or their equivalent (ctrl+p and ctrl+n) to access the command history.
Example	Switch# show history enable config interface ethernet 1/0/3 enable dir show ftp

show history all-users

Syntax	show history all-users [detail]	
Parameter	detail	shows user name of the executing command. IP address of the user will be shown when logging in the executing command through Telnet or SSH
Default	none	
Mode	Admin and configuration mode	
Usage	This command is used to show the recent command history of all users, including time, logging type, executing command, etc. Notice: The user can only check the command history of other users whose purview should not be higher than oneself.	
Example	Switch# show history all-users detail Time Type User Command 0w 0d 0h 2m Telnet/SSH admin show history all-users detail 192.168.1.2:1419 0w 0d 0h 1m Telnet/SSH admin show history all-users 192.168.1.2:1419 0w 0d 0h 1m Console Null show history all-users 0w 0d 0h 1m Console Null end 0w 0d 0h 1m Console Null ip address 192.168.1.1 255.255.255.0 0w 0d 0h 0m Console Null in v 1 0w 0d 0h 0m Console Null telnet-server enable	

show logging buffered

Syntax	show logging buffered [level {critical warnings} range <begin-index> <end-index>]	
Parameter	level {critical warnings}	level of critical information
	<begin-index>	index start value of the log message, the valid range is 1-65535
	<end-index>	index end value of the log message, and the valid range is 1-65535. When only display logging buffered information of the line card must be added range

	parameter, but the main control has not the reques
Default	No parameter specified indicates all the critical log information will be displayed.
Mode	Admin and configuration mode
Usage	This command displays the detailed information in the log buffer channel. This command is not supported on low end switches. Warning and critical log information is saved in the buffer zone. When displayed to the terminal, their display format should be: index ID time <level> module ID [mission name] log information.
Example	Display the critical log information in the log buffer zone channel and related to the main control with index ID between 940 and 946. Switch# show logging buffered level critical range 940 946 Current messages in SDRAM:0

show logging executed-commands state

Syntax	show logging executed-commands state
Parameter	none
Default	none
Mode	Admin Mode
Usage	Use this command to display the state (enable or disable).
Example	Switch#show logging executed-commands state Logging executed command state is enable

show logging source

Syntax	show logging source mstp
Parameter	None
Default	None
Mode	Admin and configuration mode
Usage	Show the log information source of MSTP module.
Example	Show the log information source of MSTP. Switch#show logging source mstp system module log switch status: Channel Onoff Severity logbuff on warning loghost on warning terminal on warning

show running-config

Syntax	show running-config
--------	---------------------

Parameter	none	
Default	None	
Mode	Admin Mode	
Usage	Display the current active configuration parameters for the switch. When the user finishes a set of configuration and needs to verify the configuration, show running-config command can be used to display the current active parameters. .	
Example	Switch#show running-config	

show running-config current-mode

Syntax	show running-config current-mode	
Parameter	none	
Default	none	
Mode	All configuration modes.	
Usage	Enter into any configuration mode and input this command under this mode, it can show all the configurations under the current mode.	
Example	Switch(config-if-ethernet1/0/1)#show run c Interface Ethernet1/0/1 switchport access vlan 2	

show startup-config

Syntax	show startup-config	
Parameter	none	
Default	If the configuration parameters read from the Flash are the same as the default operating parameter, nothing will be displayed.	
Mode	Admin Mode	
Usage	The show running-config command differs from show startup-config in that when the user finishes a set of configurations, show running-config displays the added-on configurations whilst show startup-config won't display any configurations. However, if write command is executed to save the active configuration to the Flash memory, the displays of show running-config and show startup-config will be the same.	
Example	Switch#show startup-config	

show switchport interface

Syntax	show switchport interface [ethernet] <IFNAME>	
Parameter	<IFNAME>	port number
Default	none	
Mode	Admin and configuration mode	
Usage	Show the VLAN port mode, VLAN number and Trunk port messages of the VLAN port mode on the switch.	
Example	Show VLAN messages of port ethernet 1/0/1	

RemotePort	State	IF	VRF		
::				80	::
0	LISTEN	0	0		
::				23	::
0	LISTEN	0	0		
Displayed Information		Explanation			
LocalAddress		Local IPv6 address of TCP connection			
LocalPort		Local port of TCP connection			
RemoteAddress		Remote IPv6 address of TCP connection			
RemotePort		Remote Port of TCP connection			
State		The current state of TCP connection			
IF		Local port index of TCP connection			
VRF		Virtual route forward instance			

show telnet login

Syntax	show telnet login	
Parameter	none	
Default	none	
Mode	Admin and configuration mode	
Usage	This command used to list the information of currently available telnet clients which are connected to the switch	
Example	Switch#show telnet login Authenticate login by local. Login user: aa	

show udp

Syntax	show udp				
Parameter	none				
Default	none				
Mode	Admin Mode				
Usage	Display the current UDP connection status established to the switch.				
Example	Switch#show udp				
	LocalAddress	LocalPort	ForeignAddress	ForeignPort	State
	0.0.0.0	32768	0.0.0.0	0	CLOSE
	0.0.0.0	3071	0.0.0.0	0	CLOSE
	Displayed Information		Description		
	LocalAddress		Local address of the UDP connection.		
	LocalPort		Local pot number of the UDP connection.		

	ForeignAddress	Remote address of the UDP connection.
	ForeignPort	Remote port number of the UDP connection.
	State	Current status of the UDP connection.

show udp ipv6

Syntax	show udp ipv6													
Parameter	none													
Default	none													
Mode	Admin and configuration mode													
Usage	Show the current UDP connection													
Example	<pre>Switch#show udp ipv6 LocalAddress LocalPort RemoteAddress RemotePort State :: 3071 :: 0 CLOSE</pre> <table border="1" data-bbox="400 920 1465 1173"> <thead> <tr> <th>Displayed Information</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>LocalAddress</td> <td>Local IPv6 address of the UDP connection.</td> </tr> <tr> <td>LocalPort</td> <td>Local port number of the UDP connection.</td> </tr> <tr> <td>RemoteAddress</td> <td>Remote IPv6 address of the UDP connection.</td> </tr> <tr> <td>RemotePort</td> <td>Remote port number of the UDP connection.</td> </tr> <tr> <td>State</td> <td>Current status of the UDP connection.</td> </tr> </tbody> </table>		Displayed Information	Description	LocalAddress	Local IPv6 address of the UDP connection.	LocalPort	Local port number of the UDP connection.	RemoteAddress	Remote IPv6 address of the UDP connection.	RemotePort	Remote port number of the UDP connection.	State	Current status of the UDP connection.
Displayed Information	Description													
LocalAddress	Local IPv6 address of the UDP connection.													
LocalPort	Local port number of the UDP connection.													
RemoteAddress	Remote IPv6 address of the UDP connection.													
RemotePort	Remote port number of the UDP connection.													
State	Current status of the UDP connection.													

show version

Syntax	show version	
Parameter	none	
Default	none	
Mode	Admin Mode	
Usage	<p>Display the switch version.</p> <p>Use this command to view the version information for the switch, including hardware version and software version.</p>	
Example	Switch#show version	

Traceroute

Syntax	traceroute [source <ipv4-addr>] { <ip-addr> host <hostname> } [hops <hops>] [timeout <timeout>]	
Parameter	<ipv4-addr>	assigned source host IPv4 address in dot decimal format
	<ip-addr>	target host IP address in dot decimal format
	<hostname>	hostname for the remote host
	<hops>	maximum gateway number allowed by Traceroute command

	<timeout>	timeout value for test packets in milliseconds, between 100 -10000
Default	The default maximum gateway number is 30, timeout in 2000 ms.	
Mode	Admin mode	
Usage	This command is tests the gateway passed in the route of a packet from the source device to the target device. This can be used to test connectivity and locate a failed sector. Traceroute is usually used to locate the problem for unreachable network nodes.	
Example	Switch#traceroute 192.168.2.36 Type ^c to abort. Traceroute to host 192.168.2.36, maxhops is 30, timeout is 2000ms. 1 0ms 192.168.2.36 Traceroute completed.	

traceroute6

Syntax	traceroute6 [source <addr>] {<ipv6-addr> host <hostname>} [hops <hops>] [timeout <timeout>]	
Parameter	<ipv4-addr>	assigned source host IPv6 address in colonned hex notation.
	<ip-addr>	IPv6 address of the destination host, shown in colonned hex notation
	<hostname>	name of the remote host
	<hops>	max number of the gateways the traceroute6 passed through, ranging between 1-255
	<timeout>	timeout period of the data packets, shown in millisecond and ranging between 100~10000
Default	Default number of the gateways passes by the data packets is 30, and timeout period is defaulted at 2000ms.	
Mode	Admin mode	
Usage	This command is for testing the gateways passed by the data packets from the source device to the destination device, so to check the accessibility of the network and further locating the network failure. Traceroute6 is normally used to locate destination network inaccessible failures.	
Example	Switch#traceroute6 2004:1:2:3::4 Type ^c to abort. Traceroute to IPv6 host 2004:1:2:3::4, maxhops is 30, timeout is 2000ms. Traceroute6 error occurred.	

reload after

Syntax	reload after {[<HH:MM:SS>] [days <days>]}	
Parameter	<HH:MM:SS>	specified time, HH (hours) ranges from 0 to 23, MM (minutes) and SS (seconds) range from 0 to 59
	<days>	specified days, unit is day, range from 1 to 30.
Default	none	
Mode	Admin mode	

Usage	With this command, users can reboot the switch without shutdown its power after a specified period of time, usually when updating the switch version. The switch can be rebooted after a period of time instead of immediately after its version being updated successfully. This command will not be reserved, which means that it only has one-time effect. After this command is configured, it will prompt the reboot information when user logging in the switch by telnet.
Example	Set the switch to automatically reload after 2 days, 10 hours and 1 second. Switch#reload after 10:00:01 days 2 Process with reboot after? [Y/N] y

reload cancel

Syntax	reload cancel
Parameter	none
Default	none
Mode	Admin mode
Usage	Cancel the specified time period to reload the switch. With this command, users can cancel the specified time period to reload the switch, that is, to cancel the configuration of command “reload after”. This command will not be reserved.
Example	Prevent the switch to automatically reboot after the specified time. Switch#reload cancel Reload cancel successful.

show reload

Syntax	show reload
Parameter	none
Default	none
Mode	Admin and configuration mode
Usage	Display the user’s configuration of command “reload after”. With this command, users can view the configuration of command “reload after” and check how long a time is left before rebooting the switch.
Example	View the configuration of command “reload after”. In the following case, the user set the switch to be rebooted in 10 hours and 1 second, and there are still 9 hours 59 minutes and 48 seconds left before rebooting it. Switch#show reload The original reload after configuration is 10:00:01. System will be rebooted after 09:59:48 from now.

clear cpu-rx-stat protocol

Syntax	clear cpu-rx-stat protocol [<protocol-type>]
Parameter	<protocol-type> type of the protocol of the packet, , including dot1x, stp,

	snmp, arp, telnet, http, dhcp, igmp, ssh
Default	none
Mode	Admin mode
Usage	This command clear the statistics of the CPU received packets of the protocol type, it is supposed to be used with the help of the technical support.
Example	Clear the statistics of the CPU receives ARP packets. Switch#config Switch(config)#clear cpu-rx-stat protocol arp

cpu-rx-ratelimit protocol

Syntax	cpu-rx-ratelimit protocol <protocol-type> <packets> no cpu-rx-ratelimit protocol <protocol-type>	
Parameter	<protocol-type>	type of the protocol, including dot1x, stp, snmp, arp, telnet, http, dhcp, igmp, ssh
	<packets>	max rate of CPU receiving packets of the protocol type, its range is 1-2000 pps.
Default	A different default rate is set for the different type of protocol.	
Mode	Global mode	
Usage	Set the max rate of the CPU receiving packets of the protocol type, the no command set the max rate to default. The rate limit set by this command have an effect on CPU receiving packets, so it is supposed to be used with the help of the technical support.	
Example	set the rate of the ARP packets to 500pps. Switch#config Switch(config)#cpu-rx-ratelimit protocol arp 500	

cpu-rx-ratelimit total

Syntax	cpu-rx-ratelimit total <packets> no cpu-rx-ratelimit total	
Parameter	<packets>	max number of CPU receiving packets per second
Default	1200pps	
Mode	Global mode	
Usage	Set the total rate of the CPU receiving packets, the no command sets the total rate of the CPU receiving packets to default. The total rate set by the command have an effect on CPU receiving packets, so it is supposed to be used with the help of the technical support.	
Example	Set the total rate of the CPU receive packets to 1500pps. Switch#config Switch(config)# cpu-rx-ratelimit total 1500	

show cpu-rx protocol

Syntax	show cpu-rx protocol [<protocol-type>]
--------	--

Parameter	<protocol-type>	protocol type of the packets, if do not input parameters, show all statistic packets.
Default	none	
Mode	Admin and configuration mode	
Usage	Show the statistics of the CPU received packets of the specified protocol type. This command is used to debug, it is supposed to be used with the help of the technical support.	
Example	Show the statistics of CPU receiving ARP packets. Switch#show cpu-rx protocol arp Type Rate-limit TotPkts DropPkts DelayCount CurState ARP 300 0 0 0 allowed	

15.1.Commands for PoE Configuration

power inline enable (Global)

Command	power inline enable no power inline enable	
parameter	-	
default	Disable.	
Mode	Global Mode	
Usage Guide	This command enables/disables global PoE.With PoE globally disabled, there would be no power output no matter what the power state of a specified port is.	
Example	Globally disable PoE. Switch(Config)#no power inline enable	

power inline enable (Port)

Command	power inline enable no power inline enable	
parameter	-	
default	Disable.	
Mode	Port Mode.	
Usage Guide	This command is used to enable/disable the specified port PoE, when the port disables the POE, there will be no power output regardless of the power state of the specified port.	
Example	Disable power supply on ports1/0/1. Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#no power inline enable	

power inline high-inrush

Command	power inline high-inrush enable no power inline high-inrush enable	
parameter	-	

default	The allowed high-inrush current is not enabled
Mode	Global mode
Usage Guide	Power for non-standard PD instantaneously, this command is used to enable allowed high inrush output, no the command disables high inrush output. High-inrush current will be brought when nonstandard PD is powered instantaneously, it will result PSE self-protection to make PD power failure. Here, if this nonstandard PD must be powered, it needs to allow the high-inrush current.
Example	Enable the allowed high-inrush current when nonstandard PD is powered instantaneously. Switch(config)#power inline high-inrush enable

power inline legacy

Command	power inline legacy enable no power inline legacy enable
parameter	-
default	Do not provide power supply for non-standard IEEE PD
Mode	Global Mode
Usage Guide	This command is used to enable non-standard IEEE PD detection functionality. No command disables non-standard IEEE PD detection function.
Example	Set the switch to provide power supply for non-standard IEEE PD. Switch(config)#power inline legacy enable

power inline max (Global)

Command	power inline max <max-wattage> no power inline max	
parameter	max-wattage	value of the max output power, in W. Any integer from 37 to 130 is valid
default	Default maximum output power 370W	
Mode	Global Mode	
Usage Guide	This command is used to set the global maximum output power of the POE no restore the default configuration.	
Example	Set the global max output power to 50W. Switch(Config)#power inline max 50	

power inline max (Port)

Command	power inline max <max-wattage> no power inline max	
parameter	max-wattage	the value of the max output power, in mW, ranging from 1 to 15400mW, with a granularity of 100mW. Any value less than

		100mW will be taken as 100mW, that is, 1~100 equals 100, 15301~15400 equals 15400. But the value set by users will be maintained without being rounded up.
default	Default port maximum output power 32000mW	
Mode	Port Mode	
Usage Guide	This command can be used to set the maximum output power of the specified port.	
Example	Set the max output power of Port 1 to 0.8W. Switch(config)#interface ethernet 1/0/1 Switch(config-if-ethernet1/0/1)#power inline max 800	

power inline police

Command	power inline police enable no power inline police enable	
parameter	-	
default	The power priority management policy mode is disabled	
Mode	Global Mode	
Usage Guide	This command is used to enable or disable priority management policy mode. In priority mode, when not enough PSE power is available, ports with low priority will be closed to satisfy the power supply for ports with high priority, no matter how long the access time of a PD is. If two ports have same priority, the one with smaller sequence number is higher privileged. In first-come-first-served mode, new PDs will not get power supply if available PSE power is not enough.	
Example	Enable the power priority policy mode. Switch(Config)#power inline police enable	

power inline priority

Command	power inline priority {critical high low}	
parameter	critical	the highest-level priority
	high	high-level priority
	low	low-level priority
default	Port priority is low	
Mode	Port Mode	
Usage Guide	This command is used to set the priority level of the port. This command will take effect in the mode of "power inline police enable". Without enough available power for newly connected PD, ports with higher priority will get power supply first.	
Example	Set the priority of Port 1 to high and that of Port 2 to critical. Switch(Config)#interface ethernet 1/0/1 Switch(Config-Ethernet1/0/1)#power inline priority high Switch(Config)#interface ethernet 1/0/2 Switch(Config-Ethernet1/0/2)#power inline priority critical	

power inline monitor interval

Command	power inline monitor interval <30-36000>	
parameter	<30-36000>	Monitoring interval, size range :30-36000, per second
default	The default configuration interval is 150 seconds	
Mode	Global mode	
Usage Guide	this command is used to configure poe monitor interval time.	
Example	The interval between switches is 3600 seconds. Switch(config)#power inline monitor interval 3600	

power inline monitor {on|off }

Command	power inline monitor {on off}	
parameter	-	
default	Default disable poe monitor function	
Mode	Port Configuration Mode	
Usage Guide	This command is used to enable or disable poe monitoring function.	
Example	enable poe detection function on port 1/0/1. Switch(config-if-ethernet1/0/1)#power inline monitor on	

power inline power-off

Command	power inline power-off time-range <name>	
parameter	<name>	Time range name: This name is defined by the user and the character length is 1-64 bits
default	Default not configured	
Mode	Port Mode	
Usage Guide	this command is used to set poe timing off.	
Example	The poe setting switch port 1/0/1 closes at t1. Switch(config-if-ethernet1/0/1)#power inline power-off time-range t1	

power inline reset interval

Command	power inline reset interval <1-600>	
parameter	<1-600>	Refresh time interval size :1-600 per second
default	Default refresh time is 5 seconds	
Mode	Global mode	
Usage Guide	this command can be used to set poe refresh interval time.	
Example	Sets the refresh interval poe the switch to 20 seconds. Switch(config)#power inline reset interval 20	

15.2.PoE Monitoring and Debugging

show power inline

Command	show power inline	
parameter	-	
default	-	
Mode	Admin Mode	
Usage Guide	This command is used to view POE global configuration and state.	
Example	View global POE configuration and status.Switch#show power inline.	
	PoE Work Status	: online
	PoE Port Max Number	: 24
	PoE Support Type	: 802.3at/802.3af
	PoE MCU Software Version	: V2.1
	PoE Power Available	: 370 W
	PoE Power Used	: 0 W
	PoE Power Remaining	: 370 W
	PoE Main Voltage	: 54.8 V
	PoE Min Voltage	: 44 V
	PoE Max Voltage	: 57 V
	PoE Police	: Enable
	PoE Legacy	: Enable
	PoE High-inrush Status	: Disable
PoE Monitor Interval	: 150 s	
PoE Reset Interval	: 5 s	
	Display entries	describe
	PoE Work Status	POE working status
	PoE Power Available	Global maximum of available power
	PoE Power Used	Power currently in use
	PoE Power Remaining	Remaining available power
	PoE Min Voltage	minimum voltage
	PoE Max Voltage	maximum voltage
	PoE Police	Power Priority Policy Enable Status
	PoE Legacy	Status of non-standard PD detection function
	PoE High-inrush Status	Poe high inrush state

show power inline interface ethernet

Command	show power inline interface [ethernet <interface-number> <interface-name>]	
parameter	<i>interface-number</i>	Ethernet port number
default	-	
Mode	Admin Mode	
Usage Guide	This command is used to view the configuration and status displayed on POE specified port.	
Example	View POE information on port 1/0/1.	

Switch#show power inline interface ethernet 1/0/1	
Interface	Status Oper Power(mW) Max(mW) Current(mA) Volt(V) Priority Class

Ethernet1/0/1	Disable Off 0 800 0 54
Low	N/A
Display entries	describe
Oper	Working status: On: PD normal connection Off: PD no connection Faulty: PD detection failure Deny: Not enough power available or required to exceed the limit
Current(mA)	Current current at port
Volt(V)	Current voltage at port
Class	PD input power used: 0 Default 0.44~12.95 1 Optional 0.44~3.84 2 Optional 3.84~6.49 3 Optional 6.49~12.95 4 Reserved treated as class 0 and reserved for future use It is impossible for a compatible PD to provide a class 4 signal

16.1.Commands for RIP

accept-lifetime

Command	accept-lifetime <start-time> {<end-time> duration<seconds> infinite} no accept-lifetime Use this command to specify a key accept on the key chain as a valid time period. The "no accept-lifetime" command deletes this configuration.
Parameter	<start-time> parameter specifies the start time of the time period, of which the form should be: <start-time>={<hh:mm:ss> <month> <day> <year> <hh:mm:ss> <day> <month> <year>} <hh:mm:ss> specify the concrete valid time of accept-lifetime in hours, minutes and second<day> specifies the date of valid, ranging between 1 -31 <month> specifies the month of valid shown with the first three letters of the month, such as Jan <year> specifies the year of valid start, ranging between 1993 - 2035 <end-time> specifies the due of the time period, of which the form should be: <end-time>={<hh:mm:ss> <month> <day> <year> <hh:mm:ss> <day> <month> <year>}<hh:mm:ss> specify the concrete valid time of accept-lifetime in hours,

	<p>minutes and second</p> <p><day> specifies the date of valid, ranging between 1 -31</p> <p><month> specifies the month of valid shown with the first three letters of the month, such as Jan</p> <p><year> specifies the year of valid start, ranging between 1993 - 2035</p> <p><seconds> the valid period of the key in seconds, ranging between 1-2147483646</p> <p>Infinite means the key will never be out of date.</p>
Default	Nodefault configuration.
Mode	keychain-key Mode。
Usage Guide	<p>If only the authentication mode is configured and the key chain or password used by the interface is not configured, authentication will not work at all. If the mode is not configured before configuring this command, the mode will be set to clear text authentication after configuring this command. The no operation of this command will cancel the authentication, but it does not mean that the mode will be set to the non-authentication type, only that the authentication processing will not be performed when sending or receiving packets. You can enter ip rip authentication key-chain my key to indicate that the key chain name is my key, which is 6 characters in total.</p>
Example	<p>The example below shows the accept-lifetime configuration of key 1 on the keychain named mychain.</p> <pre>Switch# config terminal Switch(config)# key chain mychain Switch(config-keychain)# key 1 Switch(config-keychain-key)# accept-lifetime 03:03:01 Dec 3 2004 04:04:02 Oct 6 2006</pre>

clear ip rip route

Command	<p>clear ip rip route {<A.B.C.D/M> kernel static connected rip ospf isis bgp all}</p> <p>Clear specific route in the RIP route table.</p>
Parameter	<p><A.B.C.D/M> Clear the routes which match the destination address from the RIP route table. Specifies the IP address prefix and its length of the destination address</p> <p>kernel delete kernel routes from the RIP route table</p> <p>static delete static routes from the RIP route table</p> <p>connected delete direct routes from the RIP route table</p> <p>rip only delete RIP routes from the RIP route table</p> <p>ospf only delete OSPF routes from the RIP route table</p> <p>isis only delete ISIS routes from the RIP route table</p> <p>bgp only delete BGP routes from the RIP route table</p> <p>all delete all routes from the RIP route table</p>
Default	No default configuration
Mode	Admin mode
Usage Guide	<p>Use this command with the all parameter will delete all learnt route in the RIP route which will be immediately recovered except for rip route. The dynamic learnt RIP route can only be recovered by studying one more time.</p>
Example	Switch# clear ip rip route 10.0.0.0/8

	Switch# clear ip rip route ospf
--	---------------------------------

default-information originate

Command	default-information originate no default-information originate Allow the network 0.0.0.0 to be redistributed into the RIP. The “no default-information originate” disables this function.
Parameter	-
Default	Disabled
Mode	Router mode and address-family mode
Usage Guide	This command tells the router to insert the default route with the destination of 0.0.0.0 into the RIP routing database, and advertise the route as other routes.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# default-information originate

default-metric

Command	default-metric <value> no default-metric Set the default metric value of the introduced route. The “no default-metric” command restores the default value to 1.
Parameter	<value> is the metric value to be set, ranging between 1~16.
Default	Default route metric value is 1.
Mode	Router mode and address-family mode.
Usage Guide	default-metric command is used for setting the default route metric value of the routes from other routing protocols when distributed into the RIP routes. When using the redistribute commands for introducing routes from other protocols, the default route metric value specified by default-metric will be adopted if no specific route metric value is set.
Example	Set the default route metric value to 3 for introducing routes from other routing protocols into the RIP routes. Switch(config-router)#default-metric 3

Distance

Command	distance <number> [<A.B.C.D/M>] [<access-list-name access-list-number >] no distance [<A.B.C.D/M>] Set the managing distance with this command. The “no distance [<A.B.C.D/M>]” command restores the default value to 120.
Parameter	<number> specifies the distance value, ranging from 1 to 255. <A.B.C.D/M> specifies the network prefix and its length.

	<access-list-name access-list-number > specifies the access-list number or name applied.
Default	The default managing distance of RIP is 120.
Mode	Router mode and address-family mode.
Usage Guide	In case there are routes from two different routing protocols to the same destination, the managing distance is then used for selecting routes. The less the managing distance of the route protocol is, the more reliable will be the route acquired from the protocol.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# distance 8 10.0.0.0/8 mylist

istribute-list

Command	<p>distribute-list{<access-list-number access-list-name> prefix<prefix-list-name>} {in out} [<ifname>]</p> <p>no distribute-list{<access-list-number access-list-name> prefix<prefix-list-name>} {in out} [<ifname>]</p> <p>This command uses access-list or prefix-list to filter the route update packets sent and received. The “no distribute-list {<access-list-number access-list-name> prefix<prefix-list-name>} {in out} [<ifname>]” command cancels this route filter function.</p>
Parameter	<p><access-list-number access-list-name> is the name or access-list number to be applied.</p> <p><prefix-list-name> is the name of the prefix-list to be applied.</p> <p><ifname> specifies the name of interface to be applied with route filtering.</p>
Default	The function in default situation is disabled.
Mode	Router mode and address-family mode.
Usage Guide	The filter will be applied to all the interfaces in case no specific interface is set.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# distribute-list prefix myfilter in vlan 1

ip rip aggregate-address

Command	<p>ip rip aggregate-address A.B.C.D/M</p> <p>no ip rip aggregate-address A.B.C.D/M</p> <p>To configure RIP aggregation route. The no form of this command will delete this configuration.</p>
Parameter	A.B.C.D/M:IPv4 address and mask length.
Default	Disabled.
Mode	Router Mode or Interface Configuration Mode.
Usage Guide	If to configure aggregation route under router mode, RIP protocol must be enabled. If configured under interface configuration mode, RIP protocol may not be enabled, but

	the aggregation router can operation after the RIP protocol be enabled on interface.
Example	To configure aggregation route as 192.168.20.0/22 globally. Switch(config)#router rip Switch(config-router)#ip rip agg 192.168.20.0/22

ip rip authentication key-chain

Command	ip rip authentication key-chain <name-of-chain> no ip rip authentication key-chain Use this command to enable RIPV2 authentication on an interface and further configures the adopted key chain. The “no ip rip authentication key-chain” command cancels the authentication.
Parameter	<name-of-chain> is the name of the adopted key chain. There may be spaces in the string. The input ends with an enter and the string should not be longer than 256 bytes.
Default	Not configured.
Mode	Interface Configuration Mode.
Usage Guide	If the authentication is only configured without configuring the key chain or password used by the interface, the authentication does no effect. If mode has not been configured prior to configuring this command, the mode will be set to plaintext authentication. The “no ip rip authentication key” command will cancel the authentication which only cancels the authentication process when sending or receiving data packet other than set non authentication mode.
Example	Switch#config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip authentication key-chain my key

ip rip authentication mode

Command	ip rip authentication mode {text md5} no ip rip authentication mode {text md5} Configure the authentication mode; the “no ip rip authentication mode {ext md5}” command restores the default authentication mode namely text authentication mode.
Parameter	text means text authentication; md5 means MD5 authentication.
Default	Not configured authentication.
Mode	Interface Configuration Mode.
Usage Guide	RIP-I do not support authentication which the RIP-II supports two authentication modes: text authentication (i.e. Simple authentication) and data packet authentication (i.e. MD5 authentication). This command should be used associating the ip rip authentication key or ip rip authentication string. Independently configuration will not lead to authentication process.
Example	Switch#config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip authentication mode md5

ip rip authentication string

Command	ip rip authentication string <text> no ip rip authentication string Set the password used in RIP authentication. The “no ip rip authentication string” cancels the authentication.
Parameter	<text> is the password used in authentication of which the length should be 1-16 characters with space available. The password should end with enter.
Default	-
Mode	Interface mode
Usage Guide	The ip rip authentication key will not be able to be configured when this command is configured, key id value is required in MD5 authentication which is 1 when use this command. The mode will be set to plaintext authentication in case no mode configuration is available. The “no ip rip authentication string” command will cancel the authentication which only cancels the authentication process when sending or receiving data packet other than set non authentication mode. Input ip rip authentication string aaa aaa to set the password as aaa aaa which is 7 characters.
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip authentication string guest

ip rip authentication cisco-compatible

Command	ip rip authentication cisco-compatible no ip rip authentication cisco-compatible After configured this command, the cisco RIP packets will be receivable by configuring the plaintext authentication or MD5 authentication
Parameter	-
Default	Not configured
Mode	Interface mode
Usage Guide	After authentication is configured on the cisco router, the RIP packets will exceeds the length of the defined standard length of the protocol once the number of route items is greater than 25. By configuring this command the over-lengthen RIP packets will be receivable other than denied.
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip authentication cisco-compatible

ip rip receive-packet

Command	ip rip receive-packet no ip rip receive-packet
---------	---

	Set the interface to be able to receive RIP packets; the “no ip rip receive-packet” command sets the interface to be unable to receive RIP packets.
Parameter	-
Default	Interface receives RIP packets.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip receive-packet

ip rip receive version

Command	ip rip receive version { 1 2 1 2 } no ip rip receive version Set the version information of the RIP packets the interface receives. The default version is 2; the “no ip rip receive version” command restores the value set by using the version command.
Parameter	1 and 2 respectively stands for RIP version 1 and RIP version 2, 1 2 stands for the RIP versions 1, 2.
Default	Version 2
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip receive version 1 2

ip rip send-packet

Command	ip rip send-packet no ip rip send-packet Set the Interface to be able to receive the RIP packets; the “no ip rip send-packet” sets the interface to be unable to receive the RIP packets.
Parameter	-
Default	Interface sends RIP packets.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip send-packet

ip rip send version

Command	ip rip send version { 1 2 1-compatible 1 2 } no ip rip send version Set the version information of the RIP packets the interface receives. The default
---------	--

	version is 2; the “no ip rip send version” command restores the value set by using the version command.
Parameter	1 and 2 respectively stands for RIP version 1 and RIP version 2, 1 2 stands for the RIP versions 1, 2.
Default	Version 2
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(config-if-vlan1)# ip rip send version 1

ip rip split-horizon

Command	ip rip split-horizon [poisoned] no ip rip split-horizon Enable split horizon. The “no ip rip split-horizon” disables the split horizon.
Parameter	[poisoned] means configure the split horizon with poison reverse.
Default	Split Horizon with poison reverse by default.
Mode	Interface Configuration Mode.
Usage Guide	The split horizon is for preventing the Routing Loops, namely preventing the layer 3 switches from broadcasting the routes which is learnt from the same interface on which the route to be broadcasted.
Example	Switch# config terminal Switch(config)# interface vlan 1 Switch(Config-if-Vlan1)# ip rip split-horizon poisoned

Key

Command	key <keyid> no key <keyid> This command is for managing and adding keys in the key chain. The “no key <keyid>” command deletes one key.
Parameter	<keyid>is key ID, ranging between 0-2147483647.
Default	-
Mode	keychainMode and keychain-keyMode。
Usage Guide	The command permits entering the keychain-key mode and set the passwords corresponding to the keys.
Example	Switch#config terminal Switch(config)#key chain mychain Switch(config-keychain)#key 1 Switch(config-keychain-key)#

key chain

Command	key chain <name-of-chain>
---------	---------------------------

	no key chain < name-of-chain > This command is for entering a keychain manage mode and configure a keychain. The “no key chain < name-of-chain >” deletes one keychain.
Parameter	<name-of-chain>is the name string of the keychain the length of which is not specifically limited.
Default	-
Mode	Global Mode
Usage Guide	-
Example	Switch#config terminal Switch(config)#key chain mychain Switch(config-keychain)#

key-string

Command	key-string <text> no key-string <text> Configure a password corresponding to a key. The “no key-string <text>”command deletes the corresponding password.
Parameter	<text> is a character string without length limit. However when referred by RIP authentication only the first 16 characters will be used.
Default	-
Mode	keychain-key Mode。
Usage Guide	This command is for configure different passwords for keys with different ID.
Example	Switch# config terminal Switch(config)# key chain mychain Switch(config-keychain)# key 1 Switch(config-keychain-key)# key-string prime

maximum-prefix

Command	maximum-prefix <maximum-prefix> [<threshold>] no maximum-prefix Configure the maximum number of RIP routes in the route table. The “nomaximum-prefix” command cancels the limit.
Parameter	<maximum-prefix>the maximum number of RIP route, ranging between 1-65535; a warning is given when the number rate of current route exceeds <threshold>ranging between 1-100, default at 75.
Default	-
Mode	router mode
Usage Guide	The maximum RIP route only limits the number of routes learnt through RIP but not includes direct route or the RIP static route configured by the route command. The base on which the comparison is performed is the number of route marked R in the show ip route database, and also the number of RIP routes displayed in the show ip route statistics command.
Example	Switch# config terminal Switch(config)# router rip

	Switch(config-router)# maximum-prefix 150
--	---

Neighbor

Command	neighbor <A.B.C.D> no neighbor <A.B.C.D> Specify the destination address requires targeted-peer sending. The “no neighbor <A.B.C.D>” command cancels the specified address and restores all gateways to trustable.
Parameter	<A.B.C.D>is the specified destination address for the sending, shown in dotted decimal notation.
Default	Not sending to any targeted-peer destination address.
Mode	router mode
Usage Guide	When used accompany with passive-interface command it can be configured to only sending routing messages to specific neighbor.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# neighbor 1.1.1.1

Network

Command	network <A.B.C.C/M ifname> no network <A.B.C.C/M ifname> Configure the RIP protocol network.
Parameter	<A.B.C.C/M >is the IP address prefix and its length in the network. <ifname> is the name of a interface.
Default	Not running RIP protocol
Mode	Router mode and address-family mode.
Usage Guide	Use this command to configure the network for sending or receiving RIP update packets. If the network is not configured, all interfaces of the network will not be able to send or receive data packets.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# network 10.0.0.0/8 Switch(config-router)# network vlan 1

offset-list

Command	offset-list <access-list-number access-list-name> {in out} <number > [<ifname>] no offset-list <access-list-number access-list-name> {in out} <number > [<ifname>] Add an offset value to the metric value of the routes learnt by RIP. The “no offset-list <access-list-number access-list-name> {in out} <number > [<ifname>]” command disables this function.
Parameter	< access-list-number access-list-name>is the access-list or name to be applied

	<number >is the added offset value, ranging between 0-16; <ifname>is the specific interface name;
Default	Default offset value is the metric value defined by the system.
Mode	Router mode and address-family mode.
Usage Guide	-
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# offset-list 1 in 5 vlan 1

passive-interface

Command	passive-interface <ifname> no passive-interface <ifname> Set the RIP layer 3 switch blocks RIP broadcast on specified interface, on which the RIP data packets will only be sent to layer 3 switches configured with neighbor.
Parameter	<ifname> is the name of specific interface.
Default	Not configured
Mode	router mode
Usage Guide	-
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# passive-interface vlan 1

recv-buffer-size

Command	recv-buffer-size<size> no recv-buffer-size This command configures the size of UDP receiving buffer zone of RIP; the “no recv-buffer-size” command restores the system default.
Parameter	<size>is the buffer zone size in bytes, ranging between 8192-2147483647.
Default	8192 bytes.
Mode	router mode
Usage Guide	-
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# recv-buffer-size 23456789

Redistribute

Command	redistribute {kernel connected static ospf [<process-id>] isis bgp} [metric<value>] [route-map<word>]
---------	---

	no redistribute {kernel connected static ospf [<process-id>] isis bgp} [metric<value>] [route-map<word>] Introduce the routes learnt from other routing protocols into RIP.
Parameter	kernel introduce from kernel routes; connected introduce from direct routes; static introduce from static routes; ospf introduce from OSPF routes. process-id is OSPF process ID, if there is no parameter that means the process by default, range between 1 to 65535; isis introduce from ISIS routes; bgp introduce from BGP routes; <value> is the metric value assigned to the introduced route, ranging between 0 to 16; <word> is the probe pointing to the route map for introducing routes.
Default	-
Mode	Router mode and address-family mode。
Usage Guide	Under the address-family mode, the parameter kernel and ISIS is unavailable.
Example	Switch#config terminal Switch(config)#router rip Switch(config-router)#redistribute kernel route-map ipi To redistribute OSPFv2 routing information to RIP. Switch(config)#router rip Switch(config-router)#redistribute ospf 2

Route

Command	route <A.B.C.D/M> no route <A.B.C.D/M> This command configures a static RIP route. The “no route <A.B.C.D/M>”command deletes this route.
Parameter	<A.B.C.D/M>Specifies this destination IP address prefix and its length.
Default	-
Mode	router mode
Usage Guide	The command adds a static RIP route, and is mainly used for debugging. Routes configured by this command will not appear in kernel route table but in the RIP route database.
Example	Switch# config terminal Switch(config)# router rip Switch(config-router)# route 1.0.0.0/8

router rip

Command	router rip no router rip Enable the RIP routing process and enter the RIP mode; the “no router rip” command closes the RIP routing protocol.
Parameter	-
Default	Not running RIP route.
Mode	Global mode
Usage Guide	This command is the switch for starting the RIP routing protocol which is required to be open before configuring other RIP protocol commands.
Example	Enable the RIP protocol mode Switch(config)#router rip Switch(config-router)#

send-lifetime

Command	send-lifetime <start-time> {<end-time> duration<seconds> infinite} no send-lifetime Use this command to specify a key on the keychain as the time period of sending keys. The “no send-lifetime” cancels this configuration.
Parameter	<start-time>> parameter specifies the starting time of the time period, which is:<start-time>={<hh:mm:ss> <month> <day> <year> <hh:mm:ss> <day> <month> <year>} <hh:mm:ss>Specify the concrete valid time of accept-lifetime in hours, minutes and second; <day>Specifies the date of valid, ranging between 1 -31; <month>Specifies the month of valid shown with the first three letters of the month, such as Jan; <year>Specifies the year of valid start, ranging between 1993 - 2035; <end-time>Specifies the due of the time period, of which the form should be: <end-time>={<hh:mm:ss> <month> <day> <year> <hh:mm:ss> <day> <month> <year>} <hh:mm:ss>Specify the concrete valid time of send-lifetime in hours, minutes and secon; <seconds>is the valid period of the key in seconding and ranging between 1-2147483646; infinite means the key will never be out of date.
Default	No default configuration.
Mode	keychain-key Mode。
Usage Guide	If only the authentication mode is configured and the key chain or password used by the interface is not configured, authentication will not work at all. If the mode is not configured before configuring this command, the mode will be set to clear text authentication after configuring this command. The no operation of this command will cancel the authentication, but it does not mean that the mode will be set to the non-authentication type, only that the authentication processing will not be performed

	when sending or receiving packets. You can enter ip rip authentication key-chain my key to indicate that the key chain name is my key, which is 6 characters in total.
Example	The example below shows the send-lifetime configuration on the keychain named mychain for key 1. Switch# config terminal Switch(config)# key chain mychain Switch(config-keychain)# key 1 Switch(config-keychain-key)# send-lifetime 03:03:01 Dec 3 2004 04:04:02 Oct 6 2006

timers basic

Command	timers basic <update> <invalid> <garbage> no timers basic Adjust the RIP timer update, timeout, and garbage collecting time. The “no timers basic” command restores each parameter to their default values.
Parameter	<update> time interval of sending update packet, shown in seconds and ranging between 5-2147483647; <invalid> time period after which the RIP route is advertised dead, shown in seconds and ranging between 5-2147483647; <garbage> is the hold time in which the a route remains in the routing table after advertised dead, shown in seconds and ranging between 5-2147483647.
Default	<update> defaulted at 30; <invalid> defaulted at 180; <garbage> defaulted at 120
Mode	router mode
Usage Guide	The system is defaulted broadcasting RIPv4 update packets every 30 seconds; and the route is considered invalid after 180 seconds but still exists for another 120 seconds before it is deleted from the routing table.
Example	Set the RIP update time to 20 seconds and the timeout period to 80 second, the garbage collecting time to 60 seconds. Switch(Config-Router)#timers basic 20 80 60

Version

Command	version {1 2} no version Configure the version of all RIP data packets sent/received by router interfaces: the “no version” restores the default configuration.
Parameter	1 is version 1 rip; 2 is version 2 rip.
Default	Sent and received data packet is version 2 by default.
Mode	Router mode and address-family mode.
Usage Guide	1 refers to that each interface of the layer 3 switch only sends/receives the RIP-I data

	packets. 2 refers to that each interface of the layer 3 switch only sends/receives the RIP-II data packets. The RIP-II data packet is the default version.
Example	Configure the version of all RIP data packets sent/received by router interfaces to version 2. Switch(config-router)#version 2

show ip protocols rip

Command	show ip protocols rip Show the RIP process parameter and statistics information.															
Parameter	-															
Default	-															
Mode	Any mode.															
Usage Guide	-															
Example	<p>show ip protocols rip</p> <p>Routing Protocol is "rip" Sending updates every 30 seconds with +/-50%, next due in 8 seconds</p> <p>Timeout after 180 seconds, garbage collect after 120 seconds</p> <p>Outgoing update filter list for all interface is not set</p> <p>Incoming update filter list for all interface is not set</p> <p>Default redistribution metric is 1</p> <p>Redistributing: static</p> <p>Default version control: send version 2, receive version 2</p> <p>Interface Send Recv Key-chain</p> <p>Vlan1 2 2</p> <p>Routing for Networks:</p> <p>Vlan1</p> <p>Vlan2</p> <p>Routing Information Sources:</p> <p>Gateway Distance Last Update Bad Packets Bad Routes</p> <p>20.1.1.1 120 00:00:31 0 0</p> <table border="1"> <thead> <tr> <th>Displayed information</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>Sending updates every 30 seconds with +/-50%, next due in 8 seconds</td> <td>Sending update every 30 secs</td> </tr> <tr> <td>Timeout after 180 seconds, garbage collect after 120 seconds</td> <td>The route time-out event period is 180 secs, the garbage collect time is 120 seconds</td> </tr> <tr> <td>Outgoing update filter list for all interface is not set</td> <td>Outgoing update filter list for all interface is not set</td> </tr> <tr> <td>Incoming update filter list for all interface is not set</td> <td>Incoming update filter list for all interface is not set</td> </tr> <tr> <td>Default redistribution metric is 1</td> <td>Default redistribution metric is 1</td> </tr> <tr> <td>Redistributing: static</td> <td>Redistributing the static route into the RIP route</td> </tr> </tbody> </table>		Displayed information	Explanation	Sending updates every 30 seconds with +/-50%, next due in 8 seconds	Sending update every 30 secs	Timeout after 180 seconds, garbage collect after 120 seconds	The route time-out event period is 180 secs, the garbage collect time is 120 seconds	Outgoing update filter list for all interface is not set	Outgoing update filter list for all interface is not set	Incoming update filter list for all interface is not set	Incoming update filter list for all interface is not set	Default redistribution metric is 1	Default redistribution metric is 1	Redistributing: static	Redistributing the static route into the RIP route
Displayed information	Explanation															
Sending updates every 30 seconds with +/-50%, next due in 8 seconds	Sending update every 30 secs															
Timeout after 180 seconds, garbage collect after 120 seconds	The route time-out event period is 180 secs, the garbage collect time is 120 seconds															
Outgoing update filter list for all interface is not set	Outgoing update filter list for all interface is not set															
Incoming update filter list for all interface is not set	Incoming update filter list for all interface is not set															
Default redistribution metric is 1	Default redistribution metric is 1															
Redistributing: static	Redistributing the static route into the RIP route															

	Default version control: send version 2, receive version 2 Interface Send Recv Key-chain Ethernet1/3 2 2	The configuration of interface receiving and sending packets. Receive version is 2, keychain 1 not configured.
	Routing for Networks: Vlan1 Vlan2	The segment running RIP is the Vlan 1 and Vlan 2
	Routing Information Sources: Gateway Distance Last Update BadPackets Bad Routes 20.1.1.1 120 00:00:31 0 0	Routing information sources The badpacket and bad routes from the gateway 20.1.1.1 are all 0. 31 seconds have passed since the last route update. The manage distance is 120
	Distance: (default is 120)	Default manage distance is 120

show ip rip

Command	show ip rip Show the routes in the RIP route data base.
Parameter	-
Default	-
Mode	Any mode.
Usage Guide	-
Example	show ip rip Codes: R - RIP, K - Kernel, C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP Network Next Hop Metric From If Time R 12.1.1.0/24 20.1.1.1 2 20.1.1.1 Vlan1 02:51 R 20.1.1.0/24 1 Vlan1 Amongst R stands for RIP route, namely a RIP route with the destination network address 12.1.1.0, the network prefix length as 24, next-hop address at 20.1.1.1. It is learnt from the Ethernet port E1/3 with a metric value of 2, and still has 2 minutes 51 seconds before time out.

show ip rip database

Command	show ip rip database show the routes in the RIP route database.
Parameter	-
Default	-
Mode	Any mode.
Usage Guide	-
Example	Switch# show ip rip database Codes: R - RIP, K - Kernel, C - Connected, S - Static, O - OSPF, I - IS-IS,

	B - BGP				
	Network	Next Hop	Metric	From	If Time
	R	10.1.1.0/24	1		Vlan1
	R	20.1.1.0/24	1		Vlan2

show ip rip interface

Command	show ip rip interface [<ifname>] Show the RIP related messages.
Parameter	<ifname> is the name of the interface to show the messages.
Default	-
Mode	Any mode.
Usage Guide	-
Example	Switch# show ip rip interface vlan 1 Vlan1 is up, line protocol is up Routing Protocol: RIP Receive RIP packets Send RIP packets Passive interface: Disabled Split horizon: Enabled with Poisoned Reversed IP interface address: 10.1.1.1/24

show ip rip aggregate

Command	show ip rip aggregate To display the information of IPv4 aggregation route.																				
Parameter	-																				
Default	-																				
Mode	Admin and Configuration Mode.																				
Usage Guide	This command is used to display which interface the aggregation route be configured, Metric, Count, Suppress and so on. If configured under global mode, then the interface display "----", "Metric" is metric. "Count" is the number of learned aggregation routes. "Suppress" is the times of aggregation.																				
Example	To display the information of IPv4 aggregation route. Switch(Config-if-Vlan1)#show ip rip agg Aggregate information of rip <table border="1"> <thead> <tr> <th>Network</th> <th>Aggregated Ifname</th> <th>Metric</th> <th>Count</th> <th>Suppress</th> </tr> </thead> <tbody> <tr> <td>192.168.0.0/16</td> <td>Vlan1</td> <td>1</td> <td>2</td> <td>0</td> </tr> <tr> <td>192.168.4.0/22</td> <td>----</td> <td>1</td> <td>2</td> <td>0</td> </tr> <tr> <td>192.168.4.0/24</td> <td>----</td> <td>1</td> <td>1</td> <td>1</td> </tr> </tbody> </table>	Network	Aggregated Ifname	Metric	Count	Suppress	192.168.0.0/16	Vlan1	1	2	0	192.168.4.0/22	----	1	2	0	192.168.4.0/24	----	1	1	1
Network	Aggregated Ifname	Metric	Count	Suppress																	
192.168.0.0/16	Vlan1	1	2	0																	
192.168.4.0/22	----	1	2	0																	
192.168.4.0/24	----	1	1	1																	

Vlan1 1 1 1	
Displayed information	Explanation
Network	Route prefix and prefix length.
Aggregated Ifname	To configure the interface name of the aggregation route. If the route aggregated globally, then display "----".
Metric	Metric of aggregation route.
Count	The number of learned aggregation route.
Suppress	The times of aggregated for aggregation route.

show ip rip redistribute

Command	show ip rip redistribute To display the routing information introduced from external process of RIP.
Parameter	-
Default	Not shown by default.
Mode	Admin Mode and Configuration Mode.
Usage Guide	-
Example	Switch#show ip rip redistribute

debug rip

Command	debug rip [events nsm packet[recv send][detail]] all no debug rip [events nsm packet[recv send][detail]] all Open various RIP adjustment switches and show various adjustment debugging messages. The "no debug rip [events nsm packet[recv send][detail]] all" command closes corresponding debugging switch.
Parameter	events shows the debugging messages of RIP events nsm shows the communication messages between RIP and NSM packet shows the debugging messages of RIP data packets recv shows the messages of the received data packets send shows the messages of the sent data packets detail shows the messages of received or sent data packets
Default	Debug switch closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch# debug rip packet

	Switch#1970/01/01 01:01:43 IMI: SEND[Vlan1]: Send to 224.0.0.9:520 1970/01/01 01:01:43 IMI: SEND[Vlan1]: Send to 224.0.0.9:520 1970/01/01 01:01:47 IMI: RECV[Vlan1]: Receive from 20.1.1.2:520
--	--

debug rip redistribute route receive

Command	debug rip redistribute route receive no debug rip redistribute route receive To enable debugging of received messages from NSM for RIP. The no form of this command will disable debugging of received messages from NSM for RIP.
Parameter	-
Default	Close the debug by default.
Mode	Admin mode
Usage Guide	-
Example	Switch#debug rip redistribute route receive Switch#no debug rip redistribute route receive

debug rip redistribute message send

Command	debug rip redistribute message send no debug rip redistribute message send To enable the debugging of sending messages for routing redistribution messages from OSPF process or BGP protocol for RIP. The no form of this command will disable the debugging messages.
Parameter	-
Default	Close the debug by default.
Mode	Admin mode
Usage Guide	-
Example	Switch#debug rip redistribute message send Switch#no debug rip redistribute message send

16.2. Commands for OSPF

area authentication

Command	area <id> authentication [message-digest] no area <id> authentication Configure the authentication mode of the OSPF area; the “no area <id> authentication” command restores the default value.
Parameter	<id> is the area number which could be shown in digit, ranging from 0 to 4294967295, or in IP address message-digest is proved by MD5 authentication, or be proved by simple plaintext authentication if not choose this parameter.

Default	No authentication.
Mode	OSPF protocol mode
Usage Guide	Set the authentication mode to plaintext authentication or MD5 authentication. The authentication mode is also configurable under interface mode of which the priority is higher than those in the area. It is required to use ip ospf authentication-key to set the password while no authentication mode configured at the interface and the area is plaintext authentication, and use ip ospf message-digest key command to configure MD5 key if is MD5 authentication. The area authentication mode could not affect the authentication mode of the interface in this area.
Example	Set the authentication mode in area 0 to MD5. Switch(config-router)#area 0 authentication message-digest

area default-cost

Command	area <id> default-cost <cost> no area <id> default-cost Configure the cost of sending to the default summary route in stub or NSSA area; the “no area <id> default-cost” command restores the default value.
Parameter	<id> is the area number which could be shown as digits 0~4294967295, or as an IP address; <cost> ranges between <0-16777215>
Default	Default OSPF cost is 1.
Mode	OSPF protocol mode
Usage Guide	The command is only adaptive to the ABR router connected to the stub area or NSSA area.
Example	Set the default-cost of area 1 to 10. Switch(config-router)#area 1 default-cost 10

area filter-list

Command	[no] area <id> filter-list {access prefix} {in out} Configure the filter broadcasting summary routing on the ABR; the “no area <id> filter-list {access prefix} {in out}” command restores the default value.
Parameter	<id> is the area number which could be shown in digits ranging between 0~4294967295, or as an IP address; access-list is appointed for use in access, so is prefix-list for prefix; <name> is the name of the filter, the length of which is between 1-256; in means from other areas to this area, out means from this area to other areas.
Default	No filter configured.
Mode	OSPF protocol mode
Usage Guide	This command is used for restraining routes from specific area from spreading between this area and other areas.
Example	Set a filter on the area 1. Switch(config)#access-list 1 deny 172.22.0.0 0.0.0.255 Switch(config)#access-list 1 permit any-source

	Switch(config)#router ospf 100 Switch(config-router)#area 1 filter-list access 1 in
--	--

area nssa

Command	area <id> nssa [TRANSLATOR no-redistribution DEFAULT-ORIGINATE no-summary] no area <id> nssa[TRANSLATOR no-redistribution DEFAULT-ORIGINATE no-summary] Set the area to Not-So-Stubby-Area (NSSA) area.
Parameter	<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address. TRANSLATOR = translator-role {candidate never always}, specifies the LSA translation mode for routes: candidate means if the router is elected translator, Type 7 LSA can be translated to Type-5 LSA, the default is candidate. never means the router will never translate Type 7 LSA to Type 5 LSA. always means the route always translate Type 7 LSA to Type 5 LSA. no-redistribution means never distribute external-LSA to NSSA. DEFAULT-ORIGINATE=default-information-originate [metric <0-16777214>] [metric-type <1-2>] , generate the Type-7 LSA. metric <0-16777214> specifies the metric value. metric-type <1-2> specifies the metric value type of external-LSA , default value is 2. no-summary shows not injecting area route to the NSSA.
Default	No NSSA area defined by default.
Mode	OSPF protocol mode
Usage Guide	The same area can not be both NSSA and stub at the same time.
Example	Set area 3 to NSSA. Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#area 0.0.0.51 nssa Switch(config-router)#area 3 nssa default-information-originate metric 34 metric-type 2 translator-role candidate no-redistribution

area range

Command	area <id> range <address> [advertise not-advertise substitute] no area <id> range <address> Aggregate OSPF route on the area border. The “no area <id> range <address>” cancels this function.
Parameter	<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address.;

	<p><address>=<A.B.C.D/M>, specifies the area network prefix and its length.;</p> <p>advertise: Advertise this area, which is the default;</p> <p>not-advertise : Not advertise this area;</p> <p>substitute= substitute <A.B.C.D/M>: advertise this area as another prefix;</p> <p><A.B.C.D/M>: Replace the network prefix to be advertised in this area.</p>
Default	Not set.
Mode	OSPF protocol mode
Usage Guide	Use this command to aggregate routes inside an area. If the network IDs in this area are not configured continuously, a summary route can be advertised by configuring this command on ABR. This route consists of all single networks belong to specific range.
Example	<pre>Switch # config terminal Switch (config)# router ospf 100 Switch (config-router)# area 1 range 192.16.0.0/24</pre>

area stub

Command	<pre>area <id> stub [no-summary] no area <id> stub [no-summary]</pre> <p>Define an area to a stub area. The “no area <id> stub [no-summary]” command cancels this function.</p>
Parameter	<p><id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address;</p> <p>no-summary: The area border routes stop sending link summary announcement to the stub area.</p>
Default	Not defined.
Mode	OSPF protocol mode
Usage Guide	Configure area stub on all routes in the stub area. There are two configuration commands for the routers in the stub area: stub and default-cost. All routers connected to the stub area should be configured with area stub command. As for area border routers connected to the stub area, their introducing cost is defined with area default-cost command.
Example	<pre>Switch # config terminal Switch (config)# router ospf 100 Switch (config-router)# area 1 stub</pre>

area virtual-link

Command	<pre>area <id> virtual-link A.B.C.D {AUTHENTICATION AUTH_KEY INTERVAL} no area <id> virtual-link A.B.C.D [AUTHENTICATION AUTH_KEY INTERVAL]</pre> <p>Configure a logical link between two backbone areas physically divided by non-backbone area. The “no area <id> virtual-link A.B.C.D [AUTHENTICATION AUTH_KEY INTERVAL]” command removes this virtual-link.</p>
Parameter	<id> is the area number which could be digits ranging between 0~4294967295, and

	<p>also as an IP address.</p> <p>AUTHENTICATION = authentication [message-digest[message-digest-key <1-255> md5 <LINE>] null AUTH_KEY].</p> <p>authentication : Enable authentication on this virtual link.</p> <p>message-digest: Authentication with MD-5.</p> <p>null : Overwrite password or packet summary with null authentication.</p> <p>AUTH_KEY= authentication-key <key>.</p> <p><key>: A password consists of less than 8 characters.</p> <p>INTERVAL= [dead-interval hello-interval message-digest-key<1-255>md5<LINE> retransmit-interval transmit-delay] <value>.</p> <p><value>:>: The delay or interval seconds, ranging between 1~65535.</p> <p><dead-interval>: A neighbor is considered offline for certain dead interval without its group messages which the default is 40 seconds.</p> <p><hello-interval>: The time interval before the router sends a hello group message, default is 10 seconds.</p> <p><message-digest-key>: Authentication key with MD-5.</p> <p><retransmit-interval>: The time interval before a router retransmitting a group message, default is 5 seconds.</p> <p><transmit-delay>: The time delay before a router sending a group messages, default is 1 second.</p>
Default	No default configuration.
Mode	OSPF protocol mode
Usage Guide	In the OSPF all non-backbone areas will be connected to a backbone area. If the connection to the backbone area is lost, virtual link will repair this connection. You can configure virtual link between any two backbone area routers connected with the public non-backbone area. The protocol treat routers connected by virtual links as a point-to-point network.
Example	<pre>Switch#config terminal Switch(config) #router ospf 100 Switch(config-router) #area 1 virtual-link 10.10.11.50 hello 5 dead 20</pre>

auto-cost reference-bandwidth

Command	<p>auto-cost reference-bandwidth <bandwidth></p> <p>no auto-cost reference-bandwidth</p> <p>This command sets the way in which OSPF calculate the default metric value. The “no auto-cost reference-bandwidth” command only configures the cost to the interface by types.</p>
Parameter	<bandwidth>: reference bandwidth in Mbps, ranging between 1~4294967.
Default	Default bandwidth is 100Mbps.
Mode	OSPF protocol mode
Usage Guide	The interface metric value is acquired by divide the interface bandwidth with reference bandwidth. This command is mainly for differentiate high bandwidth links. If several high bandwidth links exist, their cost can be assorted by

	configuring a larger reference bandwidth value.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#auto-cost reference-bandwidth 50

compatible rfc1583

Command	compatible rfc1583 no compatible rfc1583 This command configures to rfc1583 compatible. The “no compatible rfc1583” command close the compatibility.
Parameter	-
Default	Rfc 2328 compatible by default.
Mode	OSPF protocol mode
Usage Guide	-
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#compatible rfc1583

clear ip ospf process

Command	clear ip ospf [<process-id>] process Use this command to clear and restart OSPF routing processes. One certain OSPF process will be cleared by specifying the process ID, or else all OSPF processes will be cleared.
Parameter	-
Default	No default configuration.
Mode	Admin mode.
Usage Guide	-
Example	Switch#clear ip ospf process

default-information originate

Command	default-information originate [always METRIC METRICTYPE ROTEMAP] no default-information originate This command create a default external route to OSPF route area; the “no default-information originate” closes this feature.
Parameter	always: Whether default route exist in the software or not, the default route is always advertised. METRIC = metric <value>: Set the metric value for creating default route, <value> ranges between 0~16777214, default metric value is 0. METRICTYPE = metric-type {1 2}set the OSPF external link type of default route. 1 Set the OSPF external type 1 metric value. 2 Set the OSPF external type 2 metric value.

	ROTEMAP = route-map <WORD> <WORD> specifies the route map name to be applied.
Default	Default metric value is 10; default OSPF external link type is 2.
Mode	OSPF protocol mode
Usage Guide	When introducing route into OSPF route area with this command, the system will behaves like an ASBR.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#default-information originate always metric 23 metric-type 2 route-map myinfo

default-metric

Command	default-metric <value> no default-metric The command set the default metric value of OSPF routing protocol; the “no default-metric” returns to the default state.
Parameter	<value>, metric value, ranging between 0~16777214.
Default	Built-in, metric value auto translating.
Mode	OSPF protocol mode
Usage Guide	When the default metric value makes the metric value not compatible, the route introducing still goes through. If the metric value can not be translated, the default value provides alternative option to carry the route introducing on. This command will result in that all introduced route will use the same metric value. This command should be used associating redistribute.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#default-metric 100

Distance

Command	distance {<value> ROUTEPARAMETER} no distance ospf Configure OSPF manage distance base on route type. The “no distance ospf” command restores the default value.
Parameter	<value>, OSPF routing manage distance, ranging between 1~235 ROUTEPARAMETER= ospf {ROUTE1 ROUTE2 ROUTE3} ROUTE1= external <external-distance>, Configure the distance learnt from other routing area. <external-distance> distance value, ranging between 1~255. ROUTE2= inter-area <inter-distance>, configure the distance value from one area to another area. <inter-distance> manage distance value, ranging between 1~255. ROUTE3= intra-area <intra-distance> Configure all distance values in one area. <intra-distance> Manage distance value, ranging between 1~255.
Default	Default distance value is 110.

Mode	OSPF protocol mode
Usage Guide	Manage distance shows the reliability of the routing message source. The distance value may range between 1~255. The larger the manage distance value is, the lower is its reliability.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#distance ospf inter-area 20 intra-area 10 external 40

Distribute-list

Command	<pre>distribute-list <access-list-name> out {kernel connected static rip isis bgp} no distribute-list out {kernel connected static rip isis bgp} Filter network in the routing update. The “no distribute-list out {kernel connected static rip isis bgp}” command disables this function.</pre>
Parameter	<p>< access-list-name> is the access-list name to be applied.</p> <p>out: Filter the sent route update.</p> <p>kernel Kernel route.</p> <p>connected Direct route;</p> <p>static Static route;</p> <p>rip RIP route;</p> <p>isis ISIS route;</p> <p>bgp BGP route.</p>
Default	No default configuration.
Mode	OSPF protocol mode
Usage Guide	When distributing route from other routing protocols into the OSPF routing table, we can use this command.
Example	<p>Example below is the advertisement based on the access-list list 1 of the BGP route.</p> <pre>Switch#config terminal Switch(config)#access-list 11 permit 172.10.0.0 0.0.255.255 Switch(config)#router ospf 100 Switch(config-router)#redistribute rip Switch(config-router)#distribute-list 1 out rip</pre>

Filter-policy

Command	<pre>filter-policy <access-list-name> no filter-policy Use access list to filter the route obtained by OSPF, the no command cancels the route filtering.</pre>
Parameter	<access-list-name> Access list name will be applied, it can use numeric standard IP access list and naming standard IP access list to configure.
Default	No default configuration.
Mode	OSPF protocol mode
Usage Guide	This command is used to filter the route obtained by OSPF. Do not filter any routes

	when the specified access list is not exist, for the routes which do not match permit rule of access list, they will be filtered. One access list can be set for this command, only the last configuration takes effect when configuring many times.
Example	Use access list 1 to filter the routes which do not belong to 172.10.0.0/16 segment. Switch#config terminal Switch(config)#access-list 1 permit 172.10.0.0 0.0.255.255 Switch(config)#router ospf Switch(config-router)#filter-policy 1

Host area

Command	host <host-address> area <area-id> [cost <cost>] no host <host-address> area <area-id> [cost <cost>] Use this command to set a stub host entire belongs to certain area. The “[no] host <host-address> area <area-id> [cost <cost>]” command cancels this configuration.
Parameter	<host-address> is host IP address show in dotted decimal notation. <area-id> area ID shown in dotted decimal notation or integer ranging between 0~4294967295. <cost> specifies the entire cost, which is a integer ranging between 0~65535 and defaulted at 0.
Default	No entire set.
Mode	OSPF protocol mode
Usage Guide	With this command you can advertise certain specific host route out as stub link. Since the stub host belongs to special router in which setting host is not important.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#host 172.16.10.100 area 1 Switch(config-router)#host 172.16.10.101 area 2 cost 10

ip ospf authentication

Command	ip ospf [<ip-address>] authentication [message-digest null] no ip ospf [<ip-address>] authentication Specify the authentication mode required in sending and receiving OSPF packets on the interfaces; the “no ip ospf [<ip-address>] authentication” command cancels the authentication.
Parameter	<ip-address> is the interface IP address, shown in dotted decimal notation. message-digest: Use MD5 authentication. null: no authentication applied, which resets the password or MD5 authentication applied on the interface.
Default	Authentication not required in receiving OSPF packets on the interface.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch#config terminal Switch(config)#interface vlan 1

	Switch(config-if-vlan1)#ip ospf authentication message-digest
--	---

ip ospf authentication-key

Command	ip ospf [<ip-address>] authentication-key <0 LINE 7 WORD LINE> no ip ospf [<ip-address>] authentication Specify the authentication key required in sending and receiving OSPF packet on the interface; the no command cancels the authentication key.
Parameter	<ip-address> is the interface IP address shown in dotted decimal notation; <LINE> specifies authentication key. If key option is 0, specify plaintext key. If key option is 7, specify encrypted string. If no option, specify plaintext key by default.
Default	Authentication not required in receiving OSPF packets on the interface.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(Config-if-Vlan1)#ip ospf authentication-key 0 password

ip ospf cost

Command	ip ospf [<ip-address>] cost <cost> no ip ospf [<ip-address>] cost Specify the cost required in running OSPF protocol on the interface; the “no ip ospf [<ip-address>] cost” command restores the default value.
Parameter	<ip-address> is the interface IP address shown in dotted decimal notation. <cost > is the cost of OSPF protocol ranging between 1~65535.
Default	Default OSPF cost on the interface is auto-figure out based bandwidth.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf cost 3

ip ospf database-filter

Command	ip ospf [<ip-address>] database-filter all out no ip ospf [<ip-address>] database-filter The command opens LSA database filter switch on specific interface; the “no ip ospf [<ip-address>] database-filter” command closes the filter switch.
Parameter	<ip-address> is the interface IP address shown in dotted decimal notation; all: All LSAs. out: Sent LSAs.
Default	Filter switch Closed.
Mode	Interface Configuration Mode.

Usage Guide	-
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf database-filter all out

ip ospf dead-interval

Command	ip ospf [<ip-address>] dead-interval <time > no ip ospf [<ip-address>] dead-interval Specify the dead interval for neighboring layer 3 switch; the “no ip ospf [<ip-address>] dead-interval” command restores the default value.
Parameter	<ip-address>is the interface IP address shown in dotted decimal notation; <time > is the dead interval length of the neighboring layer 3 switches, shown in seconds and ranging between 1~65535.
Default	The default dead interval is 40 seconds (normally 4 times of the hello-interval).
Mode	Interface Configuration Mode.
Usage Guide	If no Hello data packet received after the dead-interval period then this layer 3 switch is considered inaccessible and invalid. This command modifies the deadinterval value of neighboring layer 3 switch according to the actual link state. The set dead-interval value is written into the Hello packet and transmitted. To ensure the normal operation of the OSPF protocol, the dead-interval between adjacent layer 3 switches should be in accordance or at least 4 times of the hello-interval value.
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf dead-interval 80

ip ospf disable all

Command	ip ospf disable all no ip ospf disable all Stop OSPF group process on the interface.
Parameter	-
Default	-
Mode	Interface Configuration Mode.
Usage Guide	This command resets the network area command and stops group process on specific interface.
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf disable all

ip ospf hello-interval

Command	ip ospf [<ip-address>] hello-interval <time>
---------	--

	no ip ospf [<ip-address>] hello-interval Specify the hello-interval on the interface; the “no ip ospf [<ip-address>] hello-interval” restores the default value.
Parameter	<ip-address> is the interface IP address shown in dotted decimal notation; <time>is the interval sending HELLO packet, shown in seconds and ranging between 1~65535.
Default	The hello-interval on the interface is 10 seconds.
Mode	Interface Configuration Mode.
Usage Guide	HELLO data packet is the most common packet which is periodically sent to adjacent layer 3 switch to discover and maintain adjacent relationship, elect DR and BDR. The user set hello-interval value will be written into the HELLO packet and transmitted. The less the hello-interval value is, the sooner the network topological structure is discovered as well larger the cost. The ensure the normal operation of OSPF protocol the hello-interval parameter between the layer 3 switches adjacent to the interface must be in accordance.
Example	Switchnfig terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf hello-interval 20

ip ospf message-digest-key

Command	ip ospf [<ip-address>] message-digest-key <key_id> MD5 <0 LINE 7 WORD LINE> no ip ospf [<ip-address>] message-digest-key <key_id> Specify the key id and value of MD5 authentication on the interface; the no command restores the default value.
Parameter	<ip-address>is the interface IP address show in dotted decimal notation; <key_id>ranges between 1-255; <LINE>is OSPF key. If key option is 0, specify plaintext key. If key option is 7, specify encrypted string. If no option, specify plaintext key by default.
Default	MD5 key is not configured.
Mode	Interface Configuration Mode.
Usage Guide	MD5 key encrypted authentication is used for ensure the safety between the OSPF routers on the network. Same key id and key should be configured between neighbors when using this command, or else no adjacent relationship will not be created.
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf message-digest-key 2 MD5 0 yourpassword

ip ospf mtu

Command	ip ospf mtu <mtu> no ip ospf mtu Specify the mtu value of the interface as the OSPF group structure according; the “no
---------	--

	ip ospf mtu" command restores the default value.
Parameter	<mtu > is the interface mtu value ranging between 576~65535
Default	Use the interface mtu acquired from the kernel.
Mode	Interface Configuration Mode.
Usage Guide	The interface value configured by this command is only used by OSPF protocol other than updated into kernel.
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf mtu 1480

ip ospf mtu-ignore

Command	ip ospf <ip-address> mtu-ignore no ip ospf <ip-address> mtu-ignore Use this command so that the mtu size is not checked when switching DD; the "no ip ospf <ip-address> mtu-ignore" will ensure the mtu size check when performing DD switch.
Parameter	<ip-address>is the interface IP address show in dotted decimal notation.
Default	Check mtu size in DD switch.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf mtu-ignore

ip ospf network

Command	ip ospf network {broadcast non-broadcast point-to-point point-to-multipoint} no ip ospf network This command configures the OSPF network type of the interface; the "no ip ospf network" command restores the default value.
Parameter	broadcast: Set the OSPF network type to broadcast. non-broadcast: Set the OSPF network type to NBMA. point-to-point: Set the OSPF network type to point-to-point. point-to-multipoint: Set the OSPF network type to point-to-multipoint.
Default	The default OSPF network type is broadcast.
Mode	Interface Configuration Mode.
Usage Guide	-
Example	The configuration below set the OSPF network type of the interface vlan 1 to point-to-point. Switch#config terminal Switch(config)#interface vlan 1

Switch(config-if-vlan1)#ip ospf network point-to-point
--

ip ospf priority

Command	ip ospf [<ip-address>] priority <priority> no ip ospf [<ip-address>] priority Configure the priority when electing “Defined layer 3 switch” at the interface. The “no ip ospf [<ip-address>] priority” command restores the default value.
Parameter	<ip-address>is the interface IP address show in dotted decimal notation. <priority> is the priority of which the valid value ranges between 0~255.
Default	The default priority when electing DR is 1.
Mode	Interface Configuration Mode.
Usage Guide	When two layer 3 switches connected to the same segments both want to be the “Defined layer 3 switch”, the priority will decide which one should be chosen. Normally the one with higher priority will be elected, or the one with larger router-id number if the priorities are the same. A layer 3 switch with a priority equal to 0 will not be elected as “Defined layer 3 switch” or “Backup Defined layer 3 switch”.
Example	Configure the priority of DR electing. Configure the interface vlan 1 to no election right, namely set the priority to 0. Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf priority 0

ip ospf retransmit-interval

Command	ip ospf [<ip-address>] retransmit-interval <time> no ip ospf [<ip-address>] retransmit-interval Specify the retransmit interval of link state announcements between the interface and adjacent layer 3 switches. The “no ip ospf [<ip-address>] retransmit-interval” command restores the default value.
Parameter	<ip-address>is the interface IP address show in dotted decimal notation. <time>is the retransmit interveral of link state announcements between the interface and adjacent layer 3 switches, shown in seconds ang raning between 1~65535.
Default	Default retransmit interval is 5 seconds.
Mode	Interface Configuration Mode.
Usage Guide	When a layer 3 switch transmits LSA to its neighbor, it will maintain the link state announcements till confirm from the object side is received. If the confirm packet is not received within the interval, the LSA will be retransmitted. The retransmit interval must be larger than the time it takes to make a round between two layer 3 switches.
Example	Configure the LSA retransmit interval of interface vlan 1 to 10 seconds. Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf retransmit-interval 10

ip ospf transmit-delay

Command	ip ospf [<ip-address>] transmit-delay <time> no ip ospf [<ip-address>] transmit-delay Set the transmit delay value of LSA transmitting; the “no ip ospf [<ip-address>] transmit-delay” restores the default value.
Parameter	<ip-address>is the interface IP address show in dotted decimal notation. <time>is the transmit delay value of link state announcements between the interface and adjacent layer 3 switches, shown in seconds ang raning between 1~65535.
Default	Default transmit delay value of link state announcements is 1 second.
Mode	Interface Configuration Mode.
Usage Guide	The LSA ages with time in the layer 3 switches, but not in the network transmitting process. By adding the transit-delay prior to sending the LSA, the LSA will be sent before aged.
Example	Set the LSA transmit delay of interface vlan1 to 3 seconds. Switch#config terminal Switch(config)#interface vlan 1 Switch(config-if-vlan1)#ip ospf transmit-delay 3

Key

Command	key <keyid> no key <keyid> This command is for managing and adding keys in the key chain. The “no key <keyid>” command deletes one key.
Parameter	<keyid>is key ID, ranging between 0-2147483647.
Default	-
Mode	keychainMode and keychain-keyMode。
Usage Guide	The command permits entering the keychain-key mode and set the passwords corresponding to the keys.
Example	Switch#config terminal Switch(config)#key chain mychain Switch(config-keychain)#key 1 Switch(config-keychain-key)#

key chain

Command	key chain <name-of-chain> no key chain < name-of-chain > This command is for entering a keychain manage mode and configure a keychain. The “no key chain < name-of-chain >” command deletes one keychain.
Parameter	<name-of-chain>is the name string of the keychain the length of which is not specifically limited.
Default	-

Mode	Global Mode and keychain Mode。
Usage Guide	-
Example	Switch#config terminal Switch(config)#key chain mychain Switch(config-keychain)#

log-adjacency-changes detail

Command	log-adjacency-changes detail no log-adjacency-changes detail Configure to keep a log for OSPF adjacency changes or not.
Parameter	-
Default	Don't I keep a log for OSPF adjacency changes by default.
Mode	OSPF Protocol Configuration Mode
Usage Guide	When this command is configured, the OSPF adjacency changes information will be recorded into a log.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)# log-adjacency-changes detail

max-concurrent-dd

Command	max-concurrent-dd <value> no max-concurrent-dd This command set the maximum concurrent number of dd in the OSPF process; the "no max-concurrent-dd" command restores the default.
Parameter	<value>ranges between <1-65535>, which is the capacity of processing the concurrent dd data packet.
Default	Not set, no concurrent dd limit.
Mode	OSPF protocol mode
Usage Guide	Specify the max concurrent number of dd in the OSPF process.
Example	Set the max concurrent dd to 20. Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#max-concurrent-dd 20

Neighbor

Command	neighbor A.B.C.D [<cost> priority <value> poll-interval <value>] no neighbor A.B.C.D [<cost> priority <value> poll-interval <value>] This command configures the OSPF router connecting NBMA network. The "no neighbor A.B.C.D [<cost> priority <value> poll-interval <value>]" command removes this configuration.
Parameter	<cost>, OSPF neighbor cost value ranging between 1-65535;

	priority <value> , neighbor priority defaulted at 0 and ranges between 0-255; poll-interval <value>, 120s by default, which the polling time before neighbor relationship come into shape , ranging between 1-65535.
Default	No default configuration.
Mode	OSPF protocol mode
Usage Guide	Use this command on NBMA network to configure neighbor manually. Every known non-broadcasting neighbor router should be configured with a neighbor entry. The configured neighbor address should be the main address of the interface. The poll-interval should be much larger than the hello-interval.
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#neighbor 1.2.3.4 priority 1 poll-interval 90 Switch(config-router)#neighbor 1.2.3.4 cost 15

network area

Command	network NETWORKADDRESS area <area-id> no network NETWORKADDRESS area <area-id> This command enables OSPF routing function one the interface with IP address matched with the network address. The “no network NETWORKADDRESS area <area-id>” command removes the configuration and stop OSPF on corresponding interface.
Parameter	NETWORKADDRESS = A.B.C.D/M A.B.C.D X.Y.Z.W, Shown with the network address prefix or the mask. Wildcast mask if shown in mask; <area-id>is the ip address or area number shown in point divided demical system, if shown in demcial integer, it ranges between 0~4294967295.
Default	No default configuration
Mode	OSPF protocol mode
Usage Guide	When certain segment belongs to certain area, interface the segment belongs will be in this area, starting hello and database interaction with the connected neighbor.
Example	Configuration 10.1.1.0/24 is in area 1. Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#network 10.1.1.0/24 area 1

ospf abr-type

Command	ospf abr-type {cisco ibm shortcut standard} no ospf abr-type Use this command to configure an OSPF ABR type. The “no ospf abr-type” command restores the default value.
Parameter	cisco , Realize through cisco ABR; ibm , Realize through ibm ABR; shortcut , Specify a shortcut-ABR;

	standard , Realize with standard(RFC2328)ABR.
Default	Cisco by default.
Mode	OSPF protocol mode
Usage Guide	For Specifying the realizing type of abr. This command is good for interactive operation among different OSPF realizing method and is especially useful in the multiple host environment.
Example	Configure abr as standard. Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#ospf abr-type standard

ospf router-id

Command	ospf router-id <address> no ospf router-id Specify a router ID for the OSPF process. The “no ospf router-id” command cancels the ID number.
Parameter	<address> , IPv4 address format of router-id.
Default	No default configuration
Mode	OSPF protocol mode
Usage Guide	The new router-id takes effect immediately.
Example	Configure router-id of ospf 100 to 2.3.4.5. Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#ospf router-id 2.3.4.5

overflow database

Command	overflow database <maxdbsize > [{hard soft}] no overflow database This command is for configuring the max LSA number. The “no overflow database” command cancels the limit.
Parameter	< maxdbsize > Max LSA numbers, ranging between 0~4294967294. soft: Soft limit, warns when border exceeded. hard: Hard limit, directly close ospf instance when border exceeded. If there is not soft or hard configured, the configuration is taken as hard limit.
Default	Not configured
Mode	OSPF protocol mode
Usage Guide	-
Example	Switch#config terminal Switch(config)#router ospf Switch(config-router)#overflow database 10000 soft

overflow database external

Command	<code>overflow database external [<maxdbsize > <maxtime>]</code> <code>no overflow database external [<maxdbsize > <maxtime>]</code> The command is for configuring the size of external link database and the waiting time before the route exits overflow state. The “no overflow database external [<maxdbsize > <maxtime>]” restores the default value.
Parameter	< maxdbsize > size of external link database, ranging between 0~4294967294, defaulted at 4294967294. < maxtime > the seconds the router has to wait before exiting the database overflow, ranging between 0~65535.
Default	-
Mode	OSPF protocol mode
Usage Guide	-
Example	Switch#config terminal Switch(config)#router ospf Switch(config-router)#overflow database external 5 3

passive-interface

Command	<code>passive-interface<ifname> [<ip-address>]</code> <code>no passive-interface<ifname> [<ip-address>]</code> Configure that the hello group not sent on specific interfaces. The “no passive-interface <ifname> [<ip-address>]”command cancels this function.
Parameter	<ifname> is the specific name of interface. <ip-address> IP address of the interface in dotted decimal format.
Default	Not configured
Mode	OSPF protocol mode
Usage Guide	-
Example	Switch#config terminal Switch(config)#router ospf Switch(config-router)#passive-interface vlan1

Redistribute

Command	<code>redistribute {kernel connected static rip isis bgp} [metric<value>] [metric-type {1 2}][route-map<word>][tag<tag-value>]</code> <code>no redistribute {kernel connected static rip isis bgp} [metric<value>] [metric-type {1 2}][route-map<word>][tag<tag-value>]</code> Introduce route learnt from other routing protocols into OSPF.
Parameter	kernel introduce from kernel route. connected introduce from direct route. static introduce from static route. rip introduce from the RIP route.

	<p>isis introduce from ISIS route.</p> <p>bgp introduce from BGP route.</p> <p>metric <value> is the introduced metric value, ranging between 0-16777214.</p> <p>metric-type {1 2} is the metric value type of the introduced external route, which can be 1 or 2, and it is 2 by default.</p> <p>route-map <word> point to the probe of the route map for introducing route.</p> <p>tag<tag-value> external identification number of the external route, ranging between 0~4294967295, defaulted at 0.</p>
Default	-
Mode	OSPF protocol mode
Usage Guide	Learn and introduce other routing protocol into OSPF area to generate AS-external_LSAs.
Example	<pre>Switch#config terminal Switch(config)#router ospf Switch(config-router)#redistribute bgp metric 12</pre>

Redistribute ospf

Command	<pre>redistribute ospf [<process-id>] [metric<value>] [metric-type {1 2}][route-map<word>] no redistribute ospf [<process-id>] [metric<value>] [metric-type {1 2}] [route-map<word>]</pre> <p>To redistribute of process ID routing to this process. The no form of command deletes the redistribution of process ID routing to this process. When input the optional parameters of metric, metric type and routemap, then restores default configuration.</p>
Parameter	<p>process-id is OSPF process ID, 0 by default.</p> <p>metric <value> is the metric for redistributed routing, range between 0 to 16777214.</p> <p>metric-type {1 2} is the metric type for redistributed routing, only can be 1 or 2, and 2 by default.</p> <p>route-map <word> is the pointer to the introduced routing map.</p>
Default	Not redistributed any OSPF routing by default.
Mode	OSPF protocol mode
Usage Guide	When process-id is not input, that means OSPF routing will be redistributed by default (Process-id is 0).
Example	<pre>Switch(config-router)#redistribute ospf</pre>

router ospf

Command	<pre>router ospf <process_id> no router ospf <process_id></pre> <p>This command is for relating the OSPF process.</p>
Parameter	<process_id> specifies the ID of the OSPF process to be created, the ranging from 1 to 65535.
Default	-

Mode	Global Mode。
Usage Guide	-
Example	Switch#config terminal Switch(config)#router ospf 100 Switch(config-router)#network 10.1.1.0/24 area 0

summary-address

Command	summary-address <A.B.C.D/M> [{not-advertise tag<tag-value>}] Summarize or restrain external route with specific address scope.
Parameter	<A.B.C.D/M> address scope, shown in dotted decimal notation IPv4 address plus mask length. not-advertised restrain the external routes. tag<tag-value> is the identification label of the external routes, which ranges between 0~4294967295, and is defaulted at 0.
Default	-
Mode	OSPF protocol mode
Usage Guide	When routes are introduced into OSPF from other routing protocols, it is required to advertise every route in a external LSA. This command is for advertise one summary route for those introduced routes contained in specific network address and masks, which could greatly reduces the size of the link state database.
Example	Switch#config terminal Switch(config)#router ospf Switch(config-router)#summary-address 172.16.0.0/16 tag 3

timers spf

Command	timers spf <spf-delay> <spf-holdtime> no timers spf Adjust the value of the route calculating timer. The “no timers spf” command restores relevant values to default.
Parameter	<spf-delay> 5 seconds by default. <spf-holdtime> 10 seconds by default.
Default	-
Mode	OSPF protocol mode
Usage Guide	This command configures the delay time between receiving topology change and SPF calculation, further configured the hold item between two discontinuous SPF calculation.
Example	Switch#config terminal Switch(config)#router ospf Switch(config-router)#timers spf 5 10

show ip ospf

Command	show ip ospf [<process-id> Display OSPF main messages.
Parameter	<process-id> is the process ID, ranging between 0~65535.
Default	Not displayed
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	<pre>Switch#show ip ospf Routing Process "ospf 0" with ID 192.168.1.1 Process bound to VRF default Process uptime is 2 days 0 hour 30 minutes Conforms to RFC2328, and RFC1583Compatibility flag is disabled Supports only single TOS(TOS0) routes Supports opaque LSA SPF schedule delay 5 secs, Hold time between two SPFs 10 secs Refresh timer 10 secs Number of external LSA 0. Checksum Sum 0x000000 Number of opaque AS LSA 0. Checksum Sum 0x000000 Number of non-default external LSA 0 External LSA database is unlimited. Number of LSA originated 0 Number of LSA received 0 Number of areas attached to this router: 1 Area 0 (BACKBONE) (Inactive) Number of interfaces in this area is 0(0) Number of fully adjacent neighbors in this area is 0 Area has message digest authentication SPF algorithm executed 0 times Number of LSA 0. Checksum Sum 0x000000 Routing Process "ospf 10" with ID 0.0.0.0 Process bound to VRF test Process uptime is 4 days 23 hours 51 minutes Conforms to RFC2328, and RFC1583Compatibility flag is disabled Supports only single TOS(TOS0) routes Supports opaque LSA SPF schedule delay 5 secs, Hold time between two SPFs 10 secs Refresh timer 10 secs Number of external LSA 0. Checksum Sum 0x000000 Number of opaque AS LSA 0. Checksum Sum 0x000000 Number of non-default external LSA 0 External LSA database is unlimited. Number of LSA originated 0 Number of LSA received 0 Number of areas attached to this router: 1 Area 0 (BACKBONE) (Inactive)</pre>

	Number of interfaces in this area is 0(0) Number of fully adjacent neighbors in this area is 0 Area has no authentication SPF algorithm executed 0 times Number of LSA 0. Checksum Sum 0x000000
--	---

show ip ospf border-routers

Command	show ip ospf [<process-id>] border-routers Display the intra-domain route entries for the switch to reach ABR and ASBR of all instances.
Parameter	<process-id> is the process ID, ranging between 0~65535.
Default	Not displayed
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	Switch#show ip ospf border-routers OSPF process 0 internal Routing Table Codes: i - Intra-area route, I - Inter-area route i 10.15.0.1 [10] via 10.10.0.1, Vlan1, ASBR, Area 0.0.0.0 i 172.16.10.1 [10] via 10.10.11.50, Vlan2, ABR, ASBR, Area 0.0.0.0

show ip ospf database

Command	show ip ospf [<process-id>] database[{{adv-router [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]asbr-summary[{{linkstate_id}} self-originate adv-router <advertiser_router>] external [{{linkstate_id}} self-originate adv-router <advertiser_router>] network [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]nssa-external [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]opaque-area [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]opaque-as [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]opaque-link [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]router [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]summary [{{linkstate_id}} self-originate adv-router <advertiser_router>}}]self-originate max-age }} Display the OSPF link state data base messages.
Parameter	<process-id> is the process ID, ranging between 0~65535 <linkstate_id> Link state ID, shown in point divided demical system <advertiser_router> is the ID of Advertising router, shown in point divided demcial IP address forma
Default	Not displayed
Mode	Admin and Configuration Mode.
Usage Guide	According to the output messages of this command, we can view the OSPF link state database messages.
Example	Switch#show ip ospf database

	<pre> Router Link States (Area 0.0.0.2) Link ID ADV Router Age Seq# CkSum Link count 192.168.1.2 192.168.1.2 254 0x80000031 0xec21 1 192.168.1.3 192.168.1.3 236 0x80000033 0x0521 2 Net Link States (Area 0.0.0.2) Link ID ADV Router Age Seq# CkSum 20.1.1.2 192.168.1.2 254 0x8000002b 0xece4 Summary Link States (Area 0.0.0.2) Link ID ADV Router Age Seq# CkSum Route 6.1.0.0 192.168.1.2 68 0x8000002b 0x5757 6.1.0.0/22 6.1.1.0 192.168.1.2 879 0x8000002a 0xf8bc 6.1.1.0/24 22.1.1.0 192.168.1.2 308 0x8000000c 0xc8f0 22.1.1.0/24 ASBR-Summary Link States (Area 0.0.0.2) Link ID ADV Router Age Seq# CkSum 192.168.1.1 192.168.1.2 1702 0x8000002a 0x89c7 AS External Link States Link ID ADV Router Age Seq# CkSum Route 2.2.2.0 192.168.1.1 1499 0x80000056 0x3a63 E2 2.2.2.0/24 [0x0] 2.2.3.0 192.168.1.1 1103 0x8000002b 0x0ec3 E2 2.2.3.0/24 [0x0] </pre>
--	---

show ip ospf interface

Command	show ip ospf interface <interface> Display the OSPF interface messages.
Parameter	<interface> is the name of interface
Default	Not displayed
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	<pre> Switch#show ip ospf interface Loopback is up, line protocol is up OSPF not enabled on this interface Vlan1 is up, line protocol is up Internet Address 10.10.10.50/24, Area 0.0.0.0 Process ID 0, Router ID 10.10.11.50, Network Type BROADCAST, Cost: 10 Transmit Delay is 5 sec, State Waiting, Priority 1 No designated router on this network No backup designated router on this network Timer intervals configured, Hello 35, Dead 35, Wait 35, Retransmit 5 Hello due in 00:00:16 Neighbor Count is 0, Adjacent neighbor count is 0 </pre>

show ip ospf neighbor

Command	show ip ospf [<process-id>] neighbor [{<neighbor_id> all detail [all] interface<ifaddress>}] Display the OSPF adjacent point messages.	
Parameter	<process-id> is the process ID ranging between 0~65535 <neighbor_id> is the dotted decimal notation neighbor ID all: Display messages of all neighbors detail: Display detailed messages of all neighbors <ifaddress> Interface IP address	
Default	Not displayed	
Mode	Admin and Configuration Mode.	
Usage Guide	OSPF neighbor state can be checked by viewing the output of this command.	
Example	Switch#show ip ospf neighbor	
	OSPF process 0:	
	Neighbor ID Pri State Dead Time Address Interface	
	192.168.1.1 1 Full/Backup 00:00:32 6.1.1.1 Vlan1	
	192.168.1.3 1 Full/DR 00:00:36 20.1.1.3 Vlan2	
	192.168.1.3 1 Full/ - 00:00:30 20.1.1.3 VLINK2	
	Displayed information	Explanation
	Neighbor ID	ID Neighbor ID
Priority	Priority	
State	Neighbor relation state	
Dead time	Neighbor dead time	
Address	Interface Address	
Interface	Interface name	

show ip ospf redistribute

Command	show ip ospf [<process-id>] redistribute To display the routing message redistributed from external process of OSPF.	
Parameter	<process-id> is the process ID ranging between 0~65535.	
Default	-	
Mode	Admin Mode and Configuration Mode.	
Usage Guide	-	
Example	Switch#show ip ospf redistribute	
	ospf process 1 redistribute information:	
	ospf process 2	
	ospf process 3	
	bgp	
	ospf process 2 redistribute information:	
ospf process 1		
bgp		
ospf process 3 redistribute information:		

	ospf process 1 bgp Switch#show ip ospf 2 redistribute ospf process 2 redistribute information: ospf process 1 bgp
--	--

show ip ospf route

Command	show ip ospf [<process-id>] route Display the OSPF routing table messages.
Parameter	<process-id> is the process ID ranging between 0~65535
Default	-
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	Switch#show ip ospf route O 10.1.1.0/24 [10] is directly connected, Vlan1, Area 0.0.0.0 O 10.1.1.4/32 [10] via 10.1.1.4, Vlan1, Area 0.0.0.0 IA 11.1.1.0/24 [20] via 10.1.1.1, Vlan1, Area 0.0.0.0 IA 11.1.1.2/32 [20] via 10.1.1.1, Vlan1, Area 0.0.0.0 IA 12.1.1.0/24 [20] via 10.1.1.2, Vlan1, Area 0.0.0.0 IA 12.1.1.2/32 [20] via 10.1.1.2, Vlan1, Area 0.0.0.0 O 13.1.1.0/24 [10] is directly connected, Vlan4, Area 0.0.0.3 O 14.1.1.0/24 [10] is directly connected, Vlan5, Area 0.0.0.4 IA 15.1.1.0/24 [20] via 13.1.1.2, Vlan4, Area 0.0.0.3 IA 15.1.1.2/32 [20] via 13.1.1.2, Vlan4, Area 0.0.0.3 E1 100.1.0.0/16 [21] via 10.1.1.1, Vlan1 E1 100.2.0.0/16 [21] via 10.1.1.1, Vlan1

show ip ospf virtual-links

Command	show ip ospf [<process-id>] virtual-links Display the OSPF virtual link message.
Parameter	<process-id> is the process ID ranging between 0~65535.
Default	-
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	Switch#show ip ospf virtual-links Virtual Link VLINK0 to router 10.10.0.9 is up Transit area 0.0.0.1 via interface Vlan1 Transmit Delay is 1 sec, State Point-To-Point, Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5 Hello due in 00:00:02 Adjacency state Full Virtual Link VLINK1 to router 10.10.0.123 is down Transit area 0.0.0.1 via interface Vlan1

	Transmit Delay is 1 sec, State Down, Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5 Hello due in inactive Adjacency state Down
--	---

show ip route process-detail

Command	show ip route [database] process-detail Display the IP routing table with specific process ID or Tag.
Parameter	The parameter of database means displaying all the routers, no parameter means only displaying effective routers.
Default	Not importing any router of OSPF process by default.
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	Switch#show ip route database process-detail Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP O - OSPF, IA - OSPF inter area N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2 E1 - OSPF external type 1, E2 - OSPF external type 2 i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area > - selected route, * - FIB route, p - stale info C *> 127.0.0.0/8 is directly connected, Loopback O 192.168.2.0/24 [110/10] is directly connected, Vlan2, 00:06:13,process 12 C *> 192.168.2.0/24 is directly connected, Vlan2

show ip protocols

Command	show ip protocols Display the running routing protocol messages.
Parameter	-
Default	-
Mode	Admin and Configuration Mode.
Usage Guide	-
Example	Switch#show ip protocols Use "show ip protocols" command will show the messages of the routing protocol running on current layer 3 switch For example, the displayed messages are: Routing Protocol is "ospf 0" Invalid after 0 seconds, hold down 0, flushed after 0 Outgoing update filter list for all interfaces is Incoming update filter list for all interfaces is Redistributing:

	Routing for Networks: 10.1.1.0/24 12.1.1.0/24 Routing Information Sources: Gateway Distance Last Update Distance: (default is 110) Address Mask Distance List Routing Protocol is "bgp 0" Outgoing update filter list for all interfaces is Incoming update filter list for all interfaces is IGP synchronization is disabled Automatic route summarization is disabled Neighbor(s): Address Filtn FiltOut DistIn DistOut Weight RouteMap Incoming Route Filter:
--	--

debug ospf events

Command	debug ospf events [abr asbr lsa nssa os router vlink] no debug ospf events [abr asbr lsa nssa os router vlink] Open debugging switches showing various OSPF events messages; the "no debug ospf events [abr asbr lsa nssa os router vlink]" command closes the debugging switch.
Parameter	-
Default	Closed.
Mode	Admin and global mode
Usage Guide	-
Example	Switch#debug ospf events router

debug ospf ifsm

Command	debug ospf ifsm [status events timers] no debug ospf ifsm [status events timers] To enable debugging of received messages from NSM for RIP. The no form of this command will disable debugging of received messages from NSM for RIP.
Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf ifsm events

debug ospf lsa

Command	debug ospf lsa [generate flooding install maxage refresh] no debug ospf lsa [generate flooding install maxage refresh] Open debugging switches showing showing link state announcements; the "no
---------	--

	debug ospf lsa [generate flooding install maxage refresh]" closes the debugging switches.
Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf lsa generate

debug ospf n fsm

Command	debug ospf n fsm [status events timers] no debug ospf n fsm [status events timers] Open debugging switches showing OSPF neighbor state machine; the "no debug ospf n fsm [status events timers]" command closes this debugging switch.
Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf n fsm events

debug ospf n sm

Command	debug ospf n sm [interface redistribute] no debug ospf n sm [interface redistribute] Open debugging switches showing OSPF NSM, the "no debug ospf n sm [interface redistribute]" command closes this debugging switch.
Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf n sm interface

debug ospf packet

Command	debug ospf packet [dd detail hello ls-ack ls-request ls-update recv detail] no debug ospf packet [dd detail hello ls-ack ls-request ls-update recv detail] Open debugging switches showing OSPF packet messages; the "no debug ospf packet [dd detail hello ls-ack ls-request ls-update recv detail]" command closes this debugging switch.
---------	---

Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf packet hello

debug ospf route

Command	debug ospf route [ase ia install spf] no debug ospf route [ase ia install spf] Open debugging switches showing OSPF related routes; the “no debug ospf route [ase ia install spf]” command closes this debugging switch.
Parameter	-
Default	Closed.
Mode	Admin mode and global mode
Usage Guide	-
Example	Switch#debug ospf route spf

debug ospf redistribute message send

Command	debug ospf redistribute message send no debug ospf redistribute message send To enable debugging of sending command from OSPF process redistributed to other OSPF process routing. The no form of command disables debugging of sending command from OSPF process redistributed to other OSPF process routing.
Parameter	-
Default	Disabled.
Mode	Admin Mode
Usage Guide	-
Example	To enable debugging of sending command from OSPF process redistributed to other OSPF process routing. Switch#debug ospf redistribute message send

debug ospf redistribute route receive

Command	debug ospf redistribute route receive no debug ospf redistribute route receive To enable/disable debugging switch of received routing message from NSM for OSPF process.
Parameter	-
Default	Disabled.
Mode	Admin Mode
Usage Guide	-

Example	To enable debugging switch of received routing message from NSM for OSPF process. Switch# debug ospf redistribute route receive
---------	--

capability restart graceful

Command	capability restart graceful no capability restart Enable GR of specified OSPF process, no command disables this function.
Parameter	-
Default	Enable OSRF GR function.
Mode	OSPF protocol configuration mode
Usage Guide	When a switch is using OSPF GR, it will quit GR directly if disable GR.
Example	Enable OSPF GR function. Switch(config)#router ospf Switch(config-router)#capability restart graceful

debug ospf events gr

Command	debug ospf events gr no debug ospf events gr Enable the debugging for displaying relevant event of OSPF GR, no command disables the debugging.
Parameter	-
Default	Disabled.
Mode	Admin Mode
Usage Guide	-
Example	Enable the debugging for displaying relevant event of OSPF GR. Switch#debug ospf events gr

ospf graceful-restart grace-period

Command	ospf graceful-restart grace-period <integer> no ospf restart grace-period Configure grace period of GR restarter, no command restores grace period to default value.
Parameter	<integer>: value of grace period, unit is second and ranging from 1 to 1800.
Default	60s.
Mode	Global configuration mode
Usage Guide	Configure grace period of GR restarter (The switch processes switchover or restart protocol). GR process should be completed during a grace period. If it does not complete GR

	process in time, it should quit GR forcibly and restart OSPF normally.
Example	Configure grace period of GR restarter to 100s. Switch(config)#ospf graceful-restart grace-period 100

ospf graceful-restart helper max-grace-period

Parameter	<integer>: value of grace period, unit is second and ranging from 1 to 1800.
Default	Do not limit grace period supported by helper.
Mode	Global configuration mode
Usage Guide	If grace period set by GR restarter is bigger than max-grace period configured by helper, helper will not help restarter to complete GR. The no command deletes all helper policies.
Example	Configure the maximum grace period allowed by GR helper to 100s. Switch(config)#ospf graceful-restart helper max-grace-period 100

ospf graceful-restart helper never

Command	ospf graceful-restart helper never no ospf graceful-restart helper One of GR helper policies. Configured the switch can not work as OSPF GR helper. The no command deletes all configured helper policies.
Parameter	-
Default	Switch can work as GR helper.
Mode	Global configuration mode
Usage Guide	After configure the policy, switch can only work as GR restarter (a switch processes switchover and restart protocol), not GR helper (a switch helps restarter to complete GR).
Example	Configure that switch cannot work as OSPF helper. Switch(config)#ospf graceful-restart helper never

show ip ospf graceful-restart

Command	show ip ospf [<process-id>] graceful-restart Show the state of OSPF GR, including whether it is processing GR at helper mode, GR remaining time.
Parameter	<process-id>: Process ID, ranging from 0 to 65535. It means that GR state of all processes shown when there is no parameter configured.
Default	-
Mode	Admin mode
Usage Guide	-
Example	Show GR state of all processes on GR restarter. Switch#show ip ospf graceful-restart

OSPF process 0 graceful-restart information: GR status :GR in progress GR remaining time : 50	
Display	Description
OSPF process 0 graceful-restart information	OSPF GR state in process 0
GR status	GR state of GR, GR in progress means switch is processing GR
GR remaining time	Remaining time of GR
Show GR state of all processes on GR helper: Switch#show ip ospf graceful-restart OSPF process 0 graceful-restart information: GR status :Helper Neighbor ID Interface Remaining time 1.1.1.1 Vlan1 100 2.2.2.2 Vlan1 200	
Display	Description
OSPF process 0 graceful-restart information	OSPF GR state in process 0
GR status	GR state, Helper means switch is in helper mode
Neighbor ID	The router-id of restarter helped
Interface	The layer 3 interface connected with restarted
Remaining time	Remaining time of GR

16.3. Commands for BGP

aggregate-address

Command	aggregate-address <ip-address/M> [summary-only] [as-set] no aggregate-address <ip-address/M> [summary-only] [as-set] Configure the aggregate-address. The "no aggregate-address <ip-address/M> [summary-only] [as-set]" command deletes the aggregate-address.
Parameter	<ip-address/M>: IP address, length of mask. [summary-only]: Send summary only ignoring specific route. [as-set]: Show AS on the path in list, each AS is shown once.
Default	No aggregate configuration.
Command Mode	BGP route mode
Usage Guide	Address aggregation reduces spreading routing messages outside. Use

	summary-only option so to spread aggregate route to the neighbors without spreading specific route. as-set option will list AS from each route covered by the aggregation only once without repeat.
Example	Switch(config-router)# aggregate-address 100.1.0.0/16 summary-only Switch(config-router)# aggregate-address 100.2.0.0/16 summary-only as-set Switch(config-router)# aggregate-address 100.3.0.0/16 as-set

bgp aggregate-next-hop-check

Command	bgp aggregate-next-hop-check no bgp aggregate-next-hop-check Configures whether BGP checks all the route next-hop in aggregating. The “no bgp aggregate-next-hop-check” command cancels this configuration, namely not check the nextop accordance of aggregate route.
Parameter	-
Default	No nexthop checked during aggregating.
Command Mode	Global mode
Usage Guide	When check is enabled, the aggregate will not be performed if the next-hop of the covered routes are not in accordance. When checking is disabled, all covered route will be aggregated into the aggregate route.
Example	Switch(config)#bgp aggregate-next-hop-check

bgp always-compare-med

Command	bgp always-compare-med no bgp always-compare-med Configures If MED comparison is always performed. The “no bgp always-compare-med” command cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Normally the BGP compares the MED only when the AS is the same. By using this configuration, MED of routes from different AS source will also be compared.
Example	The AS (200) receives the same route prefix form the two AS (100 and 300) carrying different MED, configure the MED comparison is always performed. Switch(config-router)#bgp always-compare-med

bgp asnotation asdot

Command	bgp asnotation asdot no bgp asnotation asdot Show AS number and match the regular expression with ASDOT method. The no command cancels this method.
---------	---

Parameter	-
Default	ASPLAIN method.
Command Mode	BGP route mode
Usage Guide	To change the method that show AS number and match the regular expression, it must configure "clear ip bgp *" to rebuild all BGP neighbor relationships after this command is configured.
Example	Show AS number and match the regular expression with ASDOT method. Switch(config)#router bgp 200 Switch(config-router)#bgp asnotation asdot

bgp bestpath as-path ignore

Command	bgp bestpath as-path ignore no bgp bestpath as-path ignore Set to ignore the AS-PATH length. The "no bgp bestpath as-path ignore" command cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Length of AS-PATH will be compared in BGP pathing, and its length can be ignored by using this configuration.
Example	Set to ignore the AS-PATH length: Switch(config)#router bgp 200 Switch(config-router)#bgp bestpath as-path ignore

bgp bestpath compare-confed-aspash

Command	bgp bestpath compare-confed-aspash no bgp bestpath compare-confed-aspash Set to concern the confederation AS-PATH length. The "no bgp bestpath compare-confed-aspash" command cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Normally only the length of external AS-PATH will be compared in BGP pathing. By using this configuration, lengths of AS inner confederation AS-PATH will be compared at the same time.
Example	Configure confederation AS-PATH length. Switch(config-router)#bgp bestpath compare-confed-aspash

bgp bestpath compare-routerid

Command	bgp bestpath compare-routerid no bgp bestpath compare-routerid Compare route ID; the "no bgp bestpath compare-routerid" command cancels this configuration.
---------	---

Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Normally the first arrived route from the same AS (with other conditions equal) will be chosen as the best route. By using this command, source router ID will also be compared.
Example	Device (10.1.1.66, AS200) receives the same route prefix from two devices (10.1.1.64 and 10.1.1.68) of the same AS (100), configure the device to compare route ID. Switch(config-router)#bgp bestpath compare-routerid

bgp bestpath med

Command	bgp bestpath med {[confed] [missing-as-worst]} no bgp bestpath med {[confed] [missing-as-worst]} Configure to compare the MED attributes in the confederation path and to consider the value is the largest when MED is unavailable . The “no bgp bestpath med {[confed] [missing-as-worst]}” command cancels this configuration.
Parameter	[confed]: Compare MED in the confederation path. [missing-is-worst]: Consider as max MED value when missing.
Default	-
Command Mode	BGP route mode
Usage Guide	Choose whether MED is compared among confederations by this command. If MED is missing, it is considered max when missing-is-worst or else 0.
Example	Configure to compare the MED attributes in the confederation path and to consider the value is the largest when MED is unavailable. Switch(config-router)#bgp bestpath med confed missing-as-worst

bgp client-to-client reflection

Command	bgp client-to-client reflection no bgp client-to-client reflection Configures whether the route reflection is performed. The “no bgp client-to-client reflection” cancels this configuration.
Parameter	-
Default	Reflection defaulted when client is configured.
Command Mode	BGP route mode
Usage Guide	After configured reflection client with neighbor {<ip-address> <TAG>} route-reflector-client, the router performs routing reflection in default condition. The NO form of this command cancels the route reflection among CLIENT, (reflection among Clients and non-CLIENT is not disturbed).
Example	Configure to cancel the route reflection. Switch(config-router)#no bgp client-to-client reflection

bgp cluster-id

Command	bgp cluster-id {<ip-address> <01-4294967295>} no bgp cluster-id {<[<ip-address>] <0-4294967295>} Configure the route reflection ID during the route reflection. The “no bgp cluster-id {<[<ip-address>] <0-4294967295>}” command cancels this configuration.
Parameter	<ip-address> <1-4294967295>: cluster-id which is shown in dotted decimal notation or a 32 digit number.
Default	-
Command Mode	BGP route mode
Usage Guide	A cluster consists of one routing reflector and its clients in an area. However in order to increase the redundancy level, sometime more than one routing reflectors may be deployed in one area. Router-id is for identifying the router exclusively in an area, and cluster-id is required for two or more reflector identification.
Example	Configure the route reflection cluster-id is 1.1.1.1. Switch(config-router)#bgp cluster-id 1.1.1.1

bgp confederation identifier

Command	bgp confederation identifier <as-id> no bgp confederation identifier [<as-id>] Create a confederation configuration. The “no bgp confederation identifier [<as-id>]” command deletes a confederation.
Parameter	<as-id>: ID number of the confederation AS, ranging from 1 to 4294967295, it can be shown in decimal notation (such as 6553700) or delimiter method (such as 100.100).
Default	-
Command Mode	BGP route mode
Usage Guide	Confederation is for divide large AS into several smaller AS, while still identified as the large AS. Create large AS number with this command.
Example	Switch(config-router)# bgp confederation identifier 600

bgp confederation peers

Command	bgp confederation peers <as-id> [<as-id>..] no bgp confederation peers <as-id> [<as-id>..] Add/delete one or several AS to a confederation.
Parameter	<as-id>: ID numbers of the AS included in the confederation, ranging from 1 to 4294967295, it can be shown in decimal notation (such as 6553700) or delimiter method (such as 100.100), which could be multiple.
Default	-
Command Mode	BGP route mode
Usage Guide	Confederation is for divide large AS into several smaller AS, while still identified as the large AS. Use this command to add/delete confederation members.
Example	Create a confederation, ID is 600, add 100, 200, 100.300 members.

	Switch(config-router)# bgp confederation identifier 600 Switch(config-router)#bgp confederation peers 100 200 100.300
--	--

bgp dampening

Command	bgp dampening [<1-45>] [<1-20000> <1-20000> <1-255>] [<1-45>] no bgp dampening Configure the route dampening. The “no bgp dampening” command cancels the route dampening function
Parameter	<1-45>: Respectively the penalty half-lives of accessible and inaccessible route, namely the penalty value is reduced to half of the previous value, in minutes. <1-20000>: Respectively the penalty reuse border and restrain border. <1-255>: Maximum restrain route time, in minutes.
Default	Half-life of accessible route is 15 minutes, 15 minutes for inaccessible. The restrain border is 2000, reuse border is 750, and maximum restrain time is 60 minutes
Command Mode	BGP route mode
Usage Guide	Abundant route update due to unstable route could be reduced with route dampening technology, of which the algorithm is lay penalty on the route when the route fluctuates, and when penalty exceeds the restrain border this route will no longer be advertised. The penalty value will be reduced by time by the half-life index regulation if the route keeps stable and finally be advertised again when the penalty falls below the border or the restrain time exceeds the maximum restrain time. This command is for enabling/disabling the route dampening and configuring its parameters.
Example	Enable the route dampening and use the parameter configuration by default. Switch(config-router)# bgp dampening

bgp default

Command	bgp default {ipv4-unicast local-preference <0-4294967295>} no bgp default {ipv4-unicast local-preference [<0-4294967295>]} Set the BGP defaults, the “no bgp default {ipv4-unicast local-preference [<0-4294967295>]}” command cancels this configuration.
Parameter	ipv4-unicast: Configure the default using IPv4-unicast to set up neighbor connection. local-preference<0-4294967295>: Configure the default local priority.
Default	The IPv4 unicast is default enabled when BGP is enabled. The default priority is 100.
Command Mode	BGP route mode
Usage Guide	IPv4 unicast address-family is default enabled in BGP. Cancel this setting with no bgp default ipv4-unicast command so to not enable this address-family in default. Default local priority can be configured through bgp default local-preference command.
Example	Configure the default local priority to be 500. Configure in 10.1.1.66:

	Switch(config)#router bgp 200 Switch(config-router)# bgp default local-preference 500
--	--

bgp deterministic-med

Command	bgp deterministic-med no bgp deterministic-med Use the best MED for the same prefix in the AS to compare with other AS. The “no bgp deterministic-med” cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Normally if same prefix routes from several paths, each path will be compared. With this configuration, the system will only use the path with the smallest MED in the AS (when other main attributes equal) to compare with other AS. After the best one is elected, select the path among AS with no regard to MED value.
Example	Set BGP to use the best MED for the same prefix in the AS to compare with other AS. Switch(config-router)#bgp deterministic-med

bgp enforce-first-as

Command	bgp enforce-first-as no bgp enforce-first-as Enforces the first AS position of the route AS-PATH contain the neighbor AS number or else disconnect this peer when the BGP is reviving the external routes. The “no bgp enforce-first-as” command cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	This command is usually for avoiding unsafe or unauthenticated routes.
Example	Switch(config-router)#bgp enforce-first-as

bgp fast-external-failover

Command	bgp fast-external-failover no bgp fast-external-failover Fast reset when the BGP neighbor connection varies at the interface other than wait for TCP timeout. The “no bgp fast-external-failover” command cancels this configuration.
---------	---

Parameter	-
Default	Configured
Command Mode	BGP route mode.
Usage Guide	This command is for immediately cutting of the neighbor connection when the interface is down
Example	Switch(config-router)# bgp fast-external-failover

bgp inbound-route-filter

Command	bgp inbound-route-filter no bgp inbound-route-filter The bgp do not install the RD routing message which does not exist locally. The no command means the RD will be installed with no regard to the local existence of the RD.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Normally when the switch plays as PE, whether the route bgp acquired from VPN is saved in BGP depends on if the VRF configured in this PE has got matched information. With the no command the BGP will save the routing message with no regard to the matched information.
Example	Switch(config)#router bgp 100 Switch(config-router)#no bgp inbound-route-filter

bgp inbound-max-route-num

Command	bgp inbound-max-route-num <0-500000> no bgp inbound-max-route-num Set the number limit of routers learnt by the bgp process from its neighbors.
Parameter	The number limit of routers, ranging from 0 to 500000.
Default	The number limit is 50000 by default.
Command Mode	BGP route mode
Usage Guide	Limit the number of routers learnt by the bgp process from its neighbors with this command.
Example	The following configuration will limit max number of routers that the bgp process receives from its neighbors as 20000. Switch(config-router)#bgp inbound-max-route-num 20000

bgp log-neighbor-changes

Command	bgp log-neighbor-changes no bgp log-neighbor-changes Output log message when BGP neighbor changes. The "no bgp
---------	--

	log-neighbor-changes" command cancels this configuration.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Can display neighbor change messages on the monitor.
Example	Switch(config-router)# bgp log-neighbor-changes

bgp network import-check

Command	bgp network import-check no bgp network import-check Set whether check the IGP accessibility of the BGP network route or not. The "no bgp network import-check" command sets to not checking the IGP accessibility.
Parameter	-
Default	-
Command Mode	BGP route mode
Usage Guide	Checking the IGP accessibility of the route advertised by BGP is to check the existence of next-hop and its IGP accessibility.
Example	Set to check the IGP accessibility of BGP network route. Switch(config-router)# bgp network import-check

bgp rfc1771-path-select

Command	bgp rfc1771-path-select no bgp rfc1771-path-select After this attribute is set, path selecting will follow the way defined in rfc 1771, namely not checking the AS internal metric, or comparing the internal METRIC.
Parameter	-
Default	-
Command Mode	Global mode
Usage Guide	After this attribute is set, path selecting will follow the way defined in rfc 1771, namely not checking the AS internal metric, when different AS exist, which should be perform without this attribute set.
Example	Configure to follow the rfc1771 path selecting. Switch(config)# bgp rfc1771-path-select

bgp rfc1771-strict

Command	bgp rfc1771-strict
---------	--------------------

	no bgp rfc1771-strict Set whether strictly follows the rfc1771 restrictions. The “no bgp rfc1771-strict” command set to not strictly following.
Parameter	-
Default	Not following rfc 1771 restrictions.
Command Mode	Global mode
Usage Guide	With this attribute set, generation types of routes from protocols such as RIP, OSPF, ISIS, etc will be regarded as IGP (internal generated), or else as incomplete.Example: Configure to strictly follow the rfc1771 restrictions.
Example	Configure to strictly follow the rfc1771 restrictions. Switch(config)#bgp rfc1771-strict

bgp router-id

Command	bgp router-id <A.B.C.D> no bgp router-id [<A.B.C.D>] Configure the router ID manually. The no operation cancels this configuration.
Parameter	<A.B.C.D>: Router ID.
Default	Automatically acquire router ID.
Command Mode	BGP route mode
Usage Guide	Manually set the router ID with this command.
Example	Set the Router ID to be 1.1.1.1. Switch(config-router)#bgp router-id 1.1.1.1

bgp scan-time

Command	bgp scan-time <0-60> no bgp scan-time [<0-60>] Set the time interval of the periodical next-hop validation; the “no bgp scan-time [<0-60>]” command restores to the default value.
Parameter	<0-60>: Validation time interval.
Default	Default interval is 60s.
Command Mode	BGP route mode
Usage Guide	Validate the next-hop of BGP route, this command is for configuring the interval of this check. Set the parameter to 0 if you don't want to check.
Example	Set the time interval of periodical next-hop validation to be 30s. Switch(config-router)# bgp scan-time 30

clear ip bgp

Command	clear ip bgp * [vrf <vrf-name>] [in out soft [in out]]
---------	---

	Reboot the connection between BGP of vrf-name and all peers.
Parameter	<vrf-name>: Configure the instance name of VPN, the ranging from 1 to 64; in: The in soft configuration is updated; out: The out soft configuratin is updated; soft: The soft reboot.
Default	-
Command Mode	Admin mode
Usage Guide	Reboot BGP when configuring clear ip bgp * command; send the requestment message to neighbor when configuring in parameter; sent the route to neighbor when configuring out parameter. If configure soft, BGP will not be reseted.
Example	Switch#clear ip bgp * vrf VRF-A Switch#

clear ip bgp dampening

Command	clear ip bgp [<address-family>] dampening [<ip-address> <ip-address/M>] Used for resetting BGP routing dampening.
Parameter	<address-family>: address-family, such as "ipv4 unicast". <ip-address>: IP address. <ip-address/M>: IP address and mask.
Default	-
Command Mode	Admin mode
Usage Guide	It is possible to clear BGP routing dampening messages and state by different parameters (such as address-family or IPv4 address).
Example	Clear BGP routing dampening and state of IPv4 unicast cluster. Switch# clear ip bgp ipv4 unicast dampening

clear ip bgp flap-statistics

Command	clear ip bgp [<address-family>] flap-statistics [<ip-address> <ip-address/M>] For resetting BGP routing dampening statistics messages.
Parameter	<address-family>: address-family such as "ipv4 unicast". <ip-address>: IP address. <ip-address/M>: IP address and mask.
Default	-
Command Mode	Admin mode
Usage Guide	It is possible to clear BGP routing dampening statistic messages and state by different parameters (such as address-family or IPv4 address).
Example	Clear the BGP dampening statistic messages of IPv4 unicast cluster. Switch#clear ip bgp ipv4 unicast flap-statistics

Distance

Command	distance <1-255> <ip-address/M> [<WORD>]
---------	--

	no distance <1-255> <ip-address/M> [<WORD>] Set the manage distance of the routing prefix. The “no distance <1-255> <ip-address/M> [<WORD>]” command restores to the default value.
Parameter	<1-255>: Manage distance. <ip-address/M>: Routing prefix. <WORD>: Access-list name.
Default	-
Command Mode	BGP route mode
Usage Guide	Set the manage distance for specified BGP route as the path selecting basis.
Example	Set the manage distance for route 90 10.1.1.64/32 to be 90. Switch(config-router)# distance 90 10.1.1.64/32

distance bgp

Command	distance bgp <1-255> <1-255> <1-255> no distance bgp [<1-255> <1-255> <1-255>] Set the BGP protocol management distance. The “no distance bgp [<1-255> <1-255> <1-255>]” command restores the manage distance to default value.
Parameter	<1-255>: Respectively the EBGP, IBGP and LOCAL manage distance of the BGP.
Default	Default EBGP is 20, others are 200.
Command Mode	BGP route mode
Usage Guide	: Set the manage distance for BGP routing as the NSM path selecting basis.
Example	Set the manage distance for BGP routing as 15, the manage distance for IBGP and local routing as 150. Switch(config-router)# distance bgp 15 150 150

ip as-path access-list

Command	ip as-path access-list <.LINE> {<permit> <deny>} <LINE> no ip as-path access-list <.LINE> {<permit> <deny>} <LINE> Configure the AS-PATH access-list. The “no ip as-path access-list <.LINE>{<permit> <deny>} <LINE>” command deletes this access-list.
Parameter	<.LINE>: name of access-list. <LINE>: matched strings in the AS-PATH.
Default	-
Command Mode	Global mode
Usage Guide	Use this command to configure the access-list related to AS-PATH, so to supply the conditions for pass/filter.
Example	Configure the access-list named ASPF, filter the AS-PATH contained route 100. Switch(config)#ip as-path access-list ASPF deny ^100\$

ip community-list

Command	<p>ip community-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] {deny permit} <.COMMUNITY></p> <p>no ip community-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] [{deny permit} <.COMMUNITY>]</p> <p>Configure the community-list. The “no ip community-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] [{deny permit} <.COMMUNITY>]” command deletes the community list.</p>
Parameter	<p><LISTNAME>: name of community list.</p> <p><1-199>: Standard or extended community number.</p> <p><WORD>: Standard or extended community number.</p> <p><.COMMUNITY >: Members of the community list, which may be the combination of aa:nn, or internet, local-AS, no-advertise, and no-export. It can be shown in regular expressions under extended conditions.</p>
Default	-
Command Mode	Global mode
Usage Guide	With this command we can configure the community-list so to supply terms for the pass/filter/search.
Example	Configure the ip community-list named LN, permit community attribute as 100:10. Switch(config)# ip community-list LN permit 100:10

ip extcommunity-list

Command	<p>ip extcommunity-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] {deny permit} <.COMMUNITY></p> <p>no ip extcommunity-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] {deny permit} <.COMMUNITY></p> <p>Configure the extended community-list. The “no ip extcommunity-list {<LISTNAME> <1-199> [expanded <WORD>]][standard <WORD>] {deny permit} <.COMMUNITY>” command is for deleting the extended community list.</p>
Parameter	<p><LISTNAME>: name of community-list.</p> <p><1-199>: Standard or extended community number.</p> <p><WORD>: Standard or extended community number.</p> <p><.COMMUNITY >: Members of the community list, which may be the combination of aa:nn, or internet, local-AS, no-advertise, and no-export. It can be shown in regular expressions under extended conditions.</p>
Default	-
Command Mode	Global mode
Usage Guide	With this command we can configure the community-list so to supply terms for the pass/filter/search.
Example	Configure the excommunity-list named LN, permit community attribute as 100:10. Switch(config)#ip extcommunity-list LN permit 100:10

neighbor activate

Command	neighbor {<ip-address> <TAG>} activate no neighbor {<ip-address> <TAG>} activate Configure the address family routing which do or do not switch specific address-family with BGP neighbors. The “no neighbor {<ip-address> <TAG>} activate” command is for setting the route which do not switch the specified address family.
Parameter	<ip-address>: IP address of the neighbor. <TAG>: Name of peer group.
Default	Enable the routing switch of IP unicast address-family, and disable other address-families.
Command Mode	BGP route mode
Usage Guide	IP unicast is configured under BGP route mode. Configure whether specific address-family is switched under address-family mode. If this option on any side between local side and partner is not enabled, the address-family route will not be acquired by the partner even if the corresponding address family routes acquired before will be cancelled after this option is disabled.
Example	Configure to exchange the unicast route with neighbor 2002::2. Switch(config-router)#neighbor 2002::2 activate

neighbor advertisement-interval

Command	neighbor {<ip-address> <TAG>} advertisement-interval <0-600> no neighbor {<ip-address> <TAG>} advertisement-interval [<0-600>] Configure the update interval of specific neighbor route. The “no neighbor {<ip-address> <TAG>} advertisement-interval [<0-600>]” command restores to default.
Parameter	<ip-address>: IP address of the neighbor. <TAG>: Name of the peer group. <0-600>: Advertise interval, in seconds.
Default	Default IBGP is 5s, default EBGP is 30s.
Command Mode	BGP route mode
Usage Guide	Reduce this value will improve the route updating speed while also consumes more bandwidth.
Example	Set the route update interval as 20s with neighbor 10.1.1.64. Switch(config-router)#neighbor 10.1.1.64 advertisement-interval 20

neighbor allowas-in

Command	neighbor {<ip-address> <TAG>} allowas-in [<1-10>] no neighbor {<ip-address> <TAG>} allowas-in Configure the counts same AS is allowed to appear in the neighbor route AS table. The “no neighbor {<ip-address> <TAG>} allowas-in” restores to not allow any repeat.
Parameter	<ip-address>: IP address of the neighbor. <TAG>: Name of the peer group. <1-10>: Allowed count of same AS number.
Default	In default conditions AS is not allowed repeating in the same route, and when set the

	repeat count it is defaulted at 3 when <1-10> parameters not set.
Command Mode	BGP route mode
Usage Guide	Normally BGP will not allow same AS number appears in the route more than one time. The system will deny a route when its AS number appears in the AS-PATH. However to support some special needs, especially the VPN support, the extended BGP allows the AS re-appear counts by configuration. This command is for configure the re-appear counts.
Example	Allow the same AS to appear in the route three times for neighbor 10.1.1.66. Switch(config-router)#neighbor 10.1.1.66 allowas-in

neighbor attribute-unchanged

Command	neighbor {<ip-address> <TAG>} attribute-unchanged [as-path][med][next-hop] no neighbor {<ip-address> <TAG>} attribute-unchanged [as-path] [med] [next-hop] Configure certain attributes which is kept unchanged for transmitting, namely the attribute transparent transmission. The “no neighbor {<ip-address> <TAG>} attribute-unchanged [as-path] [med] [next-hop]” command means the attribute transparent transmission is not performed.
Parameter	<ip-address>: IP address of the neighbor. <TAG>: Name of the peer group.
Default	-
Command Mode	BGP route mode
Usage Guide	With this configuration specified route attributes will not change when transmitted to the specified neighbor. The BGP route mode is the IPv4 unicast address mode configuration. No parameter refers to above three parameter are configured together.
Example	Set the attribute of route as-path, med, next-hop unchanged for neighbor 10.1.1.64. Switch(config-router)#neighbor 10.1.1.64 attribute-unchanged

neighbor capability

Command	neighbor {<ip-address> <TAG>} capability {dynamic route-refresh} no neighbor {<ip-address> <TAG>} capability {dynamic route-refresh} Configure dynamic update between neighbors and the route refresh capability negotiation. The “no neighbor {<ip-address> <TAG>} capability {dynamic route-refresh}” command do not enable the specific capability negotiation.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group.
Default	Not configure the dynamic update capability but the route refresh capability.
Command Mode	BGP route mode
Usage Guide	This is an extended BGP capability. With this configuration supported capabilities by both side will be negotiated in the OPEN messages, and the partner will respond if this capability is supported by the partner and send NOTIFICATION if not. The originating side will then send an OPEN excluded the capability to reestablish the connection. The dynamic capability refers to when the address family negotiation changes, the connection don't have to be restarted. Route refresh refers to sending refresh request when configuring some soft reconfigurable attributes and the partner will retransmit the existing route to the originating side. With route refresh attribute,

	the connection will not have to be restarted but be refreshed with the clear ip bgp * soft in command.
Example	Switch(config-router)#neighbor 10.1.1.64 capability dynamic Switch(config-router)# no neighbor 10.1.1.64 capability route-refresh

neighbor capability orf prefix-list

Command	neighbor {<ip-address> <TAG>} capability orf prefix-list {<both> <send> <receive>} no neighbor {<ip-address> <TAG>} capability orf prefix-list {<both> <send> <receive>} Configure the out route filter capability negotiation between neighbors. The “no neighbor {<ip-address> <TAG>} capability orf prefix-list {<both> <send> <receive>}” command set to not perform the negotiation.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group.
Default	-
Command Mode	BGP route mode
Usage Guide	This is an extended BGP capability. With this configuration supported capabilities by both side will be negotiated in the OPEN messages, and the partner will respond if this capability is supported by the partner and send NOTIFICATION if not. The originating side will then send an OPEN excluded the capability to reestablish the connection. With this capability, the side configured with in prefix-list filter rules will transmit its own filter rules to the peer, the peer group will apply this rule as its own out rules, so to avoid sending route which will be denied by the partner.
Example	Set to perform the out route filter capability negotiation with neighbor 10.1.1.66. Switch(config-router)#neighbor 10.1.1.66 capability orf prefix-list both

neighbor collide-established

Command	neighbor {<ip-address> <TAG>} collide-established no neighbor {<ip-address> <TAG>} collide-established Enable the collision check and settlement in the TCP connection collision. The “no neighbor {<ip-address> <TAG>} collide-established” command disables the TCP connection collision settlement.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of the peer.
Default	-
Command Mode	BGP route mode
Usage Guide	This command is for settling the problem that multi-connection among peers due to TCP connection collision. Connections created with this option on will always be check even at established state. And it will be checked if local side IP is larger than partner IP when collides. If yes, the original connection will be deleted, and if not the option will be configured to only checks when the connection originated from local side at open sent and open confirm state.
Example	Set to perform the TCP connection collision check and settlement with neighbor 10.1.1.64. Switch(config-router)#neighbor 10.1.1.64 collide-established

neighbor default-originate

Command	<code>neighbor {<ip-address> <TAG>} default-originate [route-map <WORD>]</code> <code>no neighbor {<ip-address> <TAG>} default-originate [route-map <WORD>]</code> Configures whether enables transmitting default route to the specific neighbor. The “no neighbor {<ip-address> <TAG>} default-originate [route-map <WORD>]” command configures not sending default route to neighbors.
Parameter	<ip-address>: IP address of the neighbor. <TAG>: Name of the peer. <WORD> : Name of route map.
Default	-
Command Mode	BGP route mode
Usage Guide	With this option, the default route of local side will be transmitted to partner, or else not. It supplies with options of which one to supply the default route. if several neighbors of the partner supply default route, the best one will be elected according to path selecting principles. According to route mirror, it can be chosen when to send the default route.
Example	Set to transmit the local default route to neighbor 10.1.1.64. Switch(config-router)#neighbor 10.1.1.64 default-originate Switch(config-router)# Then the default route from BGP will appear in partner route list.

neighbor description

Command	<code>neighbor {<ip-address> <TAG>} description <.LINE></code> <code>no neighbor {<ip-address> <TAG>} description</code> Configure the description string of the peer or peer group. The “no neighbor {<ip-address> <TAG>} description” command deletes the configurations of this string.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group. <.LINE>: Description string consists of displayable characters less than 80.
Default	Description string is empty.
Command Mode	BGP route mode
Usage Guide	Configure the introduction of the peer or peer group.
Example	Set the description string as tester with neighbor 10.1.1.64. Switch(config-router)#neighbor 10.1.1.64 description tester Switch(config-router)#

neighbor distribute-list

Command	<code>neighbor {<ip-address> <TAG>} distribute-list {<1-199> <1300-2699> <WORD>}</code>
---------	---

	<pre>{in out} no neighbor {<ip-address> <TAG>} distribute-list {<1-199> <1300-2699> <WORD>} {in out}</pre> <p>Configure the policy applied in partner route update transmission. The “no neighbor {<ip-address> <TAG>} distribute-list {<1-199> <1300-2699> <WORD>} {in out}” command cancels the policy configuration.</p>
Parameter	<pre><ip-address>: Neighbor IP address. <TAG>: Name of peer group. <1-199> <1300-2699> <WORD>: Number or name of the access-list.</pre>
Default	Policy not applied.
Command Mode	BGP route mode
Usage Guide	Configure the policies with access-list command and apply this command on route sending and receiving. It will filter the update route from partner when use in mode, and will filter the route from local side to partner with out mode.
Example	<pre>Send into neighbor route 10.1.1.66, to filter the route with the aim 100.1.0.0. Switch(config)#access-list 101 deny ip 100.1.0.0 0.0.1.255 any Switch(config)#access-list 101 permit ip any any Switch(config)#router bgp 100 Switch(config-router)# neighbor 10.1.1.66 distribute-list 101 in</pre>

neighbor dont-capability-negotiate

Command	<pre>neighbor {<ip-address> <TAG>} dont-capability-negotiate no neighbor {<ip-address> <TAG>} dont-capability-negotiate</pre> <p>Set to not perform capability negotiate in creating connections. The “no neighbor {<ip-address> <TAG>} dont-capability-negotiate” command cancels this configuration.</p>
Parameter	<pre><ip-address>: Neighbor IP address. <TAG>: Name of the peer group.</pre>
Default	Capability negotiation performed.
Command Mode	BGP route mode
Usage Guide	As the negotiation is the default, it can be disabled with this configuration when it is known that the partner BGP version is old which don't support capabilitynegotiation.
Example	<pre>Last addition capability negotiation will not be realized in the connection by configuring as follows. Switch(config-router)#neighbor 10.1.1.64 dont-capability-negotiate</pre>

neighbor ebgp-multihop

Command	neighbor {<ip-address> <TAG>} ebgp-multihop [<1-255>]
---------	---

	<p>no neighbor {<ip-address> <TAG>} ebgp-multihop [<1-255>]</p> <p>Configures the EBGp neighbors can existing in different segment as well as its hop count (TTL). The “no neighbor {<ip-address> <TAG>} ebgp-multihop [<1-255>]” set that the EBGp neighbors must be in the same segment.</p>
Parameter	<p><ip-address>: Neighbor IP address.</p> <p><TAG>: Name of the peer group.</p> <p><1-255> : Allowed hop count.</p>
Default	Must be in the same segment.
Command Mode	BGP route mode
Usage Guide	Without this command, EBGp peers are required to be in the same segment and after this command is configured, peer addresses may from different segments. The allowed hop count can be configured and will be 255 if not.
Example	<p>Three device 10.1.1.64(AS100) and 11.1.1.120(AS300) connected respectively to the two interface 10.1.1.66 and 10.1.1.100 of another device. IGP accessibilities of 10.1.1.64 and 11.1.1.120 on both side routes are ensured through static configuration. The neighbor relationship is established only after both side are configured as follows:</p> <pre>on 10.1.1.64 Switch(config-router)#neighbor 11.1.1.120 ebgp-multihop on 11.1.1.120 Switch(config-router)#neighbor 10.1.1.64 ebgp-multihop</pre> <p>After this, switches in different segments will be able to create BGP neighbor relationship.</p>

neighbor enforce-multihop

Command	<p>neighbor {<ip-address> <TAG>} enforce-multihop</p> <p>no neighbor {<ip-address> <TAG>} enforce-multihop</p> <p>Enforce the multihop connection to the neighbor. The “no neighbor {<ip-address> <TAG>} enforce-multihop” command cancels this configuration.</p>
Parameter	<p><ip-address>: Neighbor IP address</p> <p><TAG>: Name of peer group.</p>
Default	Not enforced
Command Mode	BGP route mode
Usage Guide	In fact the direct route can not be enforced to multihop, however will be treated as a multihop connection with this configuration, namely the check originally only performed on IBGP and EBGp of non-direct routes will be performed on all after this attribute set. The nexthop direct connected check will not be performed at exit in enforce multihop conditions.
Example	<p>Enforce neighbor 10.1.1.66 as multihop connection.</p> <pre>Switch(config-router)#neighbor 10.1.1.66 enforce-multihop</pre>

neighbor filter-list

Command	neighbor {<ip-address> <TAG>} filter-list <.LINE> {<in> <out>} no neighbor {<ip-address> <TAG>} filter-list <.LINE> {<in> <out>} Access-list control for AS-PATH. The “no neighbor {<ip-address> <TAG>} filter-list <.LINE> {<in> <out>}” cancels the AS-PATH access-list control.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group. <.LINE>: AS-PATH access-list name configured through ip as-path access-list <.LINE> <permit deny> <LINE>.
Default	Not configured
Command Mode	BGP route mode
Usage Guide	After first configured the IP AS-PATH access-list, apply this option to specified neighbor will be able to send/receive routes with specified AS numbers in the AS list. Accepting or denying depends on the configuration of the access-list, while sending and receiving are configured by this command.
Example	Configure the AS-PATH access control list, “ASPF” is the name of the access-list. The route with AS number of 100 will not be able to update to the partner due to the filter table control. Switch(config)#ip as-path access-list ASPF deny 100 Switch(config)#router bgp 100 Switch(config-router)# redistribute static Switch(config-router)neighbor 10.1.1.66 filter-list aspf out

neighbor interface

Command	neighbor <ip-address> interface <IFNAM> no neighbor <ip-address> interface <IFNAM> Specify the interface to the neighbor. The “no neighbor <ip-address>interface <IFNAM>” of the command cancels this configuration.
Parameter	<ip-address>: Neighbor IP address. <IFNAME>: Interface name, e.g. “Vlan 2”.
Default	-
Command Mode	BGP route mode
Usage Guide	Specifies the exit interface to the neighbor with this command. Interface destination accessibility should be ensured.
Example	Set the interface to neighbor 10.1.1.64 as interface vlan 2 Switch(config-router)# neighbor 10.1.1.64 interface vlan2

neighbor maximum-prefix

Command	neighbor {<ip-address> <TAG>} maximum-prefix <1-4294967295> [<1-100> <warning-only>] no neighbor {<ip-address> <TAG>} maximum-prefix <1-4294967295> [<1-100>
---------	--

	<p><warning-only>]</p> <p>Control the number of route prefix from the neighbor. The “no neighbor {<ip-address> <TAG>} maximum-prefix <1-4294967295> [<1-100> <warning-only>]” command cancels this configuration.</p>
Parameter	<p><ip-address>: Neighbor IP address.</p> <p><TAG>: Name of the peer.</p> <p><1-4294967295>: Max prefix value allowed.</p> <p><1-100>: Percentage of the max value at which it warns.</p> <p><warning-only>: Warning only or not.</p>
Default	Not limited.
Command Mode	BGP route mode
Usage Guide	Due to concerns of too much route updates from neighbors (e.g. attack), the max number of prefix acquired from a neighbor is limited, and will warns when the number hits certain rate. If the warning-only option is set, then there will be warning only, if not, the connection to the neighbor will be cut till clear the records with clear ip bgp command.
Example	<p>Configure the maximum number of route prefix from neighbor 10.1.1.64 is 12, and it warns when the number of route prefix reaches 6, and the connection will be cut when the number hit 13.</p> <p>Switch(config-router)#neighbor 10.1.1.64 maximum-prefix 12 50</p>

neighbor next-hop-self

Command	<p>neighbor {<ip-address> <TAG>} next-hop-self</p> <p>no neighbor {<ip-address> <TAG>} next-hop-self</p> <p>Ask the neighbor to point the route nexthop sent by the local side to local side. The “no neighbor {<ip-address> <TAG>} next-hop-self” command cancels this configuration.</p>
Parameter	<p><ip-address>: Neighbor IP address.</p> <p><TAG>: Name of peer group.</p>
Default	-
Command Mode	BGP route mode
Usage Guide	In the EBGp environment, the nexthop will automatically point to the source neighbor. However in IBGP environment, the nexthop remains the same for route in the same segment. If it is not broadcast network, errors will be encountered. This command is for force self as the nexthop of the neighbor under IBGP.
Example	Switch(config-router)#neighbor 10.1.1.66 next-hop-self

neighbor override-capability

Command	neighbor {<ip-address> <TAG>} override-capability
---------	---

	no neighbor {<ip-address> <TAG>} override-capability Whether enable overriding capability negotiation. The “no neighbor {<ip-address> <TAG>} override-capability” command restores the capability negotiation.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of the peer group.
Default	-
Command Mode	BGP route mode
Usage Guide	With this attribute, error notify due to unsupported capability negotiation the neighbors required will not be sent.
Example	Switch(config-router)#neighbor 10.1.1.64 override-capability

neighbor passive

Command	neighbor {<ip-address> <TAG>} passive no neighbor {<ip-address> <TAG>} passive Configure whether the connecting request is positively sent in the connection with specified neighbor; the “no neighbor {<ip-address> <TAG>} passive” command restores to positively send the connecting request.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group.
Default	Positively send the connecting request.
Command Mode	BGP route mode
Usage Guide	With this attribute set, the local side will not positively send the TCP connecting request after the neighbors are configured, but stays in listening mode waiting for the connecting request from partners.
Example	Switch(config-router)#neighbor 10.1.1.64 passive After configured with this attribute and reestablishing the connection , the local side do not attempt to create connection but stays in ACTIVE state waiting for the TCP connection request from the partner.

neighbor peer-group (Creating)

Command	neighbor < TAG> peer-group no neighbor < TAG> peer-group Create/delete a peer group. The “no neighbor < TAG> peer-group” command deletes a peer group.
Parameter	<TAG>: Name of the peer group of which the largest length contains 256 characters.
Default	No peer group.
Command Mode	BGP route mode
Usage Guide	By configuring the peer group, a group of peers with the same attributes will be configured at the same time so to reduce the configuration staff labor. Assign members to the peer group with neighbor <ip-address> peer-group <TAG>

	command.
Example	Switch(config-router)#neighbor pg peer-group Switch(config-router)#neighbor 10.1.1.64 peer-group pg Switch(config-router)#neighbor pg remote-as 100

neighbor peer-group(Configuring group members)

Command	neighbor <ip-address> peer-group <TAG> no neighbor <ip-address> peer-group <TAG> Assign/delete peers in the group. The “no neighbor <ip-address>peer-group <TAG>”command deletes the peers from the peer group.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group.
Default	No peer group.
Command Mode	BGP route mode
Usage Guide	By configuring the peer group, a group of peers with the same attributes will be configured at the same time so to reduce the configuration staff labor. Create peer group with above command and assign members into the group with this command.
Example	Refer to above examples.

neighbor port

Command	neighbor <ip-address> port <0-65535> no neighbor <ip-address> port [<0-65535>] Specify the TCP port number of the partner through which the communication carries. The “no neighbor <ip-address> port [<0-65535>]” command restores the port number to default value.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of the peer group. <0-65535>: TCP port number.
Default	Default port number is 179.
Command Mode	BGP route mode
Usage Guide	This is a configuration when the partner may connect through ports not specified by BGP.
Example	Switch(config-router)#neighbor 10.1.1.64 port 1023

neighbor prefix-list

Command	neighbor {<ip-address> <TAG>} prefix-list <LISTNAME number> {<in out>} no neighbor {<ip-address> <TAG>} prefix-list <LISTNAME number>{<in> <out>}
---------	--

	Configure the prefix restrictions applied in sending or receiving routes from specified neighbors. The “no neighbor {<ip-address> <TAG>} prefix-list <LISTNAME number> {<in> <out>}” command cancels this configuration.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of the peer group. <LISTNAME number>: Name or sequence number of the prefix-list. <in out>: Direction on which the restrictions applied.
Default	No prefix restrictions applied.
Command Mode	BGP route mode
Usage Guide	Specify the prefix and its scope by configuring ip prefix-list and determines whether this scope is permitted or denied. Only the route with permitted prefix will be sent or received.
Example	Switch(config)#ip prefix-list prw permit 100.1.0.0/22 ge 23 le 25 Switch(config)#router bgp 200 Switch(config-router)#redistribute static Switch(config-router)neighbor 10.1.1.66 prefix-list prw out

neighbor remote-as

Command	neighbor {<ip-address> <TAG>} remote-as <as-id> no neighbor {<ip-address> <TAG>} [remote-as <as-id>] Configure the BGP neighbor. The no command is used for deleting BGP neighbors.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group <as-id>: Neighbor AS number, ranging from 1 to 4294967295, it can be shown in decimal notation (such as 6553700) or delimiter method (such as 100.100).
Default	No neighbors
Command Mode	BGP route mode
Usage Guide	The BGP neighbors are completely generated through command configurations. A neighbor relationship can only be really established by mutual configuring. Partner AS number should be specified in configuration. The neighbor relationship can not be established when the AS number is incorrect. The partner AS number is the same with that of local side inside the AS.
Example	Configure 2 neighbor AS as 100 and 100.200. Switch(config)#router bgp 200 Switch(config-router)# neighbor 10.1.1.64 remote-as 100 Switch(config-router)# neighbor 10.2.1.64 remote-as 100.200

neighbor remove-private-AS

Command	neighbor {<ip-address> <TAG>} remove-private-AS no neighbor {<ip-address> <TAG>} remove-private-AS Configures whether remove the private AS number when sending to the neighbor. The “no neighbor {<ip-address> <TAG>} remove-private-AS” command
---------	---

	cancels this configuration.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group
Default	Not configured
Command Mode	BGP route mode
Usage Guide	Configure this attribute to avoid assigning the internal AS number to the external AS sometimes. The internal AS number ranges between 64512-65535, which the AS number could not be sent to the INTERNET since it is not a valid external AS number. What removed here is private AS numbers of the totally private AS routes. Those who have private AS numbers while also have public AS numbers are not processed.
Example	Switch(config-router)#neighbor 10.1.1.64 remove-private-AS

neighbor route-map

Command	neighbor {<ip-address> <TAG>} route-map <NAME> {<in out>} no neighbor {<ip-address> <TAG>} route-map <NAME> {<in out>} Configure the route mapping policy when sending or receiving route. The “no neighbor {<ip-address> <TAG>} route-map <NAME> {<in out>}” command cancels this configuration.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group <NAME>: Name of route mapping <in out>: Direction of route mapping
Default	Not set
Command Mode	BGP route mode
Usage Guide	First it has to configure route mapping under global mode by creating a route map with route-map command and configure the match condition and actions, then the command can be applied.
Example	Switch(config)#route-map test permit 5 Switch(config-route-map)#match interface Vlan1 Switch(config-route-map)#set as-path prepend 65532 Switch(config-route-map)#exit Switch(config)#router bgp 200 Switch(config-router)#neighbor 10.1.1.64 route-map test out

neighbor route-reflector-client

Command	neighbor {<ip-address> <TAG>} route-reflector-client no neighbor {<ip-address> <TAG>} route-reflector-client Configure the route reflector client. The “no neighbor {<ip-address> <TAG>}route-reflector-client” command cancels this configuration
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group

Default	Not configured.
Command Mode	BGP route mode
Usage Guide	The route reflection is used for reducing the peers when the internal IBGP routers inside AS are too much. The client only exchanges messages with route reflector while the reflector deals with message exchange among each client and other IBGP, EBGP routers. This command configures itself as the route reflector, while specific peer group is as its client. Note: this configuration is only available inside AS.
Example	Switch(config)#router bgp 100 Switch(config-router)#neighbor 10.1.1.66 remote 100 Switch(config-router)#neighbor 10.1.1.66 route-reflector-client Switch(config-router)#neighbor 10.1.1.68 remote 100 Switch(config-router)#neighbor 10.1.1.68 route-reflector-client

neighbor route-server-client

Command	neighbor {<ip-address> <TAG>} route-server-client no neighbor {<ip-address> <TAG>} route-server-client Configure the route server client. The “no neighbor {<ip-address> <TAG>} route-server-client” command cancels this configuration.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group
Default	Not configured
Command Mode	BGP route mode
Usage Guide	The route service is for reducing the peers when the router between AS is too much under EBGP environment. The server transparently transforms the routing messages to other clients with its client exchanges messages through route server.
Example	Three routers : 10.1.1.64 (AS100) and 10.1.1.68 (AS300) respectively creates neighbor relationship with the connected 10.1.1.66 (AS200) , the configuration is as follows: Switch(config)#router bgp 200 Switch(config-router)#neighbor 10.1.1.64 remote-as 100 Switch(config-router)#neighbor 10.1.1.64 route-server-client Switch(config-router)# neighbor 10.1.1.68 remote-as 300 Switch(config-router)# neighbor 10.1.1.68 route-server-clien

neighbor send-community

Command	neighbor {<ip-address> <TAG>} send-community [both extended standard] no neighbor {<ip-address> <TAG>} send-community [both extended standard] Configures whether sending the community attribute to the neighbors. The “no neighbor {<ip-address> <TAG>} send-community [both extended standard]” command set to not sending.
Parameter	<ip-address>: IP address of the neighbor <TAG>: Name of peer group

	[both extended standard]: Standard community only, extended community or both.
Default	Sending the community attributes.
Command Mode	BGP route mode
Usage Guide	The community attributes can be sent to the outside or not. By default of our company we set to sending while the default in standard protocol is not sending. By configuring this attribute community attributes will be carried when sending routing information's to the neighbors, or else not. Omission of the following choice will be equal to standard.
Example	Switch(config-router)#no neighbor 10.1.1.66 send-community Switch(config-router)#neighbor 10.1.1.66 send-community

neighbor shutdown

Command	neighbor {<ip-address> <TAG>} shutdown no neighbor {<ip-address> <TAG>} shutdown Disconnect the neighbor connection. The “no neighbor {<ip-address> <TAG>} shutdown” cancels this configuration
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group
Default	Not disconnecting.
Command Mode	BGP route mode
Usage Guide	Directly disconnect/connect to a peer (group) without canceling the neighbor configuration.
Example	Switch(config-router)#neighbor 10.1.1.64 shutdown

neighbor soft-reconfiguration inbound

Command	neighbor {<ip-address> <TAG>} soft-reconfiguration inbound no neighbor {<ip-address> <TAG>} soft-reconfiguration inbound Configures whether perform inbound soft reconfiguration; the “no neighbor {<ip-address> <TAG>} soft-reconfiguration inbound” command set to not perform the inbound soft reconfiguration.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group
Default	Not perform inbound soft reconfiguration.
Command Mode	BGP route mode
Usage Guide	The system saves the inbound messages in the buffer after the soft reconfiguration is set, will applies as soon as it restarts so to reduce consumptions of switching with other routers. The command is only available when the route refresh capability is not enabled
Example	Switch(config-router)#neighbor 11.1.1.120 soft-reconfiguration inbound

neighbor strict-capability-match

Command	neighbor {<ip-address> <TAG>} strict-capability-match no neighbor {<ip-address> <TAG>} strict-capability-match Configure whether strict capability match is required when establishing connections. The “no neighbor {<ip-address> <TAG>} strict-capability-match” command set to not requiring strict match.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group
Default	No strict capability match configured.
Command Mode	BGP route mode
Usage Guide	This command takes effect to MP-BGP only. With this command, neighbor can be established when MP-BGP capabilities of the both side are matched, or else it can not be established. However, whether other capabilities are matched will not affect to establish neighbor.
Example	Switch(config-router)#neighbor 10.1.1.64 strict-capability-match

neighbor timers

Command	neighbor {<ip-address> <TAG>} timers <0-65535> <0-65535> no neighbor {<ip-address> <TAG>} timers <0-65535> <0-65535> Configure the KEEPALIVE interval and hold time; the “no neighbor {<ip-address> <TAG>} timers <0-65535> <0-65535>” command restores the defaults.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group <0-65535>: Respectively the KEEPALIVE and HOLD TIME
Default	Default KEEPALIVE time is 60s, while HOLD TIME is 240s
Command Mode	BGP route mode
Usage Guide	Send KEEPALIVE interval and HOLD TIME intervals sent in the peer connection. The hold time is the time period for maintain the connection when no message is received from the partner (such as KEEPALIVE). And the connection will be closed after this hold time.
Example	Switch(config-router)#neighbor 10.1.1.64 timers 50 200

neighbor timers connect

Command	neighbor {<ip-address> <TAG>} timers connect <0-65535> no neighbor {<ip-address> <TAG>} timers connect [<0-65535>] Configure the connecting retry time interval. The “no neighbor {<ip-address> <TAG>} timers connect [<0-65535>]” command restores the default value.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group <0-65535>: Retry interval
Default	120s
Command Mode	BGP route mode

Usage Guide	Configure the connecting time interval when connecting a peer. The NO form restores the default value.
Example	Switch(config-router)#neighbor 10.1.1.64 timers connect 100

neighbor unsuppress-map

Command	neighbor {<ip-address> <TAG>} unsuppress-map <WORD> no neighbor {<ip-address> <TAG>} unsuppress-map <WORD> Configure or cancel the unsurprising to conditions meet the specified route map. The “no neighbor {<ip-address> <TAG>} unsuppress-map <WORD>” command cancels this configuration.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of peer group. <WORD>: Name of route-map.
Default	Not set.
Command Mode	BGP route mode
Usage Guide	This command is generally for route suppressed by the aggregated and summary-only conditions. Routes meet the route map conditions will still be send separately other than suppressed.
Example	Switch(config-router)#neighbor 10.1.1.66 unsuppress-map rmp Switch(config)#access-list 10 permit 10.1.1.100 0.0.0.255 Switch(config)#route-map rmp permit 5 Switch(config-route-map)#match ip next-hop 10 Route with nexthop as 10.1.1.100 will not be restrained.

neighbor update-source

Command	neighbor {<ip-address> <TAG>} update-source <IFNAME> no neighbor {<ip-address> <TAG>} update-source <IFNAME> Configure the update source. The “no neighbor {<ip-address> <TAG>} update-source <IFNAME>” cancels this configuration
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of peer group <IFNAME>: Name or IP of the interface
Default	Not configured, namely use nearest interface.
Command Mode	BGP route mode
Usage Guide	Specified update source is allowed to connect with any available interface which normally is the loop back interface. The NO forms restores to the nearest interface update source. Improper update source use may lead to neighbor connection unavailable, while the invalid interface causes problem which is also the reasons we use loop back interfaces. Note: the loop back interface should be maintained with its address accessibility to be able to establish connections when as the update source.
Example	Switch(config-router)#neighbor 10.1.1.66 update-source 192.168.0.1

neighbor version 4

Command	neighbor {<ip-address> <TAG>} version 4 Configure the BGP version of the partner.
Parameter	<ip-address>: Neighbor IP address <TAG>: Name of the peer group 4: Allowed BGP version, 4 only
Default	4
Command Mode	BGP route mode
Usage Guide	Only version 4 is supported so far, so whatever the configuration is the version remains at 4.
Example	Switch(config-router)#neighbor 10.1.1.66 version 4 Switch(config-router)#

neighbor weight

Command	neighbor {<ip-address> <TAG>} weight <0-65535> no neighbor {<ip-address> <TAG>} weight [<0-65535>] Configure the route weight sent from the partner. The “no neighbor {<ip-address> <TAG>} weight [<0-65535>]” command restores the default value.
Parameter	<ip-address>: Neighbor IP address. <TAG>: Name of IP address. <0-65535>: Weight.
Default	The default weight acquired from other routers is 0. The default weight on the local static configuration is 32768.
Command Mode	BGP route mode
Usage Guide	The path selecting can be affected through the configuration of the weight. The weight is only relevant to the router which is not an attribute transmittable to outside.
Example	Switch(config-router)#neighbor 10.1.1.66 weight 500

network (BGP)

Command	network <ip-address/M> [route-map <WORD>] [backdoor] no network <ip-address/M> [route-map <WORD>] [backdoor] Configure the BGP managed network, the route map specified in network application, or set the “back door” for the network. The “no network <ip-address/M>[route-map <WORD>] [backdoor]” command cancels this configuration.
Parameter	<ip-address/M>: Network prefix identifier <WORD>: Name of route-map
Default	-
Command Mode	BGP route mode
Usage Guide	As for BGP routes, specify the route through which the BGP advertisements go. With the network defined by this command, the peer will be spreaded into the route map of

	the neighbor even if there is no route locally. Using the attribute specified in the network application through route map, when specifying the route comes from EBGp or inside the network through back door parameters, the inside route will be the optimized route even if the external route is of shorter distance.
Example	Switch(config-router)# network 172.16.0.0/16

redistribute (BGP)

Command	redistribute <ROUTES> [route-map <WORD>] no redistribute <ROUTES> [route-map <WORD>] Set the BGP to redistribute route from other modes into BGP. The “no redistribute <ROUTES> [route-map <WORD>]” command cancels this configuration.
Parameter	<ROUTES>: Route source or protocol, including: connected, ISIS, kernel, OSPF, RIP, static, etc. <WORD>: Name of route map.
Default	-
Command Mode	BGP route mode
Usage Guide	Route from other ways will be distributed into the BGP route table with this command and transmitted to the neighbors.
Example	The static route is introduced into BGP with this configuration and advertised to the neighbors. Switch(config-router)# redistribute static

redistribute ospf

Command	redistribute ospf [<process-id>] [route-map<word>] no redistribute ospf [<process-id>] To redistribute routing information form OSPF to BGP. The no form of this command will remove the configuration.
Parameter	process-id is the process ID of the OSPF, limited between 1 and 65535. If no process id is specified, the default process id will be used. route-map <word> is the pointer to the introduced routing map.
Default	Not redistributed by default.
Command Mode	BGP route mode
Usage Guide	-
Example	To redistribute routing of OSPF v2 to BGP (as number is 1). Switch(config)#router bgp 1 Switch(config-router)#redistribute ospf 2

router bgp

Command	router bgp <as-id> no router bgp <as-id> Enable BGP instance. The “no router bgp <as-id>” command deletes BGP instance.
---------	---

Parameter	<as-id>: AS number, ranging from 1 to 4294967295, it can be shown in decimal notation (such as 6553700) or delimiter method (such as 100.100).
Default	BGP not enabled.
Command Mode	Global mode
Usage Guide	Enable BGP by specified AS, and then enter the config-router state, the protocol can be configured at this prompt.
Example	Enable BGP, AS number is 4294967295 in decimal notation. Switch(config)#router bgp 4294967295 Switch(config-router)#exit Enable BGP, AS number is 4294967295 in delimiter method. Switch(config)#router bgp 65535.65535 Switch(config-router)#exit

timers bgp

Command	timers bgp <0-65535> <0-65535> no timers bgp [<0-65535> <0-65535>] Configure all neighbor time in BGP. The “no timers bgp [<0-65535> <0-65535>]” command restores these times to default value.
Parameter	<0-65535>: Respectively the KEEPALIVE interval and the hold time.
Default	KEEPALIVE is 60s, HOLD TIME is 240s.
Command Mode	Admin and Configuration Mode.
Usage Guide	Similar to neighbor time configuration which just performed on all neighbors
Example	Switch(config-router)# timers bgp 50 200

show ip bgp

Command	show ip bgp [<ADDRESS-FAMILY>] [<ip-address> <ip-address/M> [longer-prefixes]] cidr-only] For displaying the routing messages permitted by BGP.
Parameter	<ADDRESS-FAMILY>: address-family such as “ipv4 unicast”; <ip-address>: IP address; <ip-address/M>: IP address and the mask
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	We can display BGP routing messages by different parameters (such as address-family or IPv4 address), or a route covered by a prefix, or only the routing message don't match the earliest IP address-family (namely the route is not A or B or C type address.)
Example	Switch#show ip bgp BGP table version is 147, local router ID is 10.1.1.64 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale

	<p>Origin codes: i - IGP, e - EGP, ? – incomplete</p> <p>Network Next Hop Metric LocPrf Weight Path</p> <p>*> 12.0.0.0 10.1.1.121 0 32768 ?</p> <p>*> 100.1.1.0/24 10.1.1.200 0 32768 ?</p> <p>*> 100.1.2.0/24 10.1.1.200 0 32768 ?</p> <p>*> 172.0.0.0/8 0.0.0.0 32768 i</p> <p>Total number of prefixes 4</p>
--	---

show ip bgp attribute-info

Command	show ip bgp attribute-info Display the BGP attributes messages.
Parameter	-
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	For displaying the attribute messages permitted by BGP.
Example	<pre>Switch#show ip bgp attribute-info attr[1] nexthop 0.0.0.0 attr[1] nexthop 10.1.1.64 attr[3] nexthop 10.1.1.64 attr[1] nexthop 10.1.1.121 attr[2] nexthop 10.1.1.200</pre>

show ip bgp community

Command	show ip bgp [<ADDRESS-FAMILY>] community <TYPE> [exact-match] For displaying route permitted by BGP with community information.
Parameter	<ADDRESS-FAMILY>: Address-family, such as "ipv4 unicast" <TYPE>: Community attributes number show in AA:NN form or combination of local-AS, no-advertise, and no-export.
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	We can choose several communities at a time, exact-match shows only the perfect match entries will be displayed.
Example	<pre>Switch#show ip bgp community BGP table version is 10, local router ID is 10.1.1.64 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path * 100.1.1.0/24 0.0.0.0 32768 700 800 i *> 172.0.0.0/8 0.0.0.0 32768 700 800 i Total number of prefixes 2</pre>

show ip bgp community-info

Command	show ip bgp community-info For displaying the community messages permitted by BGP.
Parameter	
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Messages in the same community multiply closable at the same time.
Example	Switch#show ip bgp community-info Address Refcnt Community [0x3312558] (3) 100:50

show ip bgp community-list

Command	show ip bgp [<ADDRESS-FAMILY>] community-list <NAME> [exact-match] For displaying the routes containing the community list messages and permitted by BGP
Parameter	<ADDRESS-FAMILY>: Address-family such as "ipv4 unicast" <NAME>: Community list
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Configure the community list with ip community-list command and the contained community as well. When displayed with its name, communities included in all the lists are contained.
Example	Switch(config)#ip community-list commu per 100:50 Switch#show ip bgp community-list commu BGP table version is 25, local router ID is 10.1.1.64 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? – incomplete Network Next Hop Metric LocPrf Weight Path * 100.1.1.0/24 0.0.0.0 32768 700 800 i *> 172.0.0.0/8 0.0.0.0 32768 700 800 i

show ip bgp dampening

Command	show ip bgp [<ADDRESS-FAMILY>] dampening {<dampened-paths> <flap-statistics> <parameters>} Display the routes permitted by BGP and relevant to the route dampening.
Parameter	<ADDRESS-FAMILY>: Address-family, such as "ipv4 unicast".
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Only the surged routes will be displayed. The Parameters shows the display configuration other than specific routes. The other two options will respectively show the restrained route and the dampening (recently recovered from invalid) routing

	messages.
Example	<pre>Switch#show ip bgp dampening dampened-paths BGP table version is 12, local router ID is 10.1.1.66 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network From Reuse Path *d 100.1.3.0/24 10.1.1.64 00:27:40 100 ? Total number of prefixes 1 Switch#show ip bgp dampening flap-statistics BGP table version is 13, local router ID is 10.1.1.66 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network From Flaps Duration Reuse Path *d 100.1.3.0/24 10.1.1.64 3 00:06:05 00:27:00 100 ? Switch#show ip bgp dampening parameters dampening 15 750 2000 60 15 (route-map rmp) Reachability Half-Life time : 15 min Reuse penalty : 750 Suppress penalty : 2000 Max suppress time : 60 min Un-reachability Half-Life time : 15 min Max penalty (ceil) : 11999 Min penalty (floor) : 375 Total number of prefixes 1</pre>

show ip bgp filter-list

Command	<pre>show ip bgp [<ADDRESS-FAMILY>]filter-list [<WORD >]</pre> <p>For displaying the routes in BGP meeting the specific AS filter list.</p>
Parameter	<pre><ADDRESS-FAMILY>: address-family such as "ipv4 unicast" < WORD >: AS-PATH access-list name</pre>
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Configure AS access-list with ip as-path access-list command. This command can show the routes passed the access-list.
Example	<pre>Switch#show ip bgp filter-list FL BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path</pre>

	*> 100.1.1.0/24 10.1.1.64 0 0 100 ? Total number of prefixes 1
--	---

show ip bgp inconsistent-as

Command	show ip bgp [<ADDRESS-FAMILY>] inconsistent-as For displaying routes with inconsistent BGP AS.
Parameter	<ADDRESS-FAMILY>: address family such as "ipv4 unicast".
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	If same prefix comes from different origin AS, the AS will be regarded as inconsistent. This command is for displaying this kind of routes.
Example	Switch#show ip bgp inconsistent-as BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path * 100.1.1.0/24 10.1.1.68 0 0 300 ? *> 10.1.1.64 0 0 100 ? Total number of prefixes 1

show ip bgp neighbors

Command	show ip bgp [<ADDRESS-FAMILY>] neighbors [IP-ADDRESS] [advertised-routes received {prefix-filter routes} routes] For displaying the BGP neighbor related messages.
Parameter	<ADDRESS-FAMILY>: Address-family, such as "ipv4 unicast" <ip-address>: Neighbor IP address
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Display detailed messages of all neighbors by this command without parameters. Specifying IP address will show the detailed information of the neighbors with specified IP address. The advertised-routes、received prefix-filter、received routes、routes parameters will respectively displays the routes broadcast on local side, the received prefix filter, received routes (soft reconfiguration enabled) and the routing message from specific neighbor.
Example	Switch#show ip bgp neighbor BGP neighbor is 10.1.1.66, remote AS 200, local AS 100, external link BGP version 4, remote router ID 11.1.1.100 BGP state = Established, up for 00:13:43 Last read 00:13:43, hold time is 240, keepalive interval is 60 seconds

	<p>Neighbor capabilities:</p> <p>Route refresh: advertised and received (old and new)</p> <p>Address family IPv4 Unicast: advertised and received</p> <p>Received 17 messages, 0 notifications, 0 in queue</p> <p>Sent 17 messages, 0 notifications, 0 in queue</p> <p>Route refresh request: received 0, sent 0</p> <p>Minimum time between advertisement runs is 30 seconds</p> <p>For address family: IPv4 Unicast</p> <p>BGP table version 2, neighbor version 2</p> <p>Index 1, Offset 0, Mask 0x2</p> <p>Community attribute sent to this neighbor (both)</p> <p>0 accepted prefixes</p> <p>1 announced prefixes</p> <p>Connections established 7; dropped 6</p>
--	--

show ip bgp paths

Command	show ip bgp [<ADDRESS-FAMILY>] paths Display the path message permitted by BGP.
Parameter	<ADDRESS-FAMILY>: Address-family such as "ipv4 unicast".
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Display the BGP path message includes the utilization state.
Example	Switch#show ip bgp paths Address Refcnt Path [0x331dad0:0] (1) [0x331d850:93] (1) 600 [0x331d8d8:249] (2) 200 300

show ip bgp prefix-list

Command	show ip bgp [<ADDRESS-FAMILY>] prefix-list [<NAME>] For displaying the route meet the specific prefix-list in BGP.
Parameter	<ADDRESS-FAMILY>: Address family such as "ipv4 unicast" <NAME>: Name of prefix-list
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	We can select the required BGP route by regular expression.
Example	Switch(config)#ip prefix-list PL permit any Switch(config)# Switch#show ip bgp prefix-list PL BGP table version is 1, local router ID is 10.1.1.64 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,

	S Stale				
	Origin codes: i - IGP, e - EGP, ? – incomplete				
	Network	Next Hop	Metric	LocPrf	Weight Path
	* 100.1.1.0/24	10.1.1.66	0	200	300 ?
	*>	10.1.1.100	0	32768	?
	Total number of prefixes 1				

show ip bgp quote-regex

Command	show ip bgp [<ADDRESS-FAMILY>] quote-regex [<WORD>] For displaying the BGP route meets the specific AS related regular expression.
Parameter	<ADDRESS-FAMILY >: address-family such as "ipv4 unicast" <WORD>: Regular expression
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Selecting the required route through regular expressions.
Example	Switch#show ip bgp quote-regex ^300\$ BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path *> 100.1.1.0/24 10.1.1.68 0 0 300 ? Total number of prefixes 1 Switch#sh ip bgp quote-regex 100 BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path * 100.1.1.0/24 10.1.1.64 0 0 500 100 600 ? Total number of prefixes 1

show ip bgp redistribute

Command	show ip bgp redistribute To display redistributed routing information from external processes to BGP
Parameter	-
Default	-
Command Mode	Admin mode and Command Mode.
Usage Guide	-
Example	Switch#show ip bgp redistribute

show ip bgp neighbors

Command	show ip bgp neighbors Show neighbor information of specified BGP or total BGP processes.
Parameter	
Default	-
Command Mode	Admin mode and Command Mode.
Usage Guide	-
Example	Switch#show ip bgp neighbors

show ip bgp regexp

Command	show ip bgp [<ADDRESS-FAMILY>] regexp [<LINE>] For displaying the BGP routes meets specific AS related normal expressions.
Parameter	<ADDRESS-FAMILY >: address-family such as "ipv4 unicast" <LINE>: Regular expression
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	We can select BGP route of the required AS with normal expression.
Example	Switch#show ip bgp regexp 100 BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path * 100.1.1.0/24 10.1.1.64 0 0 500 100 600 ? Total number of prefixes 1

show ip bgp route-map

Command	show ip bgp [<ADDRESS-FAMILY>] route-map [<NAME>] For displaying the BGP routes meets the specific related route map.
Parameter	<ADDRESS-FAMILY >: such as "ipv4 unicast" <NAME>: Name of route map
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Configure the route map with the route-map command, through which it can be displayed that process routes with route map. The command will display the routes meet specific route map.
Example	Switch#show ip bgp route-map rmp BGP table version is 2, local router ID is 11.1.1.100 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path

	<pre>* 100.1.1.0/24 10.1.1.64 0 0 500 100 600 ? *> 10.1.1.68 0 0 300 ? Total number of prefixes 1</pre>
--	--

show ip bgp scan

Command	show ip bgp scan For displaying BGP scan messages.
Parameter	
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Scan regularly the nexthop messages. The command can show the current interval and related routes.
Example	<pre>Switch#show ip bgp scan BGP Instance: (Default) AS 200, router-id 11.1.1.100 BGP scan interval is 60 Current BGP nexthop cache:</pre>

show ip bgp summary

Command	show ip bgp [<ADDRESS-FAMILY>] summary For displaying the BGP summary information.															
Parameter	<ADDRESS-FAMILY>: Address-family such as "ipv4 unicast".															
Default	-															
Command Mode	Admin and Configuration Mode.															
Usage Guide	Display some basic summary information of BGP															
Example	<pre>Switch#show ip bgp summary BGP router identifier 10.1.1.66, local AS number 200 BGP table version is 1 1 BGP AS-PATH entries 0 BGP community entries Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd 10.1.1.68 4 300 0 0 0 0 0 never Active Total number of neighbors 1</pre> <table border="1"> <thead> <tr> <th>Display Contents</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>identifier</td> <td>Local identifier</td> </tr> <tr> <td>local AS number</td> <td>The number of AS of local router</td> </tr> <tr> <td>table version</td> <td>the version number of BGP interior database</td> </tr> <tr> <td>AS-PATH entries</td> <td>The tabulation of the AS-PATH entries</td> </tr> <tr> <td>community entries</td> <td>The property of the community entries</td> </tr> <tr> <td>Neighbor</td> <td>Neighbor address</td> </tr> </tbody> </table>		Display Contents	Explanation	identifier	Local identifier	local AS number	The number of AS of local router	table version	the version number of BGP interior database	AS-PATH entries	The tabulation of the AS-PATH entries	community entries	The property of the community entries	Neighbor	Neighbor address
Display Contents	Explanation															
identifier	Local identifier															
local AS number	The number of AS of local router															
table version	the version number of BGP interior database															
AS-PATH entries	The tabulation of the AS-PATH entries															
community entries	The property of the community entries															
Neighbor	Neighbor address															

	V	The BGP version of neighbor running
	AS	The AS number of neighbor what is affiliated with
	MsgRcvd	The amount of message received from neighbor
	MsgSent	The amount of message sent to the neighbor
	TblVer	the version of route table
	Up/Down	It will display the conversation time length if the state with neighbor was established, otherwise display the present status.
	State/PfxRcd	If the state is established, display the amount of the prefix received of the router. otherwise, display the state of the neighbor at present.

show ip bgp view

Command	show ip bgp view [<NAME>] [<ip-address> <ip-address/M>][<ADDRESS-FAMILY>] summary] For displaying the messages of specified BGP instance.
Parameter	<NAME>: Name of BGP instance <ip-address>: IP address <ip-address/M>: IP address and mask <ADDRESS-FAMILY>: Address-family such as "ipv4 unicast"
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Display messages of specified BGP instance.
Example	Switch#show ip bgp view as300 100.1.1.0/24

show ip bgp view neighbors

Command	show ip bgp view [<NAME>] neighbors [<ip-address>] Display neighbor messages of specified BGP instance.
Parameter	<NAME>: Name of BGP instance <ip-address>: neighbor IP address
Default	-
Command Mode	Admin and Configuration Mode.
Usage Guide	Display neighbor messages of specified BGP instance.
Example	Switch#show ip bgp view as300 neighbors

debug bgp

Command	debug bgp [<MODULE> all] no debug bgp [<MODULE> all] For BGP debugging. The “no debug bgp [<MODULE> all]” command closes the BGP debugging messages
Parameter	<MODULE>: BGP module names, including dampening、 events、 filters、 fsm、 keepalives、 nsm、 updates, etc.
Default	None.
Mode	Admin Mode
Usage Guide	For monitoring BGP events and the encountered errors, warning messages.
Example	Display the debugging messages of all bgp modules. Switch#debug bgp all

debug bgp redistribute message send

Command	debug bgp redistribute message send no debug bgp redistribute message send To enable debugging switch of sending messages for redistribution of routing information from external process such as OSPF and RIP to BGP. The no command will disable the debugging switch.
Parameter	-
Default	Close the debug by default.
Mode	Admin Mode
Usage Guide	-
Example	Switch# debug bgp redistribute message send Switch# no debug bgp redistribute message send

debug bgp redistribute route receive

Command	debug bgp redistribute route receive no debug bgp redistribute route receive To enable debugging switch of received messages from NSM for BGP. The no form of this command will disable debugging switch of received messages from NSM for BGP.
Parameter	-
Default	Close the debug by default.
Mode	Admin Mode
Usage Guide	-
Example	Switch#debug bgp redistribute route receive Switch#no debug bgp redistribute route receive

bgp graceful-restart

Command	bgp graceful-restart no bgp graceful-restart
---------	---

	Enable BGP to support GR and set restart-time and stale-path-time as the default value, no command disables GR.
Parameter	-
Default	Do not enable BGP to support GR.
Mode	BGP router configuration mode
Usage Guide	-
Example	Configure GR. Switch(config-router)# bgp graceful-restart

bgp graceful-restart restart-time

Command	bgp graceful-restart restart-time <1-3600> no bgp graceful-restart restart-time <1-3600> Configure BGP GR's restart-time (Receiving Speaker enables a timeout timer for a neighbor, it uses the restart-time as the timeout). A restart-time specifies the longest waiting time from Receiving Speaker finds restarting to the received OPEN messages. If Receiving Speaker does not receive OPEN messages after exceed the time, it can delete SATLE route saved by neighbor. No command restores restart-time as the default value of 120 seconds.
Parameter	<1-3600>: time in seconds.
Default	restart-time uses the default value of 120s.
Mode	BGP router configuration mode
Usage Guide	-
Example	Configure restart-time as 60s for BGP GR Switch(config-router)# bgp graceful-restart restart-time 60

bgp graceful-restart stale-path-time

Command	bgp graceful-restart stale-path-time <1-3600> no bgp graceful-restart stale-path-time <1-3600> Configure stale-path-time for BGP GR. Specify the longest waiting time that delete stale route from the received OPEN messages to the received EOR for Receiving Speaker. No command restores stale-path-time as the default value of 360 seconds.
Parameter	<1-3600>: time in seconds
Default	stale-path-time uses the default value of 360s.
Mode	BGP router configuration mode
Usage Guide	-
Example	Configure stale-path-time as 460s for BGP GR. Switch(config-router)# bgp graceful-restart stale-path-time 460

bgp selection-deferral-time

Command	bgp selection-deferral-time <1-3600>
---------	--------------------------------------

	no bgp selection-deferral-time <1-3600> Configure selection-deferral-time for BGP GR. Specify the longest waiting time that start to count selection route from the received OPEN messages to the received EOR for Restarting Speaker. If Restarting Speaker does not receive EOR after exceed the time, it can count selection route. No command restores selection-deferral-time as the default value of 120 seconds.
Parameter	<1-3600>: time in seconds
Default	selection-deferral-time uses the default value of 120s.
Mode	BGP router configuration mode
Usage Guide	-
Example	Configure selection-deferral-time as 240s for BGP GR. Switch(config-router)# bgp selection-deferral-time 240

neighbor capability graceful-restart

Command	neighbor (A.B.C.D X:X::X:X WORD) capability graceful-restart no neighbor (A.B.C.D X:X::X:X WORD) capability graceful-restart Configure whether neighbor supports GR capability, no command does not support GR capability.
Parameter	(A.B.C.D X:X::X:X WORD): name of neighbor address or neighbor group for BGP
Default	Do not configure GR.
Mode	BGP protocol unicast address family mode
Usage Guide	-
Example	Configure that GR capability is sent to neighbor 1.1.1.1. Switch(config-router)#neighbor 1.1.1.1 capability graceful-restart

neighbor restart-time

Command	neighbor (A.B.C.D X:X::X:X WORD) restart-time <1-3600> no neighbor (A.B.C.D X:X::X:X WORD) restart-time <1-3600> Configure restart-time for neighbors, no command restores the default time.
Parameter	(A.B.C.D X:X::X:X WORD): name of neighbor address or neighbor group for BGP <1-3600>: time in seconds.
Default	The default restart-time is 120s for neighbor.
Mode	BGP protocol unicast address family mode
Usage Guide	-
Example	Configure restart-time as 60s for neighbor 1.1.1.1. Switch(config-router)# neighbor restart-time 60