




Quick Installation Guide


L2 Managed Switch

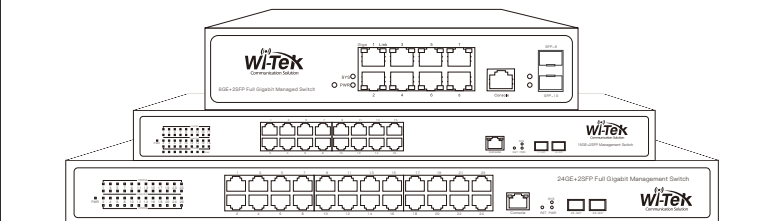


WI-MS310GF WI-MS318GF WI-MS326GF

www.wireless-tek.com


1. Packing Content



1 x WI-MS326GF

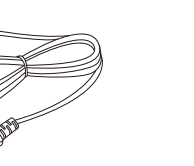

1 x Power Cord

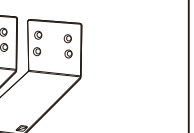

1 x Rack mount kit




1 x Installation guide

2. Appearance Overview

WI-MS310GF

- Front panel



- LED Indicator
- 8*10/100/1000Mbps RJ45 Ports
- 1*Console Port
- 2*1000Mbps SFP Slots

- Back panel




- DC Power port
- Grounding
- AC Power port

- LED indicator

LED Indicators	Description
PWR	Blinking: The device power on is normal Off: The device is power off or failed
Link	Blinking: The Data on TX/RX Solid on: The port link down
Giga	On: The negotiate speed is 1000Mbps and ports link up Off: The negotiate speed is 10/100Mbps, not 1000Mbps
SYS	On: The device is restarting Off: The device do not reboot
SFP Port 9	Blinking: The Data on TX/RX Solid on: The port link down
SFP Port 10	Blinking: The Data on TX/RX Solid on: The port link down

WI-MS318GF

- Front panel



- LED light
- 16 x 10/100/1000Mbps RJ45 Ports
- 1*Console Port
- 2*1000Mbps SFP Slots

- Back panel




- Grounding Interface
- AC Power port

- LED indicator

LED Indicators	Description
PWR	Blinking: The device power on is normal Off: The device is power off or failed
Link/Act	Solid on: The negotiate speed is 10/100Mbps and ports link up Off: The negotiate speed is 1000Mbps, not 10/100Mbps
1000M	On: The negotiate speed is 1000Mbps and ports link up Off: The negotiate speed is 10/100Mbps, not 1000Mbps
SYS	Blinking: System boot reset Off: The device do not reboot

WI-MS326GF

- Front panel



- LED light
- 24x10/100/1000Mbps RJ45 Ports
- 1*Console Port
- 2*1000Mbps SFP Slots

- Back panel




- Grounding Interface
- AC Power port

- LED indicator


LED Indicators	Description
PWR	Blinking: The device power on is normal Off: The device is power off or failed
Link/Act	Solid on: The negotiate speed is 10/100Mbps and ports link up Off: The negotiate speed is 1000Mbps, not 10/100Mbps
1000M	On: The negotiate speed is 1000Mbps and ports link up Off: The negotiate speed is 10/100Mbps, not 1000Mbps
SYS	Blinking: System boot reset Off: The device does not reset

3. Installation

- Desktop installation

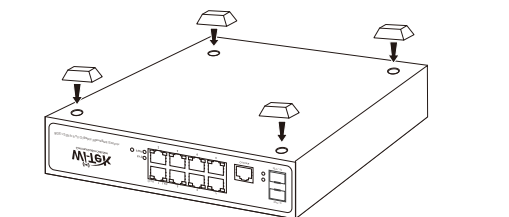

- Rack mounted installation(For WI-MS318GF WI-MS326GF)

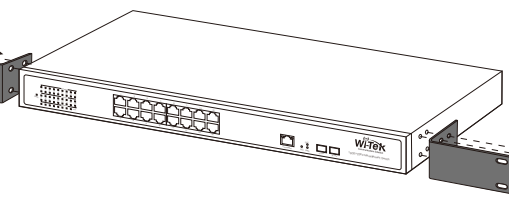

4. Login WEB UI

For more L2 management functions, please login the Web-Based UI as the following steps:

Step 1. Find the IP address of the switch.

- The default login IP address of this series switch is 192.168.0.1, with a subnet mask of 255.255.255.0.

- If the switch receives an IP address from a DHCP server in your network.You can find this IP address on the DHCP server.

Step 2. Configure the IP address on your PC to make sure the switch and PC are in the same subnet.

- If the switch uses the static IP address of 192.168.0.1, configure your PC' s IP address as192.168.0.x (" x " ranges from 2 to 254), and subnet mask as 255.255.255.0.

- If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.

Step 3. Launch a web browser on your PC. Enter the IP address of the switch in the address bar and fill in the username and password.

- The default login username and password are both "admin".

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Biaofan Technology Building 402, Bao'an street,
Baoan District,Shenzhen City, Guangdong, China
Website:www.wireless-tek.com
Tel:86-0755-32811290
Email:sales@wireless-tek.com
Technical Support:tech@wireless-tek.com

