


Quick Installation Guide


Cloud Easy Smart Gigabit PoE Switch




WI-PCES306G
Hardware Version: V3

1. Package Contents

- WI-PCES306G

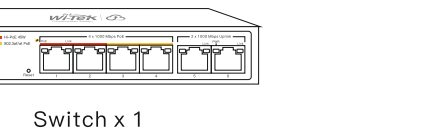

Switch x 1

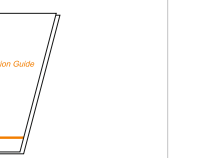

Quick Installation Guide x 1



Power Cord x 1



Mats x 4

2. Appearance Overview

- For WI-PCES306G


- Front Panel



- Reset Button

- 2 * 10/100/1000Mbps Hi-PoE 45W Ports
- 2 * 10/100/1000Mbps 802.3af/at 30W Ports
- 2 * 10/100/1000Mbps RJ45 Uplink Ports

- Back Panel



- Grounding


- AC 100-240V Power Port

- LED Indicator and Button

LED Indicator & Button	Description
PWR(Orange)	Solid On: The device is powered on normally Off: The device is powered off or failed
Link (Green)	Solid On: Port connected Blinking: Data transmission Off: Port disconnected
PoE (Orange)	Solid On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected
Reset	Hold for >5 sec. to restore factory default


3. Installation

- 3.1 Desktop Installation

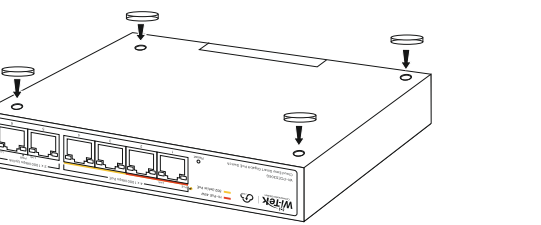


- 3.2 Wall-mount Installation


Step1. Install the Switch by following the steps: Fix 2 screws on the wall to align the 2 fixing holes on the Switch, as shown in the figure below, and hang the Switch smoothly on the screws.

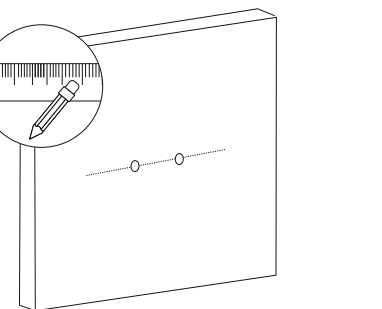

Step3. Fasten the switch to the screws through the two installation holes at the bottom of the switch. Place the switch ports side down, and the two sides of the switch are perpendicular to the ground.

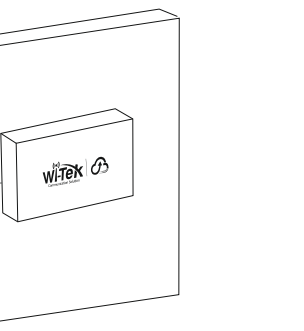


Step2. Fix 2 screws on the wall. Leave the screws at least 1.5mm outside the wall to ensure that the switch can be firmly hung on the screws.

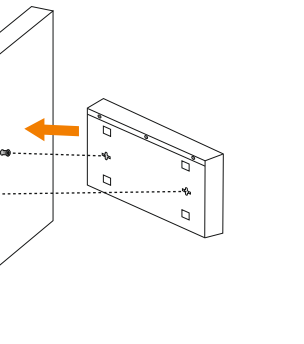

4. Configuration

First, the device is powered on, the Internet is connected to the WAN port of the gateway, the other LAN port of the gateway is connected to the Cloud Easy Smart PoE Switch, and then the PC is connected to the switch. Make sure the PC and gateway are on the same subnet.

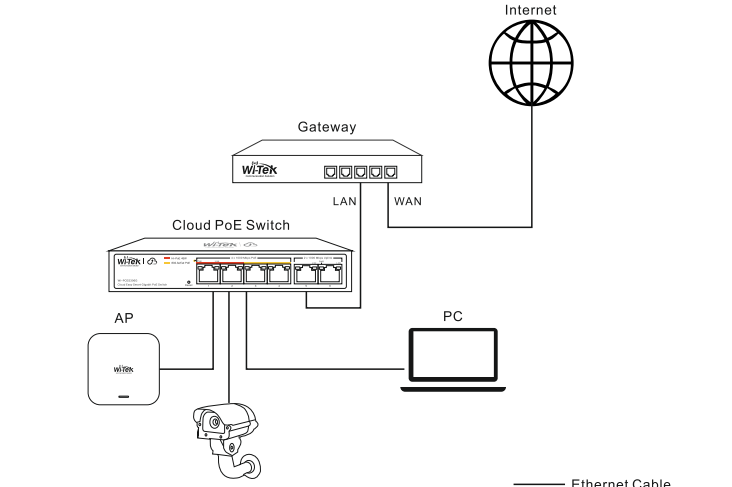


- Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1


To log in, follow these steps:

- Launch your web browser. Type the appropriate IP address in the address field.
- The login screen will appear. In the factory state, the first login requires setting an account and password.

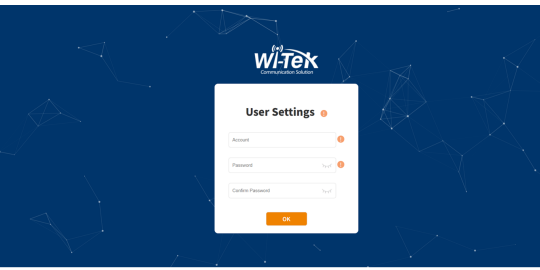


- Cloud login switch configuration

- Log in to the cloud management page (No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)


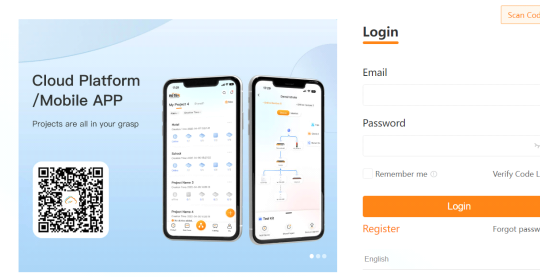


- 2. Enter the cloud binding switch

(Explain: The switch must be connected to the Internet to bind successfully)


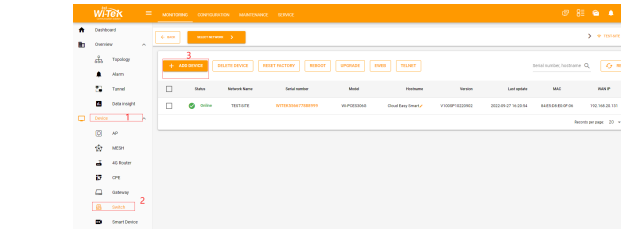


Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.
(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

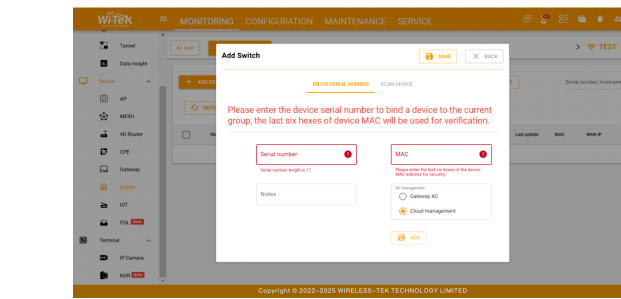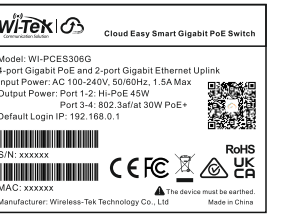

- 3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB to enter the switch.

(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

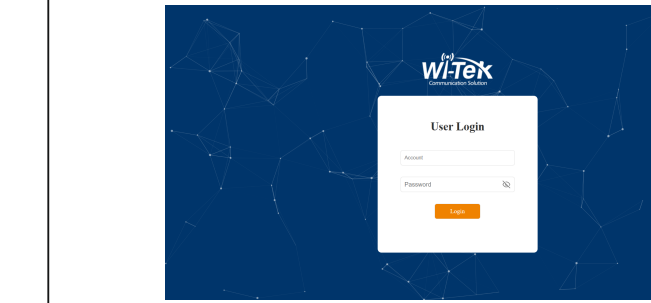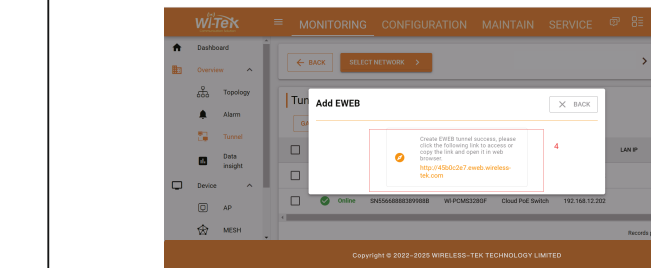

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

